


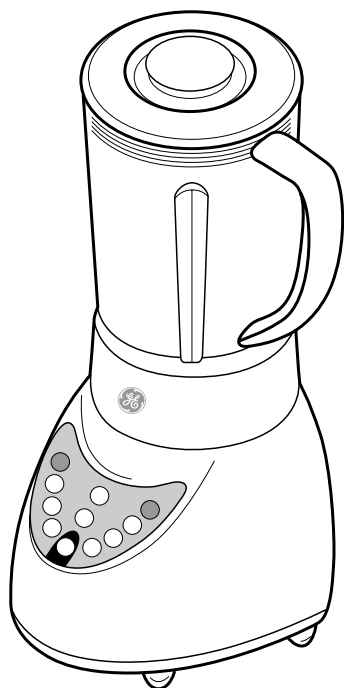

*Electronic Blender*

---



**Item Stock Number**

**GE168944**

*UPC:*

*681131689441*

*www.gehousewares.com*

*For Customer Assistance Please Call: 1-877-207-0923*

# Blender Safety

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be observed, including the following:

1. Read all instructions carefully before using the appliance.
2. Check that the voltage range given on the appliance rating label corresponds with that of your main voltage.
3. Keep children away when appliance is in use.
4. This appliance is suitable for normal household use only and not for commercial use.
5. Use the appliance only on a level working surface.
6. Do not hold the appliance on the slant while it is working.
7. Never put your fingers in the blender jar or mill cup while attached to blender base.
8. Do not operate the appliance with a damaged cord or plug or after the appliance malfunctions or has been dropped or damaged. Return the appliance for examination, adjustments, or repair.
9. The use of attachments not recommended may cause fire, electrical shock, or risk of injury.
10. Never open the cover before the motor has stopped.
11. Never immerse the motor base in water; wipe with a damp cloth to clean it.
12. Unplug the unit when not in use and whenever you clean or move the unit.
13. To disconnect the appliance, set control to off, grip plug and pull from wall outlet. Never yank on cord.
14. Repairs on electrical appliances must only be done by authorized service personnel. Faulty, unqualified repair work may cause accidents or injury to the user.
15. Do not use the appliance if the stainless steel blade is damaged.
  - If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

## SAVE THESE INSTRUCTIONS!

### Consumer Safety Information

#### **This appliance is intended for household use only.**

This appliance is equipped with a polarized plug. This type of plug has one blade wider than the other. The plug will fit into an electrical outlet only one way. This is a safety feature intended to help reduce the risk of electrical shock. If you are unable to insert the plug into the outlet, try reversing the plug. If the plug should still fail to fit, contact a qualified electrician to replace the obsolete outlet. Do not attempt to defeat the safety purpose of the polarized plug by modifying the plug in any way. The length of the cord used on this appliance was selected to reduce the hazards of

becoming tangled in or tripping over a longer cord. If a longer cord is necessary, an approved extension cord may be used. The electrical rating of the extension cord must be equal to or greater than the rating of the blender. Care must be taken to arrange the extension cord so that it will not drape over the countertop or tabletop where it can be pulled on by children or accidentally tripped over. If the cutting blades lock and do not move, this will damage the motor. Do not use. Call the toll-free customer assistance number for information. Do not place blender jar in the freezer filled with food or liquid. This will freeze and damage the cutting blades.

# Know Your Blender

## Parts and Features

- 1 Blender Base
- 2 Filler cap
- 3 Blender Lid
- 4 Blender Jar
- 5 Mill Cup
- 6 Gasket
- 7 Blender Blade (white)
- 8 Mill Blade (grey)
- 9 Blender Retaining Ring
- 10 Mill Retaining Ring
- 11 Pulse
- 12 Stop
- 13 Mill




# How to Assemble and Use

**IMPORTANT:** Your blender jar and cutting blades are subject to wear during normal use. Always inspect jar for nicks, chips, or cracks. Always inspect cutting blades for broken, cracked, or loose blades. If the jar or cutting blades are damaged, do not use. Call our toll-free customer assistance number to obtain replacement parts. Make sure blender is unplugged. Place blender base on clean, dry surface to keep foreign particles from being pulled up into the motor during operation.


## Jar and Mill Assembly

1. Place gasket onto cutting blades

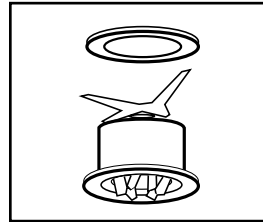

Never place blade assembly on base unless assembled to jar.

2. Place blades through jar opening.

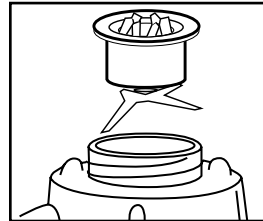

3. Screw retaining ring counter



clockwise onto jar or mill cup. Make sure the retaining ring is firmly screwed onto jar

## Before First Use

After unpacking the blender, wash everything except the blender base in hot, soapy water. Dry thoroughly. Wipe the blender base with a damp cloth or sponge. **DO NOT IMMERSE THE BASE IN WATER.** Care should be taken when handling the blades as they are very sharp.

Keep fingers out of jar while the unit is assembled.

## Preparing Fruits Or Vegetables

- Wash or peel the fruit or vegetables you want to process.
- Process seed fruit (such as apples, pears) with peels and cores.
- Fruits and vegetables with thick peels (e.g., citrus fruits, melons, kiwis, beets) must be peeled first.
- Grapes can be processed only after separation from the bunch.
- For leafy vegetables (e.g.: cabbage and spinach) and herbs, roll leaves together tightly.
- Cut fruits and vegetables into pieces that will fit into the filler cap hole.

## Operation

- The appliance is easily controlled by the touch of a button.
- The appliance can be operated only when the attachments are correctly assembled and in place on the base.
- When the appliance is plugged in, the light under the “Stop” button will blink to indicate the Blender is in “Stand-By” mode.
- **Caution:** When the light under Stop shines continuously, it means the motor may be over-loaded or over-heated. Turn the blender off for at least three minutes before using again.
- To stop the machine, either press the function button just used for a second time, or press the Stop button.
- The appliance has two main functions: Blender and Mill.

**Note:** Pulse feature works only with Blender function

## Blender:

1. The Blender jar and cutting assembly should be properly assembled and securely placed on the blender base (see Jar/Mill assembly on page 3).
2. When the unit is plugged into the wall outlet the light under the Stop button should blink on and off. The blender is currently in stand by mode.
3. Place all of the ingredients into the Blender jar. For the best results place liquid ingredients in first and blend using the “stir function” for a couple seconds. Next place all solid items into the blender jar.
4. Choose the appropriate setting for blending. Each of the following buttons can be pressed to achieve the desired amount of blending. When the ingredients reach your desired consistency press the function button a second time to turn off your Blender or press the stop button. Example: Press the stir button to start blending at the lowest speed. Press the stir button again to stop blending. Remember the Stop button will stop the blender no matter what the function.

**Stir** (slowest speed) to blend peeled fruit like apples into juice

**Chop** (faster than stir) suitable for preparing milk shakes

**Mix** ( a little more power than chop) suitable for preparing harder items such as onions

**Grate** (fourth most powerful) Suitable for really thick blending of pancake mix

**Blend** this is the second most powerful speed and should be used to blend ingredients of different consistency. ie. Cheese with milk

**Liquefy** perfect for making smoothies with fruits and juice

5. There are two additional functions when using the blender. The first is the Ice Crush feature. To crush ice cubes, just place the ice cubes into the blender jar and put the lid on. It is not necessary to add any liquid. Press the “Ice Crush” button.
6. The second feature unique to the blender function is the pulse function. To utilize the pulse feature, press the Pulse button. The light will blink under the Pulse button indicating the blender is ready for use. Press any of the other function buttons (Stir-Liquefy) and the blender will operate only while the button is held down. Once the button is released the blender will stop. To stop the pulse feature, press the Pulse button a second time. The light under the Pulse button should no longer blink.
7. Operate the blender for 3 minutes at a time. After 3 consecutive min. of operation, let the unit rest for 1 min.

## Mill:

**IMPORTANT:** Your mill cup and cutting assembly are subject to wear during normal use. Always inspect the mill cup for nicks, chips, or cracks. Always inspect the cutting assembly for broken, cracked, or loose blades. If the mill cup or cutting assembly are damaged, do not use. Call our toll free customer assistance number to obtain replacement parts. NOTE: Make sure base is UNPLUGGED and mill cup and assembly are properly removed from base prior to inspection.

1. The Mill jar and cutting assembly should be properly assembled and securely placed on the blender base (see Jar/Mill assembly on page 3).
2. When the unit is plugged into the wall outlet the light under the stop button should blink on and off. The Mill is currently in stand by mode.
3. To use the function, just press the Mill button once to turn on. Press the mill button again to turn off the Mill function, or press Stop to turn off.
4. Some general guidelines for grinding are listed below. However, time will vary depending upon the amount of coffee used and your personal preference. The best way to determine how coarse or fine to grind your coffee is to experiment with different grinds and coffee types to suit your taste. Three and a half ounces is the maximum capacity of the Mill. Wait 1 minute between batches in the Mill.

| Grind  | Suggested Use           | Grind Time |
|--------|-------------------------|------------|
| Coarse | Percolator/French Press | 10 Seconds |
| Medium | Automatic Drip          | 20 Seconds |
| Fine   | Espresso                | 30 Seconds |

## Cleaning

- Always unplug the appliance first before cleaning!
- Never immerse the base in water, clean it with a damp cloth.
- All other parts can be washed under the tap, running water is more efficient for cleaning
- The cutter blades are sharp. Handle carefully. Rinse, dry, and reassemble for storage.
- The plastic parts may be stained when processing foods with a high pigment content. (e.g.: carrots). Use vegetable oil to clean.
- **Caution:** Do not clean any parts of the appliance in the dishwasher.

# Customer Assistance

If you have a claim under this warranty, please call our Customer Assistance Number. For faster service please have model, series, and type numbers ready for operator to assist you. These numbers can be found on the bottom of your blender.

MODEL: \_\_\_\_\_ TYPE: \_\_\_\_\_ SERIES: \_\_\_\_\_

Customer Assistance Number 1-877-207-0923

Keep this number for future reference!

---

## Two-Year Limited Warranty

### What does your warranty cover?

- Any defect in material or workmanship.

### For how long after the original purpose?

- Two years.

### What will we do?

- Provide you with a new unit.
- The exchange unit is warranted for the remainder of your product's original two-year warranty.

### How do you make a warranty claim?

- Properly pack your unit. We recommend using the original carton and packing materials.
- Include in the package a copy of the sales receipt or other evidence of date of original purchase. If the unit was a gift, provide a statement specifying the date received. Also print your name and address and a description of the defect.
- Return the product to your nearest WAL\*MART store with sales receipt.

### What does your warranty not cover?

- Glass parts, glass containers, cutter/strainer, blades and/or agitators.
- Commercial use or any other use not found in printed directions.
- Damage from misuse, abuse, or neglect.
- Products purchased or serviced outside the USA or Canada.

### How does state law relate to this warranty?

- This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.
- WAL\*MART expressly disclaims all responsibility for consequential damages or incidental losses caused by use of this appliance. Some states do not allow this exclusion or limitation of incidental or consequential losses so the foregoing disclaimer may not apply to you.

For products purchased outside the United States and Canada, see dealer for warranty.

WAL\*MART Stores, Inc.  
Bentonville, AR 72716

 is a trademark of  
General Electric Company  
and is used under license by  
WAL\*MART Stores, Inc.  
Bentonville, AR 72716

WAL\*MART Stores, Inc.  
Bentonville, AR 72716