

PARTS LIST

for

KitchenAid®

5-SPEED HAND MIXER

MODELS:

KHM5TBWH5 (White)
KHM5DHWH5 (White)
KHM5APWH5 (White)
KHM5APOB5 (Onyx Black)
KHM5APER5 (Empire Red)
KHM5APBU5 (Cobalt Blue)
KHM5QWH5 (White)
KHM5QOB5 (Onyx Black)
KHM5QER5 (Empire Red)
KHM5QBU5 (Cobalt Blue)
KHM5APWH6 (White)
KHM5APOB6 (Onyx Black)
KHM5APER6 (Empire Red)
KHM5APBU6 (Cobalt Blue)
KHM5APWH7 (White)
KHM5APOB7 (Onyx Black)
KHM5APER7 (Empire Red)
KHM5APBU7 (Cobalt Blue)
4KHM5TBWH5 (White)
4KHM5DHWH5 (White)




FOR CUSTOMER SATISFACTION ALWAYS USE
FACTORY SPECIFICATION PARTS



UNIT PARTS

Variations of Models: KHM5__5,6,7, 4KHM5__5

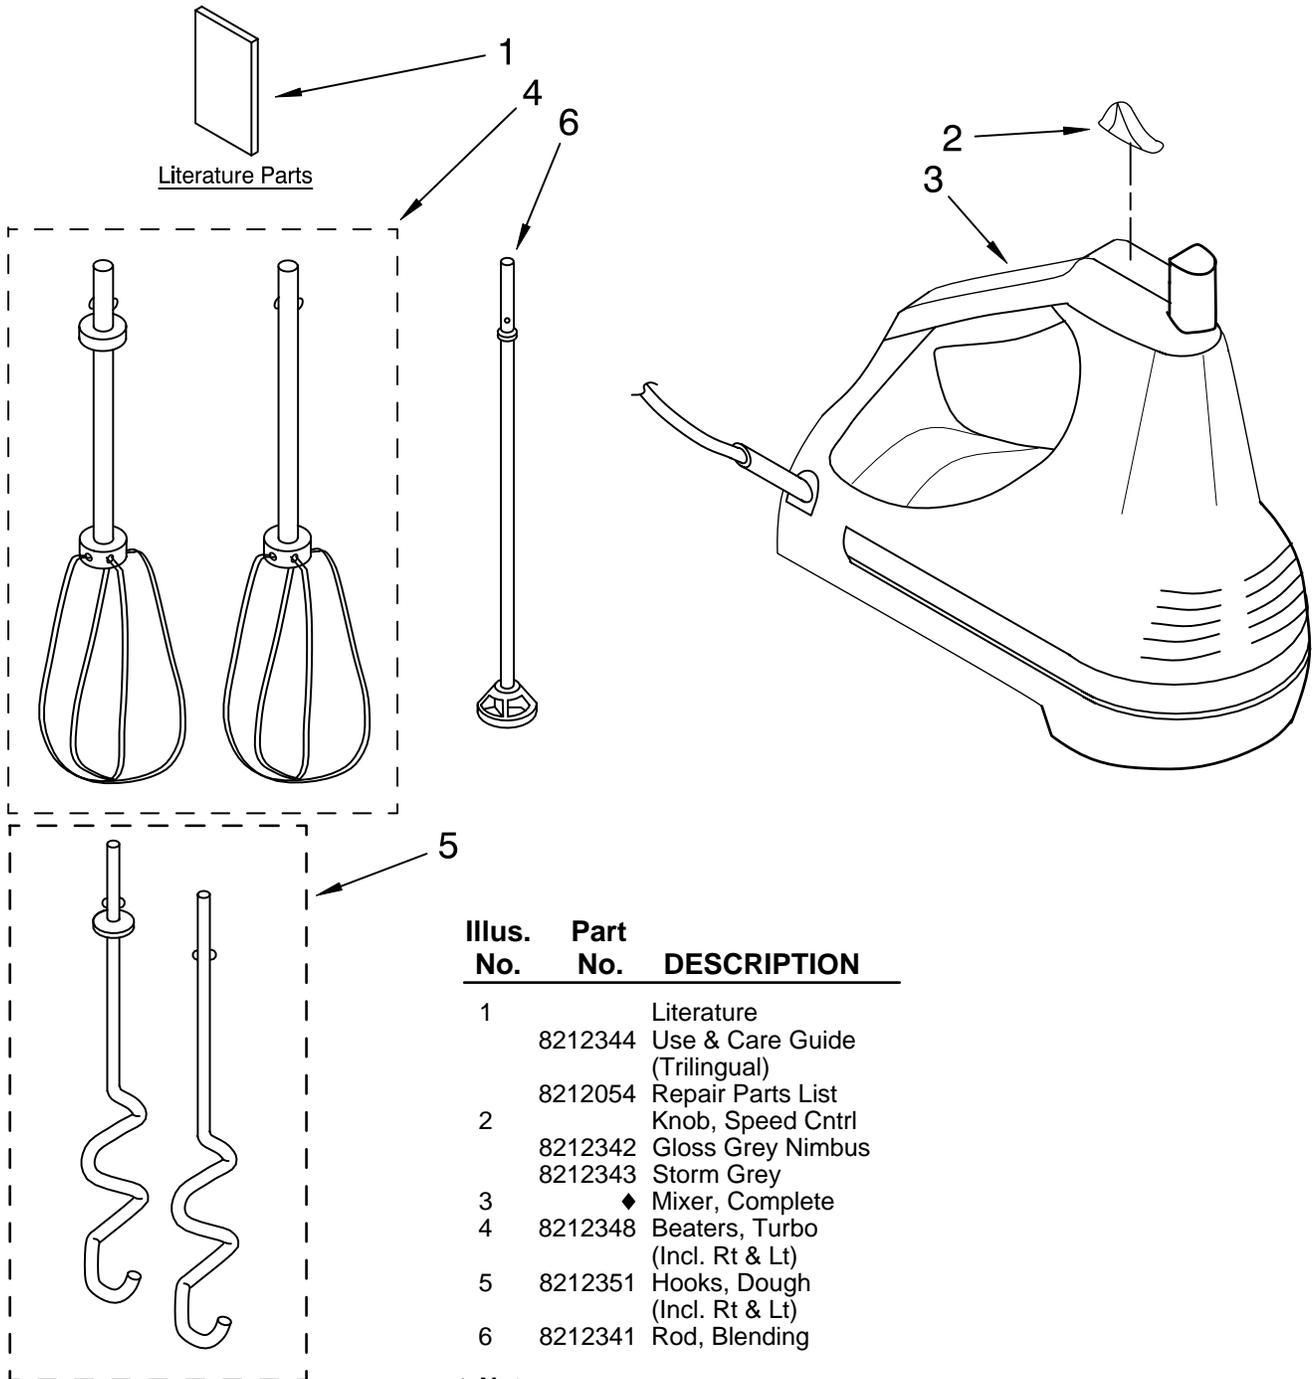

Illus. No.	Part No.	DESCRIPTION
1		Literature
	8212344	Use & Care Guide (Trilingual)
	8212054	Repair Parts List
2		Knob, Speed Cntrl
	8212342	Gloss Grey Nimbus
	8212343	Storm Grey
3		◆ Mixer, Complete
4		8212348 Beaters, Turbo (Incl. Rt & Lt)
5		8212351 Hooks, Dough (Incl. Rt & Lt)
6		8212341 Rod, Blending

◆ **Note:**
Parts not sold separately.
Must be purchased as a complete unit.

OPTIONAL PARTS NOT ILLUSTRATED

8212340 Whisk

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST