

Using your hand mixer


- 1 Switch on by sliding the speed slider to one of the positions: 1 (lowest speed) to 5 (highest speed).
 - It is recommended to start at a low speed, then change to a higher speed as required.
 - Only use the turbo setting for short bursts of mixing.
 - Use turbo on speed 5.
 - Pressing the turbo on speed 1-4 will give a slight increase in speed if required.
- 2 Switch off by returning the slider to 0.
- 3 To eject the beaters and dough hooks, place the mixer on its base and press the top half of the release button on the front of the mixer with both hands **B**.
- 4 Gently remove the beater or dough hooks.

IMPORTANT: Do not operate the mixer continuously for more than 6 minutes (with beaters) or 2 minutes (with dough hooks). After using for these lengths of time, let it cool down for 10 minutes before using again.

- When working with liquids, use a low speed in order to avoid splashing onto the mixer, and hold the liquid container firmly.

Top tips

- When making dough, first mix the dry ingredients, including oils, fats or butter, with the beater for approximately 30 seconds on speed 5 until they form breadcrumbs. Change to the dough hooks and gradually add water using speed 5. Change to speed 2 to knead the dough for approximately 1 minute.

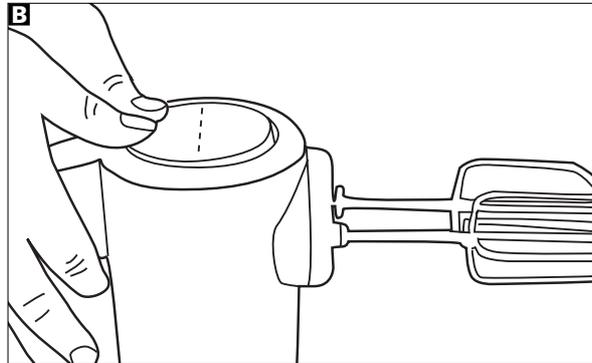

CLEANING

- Before cleaning and maintenance, switch the appliance off and unplug from the mains.
- Remove and wash the beaters and dough hooks in warm soapy water and dry well.
- Wipe the motor unit with a damp cloth. Do not use any abrasive or solvent-based cleaner.

WARNING: Never immerse the motor unit in water or other liquid.

HELPLINE

If you have any difficulty with your appliance, do not hesitate to call. We are more likely to be able to help than the store where you bought it.

Please have the following information ready to enable our staff to deal with your enquiry quickly:

- Name of the product
- Model number as shown on the underside of the appliance or rating plate
- Serial number

UK Helpline 0844 871 0950

Replacement Parts 0844 873 0716

Ireland Helpline 1800 409 119

YOUR FIVE YEAR GUARANTEE

Available on registration in the UK only



This 5 year guarantee is only valid when registered directly with Morphy Richards **within 28 days of purchase**. If you do not register your product within 28 days, it is guaranteed for 2 years. To validate your 5 year guarantee, telephone our consumer helpline. Once you have registered your product, you will receive written confirmation from Morphy Richards, please retain this information. **Please note that the 5 year guarantee is only available in the UK.** Please refer to your 2 year guarantee for more information.

If the fault develops after 28 days and within 24 months of original purchase, you should contact the Helpline number quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown.

You will be asked to return the product (in secure, adequate packaging) to the address below along with a copy of proof of purchase.

Subject to the exclusions set out below (see Exclusions), the faulty appliance will then be repaired or replaced and dispatched usually within 7 working days of receipt.

If, for any reason, this item is replaced during the 2 year guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore, it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 2 year guarantee, the appliance must have been used according to the instructions supplied.

- 2 The appliance has been used on a voltage supply other than that stamped on the product.
- 3 Repairs have been attempted by persons other than our service staff (or authorised dealer).
- 4 The appliance has been used for hire purposes or non domestic use.
- 5 The appliance is second hand.
- 6 Morphy Richards are not liable to carry out any type of servicing work under the guarantee.

- This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer.

- This guarantee is valid in the UK and Ireland only.

YOUR TWO YEAR GUARANTEE



It is important to retain the retailer's receipt as proof of purchase. Staple your receipt to this back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no.

Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase, it should be returned to the place of purchase for it to be replaced.

EXCLUSIONS

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

- 1 The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the fault has been caused by power surges or damage caused in transit.



For electrical products sold within the European Community. At the end of the electrical products useful life, it should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice in your country.

morphy richards

**The After Sales Division
Morphy Richards Ltd**
Mexborough, South Yorkshire,
England, S64 8AJ

Helplines (office hours)
UK 0844 871 0950
Spare Parts 0844 873 0716
Republic of Ireland 1800 409 119

Morphy Richards products are intended for household use only.

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of it's models at any time.

FP48954 MUK Rev 2 06/08

For details of other products in the Morphy Richards range, please see our website . . .

morphy richards®



Food Fusion and Latitude Hand mixer

 Please read and keep these instructions

Getting the best from your new appliance...

Safety

Do not operate the mixer continuously for more than 6 minutes (with beaters) or 2 minutes (with dough hooks). After using for these lengths of time, allow to cool down for 10 minutes before using again.

Operation

Refer to the information on pages 4 & 5. It is recommended to start mixing at a low speed, then change to a higher speed as required.

WHISK



To register for your 5 year guarantee, ring the Helpline number below **within 28 days of purchase**. This offer is only available in the UK. Please have the following information available:
Serial number: _____ Model number: _____
(see page 6 for guarantee details).

 


For replacement parts, help with using your Morphy Richards product, problems and lots more, contact us by phone or through our website.

FP48954 MUK Rev 2




 UK Helpline: 0844 871 0950
Replacement Parts: 0844 873 0716
Ireland Helpline: 1800 409 119


www.morphyrichards.com



CONTENTS

Important safety instructions	3
Electrical requirements	3
Features	4
Assembly	4
Using your hand mixer	5
Top tips	5
Cleaning	5
Helpline	5
Your guarantee	6

   

 

IMPORTANT SAFETY INSTRUCTIONS

The use of any electrical appliance requires the following common sense safety rules.

Primarily there is danger of injury or death and secondly the danger of damage to the appliance. These are indicated in the text by the following two conventions:

WARNING: Danger to the person!

IMPORTANT: Damage to the appliance!

In addition, we offer the following essential safety advice.

Location

- Remove all packaging and retain for future reference.
- Ensure the appliance is used on a firm, flat surface.
- Do not use the appliance outdoors or in a bathroom.
- Do not place the bowl used with the appliance on a highly polished wooden surface as damage may occur to the surface.
- Do not place the appliance on or near a hot surface, such as a hot plate or radiant rings or near a naked flame.

Mains lead

- The mains lead should reach without straining from the socket.
- Do not let the mains lead hang over the edge of a worktop where a child could reach it.
- Do not let the lead run across an open space e.g. between a low socket and table, or a cooker or toaster or other hot area which might damage the cable.

- The power cord cannot be replaced. Contact Morphy Richards for advice.

Personal safety

- Avoid touching moving parts. Keep hands, hair and clothing, and utensils away from the hand mixer attachment blades during operation, to prevent personal injury and/or damage to the appliance.
- **WARNING: To protect against the risk of electric shock, NEVER immerse the appliance body in water or in any other liquid and always ensure the electrical connections are kept dry.**
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

Children

- Children do not understand the dangers associated with operating electrical appliances. Never allow children to use this appliance.
- Children should be supervised to ensure that they do not play with the appliance.

Other safety considerations

- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of attachments or tools not recommended or sold by Morphy Richards may cause fire, electric shock or injury.
- Do not use the appliance for anything other than its intended purpose.

- Unplug from the outlet when not in use, or when left unattended, and before assembling, disassembling or cleaning.

Product specific safety

- **WARNING: To protect against fire, electric shock and personal injury, do not immerse the cord, plug or mixer in water or other liquid.**
- Unplug from the mains outlet before cleaning and attaching or detaching beaters and dough hooks.
- Do not let rotating attachments touch the mains cable.
- Do not clean the attachments under running water while they are in position.
- Make sure the mixer is switched off before connecting to or disconnecting from the mains supply and when left unattended.

ELECTRICAL REQUIREMENTS

Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current).


If the socket outlets in your home are not suitable for the plug supplied with this appliance, the plug should be removed and the appropriate one fitted.

WARNING: The plug removed from the mains lead, if severed, must be destroyed, as a plug with bared flexible cord is hazardous if engaged into a live socket outlet.

Should the fuse in the 13 amp plug require changing, a 3 amp BS1362 fuse must be fitted.

This appliance does not need to be earthed. It is a double insulated product.



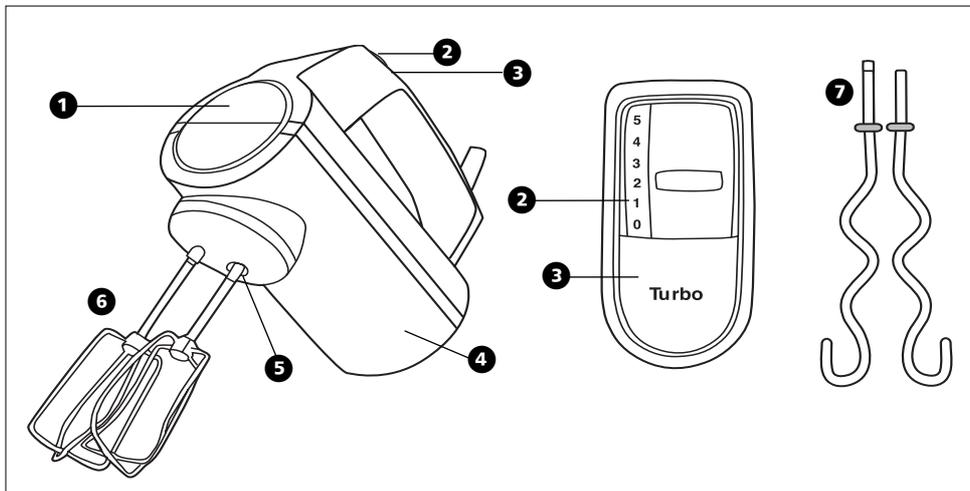

Features

- 1 Release button
- 2 Speed control slider
- 3 Turbo switch
- 4 Body
- 5 Sockets
- 6 Beaters
- 7 Dough hooks

Assembly

WARNING: Make sure that the mixer is switched off and unplugged from the mains.

- 1 Choose beaters or dough hooks.
 - Use beaters for mixing, beating, whipping and creaming liquids and mixtures.
 - Use dough hooks for kneading dough.
- 2 Insert the stem of the beater or dough hook into one of the sockets in the body.
 - The dough hook with the groove should go into the hole with the sleeve on the mixer **A**.
- 3 Push and turn the beater or dough hook until it locks into place.
- 4 Repeat for the other beater or hook.

