

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always

be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USE

- To protect against risk of electrical shock, do not put hand mixer in water or other liquid. This may cause personal injury and/or damage to the product.

- To disconnect, turn off control and unplug from outlet.
- Unplug from outlet while not in use, before putting on or taking off parts and before cleaning.

- Avoid contact with moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils away from beaters during operation to reduce the risk of injury to persons and/or damage to the hand mixer.

- Do not operate hand mixer with a damaged cord or plug, after the appliance malfunctions, or if it is dropped or damaged in any manner.

- Return appliance to the nearest Authorized Service Center for examination, repair or electrical or mechanical adjustment.

- Do not use with an extension cord.

- The use of attachments not recommended or sold by Sunbeam Products may cause fire, electrical shock or injury.

- Do not let cord hang over edge of table or countertop.
- Do not let cord touch hot surfaces, including a stove.
- Do not use outdoors or for commercial purposes.

- Remove beaters from hand mixer before washing them.
- Do not place hand mixer on or near a hot burner or in a heated oven.
- Do not use hand mixer for other than intended use.

- Do not leave hand mixer unattended while it is operating.
- Close Supervision is necessary when any appliance is used by or near children.

THIS UNIT IS FOR HOUSEHOLD USE ONLY

FOR PRODUCTS PURCHASED IN THE U.S. AND CANADA ONLY

To reduce the risk of electrical shock, this appliance has a polarized plug (*one blade is wider than the other*). This plug fits a polarized outlet only one way; if the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

FOR PRODUCTS PURCHASED IN THE U.S. AND CANADA ONLY

A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. Do not use with an extension cord.

SAVE THESE INSTRUCTIONS

English-1



MODEL/MODELO FPSTHMBGB

 
User Manual

Oster

Hand Mixer with Storage Case Batidora Manual con Funda para Almacenaje

Manual de Instrucciones


FEATURES OF YOUR HAND MIXER

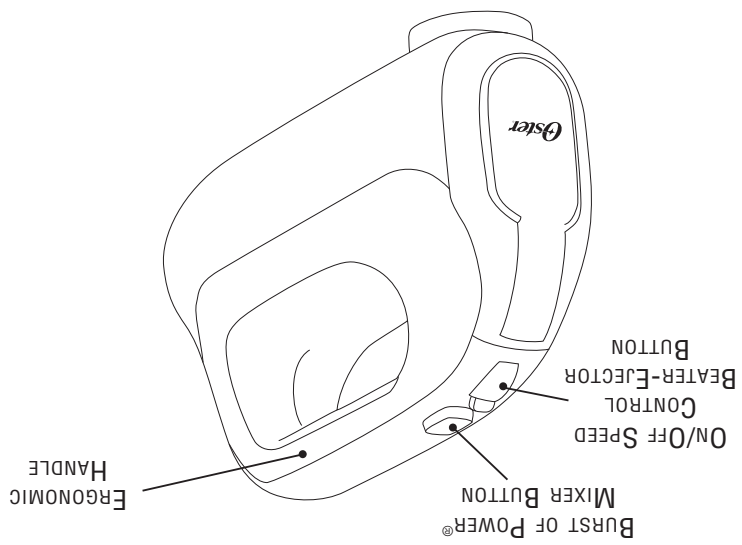

WELCOME

Congratulations on your purchase of an OSTER® Hand Mixer! To learn more about OSTER® products, please visit us at www.oster.com.

 English-2

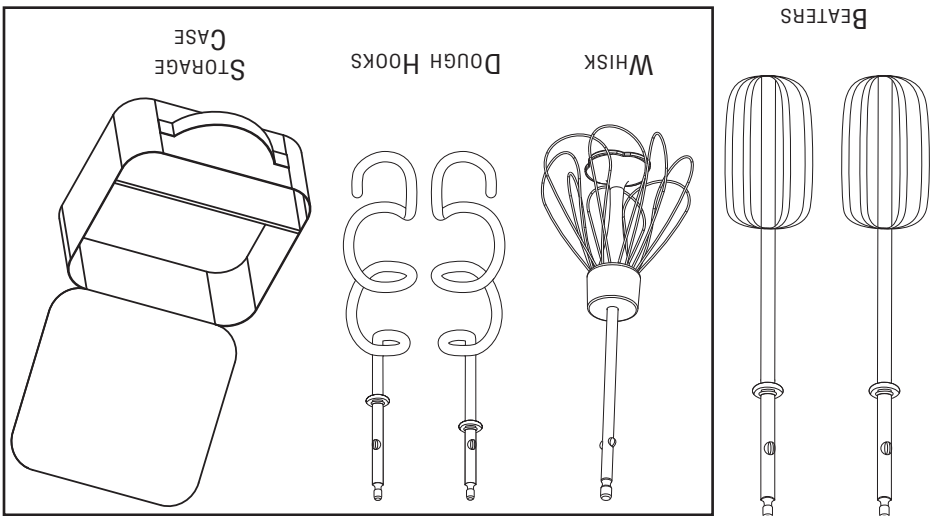

Visit us at www.oster.com

P.N. 160913

1-Year Limited Warranty

Sunbeam Products, Inc. doing business as Jarden Consumer Solutions, or if in Canada, Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions (collectively “JCS”) warrants that for a period of one year from the date of purchase, this product will be free from defects in material and workmanship. JCS, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. JCS dealers, service centers, or retail stores selling JCS products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than JCS or an authorized Sunbeam service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

What are the limits on JCS’s Liability?

JCS shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

JCS disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

JCS shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

How To Obtain Warranty Service

In the U.S.A.

If you have any question regarding this warranty or would like to obtain warranty service, please call 1-800-334-0759 and a convenient service center address will be provided to you.

In Canada

 
If you have any question regarding this warranty or would like to obtain warranty service, please call 1-800-334-0759 and a convenient service center address will be provided to you.

In the U.S.A., this warranty is offered by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions located in Boca Raton, Florida 33431. In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited, doing business as Jarden Consumer Solutions located at 20 B Hereford Street, Brampton, Ontario L6Y 0M1.

PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.

LEARNING ABOUT YOUR HAND MIXER

The OSTER® Hand Mixer with Retractable Cord has been designed to assist you in preparing delicious foods.

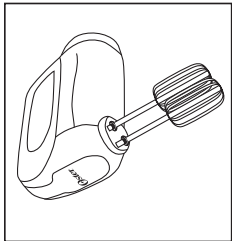

HEEL REST

The heel rest keeps the mixer stable when sitting upright on your counter.

BURST OF POWER® FEATURE

The BURST OF POWER® feature allows for an added boost to the selected speed setting at the press of the button. During especially heavy mixing tasks, press the button to drive the mixer will return to the original speed setting.

BEATER-EJECT BUTTON

 
NOTE: Make sure hand mixer is unplugged before removing or inserting any attachments.

BEATER-EJECT BUTTON

This OSTER® Hand Mixer features a convenient beater eject button. The design allows for a smooth push of the thumb to release the beaters or dough hooks. There will not be a noticeable “click”.

BEATERS

The beater design allows for thorough, fast mixing results for all types of batters. The beaters are dishwasher safe.

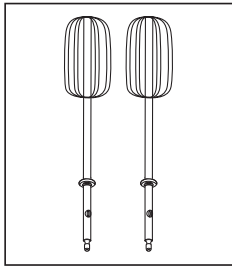

English-3

English-7



MAINTENANCE

Other than the recommended cleaning, no further user maintenance should be necessary. If for any reason your hand mixer should require repairs, do not try to fix it yourself. Send it to the nearest Authorized Sunbeam Appliance Service Center.

USING THE STORAGE CASE (select models only)

Place accessories and hand mixer in the storage case. Store assembled mixer and case as desired.

STORAGE

Store hand mixer and attachments in a clean, dry location such as a cabinet or shelf.

CARING FOR YOUR MIXER

CARE AND CLEANING

1. Before cleaning any part of the mixer, set the position selector to the “OFF” position, then unplug the cord from the outlet and eject the beaters. Be sure to dry all parts thoroughly before using them again.

2. The beaters, dough hooks and whisk may be washed in hot, soapy water or in a dishwasher.

3. The mixer and the cord can be cleaned with a damp cloth but the final clean must be with a dry cloth. DO NOT IMMERSER MIXER IN WATER WHILE CLEANING. THIS MAY CAUSE ELECTRIC SHOCK, INJURY, OR DAMAGE TO THE PRODUCT.

4. To remove stubborn spots, wipe surfaces with a piece of cloth, slightly dampened, in soapy water or a mild, non-abrasive cleaner.

5. Do not use any abrasive cleaner or material to clean any part of the hand mixer, as it can harm the body of the product.

DOUGH HOOKS

Use these hooks to knead bread dough, pizza dough or other heavy batters and doughs. Use at lower speeds for best results.

Note that the beaters are interchangeable but dough hooks are not. When using dough hooks, the dough hook with the collar on the stem (*see feature drawing*) fits into the larger drive hole on the mixer.

WHISK

The whisk is used to beat air into mixtures such as egg whites, yolks or cream.

STORAGE CASE

Lets you store your hand mixer and accessories conveniently together for easy access and travel.

BEATER-EJECT BUTTON

 
 
 
 
This OSTER® Hand Mixer features a convenient beater eject button. The design allows for a smooth push of the thumb to release the beaters or dough hooks. There will not be a noticeable “click”.

BEATER-EJECT BUTTON


NOTE: Make sure hand mixer is unplugged before removing or inserting any attachments.

BEATERS

The beater design allows for thorough, fast mixing results for all types of batters. The beaters are dishwasher safe.

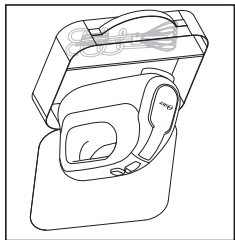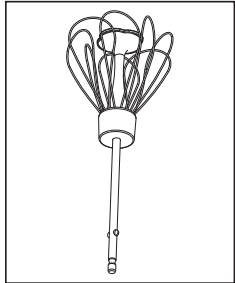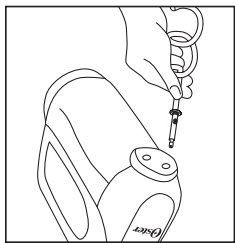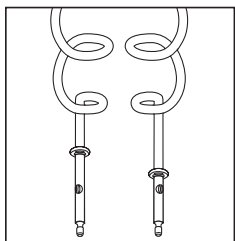

English-4

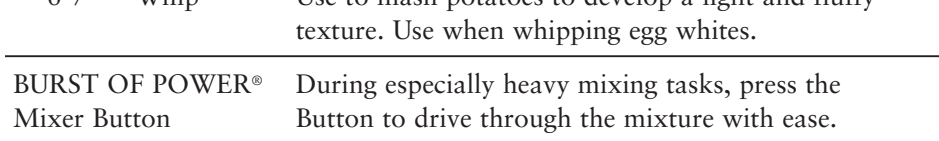 

During especially heavy mixing tasks, press the Button to drive through the mixture with ease.

Use when whipping egg whites.

Use when whipping cream for desserts.

SPEED GUIDE FOR HAND MIXER

Speeds 1 through 7: For continuous use of stirring, beating or mixing of ingredients and thin batters. May also be useful for whipping egg whites or flour into various doughs. May be used in mixing cake dough, making sauces and even heavy doughs.

SELECTION OF SPEEDS

NOTE: Do not press the “Burst” button if the speed control/eject button is at the “OFF” position. This may damage the mechanism.

2. No matter where the position selector is situated, you can get a higher speed immediately by pressing the “Burst” button.

1. You can select a speed by turning the position selector to the speed required, from Speed 1 to Speed 7.

HOW TO ADJUST THE SPEED

Oster

GCD5-OST127178-PH

Para preguntas sobre los productos llame:

Sunbeam Consumer Service

EE.UU. : 1.800.334.0759

Canada : 1.800.667.8623

www.oster.com

© 2012 Sunbeam Products, Inc. operando bajo el nombre de Jarden Consumer Solutions. Todos los derechos reservados. Distribuido por Sunbeam Products, Inc. operando bajo el nombre de Jarden Consumer Solutions, Boca Raton, Florida 33431.

Impreso en China

Printed in China

English-5



