

MultiModem DSVD™



Model MT5600DSVD

Data/Fax/Voice Modem

User Guide

MT5600DSVD User Guide

Model MT5600DSVD

P/N S0000169 Revision B

Copyright © 1998–2001 by Multi-Tech Systems, Inc.

All rights reserved. This publication may not be reproduced, in whole or in part, without prior expressed written permission from Multi-Tech Systems, Inc.

Multi-Tech Systems, Inc. makes no representations or warranties with respect to the contents hereof and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. Furthermore, Multi-Tech Systems, Inc. reserves the right to revise this publication and to make changes in the content hereof without obligation of Multi-Tech Systems, Inc. to notify any person or organization of such revisions or changes.

Record of Revisions

<i>Revision</i>	<i>Date</i>	<i>Description</i>
-----------------	-------------	--------------------

A	5/18/98	Manual released as p/n 82078600.
---	---------	----------------------------------

B	3/22/01	Manual thoroughly revised and released as p/n S0000169.
---	---------	---

Trademarks

MultiModemDSVD, Multi-Tech, and the Multi-Tech logo are trademarks of Multi-Tech Systems, Inc.

Adobe and Acrobat are trademarks of Adobe Systems Incorporated. MNP and Microcom Network Protocol are trademarks of Microcom, Inc. K56flex is a registered trademark of Rockwell International Corporation and Lucent Technologies Corporation. Microsoft, Windows, Windows 95, Windows 98, Windows Me, Windows NT, and Windows 2000 are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. All other brand and product names mentioned in this publication are trademarks or registered trademarks of their respective companies.

Patents

This device is covered by one or more of the following patents: 6,031,867; 6,012,113; 6,009,082; 5,905,794; 5,864,560; 5,815,567; 5,815,503; 5,812,534; 5,809,068; 5,790,532; 5,764,628; 5,764,627; 5,754,589; D394,250; 5,724,356; 5,673,268; 5,673,257; 5,644,594; 5,628,030; 5,619,508; 5,617,423; 5,600,649; 5,592,586; 5,577,041; 5,574,725; D374,222; 5,559,793; 5,546,448; 5,546,395; 5,535,204; 5,500,859; 5,471,470; 5,463,616; 5,453,986; 5,452,289; 5,450,425; D361,764; D355,658; D355,653; D353,598; D353,144; 5,355,365; 5,309,562; 5,301,274. Other patents pending.

Notice

Though this modem is capable of 56K bps download performance, line impairments, public telephone infrastructure, and other external technological factors currently prevent maximum 56K bps connections.

Multi-Tech Systems, Inc.
2205 Woodale Drive
Mounds View, MN 55112 U.S.A

Telephone (763) 785-3500 or (800) 328-9717
Fax (763) 785-9874
Technical Support (800) 972-2439
Internet <http://www.multitech.com>

Chapter 1: Introduction

Introduction	2
Product Description	2
Features	2
What Is in Your Modem Package?	4
Related Manuals	4

Chapter 2: Installation

Introduction	6
What You Will Need	6
Safety Warnings	6
Step 1: Mount the Feet	7
Step 2: Change the Speaker Jumper	7
Opening the Modem	7
Changing the Speaker Jumper	8
Step 3: Connect the Modem to Your System	9
RS232 Connection	9
Line Connection	9
Phone Connection	10
Microphone Connection	10
Speaker Connection	10
Power Connection	10
Power-On Test	10
Surge Protectors and Lightning	10
Step 4: Install the Modem Driver	11
Installing the Modem Driver	11
Removing Your Old Modem Driver	11
Step 5: Install and Configure Your Software	12

Chapter 3: Operation

Introduction	14
Front Panel	14
Configuring the Modem	15
Connecting to the Internet	15
Dial-Up Networking	16
Dial-Up Networking in Windows 95/98	16
Dial-Up Networking in Windows Me	17
Dial-Up Networking in Windows NT 4.0	17
Dial-Up Networking in Windows 2000	18
Fax Operation	19
Voice Operation	19
To Originate a Voice Call in Speakerphone Mode	19
To Answer a Voice Call in Speakerphone Mode	20
To Originate a DSVD Call Using the Headset	20
To Answer a DSVD Call Using the Headset	20
References	21

Chapter 4: AT Commands, S-Registers & Result Codes

AT Commands	23
AT Command Summary	24
Voice Commands	39
S-Registers	41
Result Codes	45

Chapter 5: Solving Problems

Introduction	49
None of the Indicators Light	49
The Modem Does Not Respond to Commands	50
The Modem Dials But Cannot Connect	51
The Modem Disconnects While Online	52
The Modem Cannot Connect When Answering	53
File Transfer Is Slower Than It Should Be	53
Data Is Being Lost	53
There Are Garbage Characters on the Monitor	54
The Modem Doesn't Work with Caller ID	54
Fax and Data Software Can't Run at the Same Time	54

Appendix A: Regulatory Compliance

FCC Part 68 Telecom	56
FCC Part 15	57
Industry Canada	57
Fax Branding Statement	58
Canadian Limitations Notice	58
EMC, Safety, and R&TTE Directive Compliance	59
International Modem Restrictions	59
New Zealand Telecom Warning Notice	59
South African Notice	60

Appendix B: Technical Specifications 61**Appendix C: Loopback Tests**

Introduction	64
Local Analog Loopback Test (V.54 Loop 3)	64
Remote Digital Loopback Test (V.54 Loop 2)	65
Local Digital Loopback Test (V.54 Loop 2)	66


Appendix D: Warranty, Service, and Technical Support

Limited Warranty	68
Online Warranty Registration	68
Service	68
North American Products	68
International Products	69
Technical Support	69
Internet Sites	70
Ordering Accessories	70

Appendix E: Upgrading the Modem

Introduction 71
Upgrade Overview 71
Step 1: Identify the Modem Firmware 71
Step 2: Identify the Current Firmware Version 72
Step 3: Download the Upgrade File 72
Step 4: Extract the Upgrade Files 72
Step 5: Clear Your Stored Parameters 72
Step 6: Upgrade the Modem's Firmware 73
Step 7: Restore Your Parameters 73

Index..... 74

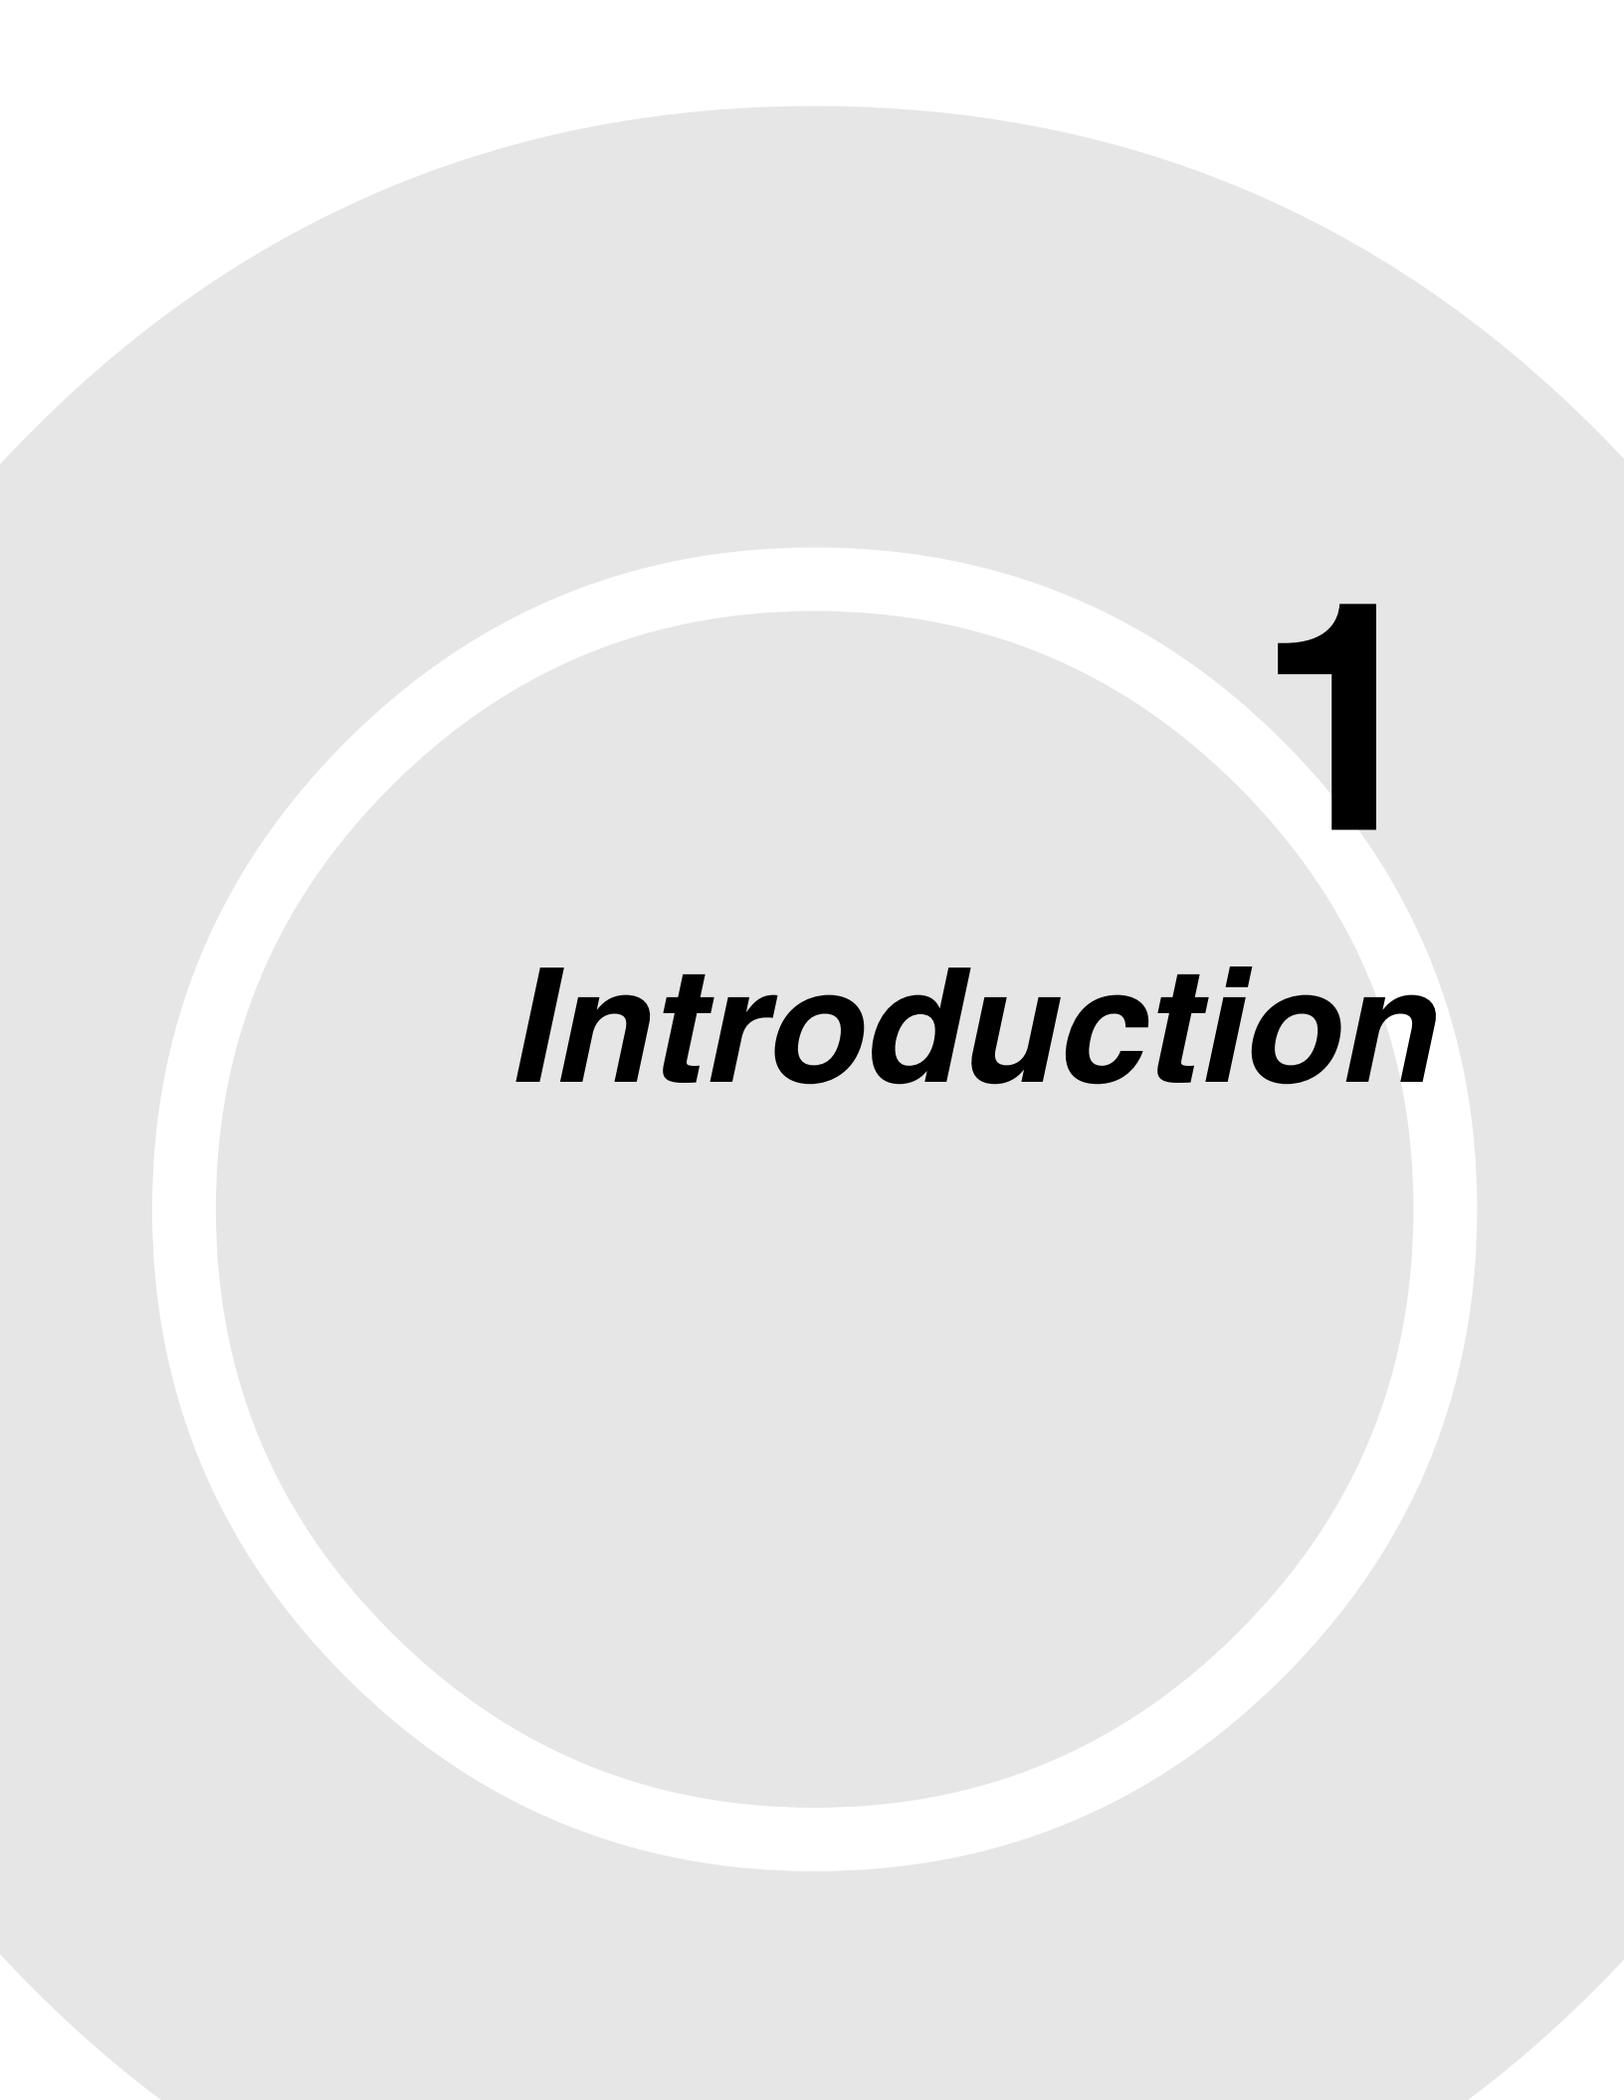

1

Introduction

Introduction

Congratulations on your purchase of your MultiModemDSVD! You have acquired not only one of the finest intelligent data, fax, and voice modems available, but a modem that can transmit voice and data at the same time. This user guide will help you to install, configure, test, and use your modem.

Product Description

The MultiModemDSVD modem incorporates both the ITU-T V.90 and the K56flex™ protocols, both of which enable Internet connections at data rates up to 53K bps* over standard telephone lines. Using these protocols, Internet service providers (ISPs) are able to send data downstream to your computer at high speeds because data on the telephone network normally is converted from digital to analog only once before it reaches your modem. Upstream transmissions, and transmissions between client modems, are limited to data rates of 33.6K bps, as are downstream transmissions that are converted more than once on the telephone network.

The MultiModemDSVD offers interactive automatic dialing and command mode configuration. You can store up to four command line/telephone numbers of up to 40 characters each in the modem's nonvolatile memory. The modem pulse or tone dials, and recognizes dial tones and busy signals for reliable call-progress detection. The modem can also detect AT&T calling card tones. It is FCC-Registered for connection to telephone networks without notification to the telephone company.

Digital simultaneous voice and data (DSVD) operation allows data transfer and voice conversation to occur simultaneously during a data connection. On a DSVD call, a headset or microphone and speaker can be used as the voice interface. Both local and remote modems must have compatible DSVD technology to support the DSVD function. The MultiModemDSVD is compatible with the industry-standard ITU-T V.70 DSVD specification.

Features

General

- Complies with major ITU-T, TIA, and EIA international standards to ensure compatibility with other modems.
- Distinguishes data, fax, or voice calls using DTMF and tone detection with software packages supporting these features.
- Supports serial port speeds to 230.4K bps with compatible serial ports
- On U.S. products, includes Caller ID to identify your caller's phone number.

*Though this modem is capable of 56K bps download performance, line impairments, public telephone infrastructure, and other external technological factors currently prevent maximum 56K bps connections.

Data

- Supports the ITU-T V.90 and K56flex™ standards for data transmission speeds up to 56K bps while maintaining compatibility with lower-speed modems.

Note: Under the 56K bps standards, you can asymmetrically download data from an ISP at speeds up to 53K bps, whereas you can upload only at speeds up to 33.6K bps.

- Supports the enhanced ITU-T V.34 standard, with data transmission speeds to 33.6K bps, while maintaining compatibility with lower-speed modems.
- Supports V.90 and K56flex speeds plus 33.6K, 31.2K, 28.8K, 26.4K, 24K, 21.6K, 19.2K, 16.8K, 14.4K, 12K, 9.6K, 7.2K, 4.8K, 2.4K, 1.2K, and 0–300 bps.
- Supports automatic fallback to slower speeds in noisy line conditions, and fall-forward to faster speeds as conditions improve.
- Supports ITU-T V.42 LAP-M and MNP Class 3 and 4 error correction.
- Supports ITU-T V.42bis (4-to-1) and MNP 5 (2-to-1) data compression.
- Automatically disables compression when transferring already-compressed files.
- Can autodial, redial, pulse (rotary) and touch-tone dial.
- Detects dial tones and busy signals for reliable call-progress detection.
- Compatible with the standard AT command set used by most communication programs.
- Has MNP10 data throughput enhancement.
- Supports the H.324 protocol (videophone ready).
- Supports distinctive rings to route voice, data, or fax calls on a single phone line.
- Supports Plug and Play (PnP).
- Can be upgraded by flash programming.

Fax

- Supports V.17, Class 1, Class 2, and Group 3 fax communication standards, allowing it to communicate with other fax modems as well as with fax machines.
- Sends and receives faxes from your computer at 14,400 bps, 9600 bps, 7200 bps, 4800 bps, 2400 bps, or 300 bps.

Voice

- Full-duplex speakerphone support with adjustable speaker volume control. Can record and play back answering machine messages using included microphone and speaker.
- Remote/local telephone answering machine (TAM) capabilities include voice mail control, record and playback, and call screening.
- Supports AT#V voice commands.
- Supports DSVD digital simultaneous voice and data.

What Is in Your Modem Package?

Your modem package has several components. Make sure you have them all before trying to operate your modem. Your package should include:

- One MT5600DSVD modem
- One DC power supply
- One set of four plastic feet
- One modular telephone cable
- One headset
- A printed *Quick Start Guide*
- This *User Guide* on disk
- An installation disk
- A CD containing data communications and other programs

If any of these items are missing, please contact Multi-Tech Systems or your dealer/distributor (see Appendix D for information on contacting Multi-Tech via telephone, fax, or the Internet).

Related Manuals

The following manuals are available from the Multi-Tech World Wide Web and FTP sites.

82076200 *MT56XX Fax Class 1 Developer's Guide*

<ftp://ftp.multitech.com/manuals/pdf/developers%20kits/5600fax.pdf>

82006502 *Fax Class 2 Developers's Kit*

<ftp://ftp.multitech.com/manuals/pdf/developers%20kits/82006502.pdf>



2

Installation

Introduction

This chapter shows step-by-step how to set up your MultiModemDSVD and configure your communications software to work with it.

What You Will Need

Before starting, please make sure you have everything you need:

We supply

- ✓ An MT5600DSVD data/fax/voice modem
- ✓ A DC power supply module
- ✓ A set of four plastic feet
- ✓ A modular telephone cable
- ✓ A headset
- ✓ An installation disk
- ✓ A CD containing data communications and other programs
- ✓ A printed *Quick Start Guide*
- ✓ This *User Guide* on disk

You supply

- ✓ A computer with an unused serial port
- ✓ A shielded RS-232 serial cable with a male DB-25 connector on one end and a connector to match your computer's serial port on the other end
- ✓ A nearby AC power outlet
- ✓ A nearby telephone line jack
- ✓ An optional PC stereo microphone
- ✓ An optional amplified speaker or sound card with speakers
- ✓ For connecting to a sound card, an optional male-to-male stereo patch cord with 1/8-inch mini plugs

If you are new to computers, see Chapter 3, "Features," for more information about the required equipment.

Safety Warnings

- Use this product only with UL- and CUL-listed computers.
- To reduce the risk of fire, use only 26 AWG or larger telephone wiring.
- Never install telephone wiring during a lightning storm.
- Never install a telephone jack in a wet location unless the jack is specifically designed for wet locations.
- Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying telephone lines.
- Avoid using a telephone (other than a cordless type) during an electrical storm; there is a risk of electrical shock from lightning.
- Do not use a telephone in the vicinity of a gas leak.

Step 1: Mount the Feet

The modem comes with a strip of self-adhesive plastic feet, which you can optionally mount on the bottom of the modem. To install the feet, simply peel them from their paper strip and press them into the recesses on the bottom of the modem.



Figure 2-1. Mounting the feet.

Step 2: Change the Speaker Jumper

This step is required *only* if you intend to connect a monophonic speaker to your modem. (This step is not required for stereo speakers or for the included headset.) If you do not intend to connect a monophonic speaker to your modem, skip to Step 3.

Warning: The following procedure must be performed by authorized service personnel.

Caution: The circuit board can be harmed by static electricity. Before you open the case, touch a grounded object, such as the metal chassis of your computer, to discharge any static electricity in your body, then touch the metal shell of the modem's RS232 connector to ensure that there is no voltage difference between you and the modem.

Opening the Modem

1. If the modem is connected, turn it off and remove all connecting cables, including power and line cables.
2. Turn the modem over.
3. On the bottom of the modem are two screws that hold the case together. Remove both screws and set them aside.
4. Turn the modem over again.
5. Remove the top part of the modem case.
6. To close the modem, reverse steps 1–5.

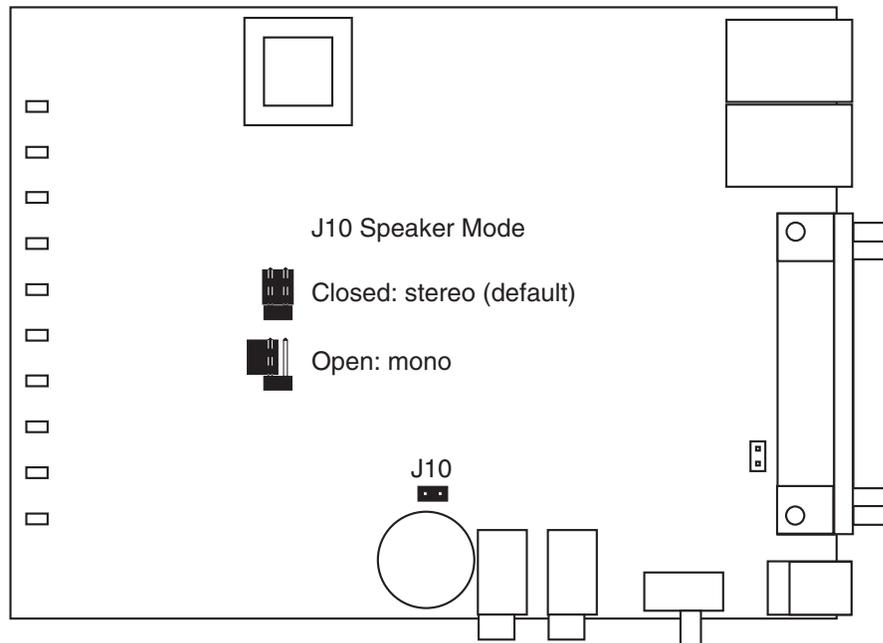


Figure 2-2. Location of speaker jumper.

Changing the Speaker Jumper

The speaker jumper (J10) is behind the internal speaker near the external speaker jack (see Figure 2-2).

- To use the MultiModemDSVD with a monophonic external speaker, remove the jumper plug from the J10 jumper pins. You can store it by placing it on one jumper pin.
- To use the MultiModemDSVD with a stereo speaker or sound card, place the jumper plug on both pins of the J10 jumper. This is the factory default position.

Step 3: Connect the Modem to Your System

Placing the modem in a convenient location, connect it to your computer's serial port, to the telephone line, to AC power, and, optionally, to your telephone. For voice operations, connect it to the supplied headset or, optionally, to a microphone and a speaker or sound card.

Note: Do not turn on the modem until you have made all the connections.

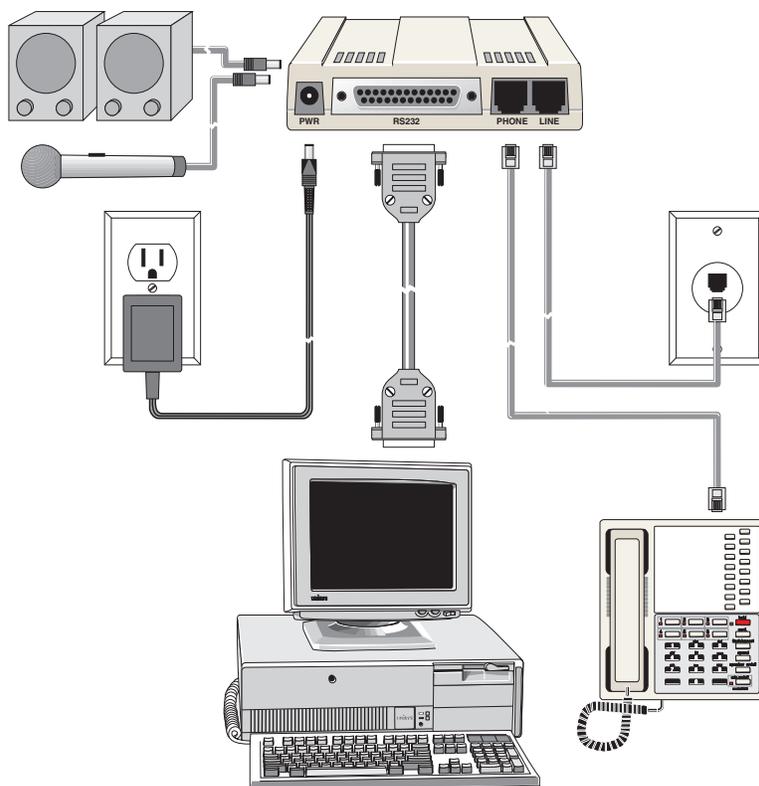


Figure 2-3. Modem connections.

RS232 Connection

Plug one end of the serial cable into the RS232 connector on the modem, and the other end into a serial port connector on your computer, such as COM1 or COM2.

Line Connection

Plug one end of the phone cable into the modem's LINE jack, and the other end into a phone line wall jack.

Note: The LINE jack is not interchangeable with the PHONE jack. Do not plug the phone into the LINE jack or the line cable into the PHONE jack.

Note: The Federal Communications Commission (FCC), Industry Canada, and other government agencies may impose certain restrictions on equipment connected to public telephone systems. For more information, see Appendix A.

Phone Connection

For voice-only calls, you can optionally plug a telephone into the modem's PHONE jack.

Microphone Connection

Plug the microphone plug of the supplied headset into the MIC jack on the side of the modem. Optionally, plug an unamplified microphone into the MIC jack. The microphone should have a 1/8-inch mini plug.

Speaker Connection

Plug the speaker plug of the supplied headset into the SPKR jack on the side of the modem. Optionally, use a 1/8-inch-plug male-to-male stereo patch cord to connect the SPKR jack on the side of the modem to the LINE IN jack on your sound card.

If you do not have a sound card, you can plug an amplified speaker directly into the SPKR jack.

Power Connection

Plug the power supply module into an AC power outlet or power strip. Plug the power supply's cable into the PWR jack on the modem.

Note: Use only the power supply supplied with the modem. Use of any other power supply will void the warranty and could damage the modem.

Power-On Test

Test the modem by turning it on (a power switch is located on the right side). When you apply power, the modem performs a diagnostic self-test, indicated by several indicators flashing for a second or two, after which the 56 indicator should light. If this does not happen, check that the power switch is on, the power supply is solidly connected, and the AC outlet is live. If these measures do not work, see Chapter 6, "Solving Problems."

Surge Protectors and Lightning

Because of power surges and other transient voltages on power and telephone lines, we recommend that you plug the modem into a surge protector rather than directly into a wall outlet, preferably a surge protector that provides protection against electrical spikes on the telephone line as well as on the power line. Please note, however, that not even a surge protector can guard against damage from a nearby lightning strike.

Step 4: Install the Modem Driver

If you use Windows 95, Windows 98, Windows Me, Windows NT 4.0, or Windows 2000, you must install the modem driver. (If you use Windows 3.1 or another operating system, skip this step and go to Step 5.) The modem driver is used by Windows to control the modem.

Installing the Modem Driver

1. Make sure your modem is connected properly, and then turn on your computer. Windows should detect your new modem and open the **Install New Modem** wizard.

Note: If Windows cannot find a modem, your modem may not have power, it may be plugged into the wrong connector on your computer, or the serial cable may be faulty. See “None of the LEDs Light When the Modem Is Turned On” and “The Modem Does Not Respond to Commands” in Chapter 5, “Solving Problems.”

2. In the **Install New Modem** wizard, select **Don't detect my modem; I will select it from a list**, and then click **Next**. A dialog box with a list of manufacturers and a list of modem models appears.
3. Insert your modem's setup disk into your floppy drive, and then click **Have Disk**.
4. In the **Install from Disk** dialog box, select the drive the installation disk is in, and then click **OK**.
5. A list of modems appears. Select your modem from the list, and then click **Next**.
6. Select the port the modem is connected to, and then click **Next**.
7. Windows installs and configures the modem.
8. Click **Finish** to exit.

Removing Your Old Modem Driver

When your new modem replaces another modem, the old modem driver remains in Windows after you install the new modem, and the old modem is still selected in HyperTerminal and other Windows applications. Though you can change the application connection descriptions one at a time, it is easier to force Windows applications to use the new modem by removing the old modem from Windows.

1. Click the **Start** button, point to **Settings**, and then click **Control Panel**.
2. Double-click the Modems icon to open the **Modems Properties** dialog box.
3. In the list box, select the old modem.
4. Click **Remove**, and then click **Close**.
5. The next time you dial a HyperTerminal connection, it will select your new modem and ask you to confirm the selection.

Step 5: Install and Configure Your Software

You may use either the communication program included with your modem or a third-party program. Communication programs designed for Windows 95/98/Me and Windows NT/2000 normally do not need to be manually configured, since they use the Plug and Play configuration supplied by the Windows modem driver. Communication programs designed for DOS and other operating systems, however, may need to be manually configured to work with your modem. Though each communication program is different, the following procedure should work with most of them.

1. Turn on your computer and run your communication program.
2. Find the dialog box or menu that lets you select your modem. (In Windows Terminal select **Settings | Modem Commands**; in HyperTerminal select **File | Properties | Phone Number**; and in PhoneTools select **Configure | General Configuration | Communication | Change Modem**.)
3. Choose your modem from the program's modem list. If it isn't listed, choose a generic modem and modify the settings as necessary.
4. Change the modem initialization string, if necessary. The factory default configuration works well for most purposes. To load the factory default configuration, use **AT&F**. To load a custom configuration that was saved using the **&W** command, use **ATZ**. Note that the **Z** command must be in a command string by itself. For a Macintosh, the initialization string should include the **&D0** command. If you do not want the modem to always answer the phone, add **S0=0** to the string. To use Caller ID with the modem, add **S0=2** to the string (Caller ID information is sent between the first and second rings, so the phone must ring at least twice before the modem picks up the line). Depending on the software, you might have to end the string with a carriage return character (^M).

Note: To change the modem's default configuration, type new commands in the communication program's terminal window, adding the **&W** command to store them in the modem's nonvolatile memory. For instance, to create a default configuration for a Macintosh computer that turns off autoanswer, type **AT&F&D0S0=0&W**. The new configuration loads automatically whenever the modem is turned on or receives the **ATZ** command.

5. Select the port the modem is connected to (normally COM1 or COM2).
6. Select your serial port speed. This can be labeled "maximum speed," "DTE bps," or "baud rate." Ideally, if you use data compression, you should set your serial port baud rate to four times the modem's maximum transmission speed or faster; however, few files can be compressed enough to require speeds that high, and not all serial ports can handle speeds that high.
7. If the communication program has an autobaud selection, make sure it is disabled. Autobaud applies only to older modems, and can cause problems if enabled.
8. If the program allows you to edit the no-connect messages (*NO CARRIER*, *BUSY*, *NO ANSWER*, *NO DIALTONE*), make sure there is no space between *DIAL* and *TONE* in *NO DIALTONE*.
9. Refer to the program manual or online help for other configuration choices. In most cases you can accept the default values.



3

Operation

Introduction

Like any modem, your MultiModemDSVD operates only under the control of a communication program, such as the one included with the modem. It also operates under other general-purpose data communication programs, such as Windows Terminal and HyperTerminal. For information on how to use the modem with the communication program of your choice, please refer to the program's documentation.

Unlike other modems, with the MultiModemDSVD you can also simultaneously send voice and data over a single phone line or, using third-party white-board software, work on a document with someone at another location.

Front Panel



Figure 3-1. Front panel

The MultiModemDSVD has ten LED indicators on the front panel that indicate status, configuration, and activity:

- TD Transmit Data.** The TD LED flashes when the modem is transmitting data to another modem. The state of the LED matches the TD circuit on pin 2 of the RS-232C/V.24 interface.
- RD Receive Data.** The RD LED flashes when the modem is receiving data from another modem. The state of the LED matches that of the RD circuit on pin 3 of the RS-232C/V.24 interface.
- CD Carrier Detect.** The CD LED lights when the modem detects a valid carrier signal from another modem. It is on when the modem is communicating with the other modem and off when the link is broken.
- 56 56K Mode (56,000–28,000 bps).** The 56 LED lights whenever the modem connects to an ISP server in K56flex or V.90 mode. The actual connection speed depends on server capabilities and line conditions.
- 33 V.34 Mode (33,600–16,800 bps).** The 33 LED lights whenever the modem connects in V.34 mode.
- 14 V.32bis Mode (14,400 bps–).** The 14 LED lights whenever the modem connects in V.32bis mode.

Note: Although the modem can connect at lower than V.32bis speeds, no speed indicator lights during the connection.

- **OH Off-Hook.** The OH LED lights when the modem is off-hook, which occurs when the modem is dialing, online, or answering a call. The LED flashes when the modem pulse-dials.
- **TR Terminal Ready.** The TR LED lights when a datacomm program initializes the modem. It means the modem is ready for an outgoing or incoming call. It goes off when the datacomm program disconnects the COM port. When it goes off, a connected modem will disconnect. The state of the TR LED matches that of the DTR circuit on pin 20 of the RS-232C/V.24 interface.
- **EC Error Correction (V.42).** The EC LED lights continuously when the modem is in V.42 error correction mode, and blinks when compression is activated.
- **FX Fax.** The FX LED lights when the modem is in fax mode.

Note: When you turn on the modem, the speed lights flash briefly as the modem does a self-test, then the LED for the default modem baud rate lights. The default rate for the modem is 56K bps. After a call, the LEDs for the connection's baud rate remain lit until another call is made or the modem is reset. If you connect at a rate under 14,400 bps, all speed LEDs remain off after the connection is broken, even though the modem is still turned on.

Configuring the Modem

Your modem normally is configured either through Windows or through the communication program you are using. The default settings work best for most purposes. See "Step 5: Install and Configure Your Software" in Chapter 2 for help in setting up your communication program.

You can also configure your modem directly by typing AT commands in the terminal window of a communication program. See Chapter 4 for descriptions of the modem's AT commands.

Connecting to the Internet

Your Multi-Tech modem is your gateway to the Internet and the World Wide Web. To access the Internet and Web via your modem, you must establish a dial-up account with an Internet service provider (ISP). To locate an ISP near you, look in a local directory or computer publication. Your ISP should provide you with the following information:

- User name (also called user ID)
- Password
- Access number (the number you call to connect to the server)
- Host name and/or domain name
- Domain Name Server (DNS) server address

If, besides the Web, you use the Internet for e-mail and newsgroups, your ISP should also provide you with the following information:

- E-mail or POP mail address

- POP server address
- Mail or SMTP address
- News or NNT server address

Dial-Up Networking

Whether you use the Internet for e-mail or for browsing the Web, to connect to it through your modem, you must first set up a remote-node client program. The one in Windows 95, 98, Me, NT 4.0, and 2000 is called Dial-Up Networking. Dial-Up Networking establishes your connection to the ISP's server, which is the shared computer that manages calls from clients (your computer) to the Internet. Most, if not all, Windows browsers start Dial-Up Networking automatically when you open them.

Dial-Up Networking in Windows 95/98

To install and run Dial-Up Networking in Windows 95 or 98

Install a NetWare client or Client for Microsoft Networks on the client computer. Microsoft Client for Netware Networks, Microsoft Client for Microsoft Networks, and two Novell Netware clients are included with Windows 95/98.

1. Insert the Windows compact disc into the CD-ROM drive.
2. In Windows, click the Start button, and then select Settings, Control Panel, and Add/Remove Programs.
3. Click the **Windows Setup** tab.
4. Check **Communications** in the **Components** list.
5. Click the **Details** button.
6. Check **Dial-up Networking** in the **Components** list.
7. Click **OK**. Dial-Up Networking is installed from the Windows compact disc.
8. When the installation is complete, reboot the computer.

To create a connection entry

1. Double-click the **My Computer** icon.
2. Double-click the **Dial-Up Networking** icon.
3. Double-click the **Make New Connection icon**, and follow the directions in the wizard to create a connection entry.

To dial your Internet access provider

1. Double-click the **My Computer** icon.
2. Double-click the **Dial-Up Networking** icon.
3. Double-click the icon with your ISP's name.
4. Type your name and password if they are not already entered.
5. Click **Connect**.

6. Follow the instructions provided by your ISP for browsing the the Internet, reading e-mail, and accessing information.

For further information on Dial-Up Networking or Microsoft Client for NetWare Networks, see Windows Help.

Dial-Up Networking in Windows Me

To install Dial-Up Networking

Dial-Up Networking is automatically installed with Windows Me.

To create a connection entry

1. Click **Start**, point to **Programs**, point to **Accessories**, point to **Communications**, and then click **Internet Connection Wizard**.
2. Click **I want to sign up for a new Internet account**, and then click **Next**.
3. Follow the instructions for setting up your dial-up properties and detecting your modem.

To dial your Internet access provider

1. Click **Start**, point to **Settings**, and then click **Control Panel**.
2. Double-click the **Dial-Up Networking** icon.
3. Double-click the icon with your ISP's name.
4. Follow the instructions provided by your ISP for browsing the the Internet, reading e-mail, and accessing information.

For further information on Dial-Up Networking, see Windows Me Help.

Dial-Up Networking in Windows NT 4.0

To install Dial-Up Networking

1. Double-click the **My Computer** icon, and then double-click the **Dial-Up Networking** icon. If Dial-Up Networking is not installed, you will see an **Install** button in the **Dial-Up Networking** dialog box.
2. Insert the Windows NT 4.0 compact disc into the CD-ROM drive.
3. Click **Install** in the **Dial-Up Networking** dialog box.
4. In the **Add RAS Device** dialog box, choose the modem to use with **Dial-Up Networking**, and then click **OK**.
5. In the **Remote Access Setup** dialog box, click **Configure**.
6. In the **Configure Port Usage** dialog box, click **Dial out only**, and then click **OK**.
7. In the **Remote Access Setup** dialog box, click **Network**.
8. In the **Network Configuration** dialog box, make sure that only **TCP/IP** is selected, and then click **OK**.
9. If there is a network interface card that does not have TCP/IP bound to it, the Microsoft TCP/IP Properties window appears. Click **Cancel** to close the window.

10. Click **Continue**, and then click **Restart** to finish the installation.
11. When the installation is complete, reboot the computer.

To create a connection entry

1. Double-click the **My Computer** icon, and then double-click the **Dial-Up Networking** icon.
2. In the **Dial-Up Networking** dialog box, click the **New** button.
3. In the **New Phonebook Entry** wizard, follow the directions to create a connection entry.

To dial your Internet access provider

1. Double-click the **My Computer** icon.
2. Double-click the **Dial-Up Networking** icon.
3. Click the connection in **Phonebook entry to dial**.
4. Click **Dial**.
5. Follow the instructions provided by your ISP for browsing the the Internet, reading e-mail, and accessing information.

For further information on Dial-Up Networking, see Windows NT Help.

Dial-Up Networking in Windows 2000**To install Dial-Up Networking**

Dial-Up Networking is automatically installed with Windows 2000.

To create a connection entry

1. Select **Start | Settings | Network and Dial-up Connections**.
2. Double-click **Make New Connection**, and then click **Next**.
3. Click **Dial-up to the Internet**, click **Next**, and then follow the instructions in the **Network Connection** wizard.

To dial your Internet access provider

1. Select **Start | Settings | Network and Dial-up Connections**.
2. Double-click the icon with your ISP's name.
3. Follow the instructions provided by your ISP for browsing the the Internet, reading e-mail, and accessing information.

For further information on Dial-Up Networking, see Windows 2000 Help.

Fax Operation

Using the PhoneTools program included with your modem, you can use your modem to send and receive faxes directly from your computer. The following procedure uses print capture, which enables you to fax a document directly from the Windows application in which you created it without opening PhoneTools.

1. Create a document in a Windows application, such as a word processor, graphic editor, or spreadsheet. To fax the document, keep the application and the document open and select the **Print** command from the **File** menu.
2. Select **CAPTURE FAX BVRP** as the printer driver, and then click **OK**. The **Send Fax** wizard appears.
3. In the **Recipient** section, type the required information or extract it from the Phone Book by clicking .
4. In the **Template** section, optionally select a cover page and type a cover message.
5. Select the document to be sent. The default file when sending from within a Windows application is **Capture.dgr**.
6. Select the date and time to send the document, if you do not want to send it immediately.
7. Click **Finish** to start the transmission.

Voice Operation

Operation in DSVD mode allows data transfer and voice conversation to occur simultaneously during a data connection. On a DSVD call, a headset or microphone and speaker can be used as the voice interface. Both local and remote modems must have compatible DSVD technology to support the DSVD function. DSVD can be used by running a communications application that supports DSVD. Follow the application instructions. DSVD can also be controlled manually issuing AT commands to the modem as described in the following sections.

To Originate a Voice Call in Speakerphone Mode

1. In the terminal window of your communications application, type **AT** and press **ENTER**. The modem will respond with **OK**.
2. Type **AT&F** and press **ENTER** to reset the modem to its default configuration.
3. Type **AT#CLS=8#VRN=0#VLS=6** and press **ENTER** to initialize the modem for speakerphone mode.
4. To dial, type **ATDTnnnnnnnn** and press **ENTER**, where *nnnnnnnn* is the phone number of a remote party. The modem will report **VCON** at the completion of dialing to indicate the speakerphone is on.
5. To hang up, type **+++ATH** and press **ENTER**.

To Answer a Voice Call in Speakerphone Mode

1. In the terminal window of your communications application, type **AT** and press **ENTER**. The modem will respond with **OK**.
2. Type **AT&F** and press **ENTER** to reset the modem to its default configuration.
3. Type **AT#CLS=8#VRN=0#VLS=6S0=0** and press **ENTER** to initialize the modem for speakerphone mode.
4. To answer a call in speakerphone mode upon receipt of a **RING** message, type **ATA** and press **ENTER**. The modem will report **VCON** to indicate the speakerphone is on.
5. To hang up, type **ATH** and press **ENTER**.

To Originate a DSVD Call Using the Headset

1. In the terminal window of your communications application, type **AT** and press **ENTER**. The modem will respond with **OK**.
2. Type **AT&F** and press **ENTER** to reset the modem to its default configuration.
3. Type **AT-SMS=1#VLS=5** and press **ENTER** to enable DSVD mode using the headset.
4. To dial, type **ATDTnnnnnnnn** and press **ENTER**, where *nnnnnnnn* is the phone number of a remote modem.
5. You will hear some high pitched tones, then a static-like sound after the remote modem picks up your call. You will see a **CONNECT** response on your terminal. You can then send data to the remote modem and talk to the remote user by speaking into the microphone.
6. To hang up, type **+++ATH** and press **ENTER**.

Note: If DSVD is enabled, the modems will not connect if the V.34 connect rate is below 12000 bps. The voice link is not maintained in data mode, so if **+++** is typed and the user goes back to data mode, a simulated busy is played to both modems to tell the users to place their handsets on hook. If you get an **ERROR** message when dialing or answering a call, check to make sure the lines are not in the wrong jacks. A DSVD data connection is terminated by dropping **DTR** (if enabled by **&D2**) or by issuing **+++ATH**.

To Answer a DSVD Call Using the Headset

1. In the terminal window of your communications application, type **AT** and press **ENTER**. The modem will respond with **OK**.
2. Type **AT&F** and press **ENTER** to reset the modem to its default configuration.
3. Type **AT-SMS=1#VLS=5** and press **ENTER** to enable DSVD mode using the headset.
4. When the modem responds by displaying **RING** on the screen, type **ATA** and press **ENTER** to answer the call.

5. You will hear some high pitched tones, then a static-like sound after the remote modem picks up your call. You will see a *CONNECT* response on your terminal. You can then send data to the remote modem and talk to the remote user by speaking into the microphone
6. To hang up, type **+++ATH** and press **ENTER**.

References

The World Wide Web is an excellent source of information about modems in general and modem installation, configuration, and troubleshooting in particular. The following Web sites are good places to start:

- Costmo's Other Resources Page:
<http://modems.rosenet.net/or/>
- Curt's High Speed Modem Page:
<http://www.teleport.com/~curt/modems.html>
- Data Communications FAQ:
<http://www.best.com/~malch/comfaq.html>
- Multi-Tech Systems, Inc.:
<http://www.multitech.com/>

4

AT Commands, S-Registers & Result Codes

AT Commands

AT commands are used to control the operation of your modem. They are so called because each command must be preceded by the characters *AT* to get the *AT*tention of the modem.

AT commands can be issued only when the modem is in command mode or online command mode. The modem is in *command mode* whenever it is not connected to another modem. The modem is in *data mode* whenever it is connected to another modem and ready to exchange data. *Online command mode* is a temporary state in which you can issue commands to the modem while connected to another modem. To put the modem into online command mode from data mode, you must issue an *escape sequence* (+++) followed immediately by the *AT* characters and the command, e.g., +++ATH to hang up the modem. To return to data mode from online command mode, you must issue the command ATO.

To send AT commands to the modem you must use a communications program, such as the HyperTerminal applet in Windows 95 and NT 4.0, or the Trio communications program included with your modem. You can issue commands to the modem either directly, by typing them in the terminal window of the communications program, or indirectly, by configuring the operating system or communications program to send the commands automatically. Fortunately, communications programs make daily operation of modems effortless by hiding the commands from the user. Most users, therefore, need to use AT commands only when reconfiguring the modem, e.g., to turn autoanswer on or off.

The format for entering an AT command is **ATXn**, where *X* is the command and *n* is the value for the command, sometimes called the command *parameter*. The value is always a number. If the value is zero, you can omit it from the command; thus, **AT&W** is equivalent to **AT&W0**. Most commands have a *default* value, which is the value that is set at the factory. The default values are shown in the "AT Command Summary," which begins on the next page.

You must press ENTER to send the command to the modem. Any time the modem receives a command, it sends a response known as a *result code*. The most common result codes are *OK*, *ERROR*, and the *CONNECT* messages that the modem sends to the computer when it is connecting to another modem. For a table of valid result codes, see "Result Codes" at the end of this chapter.

You can issue several commands in one line, in what is called a command *string*. The command string begins with **AT** and ends when you press ENTER. Spaces to separate the commands are optional; they are ignored by the command interpreter. The most familiar command string is the *initialization string*, which is used to configure the modem when it is turned on or reset, or when your communications software calls another modem.

AT Command Summary

Command:	AT	Attention Code
Values:		n/a
Description:		The attention code precedes all command lines except A/ and the escape sequence.
Command:	ENTER	Key
Values:		n/a
Description:		Press the ENTER or RETURN key to execute most commands.
Command:	A	Answer
Values:		n/a
Description:		Answers an incoming call before the final ring.
Command:	A/	Repeat Last Command
Values:		n/a
Description:		Repeats the last command string. Do not precede this command with AT . Do not press ENTER to execute.
Command:	Bn	Communication Standard Setting
Values:		$n = 0$ or 1
Default:		1
Description:	B0	Selects ITU-T V.22 mode when the modem is at 300 or 1200 bps.
	B1	Selects Bell 212A when the modem is at 300 or 1200 bps.
Command:	Cn	Carrier Control
Values:		$n = 1$
Default:		1
Description:	C0	Transmit carrier always off. (Not supported.)
	C1	Normal transmit carrier switching (included for backward compatibility with some software).
Command:	Ds	Dial
Values:		$s =$ dial string (phone number and dial modifiers)
Default:		none
Description:		Dials telephone number s , where s may up to 40 characters long and include the following dial string modifiers.
	0–9	Digits 0 through 9
	*	The “star” digit (tone dialing only)
	#	The “pound” digit (tone dialing only)
	A–D	A, B, C, and D tone digits. Country specific; some countries may prohibit these digits.
	L	Redial last number. (Must be placed immediately after ATD .)
	P	Select pulse-dialing until a T is encountered. Affects current and subsequent dialing.
	T	Select tone-dialing until a P is encountered. Affects current and subsequent dialing.
	W	Wait for a new dial tone before continuing to dial. (X2 or X4 must be selected.)
	,	Pause during dialing for time set in register S8 .

- ; Return to command mode after dialing. (Place at end of dial string.)
- ! Hook flash. Causes the modem to go on-hook for the time specified in *S29*, then off-hook again .
- @ Wait for silence. Causes the modem to wait for 5 seconds of silence before processing the next part of the command. If silence is not detected within the time set in register *S7*, the modem returns a NO ANSWER or BUSY code.
- ^ Toggle data calling tone on or off. Applies only to current dialing attempt.
- & Detect credit card “bong” tone. If the tone is not detected within the time specified by *S7* (US models), the modem aborts the rest of the sequence and hangs up. The character should follow the phone number and precede the user’s call card number, e.g., `ATDT1028806127853500&123456789`.

Command: DS=y Dial Stored Telephone Number

Values: *n* = 0–3
 Default: none
 Description: Dial a number previously stored in directory number *y* by the `&Zy=x` command. Example: `ATDS=3`.

Command: En Echo Command Mode Characters

Values: *n* = 0 or 1
 Default: 1
 Description: E0 Do not echo keyboard input to the terminal.
 E1 Do echo keyboard input to the terminal.

Command: Hn Hook Control

Values: *n* = 0 or 1
 Default: 0
 Description: H0 Go on-hook (hang up) and terminate any `&T` test that is in progress.
 H1 Go off-hook (make the phone line busy) and enter command mode.

Command: In Information Request

Values: *n* = 0–6
 Default: None
 Description: I0 Display the product code. Example: `MT5600DSVD`.
 I1 Calculate the ROM checksum and display the least significant byte in decimal format.
 I2 Calculate the ROM checksum and compare it to the prestored checksum, displaying `OK` if they match, or `ERROR` if they do not.
 I3 Display the controller firmware version (F), the basic model (V90), the application code (A), and the interface type code (I) in the format `VF.FFF-V90_AI`. The application codes are *D* for desktop and *L* for low power (PCMCIA). The interface codes are *S* for serial and *P* for parallel. Example: `V2.210-V90_DS`
 I4 Display the OEM-defined identifier string in either binary or ASCII format.
 I5 Display the country code. Example: `022`.
 I6 Display the modem data pump model and internal code version. Example: `RCV56DPF-PLL L8571A Rev 29.00/29.00`.

Command: **Ln** **Monitor Speaker Volume**

Values: $n = 0, 1, 2, \text{ or } 3$

Default: 1

Description: L0 Select low volume.
 L1 Select low volume.
 L2 Select medium volume.
 L3 Select high volume.

Note: Use the *M* command to turn the speaker on or off.

Command: **L5** **Display Legacy Parameters**

Value: 5

Default: None

Description: Displays the current values for the error correction, flow control, data compression, and serial port speed commands.

Example:

```
at15
&E2 &E3 &E15 $SB115200
OK
```

Note: Use the *&V* command to display the other parameters.

Command: **Mn** **Monitor Speaker Mode**

Values: $n = 0, 1, 2, \text{ or } 3$

Default: 1

Description: M0 Speaker is always off.
 M1 Speaker is on until the carrier signal is detected.
 M2 Speaker is always on when the modem is off-hook.
 M3 Speaker is off when receiving carrier and during dialing, but on during answering.

Command: **Nn** **Modulation Handshake**

Values: $n = 0 \text{ or } 1$

Default: 1

Description: N0 Disables automode. The modem attempts a handshake at the speed set by *S37* or, if *S37=0*, at the most recently sensed serial port speed.
 N1 Enables automode. The modem attempts a handshake at the speed set by *S37* or, if *S37=0*, at the highest possible speed. During the handshake, fallback to a lower speed can occur.

Note: Setting the *N* command automatically sets the *<automode>* parameter of the *+MS* command. *N* and *S37* are provided only for compatibility with existing software. *+MS* is the recommended command.

Command:	On	Return Online to Data Mode
Values:		0 or 1
Default:		None
Description:	O0	Exit online command mode and return to online data mode without a retrain. Normally used after a +++ escape (see +++AT<CR> escape sequence).
	O1	Exit online command mode and return to online data mode after a retrain.
Command:	P	Pulse Dialing
Values:		P, T
Default:		T
Description:		Forces pulse (non-touch-tone) dialing until a T command or dial modifier is received.
Command:	Qn	Result Codes Enable/Disable
Values:		n = 0 or 1
Default:		0
Description:	Q0	Enable result codes.
	Q1	Disable result codes.
Command:	Sr	Select Register
Values:		r = S-register number
Default:		None
Description:		Selects register Sr as the last register accessed. E.g., S0. The command AT? can then be used to read the register, and the command AT=n can then be used to set the register to value n.
Command:	Sr=n	Set Register Value
Values:		r = S-register number; n varies
Default:		None
Description:		Set value of register Sr to n, where n is entered in decimal format. E.g., S0=1. If the short form AT=n is used, the value is written to the last accessed S-register.
Command:	Sr?	Read Register Value
Values:		r = S-register number
Default:		None
Description:		Read value of register Sr and display it in 3-digit decimal format. E.g., S2? gives the response 043. If the short form AT? is used, the last accessed S-register is read.
Command:	T	Tone Dialing
Values:		P, T
Default:		T
Description:		Forces DTMF (touch-tone) dialing until a P command or P dial modifier is received.
Command:	Vn	Result Code Format
Values:		n = 0 or 1
Default:		1
Description:	V0	Displays result codes as digits (terse response).
	V1	Displays result codes as words (verbose response).

Command: **Wn** **Connect Message Control**
 Values: $n = 0, 1, \text{ or } 2$
 Default: 0
 Description: W0 The *CONNECT* result code reports the serial port speed only.
 W1 The *CONNECT* result code reports the line speed, the error correction protocol, and the serial port speed, respectively.
 W2 The *CONNECT* result code reports the line speed only.

Note: See also the *\V* command

Command: **Xn** **Result Code Selection**
 Values: $n = 0-4$
 Default: 4
 Description: This command selects which subset of the result messages will be used by the modem to inform the computer of the results of commands.
 X0 Sends *OK*, *CONNECT*, *RING*, *NO CARRIER*, *ERROR* and *NO ANSWER*; does not look for dial tone or busy signal.
 X1 Sends *X0* messages and connect speed; does not look for dial tone or busy signal.
 X2 Sends *X1* messages with *NO DIALTONE*; does not look for busy signal.
 X3 Sends *X1* messages with *BUSY*; does not look for dial tone.
 X4 Sends all messages, including *NO DIALTONE* and *BUSY*.

Note: If the modem is in fax mode, the only message sent to indicate a connection is *CONNECT* without a speed indication. See also the *\V* command.

Command: **Yn** **Long Space Disconnect**
 Values: $n = 0 \text{ or } 1$
 Default: 0
 Description: Y0 Disable sending or responding to long space break signal on disconnect.
 Y1 Enables long space disconnect. In non-error correction mode, the modem sends a long space of four seconds prior to going on-hook. In non-error correction mode, the modem responds to the receipt of a long space (i.e., a break signal greater than 1.6 seconds) by going on-hook.

Command: **Zn** **Modem Reset**
 Values: $n = 0 \text{ or } 1$
 Default: None
 Description: The modem performs a soft reset and restores (recalls) the configuration profile according to the parameter supplied. If no parameter is specified, zero is assumed.
 Z0 Reset modem to profile saved by the last *&W* command (profile 0).
 Z1 Reset modem and restore stored profile 1.

Note: See also the *&F* and *&W* commands.

Command: **&Cn Data Carrier Detect (DCD) Control**
 Values: $n = 0$ or 1
 Default: 1
 Description: **&C0** Forces the DCD circuit to always be high.
 &C1 DCD goes high when the remote modem's carrier signal is detected, and goes low when the carrier signal is not detected.

Command: **&Dn Data Terminal Ready (DTR) Control**
 Values: $n = 0, 1, 2,$ or 3
 Default: 2
 Description: This command interprets the high to low transition of the DTR signal from the computer according to the supplied parameter. The action taken depends on the current **&Q** setting.
 &D0 **&Q0, &Q5, &Q6:** DTR is ignored (assumed high). Allows operation with computers that do not provide DTR.
 &D1 **&Q0, &Q5, &Q6:** DTR drop is interpreted by the modem as if the asynchronous escape sequence had been entered. The modem returns to asynchronous command state without disconnecting.
 &D2 **&Q0–&Q6:** DTR drop causes the modem to hang up. Autoanswer is inhibited.
 &D3 **&Q0, &Q5, &Q6:** DTR drop causes the modem to perform a soft reset as if the **Z** command were received. The **&Y** setting determines which profile is loaded.
 &Q5 or **&Q6** and **+FCLASS=1** or **+FCLASS=2:** Same as for **&Q0**.

Note: If **&D1, &D2,** or **&D3** is set, the modem will not dial without a DTR drop.

Command: **&En V.42 Error Correction Modes**
 Values: $n = 0, 1,$ or 2
 Default: 1
 Description: **&E0** V.42 non-error correction mode (V.42 disabled).
 &E1 V.42 auto-reliable mode.
 &E2 V.42 reliable mode (V.42 enabled).

Command: **&En Modem-Initiated Flow Control**
 Values: $n = 3, 4,$ or 5
 Default: 4
 Description: **&E3** Flow control disabled.
 &E4 CTS/RTS hardware flow control.
 &E5 XON/XOFF software flow control.

Note: See also the **L5** and **&K** commands.

Command: **&En V.42bis Data Compression**
 Values: $n = 14$ or 15
 Default: 15
 Description: &E14 V.42bis data compression disabled.
 &E15 V.42bis data compression enabled.

Note: This command controls only V.42bis data compression, whereas the %C command controls both V.42bis and MNP-5 data compression. The command in effect is the one last entered. See also the L5 command.

Command: **&Fn Load Factory Settings**
 Values: $n = 0$ or 1
 Default: None
 Description: &F0 Load factory configuration 0.
 &F1 Load factory configuration 1.

Note: See also the Z, L5, and &V commands.

Command: **&Gn V.22bis Guard Tone Control**
 Values: $n = 0, 1,$ or 2
 Default: 0
 Description: &G0 Disable guard tone.
 &G1 Set guard tone to 550 Hz.
 &G2 Set guard tone to 1800 Hz.

Note: The &G command is not used in North America, and may not be permitted in some countries.

Command: **&Jn Telephone Jack Control**
 Values: $n = 0$ or 1
 Default: None
 Description: &J0 NA
 &J1 NA

Note: This command is included only for backwards compatibility. It performs no function except to load the S-register. The parameter value, if valid, is written to S21 bit 1.

Command: **&Kn Flow Control Selection**
 Values: $n = 0, 3, 4, 5,$ or 6
 Defaults: 3 (data modem mode)
 6 (fax modem and voice modes)
 Description: &K0 Disables flow control.
 &K3 Enables CTS/RTS hardware flow control.
 &K4 Enables XON/XOFF software flow control.
 &K5 Enables transparent XON/XOFF flow control.
 &K6 Enables both RTS/CTS and XON/XOFF flow control.

Note: See also the &E command

- Command: **&Mn Communications Mode**
 Values: $n = 0$
 Default: 0
 Description: This command determines the DTR operating mode. The modem treats the **&M** command as a subset of the **&Q** command.
- &M0** Selects direct asynchronous operation. Note that the command sequence **&M0\N0** selects normal buffered mode, but the command sequence **\N0&M0** selects direct mode. This is because the **\N0** command is analogous to the **&Q6** command.
-
- Command: **&Pn Pulse Dial Make/Break Ratio**
 Values: $n = 0$
 Default: 0
 Description: **&P0** Selects a make/break dial ratio of 39:61 at 10 pulses per second.
-
- Command: **&Qn Asynchronous Communications Mode**
 Values: $n = 0, 5, 6$
 Default: 5
 Description: This command is an extension of the **&M** command, and is used to control which connection modes are permitted. It is used in conjunction with **S36** and **S48**. (See also the **\N** command.)
- &Q0** Selects direct asynchronous operation. See **&M0**.
 &Q5 The modem will try to negotiate an error-corrected link. The modem can be configured using **S36** to determine whether a failure will result in the modem disconnecting or falling back to a non-error-correction connection. See also **\N3**.
 &Q6 Selects asynchronous operation with speed buffering and no error correction. Same as **\N0**.
-
- Command: **&Sn Data Set Ready (DSR) Control**
 Values: $n = 0$ or 1
 Default: 0
 Description: **&S0** Force DSR high (on) at all times.
 &S1 Let DSR go high only during a connection.
-
- Command: **&Tn V.54 Test Commands**
 Values: $n = 0, 1, 3, 4, 5, 6, 7,$ or 8
 Default: None
 Description: The modem can perform selected test and diagnostic functions. A test can be run only when the modem is in asynchronous operation in non-error-correction mode (normal or direct mode). For tests 3, 6, and 7, a connection between the two modems must first be established. To terminate a test in progress, the escape sequence (+++) must be entered first, except for parameters 7 and 8. If **S18** is non-zero, a test terminates automatically after the time specified by **S18** and displays the **OK** message.
- &T0** Abort. Stop any test in progress.
 &T1 Start local analog loopback, V.54 Loop 3. If a connection exists when this command is issued, the modem hangs up. The **CONNECT XXXX** message is displayed upon the start of the test.

- &T3 Start local digital loopback, V.54 Loop 2. If no connection exists, *ERROR* is returned.
- &T4 Enables acknowledgment for remote digital loopback request.
- &T5 Ignores acknowledgment for remote digital loopback request.
- &T6 Requests a remote digital loopback, V.54 Loop 2, without self-test. If no connection exists, *ERROR* is returned. The *CONNECT XXXX* message is displayed upon the start of the test.
- &T7 Requests a remote digital loopback, V.54 Loop 2, with self test. (In self test, a test pattern is looped back and checked by the modem..) If no connection exists, *ERROR* is returned. When the test is terminated, the number of detected errors is reported to the computer.
- &T8 Starts local analog loopback, V.54 Loop 3, with self test. If a connection exists, the modem hangs up before the test begins. When the test is terminated, the number of detected errors is reported to the computer.

Command: **&V0 Display Current Configuration**
 Values: 0
 Default: None
 Description: Displays the current (active) configuration.

Note: See also the *L5* command.

Command: **&V1 Display Last Connection Statistics**
 Values: 1
 Default: None
 Description: Displays statistics for the last connection.

Command: **&Wn Store Current Configuration**
 Values: *n* = 0 or 1
 Default: None
 Description: &W0 Stores current modem settings in nonvolatile memory as Profile 0. Profile 0 is loaded instead of the factory defaults at power-on (if **&Y0** is set) and by the **ATZ** command.
 &W1 Stores current modem settings in nonvolatile memory as Profile 1. Profile 1 is loaded instead of the factory defaults at power-on (if **&Y1** is set) and by the **ATZ1** command.

Note: See also the *Z*, *&F*, and *&Y* commands.

Command: **&Yn Select Profile for Hard Reset**
 Values: *n* = 0 or 1
 Default: None
 Description: &Y0 Select profile 0 to be loaded on power-up.
 &Y1 Select profile 1 to be loaded on power-up.

Note: See also the *&W* and *Z* commands.

Command: **&Zy=x Store Telephone Number**
 Values: $y = 0-3$
 $x =$ Dialing command
 Default: None
 Description: Stores telephone dial string x in memory location y . Each telephone number dial string can contain up to 34 digits. Dial the stored number using the command *ATDS=y*.

Note: DTR dialing uses the number stored in memory location 0.

Command: **%Cn Data Compression Control**
 Values: $n = 0, 1, 2, \text{ or } 3$
 Default: 3
 Description: Enables or disables data compression negotiation. The modem can only perform data compression on an error-corrected link.

%C0 Disables data compression.
 %C1 Enables MNP 5 data compression negotiation.
 %C2 Enables V.42bis data compression negotiation.
 %C3 Enables both V.42bis and MNP 5 data compression negotiation.

Note: This command controls both V.42bis and MNP-5 data compression, whereas the **&E14** and **&E15** commands control only V.42bis data compression. The command in effect is the one last entered.

Command: **%En Line Quality Monitor**
 Values: $n = 0, 1, \text{ or } 2$
 Default: 2
 Description: Controls whether or not the modem will automatically monitor the line quality and request a retrain (**%E1**) or fall back to a lower speed when line quality is insufficient and fall forward to a faster speed when line quality is sufficient (**%E2**).

%E0 Disable line quality monitor and auto-retrain.
 %E1 Enable line quality monitor and auto-retrain.
 %E2 Enable line quality monitor and fallback/fall forward.

Command: **%L Line Signal Level**
 Values: None
 Default: None
 Description: %L Returns a value that indicates the received signal level. The value returned is a direct indication (DAA-dependent) of the receive level at the MDP, not at the telephone line connector. For example, 009 = -9 dBm, 043 = -43 dBm, and so on.

Command: **%Q Line Signal Quality**
 Values: None
 Default: None
 Description: %Q Reports the line signal quality (DAA-dependent) as a three-digit number. Returns the higher order byte of the EQM value. Based on the EQM value, retrain or fallback/fall forward may be initiated if enabled by **%E1** or **%E2**.

Command: **%U** **PCM Code Selection**
 Values: n = 0 or 1
 Default: 0
 Description: Specifies the PCM code type for 56K modulation. Note, however, that the modem automatically selects the code type if the server sends the proper ID.

 %U0 Selects μ -Law coding—used in North America and Japan.
 %U1 Selects A-Law coding—used outside North America and Japan.

Note: See also the **+MS=** command.

Command: **\An** **Maximum MNP Block Size**
 Values: n = 0, 1, 2, or 3
 Default: 1
 Description: \A0 64-character maximum block size.
 \A1 128-character maximum block size.
 \A2 192-character maximum block size.
 \A3 256-character maximum block size.

Command: **\Bn** **Transmit Break**
 Values: n = 0–9 in 100 ms units
 Default: 3
 Description: In non-error-correction mode only, sends a break signal of the specified length to a remote modem. Works in conjunction with the **\K** command.

Command: **\Kn** **Break Control**
 Values: n = 0–5
 Default: 5
 Description: Controls the response of the modem to a break received from the computer, the remote modem, or the **\B** command. The response is different for each of three different states.

Data mode. The modem receives the break from the computer:

 \K0 Enter online command mode, no break sent to the remote modem.
 \K1 Clear data buffers and send break to the remote modem.
 \K2 Same as **\K0**.
 \K3 Send break immediately to the remote modem .
 \K4 Same as **\K0**.
 \K5 Send break to the remote modem in sequence with the transmitted data.

Data mode. The modem receives the break from the remote modem during a non-error-corrected connection:

 \K0 Clear data buffers and send break to the computer.
 \K1 Same as **\K0**.
 \K2 Send break immediately to the computer.
 \K3 Same as **\K2**.
 \K4 Send break to the computer in sequence with the received data.
 \K5 Same as **\K4**.

Online command mode. The modem receives a `\Bn` command from the computer:

- `\K0` Clear data buffers and send break to the remote modem.
- `\K1` Same as `\K0`.
- `\K2` Send break immediately to the remote modem.
- `\K3` Same as `\K2`.
- `\K4` Send break to the remote modem in sequence with the transmitted data.
- `\K5` Same as `\K4`.

Command: **\Nn Error Correction Mode Selection**

Values: *n* = 0–5

Default: 3

- Description: `\N0` Normal (non-error correction) mode with data buffering. (Forces `&Q6`.)
- `\N1` Direct mode. Equivalent of `&M0` and `&Q0` modes. (Forces `&Q0`.)
- `\N2` V.42/MNP reliable (error-correction) mode. The modem attempts first a V.42 connection and then an MNP connection. Failure to make a reliable connection results in the modem hanging up. (Forces `&Q5`, `S36=4`, and `S48=7`.)
- `\N3` V.42/MNP auto-reliable mode. The modem attempts first to connect in V.42 mode, then in MNP mode, and finally in non-error-correction mode with data buffering. (Forces `&Q5`, `S36=7`, and `S48=7`.)
- `\N4` V.42 (LAPM) reliable mode.If the modem cannot make a V.42 connection, it disconnects. (Forces `&Q5` and `S48=0`.) Note: The `-K1` command can override the `\N4` command.
- `\N5` MNP reliable mode.If the modem cannot make an MNP connection, it disconnects. (Forces `&Q5`, `S36=4`, and `S48=128`.)

Command: **\Wn Single Line Connect Message**

Values: *n* = 0 or 1

Default: 0

- Description: `\V0` Disables single line connect message. Connect messages are controlled by the `X`, `W`, and `S95` settings.
- `\V1` Enables single line connect messages in the format: `CONNECT <Serial Port Speed></Modulation></Protocol></Compression></Line Speed>/<Voice and Data>`. Overrides the `X`, `W`, and `S95` commands. Connect messages are displayed in the single line format subject to the commands `V` and `Q`. In non-verbose mode (`V0`), single line connect messages are disabled and a single numeric result code is generated for `CONNECT`.

- Command: **+MS= Modulation Selection**
 Values: See description.
 Default: See description.
 Description: This extended-format command selects modulation and, optionally, enables or disables automode, specifies the lowest and highest connection rates, selects μ -Law or A-Law codec type, and specifies the highest transmit rate using one to five subparameters.
- The command format is
+MS=[*mod*][,*automode*][,*min_RX_rate*][,*max_RX_rate*][,*x_law*][,*reserved*][,*max_TX_rate*]]]]]]<CR>
 Subparameters that are not entered retain their current value. Commas separate optional subparameters, and should be inserted to skip a subparameter. Example: **+MS=,0,<CR>** disables automode and keeps all other settings at their current values.
- +MS?** Reports current options in the format
mod,automode,min_RX_rate,max_RX_rate,x_law,reserved,max_TX_rate.
 Example: 56,1,300,56000,0,0,33600.
- +MS=?** Reports supported options in the format (list of supported *mod* values),(list of supported *automode* values),(list of supported *min_RX_rate* values),(list of supported *max_RX_rate* values),(list of supported *x_law* values),(list of supported *reserved* values),(list of supported *max_TX_rate* values).
 Example: (0,1,2,3,9,10,11,56,64,69),(0,1),(300-33600),(300-56000),(0,1),(0,1),(300-33600).

Subparameters

- mod*** A decimal number that specifies the preferred modulation (automode enabled) or the modulation to use in originating or answering a connection (automode disabled). See the table on the next page.
- automode*** An optional numeric value that enables or disables automatic modulation negotiation using V.8 bis/V.8 or V.32 bis Annex A. The options are:
 0 = Disable automode
 1 = Enable automode (default)
- min_RX_rate*** An optional number that specifies the lowest rate at which the modem may establish a receive connection. The value is decimal coded in units of bps, e.g., 2400 specifies the lowest rate to be 2400 bps. See "Possible rates" in the *mod* table. The default is 300 for 300 bps.
- max_RX_rate*** An optional number that specifies the highest rate at which the modem may establish a receive connection. The value is decimal coded in units of bps, e.g., 28800 specifies the highest rate to be 28800 bps. See "Possible rates" in the *mod* table. The default is 56000, for 56000 bps.

<mod>	Modulation	Possible rates (bps) ¹
0	V.21	300
1	V.22	1200
2	V.22bis	2400 or 1200
3	V.23	1200
9	V.32	9600 or 4800
10	V.32bis	14400, 12000, 9600, 7200, or 4800
11	V.34	33600, 31200, 28800, 26400, 24000, 21600, 19200, 16800, 14400, 12000, 9600, 7200, 4800, or 2400
12 ²	V.90	56000, 54667, 53333, 52000, 50667, 49333, 48000, 46667, 45333, 44000, 42667, 41333, 40000, 38667, 37333, 36000, 34667, 33333, 32000, 30667, 29333, or 28000
56 ³	K56flex	56000, 54000, 52000, 50000, 48000, 46000, 44000, 42000, 40000, 38000, 36000, 34000, or 32000
64	Bell 103	300
69	Bell212	1200

Notes:

1. See optional <automode>, <min_RX_rate>, <max_RX_rate>, and <max_TX_rate> subparameters.
2. Selects V.90 modulation as first priority. If a V.90 connection cannot be established, the modem attempts K56flex, V.34, V.32bis, etc. (Default.)
3. Selects K56flex modulation as first priority. If a K56flex connection cannot be established, the modem attempts V.90, V.34, V.32bis, etc.

x_law An optional number that specifies the PCM code type for 56K modulation. The options are:

0 = μ -Law—used in North America and Japan (default)

1 = A-Law—used outside North America and Japan

The modem automatically selects A-Law or μ -Law if the server sends the Conexant ID. Note that the **ATZ** command restores the *x_law* value from NVRAM. You can also manually select A-Law or μ -Law using the **%U** command.

reserved Must not be changed from the default value of 0.

max_TX_rate An optional number that specifies the highest rate at which the modem may establish a transmit connection. The value is decimal coded in units of bps, e.g., 33600 specifies the highest rate to be 33600 bps. See “Possible rates” in the *mod* table. The default is 33600, for 33600 bps.

Command:	-Kn	MNP Extended Services
Values:	<i>n</i> = 0, 1, or 2	
Default:	0	
Description:	Enables or disables conversion of a V.42 LAPM connection to an MNP 10 connection.	
	-K0	Disables V.42 LAPM to MNP 10 conversion.
	-K1	Enables V.42 LAPM to MNP 10 conversion.
	-K2	Enables V.42 LAPM to MNP 10 conversion; inhibits MNP Extended Services initiation during V.42 LAPM answer mode detection phase.

Command: -SDR=*n* Distinctive Ring Control

Values: 0–7

Default: 0

Description: This command enables or disables detection and reporting of distinctive ring. One, two, or three distinctive ring types can be simultaneously enabled depending upon the value of *n*. The detected ring type is reported in the verbose result code by appending the ring type number to the end of the *RING* message.

-SDR=0 Disables distinctive ring. Any valid ring detected is reported as *RING*.

-SDR=1 Enables distinctive ring type 1.

-SDR=2 Enables distinctive ring type 2.

-SDR=3 Enables distinctive ring types 1 and 2.

-SDR=4 Enables distinctive ring type 3.

-SDR=5 Enables distinctive ring types 1 and 3.

-SDR=6 Enables distinctive ring types 2 and 3.

-SDR=7 Enables distinctive ring types 1, 2, and 3.

The supported ring types and ring cadence detection criteria are shown in the following table:

Distinctive ring type	Ring cadence detection criteria
1	2.0 sec. on, 4.0 sec. off
2	0.8 sec. on, 0.4 sec. off, 0.8 sec. on, 0.4 sec. off
3	0.4 sec. on, 0.2 sec. off, 0.4 sec. on, 0.2 sec. off, 0.8 sec. on, 0.4 sec. off

Command: *n* Flash Memory Download**

Values: *n* = 0, 1, or 2

Description: **0 Initiate download to flash memory at the last sensed speed

**1 Initiate download to flash memory at 38.4K bps

**2 Initiate download to flash memory at 57.6K bps

Command: #CID=*n* Caller ID

Values: *n* = 0, 1, or 2

Default: 0

Description: Enables or disables Caller ID recognition and reporting.

#CID=0 Disables Caller ID.

#CID=1 Enables formatted Caller ID reporting of ICLID SDM (Single Data Message) and MDM (Multiple Data Message) packets.

#CID=2 Enables unformatted Caller ID reporting of any ICLID packet received after the first *RING* cycle, including SDM, MDM, or call waiting packets.

#CID? Retrieves the current Caller ID mode from the modem.

#CID=? Returns the mode capabilities of the modem in a list with each element separated by commas.

Command: **\$SBn Serial Port Baud Rate**
Values: n = speed in bits per second
Default: 57600
Description: \$SB300 Set serial port to 300 bps.
\$SB1200 Set serial port to 1200 bps.
\$SB2400 Set serial port to 2400 bps.
\$SB4800 Set serial port to 4800 bps.
\$SB9600 Set serial port to 9600 bps.
\$SB19200 Set serial port to 19200 bps.
\$SB38400 Set serial port to 38400 bps.
\$SB57600 Set serial port to 57600 bps.
\$SB115200 Set serial port to 115200 bps.
\$SB230400 Set serial port to 230400 bps.

Note: See also the *L5* command.

Command: **+++AT<CR> Escape Sequence**
Values: n/a
Description: Puts the modem in command mode (and optionally issues a command) while remaining online. Type **+++AT** and up to ten command characters, then press ENTER. Used mostly to issue the hang-up command: **+++ATH<CR>**.

Voice Commands

The MultiModemDSVD uses DSVD technology to achieve simultaneous voice and data operation over a telephone line. Establishing a DSVD connection is like establishing a regular data modem connection. Initiate the call to another DSVD modem using normal dialing (**ATD**) and answering (**ATA**) procedures. The modem can switch from a regular phone conversation into DSVD mode and back to phone conversation. A headset or microphone/speaker can be used for voice communication during DSVD mode.

Command: **-SMS=n Data/DSVD Mode**
Values: n = 0, 1, or 3
Default: 3
Description: -SMS=0 Data mode.
-SMS=1 DSVD mode.
-SMS=3 Automatic mode select (data/DSVD)

Note: DSVD mode can be enabled by either the **-SSE=1** or the **-SMS=1** command, and disabled by either **-SSE=0** or **-SMS=0**.

Command: **-SSE=*n* DSVD Enable/Disable**

Values: *n* = 0 or 1

Default: 0

Description: -SSE=0 Disable DSVD.
-SSE=1 Enable DSVD.

Note: DSVD mode can be enabled by either the **-SSE=1** or the **-SMS=1** command, and disabled by either **-SSE=0** or **-SMS=0**.

Command: **#BDR=*n* Baud Rate Select**

Values: *n* = 0–48

Default: 0

Description: #BDR=0 Enables autobaud detection on the serial port interface.
#BDR=*n* 1<*n*<48. Sends *OK* message at current speed, then switches to the new speed defined by *n* × 2400 bps unless and until another **#BDR=** command is received. Autobaud is disabled, and the character format is maintained at the format most recently detected.

Command: **#CLS=*n* Data, Fax, or Voice/Audio Select**

Values: *n* = 0, 1, 2, or 8

Default: 0

Description: #CLS=0 Data mode: The modem acts like a data modem on subsequent answer or originate operations.
#CLS=1 Class 1 fax mode: Selects Class 1 fax modem operation.
#CLS=2 Class 2 fax mode: Selects Class 2 fax modem operation.
#CLS=8 Voice/audio mode: All telephone calls initialized by **#CLS=8** result, after successful call progress, in the modem operating in online voice command mode.

Command: **#MDL? Identify Model**

Values: n/a

Description: Displays the modem name or model.

Command: **#MFR? Identify Manufacturer**

Values: n/a

Description: Displays the name of the manufacturer.

Command: **#REV? Identify Revision Level**

Values: n/a

Description: Displays the revision level of the modem's firmware.

Command: **#VLS=*n* Voice Line Select**

Values: *n* = 5 or 6

Default: 5

Description: #VLS=5 Selects the headset while in **#CLS=8** (voice/audio) mode.
#VLS=6 Select the speakerphone while in **#CLS=8** (voice/audio) mode.

Note: The **#VLS=** command must be issued prior to establishing a DSVD connection if a voice line other than the default headset is desired.

S-Registers

Certain modem values, or parameters, are stored in memory locations called S-registers. Use the S command to read or to alter the contents of S-registers (see previous section).

<i>Register</i>	<i>Unit</i>	<i>Range</i>	<i>Default</i>	<i>Description</i>
<i>S0</i>	1 ring	0, 1–255	1	Sets the number of rings before the modem answers. ATS0=0 disables autoanswer completely.
<i>S1</i>	1 ring	0–255	0	Counts the rings that have occurred.
<i>S2</i>	decimal	0–127 128–255	43 (+)	Sets ASCII code for the escape sequence character. Values greater than 127 disable escape.
<i>S3</i>	decimal	0–127	13 (^M)	Sets the ASCII code for the carriage return character.
<i>S4</i>	decimal	0–127	10 (^J)	Sets the ASCII code for the line feed character.
<i>S5</i>	decimal	0–32 33–127	8 (^H)	Sets the ASCII code for the backspace character. Values greater than 32 disable backspace.
<i>S6</i>	seconds	2–255	2	Sets the time the modem waits after it goes off-hook before it begins to dial the telephone number.
<i>S7</i>	seconds	1–255	50	Sets the time the modem waits for a carrier signal before aborting a call. Also sets the wait for silence time for the @ dial modifier, and the time the modem waits for the dial tone after encountering W in the dial string.
<i>S8</i>	seconds	0–255	2	Sets the length of a pause caused by a comma character in a dialing command.
<i>S9</i>	100 ms	1–255	6	Sets the time, in tenths of a second, that the carrier must be present before the modem considers it valid.
<i>S10</i>	100 ms	1–255	14	Sets how long a carrier signal must be lost before the modem disconnects.
<i>S11</i>	1 ms	50–255	95	Sets spacing and duration of dialing tones.
<i>S12</i>	20 ms	0–255	50	Defines the maximum period, in fiftieths of second, allowed between receipt of the last character of the three escape character sequence from the computer and the sending of the OK result code to the computer. (Escape code guard time).

<u>Register</u>	<u>Unit</u>	<u>Range</u>	<u>Default</u>	<u>Description</u>
S18	seconds	0–255	0	Sets the length of time that the modem conducts an <i>&T</i> test before it returns to the command mode. If the value is zero, the test must be terminated from command mode by issuing an <i>&T0</i> or <i>H</i> command. When <i>S18</i> is non-zero, the modem returns the <i>OK</i> message upon test termination.
S24	seconds	0–255	0	Sets the length of time that the modem operates in normal mode with no detected telephone or serial port activity before entering low-power sleep mode. The timer is reset upon any serial port or telephone line activity.
S25	10 ms	0–255	5	Sets the length of time that the modem ignores DTR while taking the action specified by <i>&D</i> .
S29	10 ms	0–255	70	Sets the length of time that the modem goes on-hook when it encounters a flash dial modifier (!) in the dial string.
S30	10 ms	0, 1–255	0	Sets the length of time that the modem waits before disconnecting when no data is sent or received. A value of zero disables the timer.
S32	decimal	0–255	17	Sets the ASCII code for the XON character.
S33	decimal	0–255	19	Sets the ASCII code for the XOFF character.
S35	decimal	0–1	0	0 disables, 1 enables the V.25 data calling tone, which allows remote data/fax/voice discrimination.
S36	decimal	0–7	7	LAPM Failure Control. Specifies the fallback action to take in the event of an LAPM negotiation failure. These fallback options are initiated immediately upon connection if <i>S48</i> = 128. If an invalid number is entered, <i>S36</i> acts as if the default value has been entered. (See <i>S48</i> .) <ul style="list-style-type: none"> 0 Modem disconnects. 1 Modem stays online and a direct mode connection is established. 2 Reserved. 3 Modem stays on-line and a normal mode connection is established. 4 An MNP connection is attempted and if it fails, the modem disconnects. 5 An MNP connection is attempted and if it fails, a direct mode connection is established.

<u>Register</u>	<u>Unit</u>	<u>Range</u>	<u>Default</u>	<u>Description</u>
				6 Reserved. 7 An MNP connection is attempted and if it fails, a normal modem connection is established.
S37	decimal	0	0	Sets the maximum V.34 speed at which the modem attempts to connect. The default value is an automode connection. If <i>N0</i> is active, connection is attempted at the most recently sensed serial port speed (<i>+MS=</i> command settings are updated to the appropriate values). If <i>N1</i> is active, connection is attempted at the highest possible speed. (<i>+MS=</i> settings are updated to 11,1,300,3360 to reflect V.34, automode, 300 bps minimum speed, and 33600 bps maximum speed). Supported only for compatibility with existing software; use the <i>+MS=</i> command instead.
S38	seconds	0-254, 255	20	Sets the delay between the modem's receipt of the <i>H</i> command to disconnect (or high-to-low transition of DTR if the modem is programmed to follow the signal), and the disconnect operation. Applies only to error-correction connections. This register can be used to ensure that data in the modem buffer is sent before the modem disconnects. If <i>S38</i> is set to a value between 0 and 254, the modem waits for the remote modem to acknowledge all data in the modem buffer before disconnecting. If <i>S38</i> is set to 255, the modem does not time out, and continues to attempt to deliver data in the buffer until the connection is lost or the data is delivered.
S46	decimal	136, 138	138	Enables or disables data compression: 136 Error correction without compression. 138 Error correction with compression.
S48	decimal	0, 7, 128	7	Enables or disables LAPM negotiation. An invalid value is treated as a 128 value. 0 Disables negotiation and proceeds with LAPM. 7 Enables negotiation. 128 Disables negotiation and proceeds at once with the fallback action specified in <i>S36</i> . Can be used to force MNP.

<u>Register</u>	<u>Unit</u>	<u>Range</u>	<u>Default</u>	<u>Description</u>
S86	decimal	0, 3–23	n/a	<p>When the modem issues a <i>NO CARRIER</i> result code, a value is written to this register to help determine the reason for the failed connection. <i>S86</i> records the first event that contributes to a <i>NO CARRIER</i> message. Use the <i>S86?</i> command to read the value.</p> <ul style="list-style-type: none"> 0 Normal disconnect; no error occurred. 3 Call Waiting caused disconnect. 4 Physical loss of carrier. 5 No error correction at the other end. 6 No response to feature negotiation. 7 This modem is async-only, the other sync-only. 8 No framing technique in common. 9 No protocol in common. 10 Bad response to feature negotiation. 11 No sync information from remote modem. 12 Normal disconnect initiated by remote modem. 13 Remote modem does not respond after 10 retransmissions of the same message. 14 Protocol violation. 15 DTR lost. 15 Three retrains or excessive retransmissions when no DTR. 16 Received GSTN clear-down. 17 Inactivity timeout. 18 Speed not supported. 19 Long space disconnect. 20 Key abort disconnect. 21 Clears previous disconnect reason. 22 No connection established. 23 Disconnect after three retrains.
S95	decimal	0–15, 32–47	0	<p>The bits in this register can be set to override some of the <i>W</i> command options. A bit set to a 1 in this register enables the corresponding result code regardless of the <i>W</i> setting.</p> <ul style="list-style-type: none"> Bit 0 <i>CONNECT</i> result code indicates DCE speed instead of DTE speed. Bit 1 Append <i>/ARQ</i> to <i>CONNECT XXXX</i> result code in error-correction mode. Bit 2 Enable <i>CARRIER XXXX</i> result code. Bit 3 Enable <i>PROTOCOL XXXX</i> result code. Bit 4 Reserved. Bit 5 Enable <i>COMPRESSION</i> result code . Bit 6 Reserved. Bit 7 Reserved.

Result Codes

In command mode your modem can send the following responses, called *result codes*, to your computer. Result codes are used by communications programs and can also appear on your monitor.

<u>Terse</u>	<u>Verbose</u>	<u>Description</u>
0	OK	Command executed
1	CONNECT	Modem connected to line
2	RING	Ring signal detected
3	NO CARRIER	Carrier signal lost or not detected
4	ERROR	Invalid command
5	CONNECT 1200	Connected at 1200 bps
6	NO DIALTONE	No dial tone detected
7	BUSY	Busy signal detected
8	NO ANSWER	No answer at remote end
9	CONNECT 0600	Connected at 600 bps
10	CONNECT 2400	Connected at 2400 bps
11	CONNECT 4800	Connected at 4800 bps
12	CONNECT 9600	Connected at 9600 bps
13	CONNECT 7200	Connected at 7200 bps
14	CONNECT 12000	Connected at 12000 bps
15	CONNECT 14400	Connected at 14400 bps
16	CONNECT 19200	Connected at 19200 bps
17	CONNECT 38400	Connected at 38400 bps
18	CONNECT 57600	Connected at 57600 bps
19	CONNECT 115200	Connected at 115200 bps
20	CONNECT 230400	Connected at 230400 bps
22	CONNECT 75TX/1200RX	V.23 connection in originate mode
23	CONNECT 1200TX/75RX	V.23 connection in answer mode
24	DELAYED	Delay is in effect for the dialed number
32	BLACKLISTED	Dialed number is blacklisted
33	FAX	Connected in fax mode
35	DATA	Connected in data mode
40	CARRIER 300	0-300 bps data carrier detected
44	CARRIER 1200/75	V.23 backward channel detected
45	CARRIER 75/1200	V.23 forward channel detected
46	CARRIER 1200	1200 bps data carrier detected
47	CARRIER 2400	2400 bps data carrier detected
48	CARRIER 4800	4800 bps data carrier detected
49	CARRIER 7200	7200 bps data carrier detected
50	CARRIER 9600	9600 bps data carrier detected
51	CARRIER 12000	12000 bps data carrier detected
52	CARRIER 14400	14400 bps data carrier detected
53	CARRIER 16800	16800 bps data carrier detected
54	CARRIER 19200	19200 bps data carrier detected
55	CARRIER 21600	21600 bps data carrier detected
56	CARRIER 24000	24000 bps data carrier detected
57	CARRIER 26400	26400 bps data carrier detected
58	CARRIER 28800	28800 bps data carrier detected
59	CONNECT 16800	Connected at 16800 bps
61	CONNECT 21600	Connected at 21600 bps

<i>Terse</i>	<i>Verbose</i>	<i>Description</i>
62	CONNECT 24000	Connected at 24000 bps
63	CONNECT 26400	Connected at 26400 bps
64	CONNECT 28800	Connected at 28800 bps
66	COMPRESSION CLASS 5	Connected with MNP Class 5 data compression
67	COMPRESSION V.42 bis	Connected with V.42 bis data compression
69	COMPRESSION NONE	Connected without data compression
70	PROTOCOL NONE	Connected without any protocol
77	PROTOCOL LAPM	Connected in V.42 LAPM mode
78	CARRIER 31200	56000 bps data carrier detected
79	CARRIER 33600	33600 bps data carrier detected
80	PROTOCOL ALT	Connected in MNP mode
81	PROTOCOL ALT-CELLULAR	Connected in MNP 10 mode
84	CONNECT 33600	Connected at 33600 bps
91	CONNECT 31200	Connected at 31200 bps
150	CARRIER 32000	32000 bps data carrier detected
151	CARRIER 34000	34000 bps data carrier detected
152	CARRIER 36000	36000 bps data carrier detected
153	CARRIER 38000	38000 bps data carrier detected
154	CARRIER 40000	40000 bps data carrier detected
155	CARRIER 42000	42000 bps data carrier detected
156	CARRIER 44000	44000 bps data carrier detected
157	CARRIER 46000	46000 bps data carrier detected
158	CARRIER 48000	48000 bps data carrier detected
159	CARRIER 50000	50000 bps data carrier detected
160	CARRIER 52000	52000 bps data carrier detected
161	CARRIER 54000	54000 bps data carrier detected
162	CARRIER 56000	56000 bps data carrier detected
165	CONNECT 32000	Connected at 32000 bps
166	CONNECT 34000	Connected at 34000 bps
167	CONNECT 36000	Connected at 36000 bps
168	CONNECT 38000	Connected at 38000 bps
169	CONNECT 40000	Connected at 40000 bps
170	CONNECT 42000	Connected at 42000 bps
171	CONNECT 44000	Connected at 44000 bps
172	CONNECT 46000	Connected at 46000 bps
173	CONNECT 48000	Connected at 48000 bps
174	CONNECT 50000	Connected at 50000 bps
175	CONNECT 52000	Connected at 52000 bps
176	CONNECT 54000	Connected at 54000 bps
177	CONNECT 56000	Connected at 56000 bps
180	CONNECT 28000	Connected at 28000 bps (V.90 mode)
180	CARRIER 28000	28000 bps data carrier detected (V.90 mode)
181	CONNECT 29333	Connected at 29333 bps (V.90 mode)
181	CARRIER 29333	29333 bps data carrier detected (V.90 mode)
182	CONNECT 30667	Connected at 30667 bps (V.90 mode)
182	CARRIER 30667	30667 bps data carrier detected (V.90 mode)
183	CONNECT 33333	Connected at 33333 bps (V.90 mode)
183	CARRIER 33333	33333 bps data carrier detected (V.90 mode)
184	CONNECT 34667	Connected at 34667 bps (V.90 mode)
184	CARRIER 34667	34667 bps data carrier detected (V.90 mode)

<i>Terse</i>	<i>Verbose</i>	<i>Description</i>
185	CONNECT 37333	Connected at 37333 bps (V.90 mode)
185	CARRIER 37333	37333 bps data carrier detected (V.90 mode)
186	CONNECT 38667	Connected at 38667 bps (V.90 mode)
186	CARRIER 38667	38667 bps data carrier detected (V.90 mode)
187	CONNECT 41333	Connected at 41333 bps (V.90)
187	CARRIER 41333	41333 bps data carrier detected (V.90)
188	CONNECT 42667	Connected at 42667 bps (V.90)
188	CARRIER 42667	42667 bps data carrier detected (V.90)
189	CONNECT 45333	Connected at 45333 bps (V.90)
189	CARRIER 45333	45333 bps data carrier detected (V.90)
190	CONNECT 46667	Connected at 46667 bps (V.90)
190	CARRIER 46667	46667 bps data carrier detected (V.90)
191	CONNECT 49333	Connected at 49333 bps (V.90)
191	CARRIER 49333	49333 bps data carrier detected (V.90)
192	CONNECT 50667	Connected at 50667 bps (V.90)
192	CARRIER 50667	50667 bps data carrier detected (V.90)
193	CONNECT 53333	Connected at 53333 bps (V.90)
193	CARRIER 53333	53333 bps data carrier detected (V.90)
194	CONNECT 54667	Connected at 54667 bps (V.90)
194	CARRIER 54667	54667 bps data carrier detected (V.90)
+F4	+FCERROR	V.21 signal received/high speed fax expected (V.27, V.29, V.33 or V.17).



5

***Solving
Problems***

Introduction

Your modem was thoroughly tested at the factory before it was shipped. If you are unable to make a successful connection, or if you experience data loss or garbled characters during your connection, it is possible that the modem is defective. However, it is more likely that the source of your problem lies elsewhere. The following symptoms are typical of problems you might encounter:

- None of the LEDs light when the modem is on.
- The modem does not respond to commands.
- The modem dials but is unable to make a connection.
- The modem disconnects while online.
- The modem cannot connect when answering.
- File transfer is slower than it should be.
- Data is being lost.
- There are garbage characters on the monitor.
- The modem doesn't work with Caller ID.
- Fax and data software can't run at the same time.

If you experience problems, please check the following possibilities before calling Technical Support (see Appendix D).

None of the Indicators Light

When you turn on the modem, the LED indicators on the front panel should flash briefly as the modem runs a self-test. If the LEDs remain off, the modem is probably not receiving power.

- ✓ Make sure the modem's power switch is on, especially if you normally turn on the modem by turning on a power strip.
- ✓ If the power supply is plugged into a power strip, make sure the power strip is plugged in and its power switch is on.
- ✓ Make sure the power supply module is firmly connected to the modem and to the wall outlet or power strip.
- ✓ If the power strip is on and the modem switch is on, try moving the modem power supply to another outlet on the power strip.
- ✓ Test that the outlet is live by plugging a lamp into it.
- ✓ The modem or power supply may be defective. If you have another Multi-Tech modem, try swapping modems. If the problem goes away, the first modem or power supply may be defective. Call Tech Support for assistance.

CAUTION: Do not under any circumstances replace the power supply module with one designed for another product, as it can damage the modem and void your warranty.

The Modem Does Not Respond to Commands

- ✓ Make sure the modem is plugged in and turned on. (See “None of the Indicators Light.”)
- ✓ Make sure you are issuing the modem commands from the data communications software, either manually in terminal mode or automatically by configuring the software. (You cannot send commands to the modem from the DOS prompt.)
- ✓ Make sure you are in terminal mode in your data communications program, then type **AT** and press **ENTER**. If you get an **OK** response, your connections are good and the problem likely is in the connection setup in your communications software.
- ✓ Try resetting your modem by turning it off and on. If you are using DOS or Windows 3.1 communications software, make sure the initialization string includes **&F** as the first command, to cancel any “leftover” command that could affect the modem’s operation.
- ✓ If you don’t get an **OK**, the problem may still be in the communications software. Make sure you have done whatever is necessary in your software to make a port connection. Not all communications programs connect to the COM port automatically. Some connect when the software loads and remain connected until the program terminates. Others can disconnect without exiting the program. The modem’s TR indicator lights to show that the software has taken control of the modem through the COM port.
- ✓ Your communications software settings may not match the physical port the modem is connected to. The serial cable might be plugged into the wrong connector—check your computer documentation to make sure. Or you might have selected a COM port in your software other than the one the modem is physically connected to—compare the settings in your software to the physical connection.
- ✓ If the modem is on, the cable is plugged into the correct port, the communications software is configured correctly, and you still don’t get an **OK**, the fault might be in the serial cable. Make sure it is firmly connected at both ends.
- ✓ Is this the first time you have used the cable? If so, it may not be wired correctly. Check the cable description on the packaging to make sure the cable is the right one for your computer.
- ✓ Peripheral expansion cards, such as sound and game cards, might include a serial port preconfigured as COM1 or COM2. The extra serial port, or the card itself, may use the same COM port, memory address, or interrupt request (IRQ) as your communications port. Be sure to disable any unused ports.

Windows 3.1x: To look for address or IRQ conflicts, in Program Manager select **File | Run**, type **MSD**, and press **ENTER**. Then select **Mouse**, **COM Ports**, and **IRQ Status**, and note the addresses and IRQs that are in use. If you find an IRQ conflict, note which IRQs are not being used, then change one of the conflicting devices to use one of the unused IRQs. If you find an address conflict, change the address of one of the conflicting devices.

To change a port address or IRQ in Windows 3.1x, double-click the Control Panel icon, then the Ports icon. Click on the port you want to change, click **Settings**, click **Advanced**, and select the new port address and/or interrupt. If you wish to use COM3 or COM4, note that COM3 shares an IRQ with COM1, as does COM4 with COM2, so you should change their IRQs to unused ones, if possible.

Windows 9x: Right-click on My Computer, select **Properties** from the menu, click on the **Device Manager** tab, double-click on **Ports**, then double-click on the communication port your modem is connected to. In the port's **Properties** sheet, click on the **Resources** tab to see the port's input/output range and interrupt request. If another device is using the same address range or IRQ, it appears in the **Conflicting Device List**. Uncheck **Use automatic settings** to change the port's settings so they do not conflict with the other device, or select the port the conflicting device is on and change it instead. If you need to open your computer to change switches or jumpers on the conflicting device; refer to the device's documentation.

Windows NT 4.0: To look for address or IRQ conflicts, click Start, Programs, Administrative Tools (Common), and Windows NT Diagnostics. In the **Windows NT Diagnostics** dialog box, click the **Resources** tab to see which input/output ranges and interrupt requests are in use. If you need to open your computer to change switches or jumpers on the conflicting device; refer to the device's documentation.

- ✓ The serial port might be defective. If you have another serial port, install the modem on it, change the COM port setting in your software, and try again.
- ✓ The modem might be defective. If you have another Multi-Tech modem, try swapping modems. If the problem goes away, the first modem is possibly defective. Call Tech Support for assistance (see Appendix D).

The Modem Dials But Cannot Connect

There can be several reasons the modem fails to make a connection. Possibilities include:

- lack of a physical connection to the telephone line.
- a wrong dial tone.
- a busy signal.
- a wrong number.
- no modem at the other end.
- a faulty modem, computer, or software at the other end.
- incompatibility between modems.

You can narrow the list of possibilities by using extended result codes. Extended result codes are enabled by default. If they have been disabled, include **V1X4** in the modem's initialization string, or in terminal mode enter **ATV1X4** and press ENTER. When you dial again, the modem will report the call's progress.

- ✓ If the modem reports *NO DIALTONE*, check that the modem's telephone line cable is connected to both the modem's LINE jack (not the PHONE jack) and the telephone wall jack. If the cable looks secure, try replacing it. If that doesn't work, the problem might be in your building's telephone installation. To test the building installation, plug a telephone into your modem's telephone wall jack and listen for a dial tone. If you hear a dial tone, your modem might be installed behind a company phone system (PBX) with an internal dial tone that sounds different from the normal dial tone. In that case, the modem might not recognize the dial tone and might treat it as an error. Check your PBX manual to see if you can change the internal dial tone; if you can't, change your modem's initialization

string to replace **X4** with **X3**, which will cause the modem to ignore dial tones (note, however, that **X3** is not allowed in some countries, such as France and Spain).

- ✓ If the modem reports **BUSY**, the other number might be busy, in which case you should try again later, or it might indicate that you have failed to add a **9**, prefix to the phone number if you must dial **9** for an outside line.

If you must dial **9** to get an outside line, the easiest way to dial it automatically is to include it in the modem's dial prefix, e.g., **ATDT9,**. Note the comma, which inserts a pause before the number is dialed. By inserting **9**, into the dial prefix, you do not have to include it in each directory entry.

To change the dial prefix in Windows HyperTerminal, select **Connect** from the **Call** menu, click **Dialing Properties**, and type **9** in the local and long distance boxes in **How I dial from this location**.

- ✓ If the modem reports **NO ANSWER**, the other system has failed to go off-hook, or you might have dialed a wrong number. Check the number.
- ✓ If the modem reports **NO CARRIER**, the phone was answered at the other end, but no connection was made. You might have dialed a wrong number, and a person answered instead of a computer, or you might have dialed the correct number but the other computer or software was turned off or faulty. Check the number and try again, or try calling another system to make sure your modem is working. Also, try calling the number on your telephone. If you hear harsh sounds, then another modem is answering the call, and the modems might be having problems negotiating because of modem incompatibilities or line noise. Try connecting at a lower speed.

The Modem Disconnects While Online

- ✓ If you have Call Waiting on the same phone line as your modem, it can interrupt your connection when someone tries to call you. If you have Call Waiting, disable it before each call. In most telephone areas in North America, you can disable Call Waiting by preceding the telephone number with ***70** (check with your local telephone company).

You can automatically disable Call Waiting by including the disabling code in the modem's dial prefix (e.g., **ATDT*70,**—note the comma, which inserts a pause before the number is dialed). To change the dial prefix in Windows Terminal, select **Settings | Modem Commands**. To change it in Windows HyperTerminal, select **Connect** from the **Call** menu, click **Dialing Properties**, check **This location has Call Waiting**, and select the correct code for your phone service.

- ✓ If you have extension phones on the same line as your modem, you or someone else can interrupt the connection by picking up another phone. If this is a frequent problem, disconnect the extension phones before using the modem, or install another phone line especially for the modem.
- ✓ Check for loose connections between the modem and the computer, the telephone jack, and AC power.
- ✓ You might have had a poor connection because of line conditions or the problem might have originated on the other end of the line. Try again.

- ✓ If you were online with a BBS or an online service like CompuServe, it might have hung up on you because of lack of activity on your part or because you exceeded your time limit for the day. Try again.

The Modem Cannot Connect When Answering

- ✓ Autoanswer might be disabled. Turn on autoanswer in your datacomm program or send the command `ATS0=1` (`ATS0=2` if you have Caller ID service) to your modem in terminal mode.

File Transfer Is Slower Than It Should Be

- ✓ You might have an older UART. For best throughput, install a 16550AFN UART or a Multi-Tech ISI serial port card. See the "Quick Start" chapter for information on how to identify your UART.
- ✓ If you are running under Windows 3.1 and have a 16550AFN UART, you must replace the Windows serial driver, `COMM.DRV`, to take full advantage of the UART's speed.
- ✓ If you are using a slow transfer protocol, such as Xmodem, try Zmodem or Ymodem/G instead.
- ✓ Is your line noisy? If there is static on your line, the modem has to resend many blocks of data to insure accuracy. You must have a clean line for maximum speed.
- ✓ Are you downloading a compressed file with MNP 5 hardware compression enabled? Since hardware data compression cannot compress a file already compressed by an archiving program, the transfer can be marginally slower with data compression enabled than with it disabled.
- ✓ Does your Internet service provider (ISP) use the same 56K protocol as your modem? The default setting of your modem is to connect using either the K56flex or the V.90 protocol, depending on which one the ISP modem is using. If your ISP uses the X2 protocol, the maximum speed you will be able to connect at is 33,600 bps. Check with your ISP to see which protocols it supports.
- ✓ Try entering the `&V1` command to display information about the last connection, making a screen print of the connection statistics, and checking for parameters that might be unacceptable.

Data Is Being Lost

- ✓ If you are using data compression and a high speed serial port, set the serial port baud rate to four times the data rate.
- ✓ Your UART might not be reliable at serial port speeds over 9600 bps or 19,200 bps. Turn off data compression, reset your serial port speed to a lower rate, or replace your serial port with a faster one.

- ✓ Make sure the flow control method you selected in software matches the method selected in the modem. If you are using the modem with a Macintosh, you might have the wrong cable for hardware flow control.
- ✓ If you are running under Windows 3.1 and have a 16550AFN UART, you might need to turn on the 16550's data buffers and/or replace the Windows serial driver, COMM.DRV.
- ✓ Try entering the **&V1** command to display information about the last connection, making a screen print of the connection statistics, and checking for parameters that might be unacceptable.

There Are Garbage Characters on the Monitor


- ✓ Your computer and the remote computer might be set to different word lengths, stop bits, or parities. If you have connected at 8-N-1, try changing to 7-E-1, or vice-versa, using your communications software.
- ✓ You might be experiencing line noise. Enable error correction, if it is disabled, or hang up and call again; you might get a better connection the second time.
- ✓ At speeds above 2400 bps, the remote modem might not use the same transmission or error correction standards as your modem. Try connecting at a slower speed or disabling error correction. (With no error correction, however, line noise can cause garbage characters.)
- ✓ Try entering the **&V1** command to display information about the last connection, making a screen print of the connection statistics, and checking for parameters that might be unacceptable.

The Modem Doesn't Work with Caller ID

- ✓ Caller ID information is transmitted between the first and second rings, so if autoanswer is turned off (**S0=0**) or if the modem is set to answer after only one ring (**S0=1**), the modem will not receive Caller ID information. Check your initialization string, and if necessary change it to set the modem to answer after the second ring (**S0=2**).
- ✓ Make sure that you have Caller ID service from your telephone company.

Fax and Data Software Can't Run at the Same Time

- ✓ Communications devices can be accessed by only one application at a time. Under DOS or Windows 3.1x, you can run either your fax software or your datacomm software, but not both at the same time, unless you have a special communications device management application. In Windows 95, you can have data and fax communication applications open at the same time, but they cannot use the same modem at the same time.

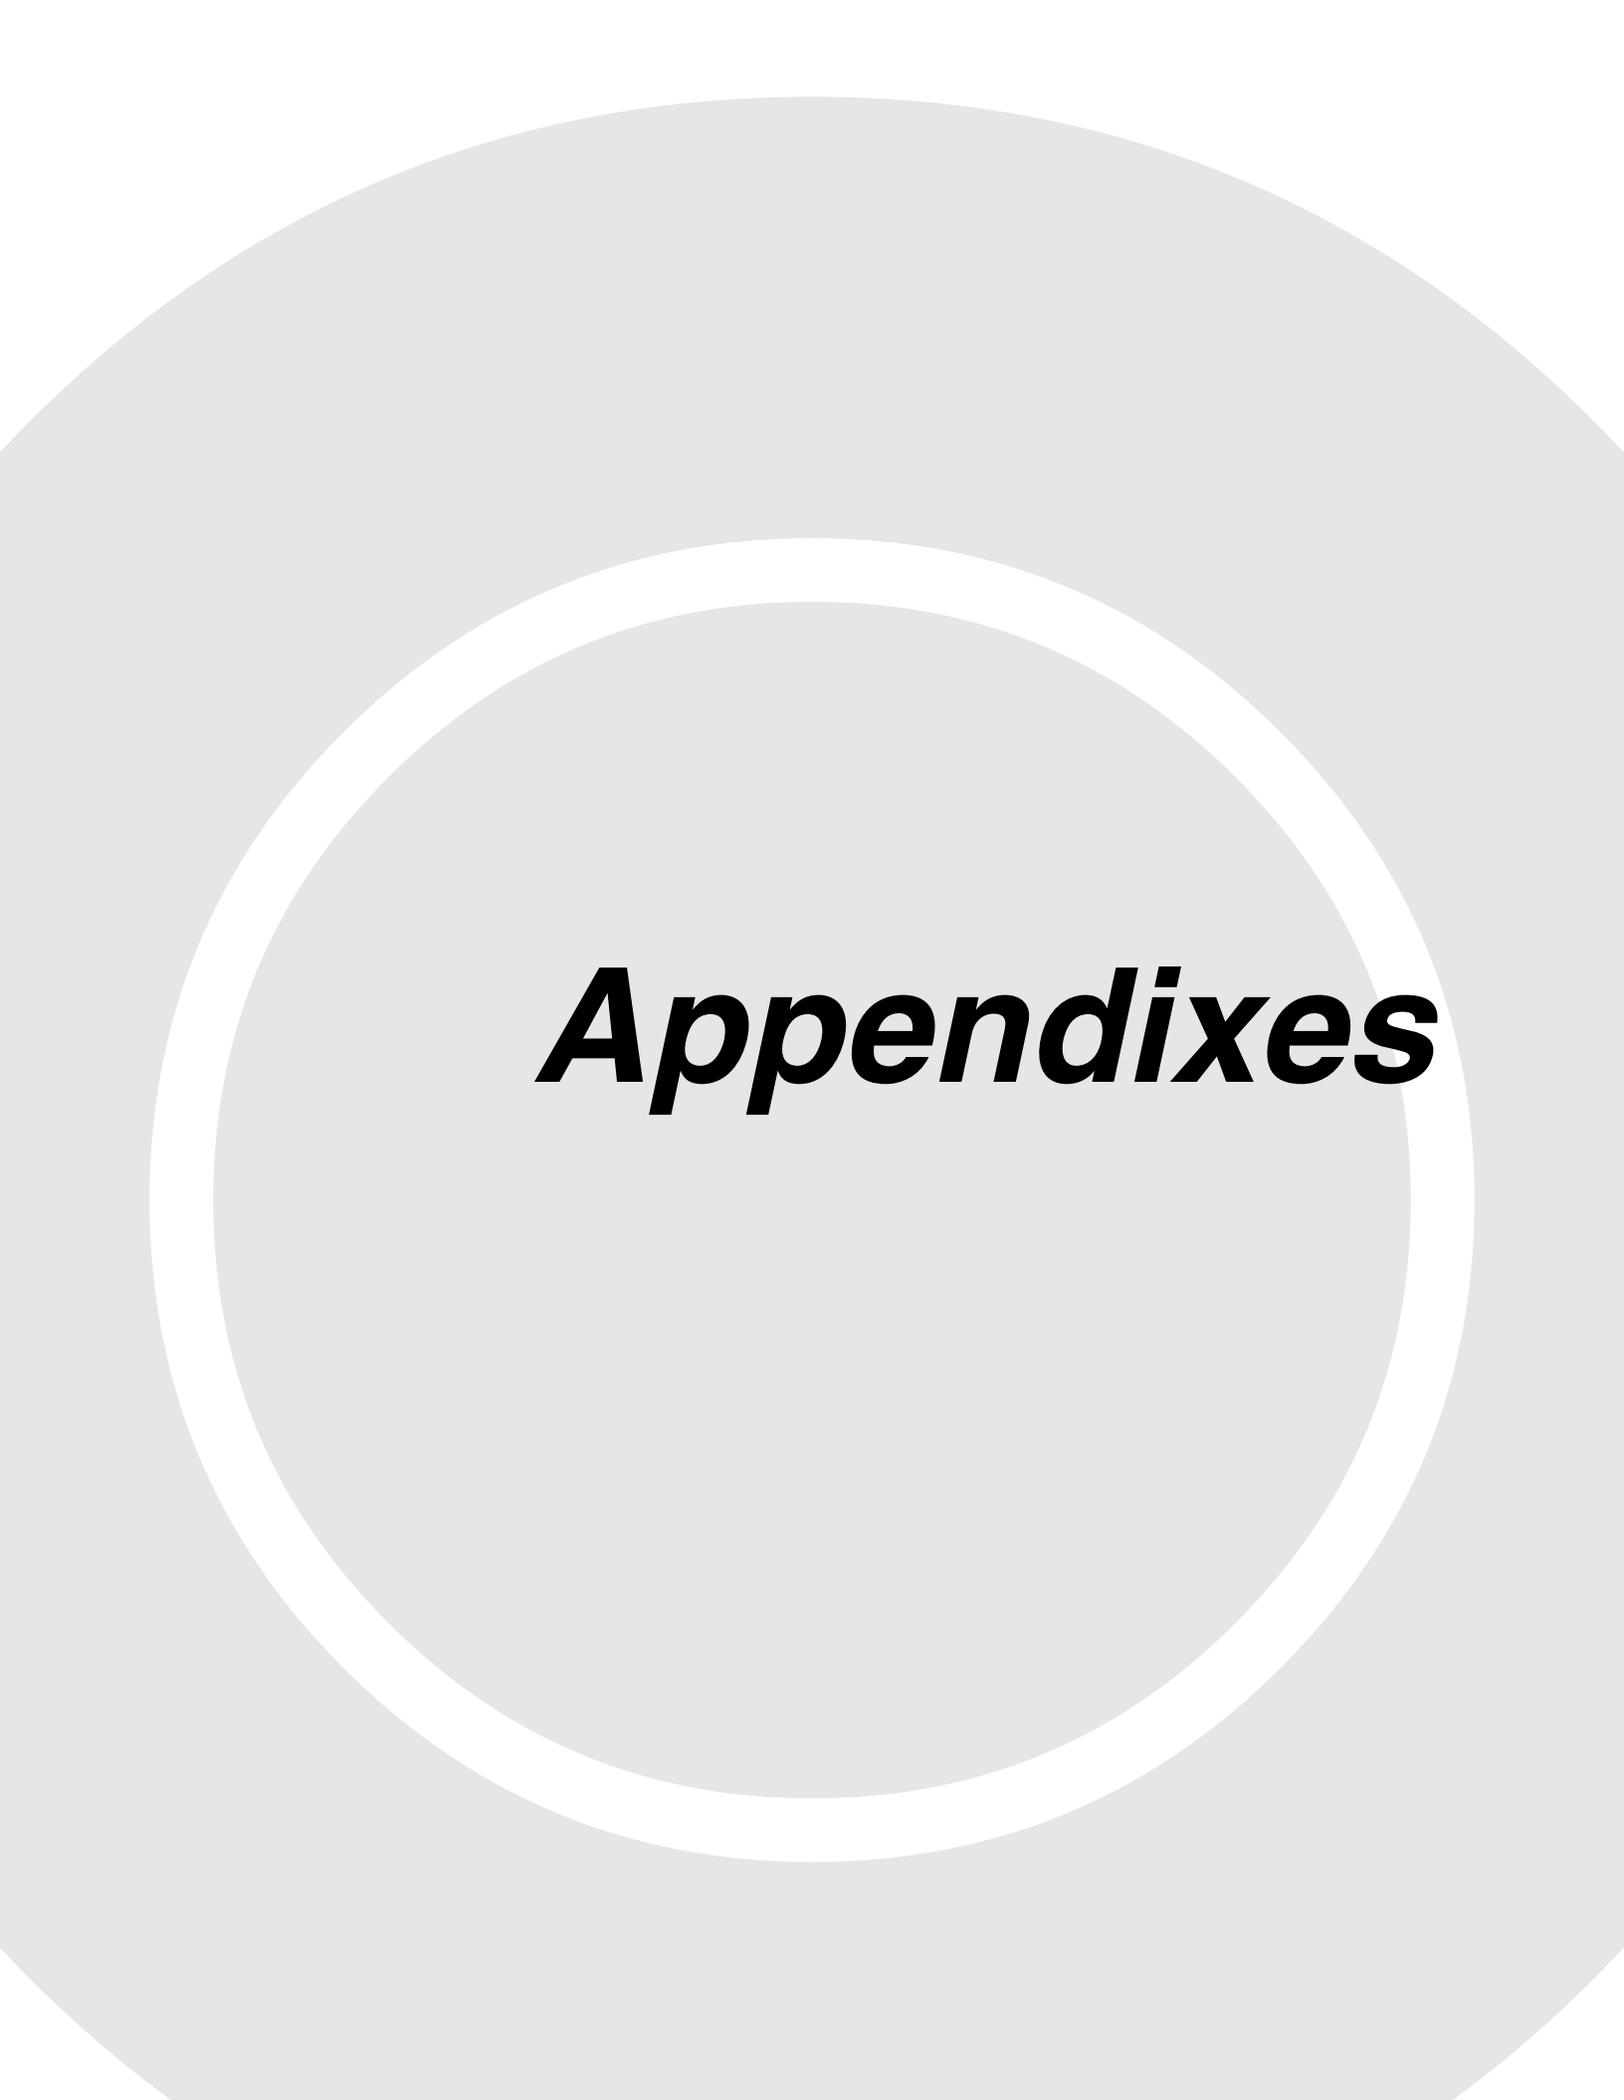

Appendixes

Appendix A: Regulatory Compliance

FCC Part 68 Telecom

1. This equipment complies with part 68 of the Federal Communications Commission Rules. On the outside surface of this equipment is a label that contains, among other information, the FCC registration number. This information must be provided to the telephone company.
2. The suitable USOC jack (Universal Service Order Code connecting arrangement) for this equipment is shown below. If applicable, the facility interface codes (FIC) and service order codes (SOC) are shown.
3. An FCC-compliant telephone cord and modular plug is provided with this equipment. This equipment is designed to be connected to the telephone network or premises wiring using a compatible modular jack that is Part 68 compliant. See installation instructions for details.
4. The ringer equivalence number (REN) is used to determine the number of devices that may be connected to the telephone line. Excessive RENs on the telephone line may result in the device not ringing in response to an incoming call. In most, but not all, areas the sum of the RENs should not exceed 5.0. To be certain of the number of devices that may be connected to the line, as determined by the total RENs, contact the local telephone company.
5. If this equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice is not practical, the telephone company will notify you as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.
6. The telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the operation of the equipment. If this happens, the telephone company will provide advance notice in order for you to make necessary modifications in order to maintain uninterrupted service.
7. If trouble is experienced with this equipment (the model of which is indicated below) please contact Multi-Tech Systems, Inc. at the address shown below for details of how to have repairs made. If the trouble is causing harm to the telephone network, the telephone company may request you remove the equipment from the network until the problem is resolved.
8. No repairs are to be made by you. Repairs are to be made only by Multi-Tech Systems or its licensees. Unauthorized repairs void registration and warranty.
9. This equipment should not be used on party lines or coin lines.
10. If so required, this equipment is hearing-aid compatible.

Manufacturer:	Multi-Tech Systems, Inc.
Model Number:	MT5600DSVD
FCC Registration No:	AU7USA-24713-M5-E
Ringer Equivalence:	0.3B
Modular Jack (USOC):	RJ11C or RJ11W (single line)
Service Center in USA:	Multi-Tech Systems, Inc. 2205 Woodale Drive Mounds View, MN 55112 U.S.A. (763) 785-3500 (763) 785-9874 Fax

FCC Part 15

This equipment has been tested and found to comply with the limits for a **Class B** digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Plug the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC rules. Operation of this device is subject to the following conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference that may cause undesired operation.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Industry Canada

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement Canadien sur le matériel brouilleur.

Fax Branding Statement

The Telephone Consumer Protection Act of 1991 makes it unlawful for any person to use a computer or other electronic device, including fax machines, to send any message unless such message clearly contains the following information:

- Date and time the message is sent
- Identification of the business or other entity, or other individual sending the message
- Telephone number of the sending machine or such business, other entity, or individual

This information is to appear in a margin at the top or bottom of each transmitted page or on the first page of the transmission. (Adding this information in the margin is referred to as *fax branding*.)

Since any number of fax software packages can be used with this product, the user must refer to the fax software manual for setup details. Typically the fax branding information must be entered via the configuration menu of the software.

Canadian Limitations Notice

Notice: The ringer equivalence number (REN) assigned to each terminal device provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the ringer equivalence numbers of all the devices does not exceed 5.

Notice: The Industry Canada label identifies certificated equipment. This certification means that the equipment meets certain telecommunications network protective, operational and safety requirements. The Industry Canada label does not guarantee the equipment will operate to the user's satisfaction.

Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations. Repairs to certified equipment should be made by an authorized Canadian maintenance facility designated by the supplier. Any repairs or alterations made by the user to this equipment or equipment malfunctions may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

Caution: Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

EMC, Safety, and R&TTE Directive Compliance



The CE mark is affixed to this product to confirm compliance with the following European Community Directives:

- Council Directive 89/336/EEC of 3 May 1989 on the approximation of the laws of Member States relating to electromagnetic compatibility;
and
- Council Directive 73/23/EEC of 19 February 1973 on the harmonization of the laws of Member States relating to electrical equipment designed for use within certain voltage limits;
and
- Council Directive 1999/5/EC of 9 March 1999 on radio equipment and telecommunications terminal equipment and the mutual recognition of their conformity.

International Modem Restrictions

Some dialing and answering defaults and restrictions may vary for international modems. Changing settings may cause a modem to become non-compliant with national telecom requirements in specific countries. Also note that some software packages may have features or lack restrictions that may cause the modem to become non-compliant.

New Zealand Telecom Warning Notice

1. The grant of a Telepermit for any item of terminal equipment indicates only that Telecom has accepted that the item complies with minimum conditions for connection to its network. It indicates no endorsement of the product by Telecom, nor does it provide any sort of warranty. Above all, it provides no assurance that any item will work correctly in all respects with another item of Telepermitted equipment of a different make or model, nor does it imply that any product is compatible with all of Telecom's network services.

This equipment is not capable under all operating conditions of correct operation at the higher speed which it is designated. 33.6 kbps and 56 kbps connections are likely to be restricted to lower bit rates when connected to some PSTN implementations. Telecom will accept no responsibility should difficulties arise in such circumstances.

2. Immediately disconnect this equipment should it become physically damaged, and arrange for its disposal or repair.
3. This modem shall not be used in any manner which could constitute a nuisance to other Telecom customers.

4. This device is equipped with pulse dialing, while the Telecom standard is DTMF tone dialing. There is no guarantee that Telecom lines will always continue to support pulse dialing.

Use of pulse dialing, when this equipment is connected to the same line as other equipment, may give rise to 'bell tinkle' or noise and may also cause a false answer condition. Should such problems occur, the user should not contact the Telecom Faults Service.

The preferred method of dialing is to use DTMF tones, as this is faster than pulse (decadic) dialing and is readily available on almost all New Zealand telephone exchanges.

5. Warning Notice: No '111' or other calls can be made from this device during a mains power failure.
6. This equipment may not provide for the effective hand-over of a call to another device connected to the same line.
7. Some parameters required for compliance with Telecom's Telepermit requirements are dependent on the equipment (PC) associated with this device. The associated equipment shall be set to operate within the following limits for compliance with Telecom's Specifications:

For repeat calls to the same number:

- There shall be no more than 10 call attempts to the same number within any 30-minute period for any single manual call initiation, and
- The equipment shall go on-hook for a period of not less than 30 seconds between the end of one attempt and the beginning of the next attempt.

For automatic calls to different numbers:

- The equipment shall be set to ensure that automatic calls to different numbers are spaced such that there is no less than 5 seconds between the end of one call attempt and the beginning of another.

For automatically answered incoming calls:

- The equipment shall be set to ensure that calls are answered between 3 and 30 seconds of receipt of ringing.

8. For correct operation, total of the RNs of all devices connected to a single line at any time should not exceed 5.

South African Notice

This modem must be used in conjunction with an approved surge protection device.

Appendix B: Technical Specifications

Your MultiModemDSVD modem meets the following specifications:

<i>Trade Name</i>	MultiModemDSVD™
<i>Model Number</i>	MT5600DSVD
<i>Server-to-Client Data Rates</i>	K56flex or V.90 speeds when accessing an ISP type K56flex or V.90 server (actual speed depends on server capabilities and line conditions) *
<i>Client-to-Client Data Rates</i>	33,600, 31,200, 28,800, 26,400, 24,000, 21,600, 19,200, 16,800, 14,400, 12,000, 9600, 7200, 4800, 2400, 1200, 0-300 bps
<i>Fax Data Rates</i>	14,400, 9600, 7200, 4800, 2400, 300 bps
<i>Data Format</i>	Serial, binary, asynchronous
<i>Modem Compatibility</i>	ITU-T V.90; K56flex; ITU-T V.34 enhanced, V.34, V.32terbo, V.32bis, V.32, V.22bis, V.22; Bell 212A and 103/113; ITU-T V.42, V.42bis; ITU-T V.21 & V.23 in international versions
<i>Fax Compatibility</i>	ITU-T Group 3, Class 1 and 2, T.4, T.30, V.21, V.27ter, V.29, V.17, and TIA/EIA TR29.2
<i>Voice Compatibility</i>	ITU-T V.70 DSVD
<i>Error Correction</i>	ITU-T V.42 (LAP-M or MNP 3-4)
<i>Data Compression</i>	ITU-T V.42bis (4:1 throughput), MNP 5 (2:1 throughput)
<i>Speed Conversion</i>	Serial port data rates adjustable to 300, 1200, 2400, 4800, 9600, 19,200, 38,400, 57,600, 115,200, and 230,400 bps
<i>Mode of Operation</i>	Fax online modes; full duplex over dial-up lines; AT and AT#V command modes supporting answering machine and voice mail functions
<i>Flow Control</i>	XON/XOFF (software), RTS/CTS (hardware)
<i>Intelligent Features</i>	Plug and play; fully AT command compatible; autodial, redial, repeat dial; pulse or tone dial; dial pauses; auto answer; caller ID; EIA extended automode; adaptive line probing; automatic symbol and carrier frequency during start-up, retrain, and rate renegotiation; DTMF detection; call status display, auto-parity and data rate selections; keyboard-controlled modem options; non-volatile memory; on-screen displays for modem option parameters; command lines of up to 40 characters each.
<i>Command Buffer</i>	40 characters

*Though these modems are capable of 56K bps download performance, line impairments, public telephone infrastructure and other external technological factors currently prevent maximum 56K bps connections.

<i>Data Modulation</i>	FSK at 300 bps, PSK at 1200 bps, QAM at 2400, 4800, and 9600 bps (non-trellis), QAM with trellis-coded modulation (TCM) at 9600, 12,000, 14,400, 16,800, 19,200, 21,600, 24,000, 26,400, 28,800, 31,200, 33,600, and 56,000 bps
<i>Fax Modulation</i>	V.21 CH2 FSK at 300 bps (half duplex) V.27ter DPSK at 4800 and 2400 bps V.29 QAM at 9600 and 7200 bps V.17TCM at 14400, 12000, 9600, and 7200 bps
<i>Carrier Frequencies ITU-T V.34</i>	1600, 1646, 1680, 1800, 1829, 1867, 1920, 1959, 2000 Hz
<i>Carrier Frequencies AT&T V.32 terbo/ ITU-T V.32bis/V.32</i>	1800 Hz
<i>Carrier Frequencies V.22bis/V.22 or Bell 212A Standard (2400 & 1200 bps)</i>	Transmit originate: 1200 Hz Transmit answer: 2400 Hz Receive originate: 2400 Hz Receive answer: 1200 Hz
<i>Carrier Frequencies ITU-T V.23 (1200 bps)</i>	Transmit originate: 390 Hz mark 450 Hz space Receive originate: 1300 Hz mark 2100 Hz space Transmit answer: 1300 Hz mark 2100 Hz space Receive answer: 390 Hz mark 450 Hz space
<i>Carrier Frequencies ITU-T V.21 (0–300 bps)</i>	Transmit originate: 980 Hz mark 1180 Hz space Receive originate: 1650 Hz mark 1850 Hz space Transmit answer: 1650 Hz mark 1850 Hz space Receive answer: 980 Hz mark 1180 Hz space
<i>Carrier Frequencies Bell 103/113 (0–300 bps)</i>	Transmit originate: 1270 Hz mark 1070 Hz space Receive originate: 2225 Hz mark 2025 Hz space Transmit answer: 2225 Hz mark 2025 Hz space Receive answer: 1270 Hz mark 1070 Hz space
<i>Fax Carrier Frequencies</i>	V.21 Ch2 (half duplex): 1650 Hz mark, 1850 Hz space for transmit originate 1650 Hz mark, 1850 Hz space for transmit answer V.27ter: 1800 Hz originate/answer V.29 QAM: 1800 Hz originate/answer V.17 TCM: 1800 Hz originate/answer

<i>Voice Compression and Sampling Rate</i>	PCM 128, 8000 Hz, or IMA ADPCM, 8000 Hz, (selectable via #V commands). Note that your computer system should have a processing speed of at least 75 MHz to take full advantage of the telephony features of this product.
<i>Transmit Level</i>	-11 dBm (dial-up)
<i>Frequency Stability</i>	±0.01%
<i>Receiver Sensitivity</i>	-43 dBm under worst-case conditions
<i>AGC Dynamic Range</i>	43 dB
<i>Impedances</i>	Microphone input: 2.2 kΩ Speaker output: 50Ω
<i>Interface</i>	EIA RS-232C/ITU-T V.24/V.28
<i>Connectors</i>	DB25 RS-232C connector; two RJ-11 phone jacks (one RJ-11 jack on UK and international modems), power jack; 1/8-inch stereo speaker jack and microphone jack.
<i>Cables</i>	One RJ-11 phone cable (USA); country-specific cord for UK and International models; external power transformer and cord
<hr/>	
Note: Any cables connected to the computer should be shielded to reduce interference.	
<hr/>	
<i>Diagnostics</i>	Power-on self test, local analog loop, local digital loop, remote digital loop.
<i>Indicators</i>	LEDs for Transmit Data, Receive Data, Carrier Detect, 56K bps, 33.6K bps, 14.4K bps, Off Hook, Terminal Ready, Error Correction, Fax.
<i>Speaker</i>	Command-controlled 2-inch speaker for call progress monitoring.
<i>Manual Control</i>	ON/OFF power switch
<i>Environmental</i>	Temperature range 0°–50°C (32°–120°F); humidity range 20–90% (non-condensing)
<i>Power Requirements</i>	100–130VAC, 50/60 Hz, 5 W; two-prong outlet-mounted transformer (included); 230V/50 Hz optional (international)
<i>Power Consumption</i>	9 VDC, 300 mA maximum transformer output
<i>Dimensions</i>	10.8 cm wide x 14.8 cm long x 2.9 cm high (4.25" x 5.8" x 1.15")
<i>Weight</i>	224 g (8 oz)
<i>Limited Warranty</i>	10 years

Appendix C: Loopback Tests

Introduction

Each time you turn on your modem, it performs an automatic self-test to ensure proper operation. Your modem also has three diagnostic tests: local analog loopback, remote digital loopback, and local digital loopback. These ITU-T V.54 loopback tests isolate telephone circuit and transmission problems.

In a loopback test, data from your computer loops through the circuits of your modem and/or a remote modem before it appears on your monitor. When the loop has been completed, the data on your PC's monitor should match the original data.

The local analog loopback test allows you to verify that the modem's transmitter and receiver circuits are functioning properly.

The local digital loopback allows you to verify that the local computer or terminal, the two modems, and the transmission line between them are functioning properly.

The remote digital loopback test allows you to verify that the remote computer or terminal, the remote modem, the serial ports, the telephone line, and the local modem are functioning properly.

Note: All loopback tests should be run at 9600 bps without error correction.

Local Analog Loopback Test (V.54 Loop 3)

In this test, data from your computer or terminal is sent to your modem's transmitter, converted into analog form, looped back to the modem's receiver, converted into digital form, and then sent to your monitor for verification. No connection to the phone line is required.

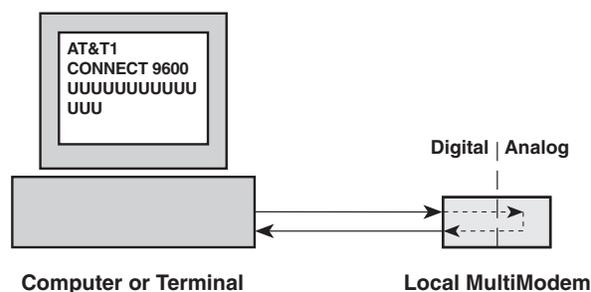


Figure C-1. Local analog loopback test.

Test procedure

1. Connect the modem to your computer. Using your communication program, set the desired baud rate and go into terminal mode.
2. Type `AT` and press `ENTER`; you should get an `OK` message. Type `AT\N` and press `ENTER` to disable error correction.

3. Type **AT&T1** and press **ENTER**. This places your modem in analog loopback mode in the originate mode. A **CONNECT** message should appear on your display. The modem is now out of command mode and in a pseudo-online mode.
4. Note that the CD LED is on. If you are set for 14,400 bps or higher, a speed LED should be on. If the CD LED is not on, there is a defect in your modem.
5. Enter characters from your keyboard. For this test, typing multiple uppercase **U** characters is a good way to send an alternating test pattern of binary ones and zeros. The characters entered should be displayed on your monitor.
6. To exit the test, type the escape sequence **+++AT** and press **ENTER**. This puts the modem in online command mode. Then type either **AT&T** or **ATH** to return to command mode.
7. Your modem passes this test if the characters received on your monitor are the same as those entered from your keyboard. If different characters appear on your monitor, your modem is probably causing the problem, though it could also be your computer. If your modem passes this test, but you are receiving errors while on line, the remote modem or the phone line could be at fault.

Remote Digital Loopback Test (V.54 Loop 2)

The remote digital loopback test tests the phone lines and the circuits of both your modem and a remote modem. In this test, your modem must be on line with another modem that is set up to respond to a request for remote digital loopback. (Note that some modems might not support remote digital loopback or might have it disabled.) Data from your computer or terminal is transmitted through your modem and over the phone line to the remote modem, where it is then looped back to your modem.

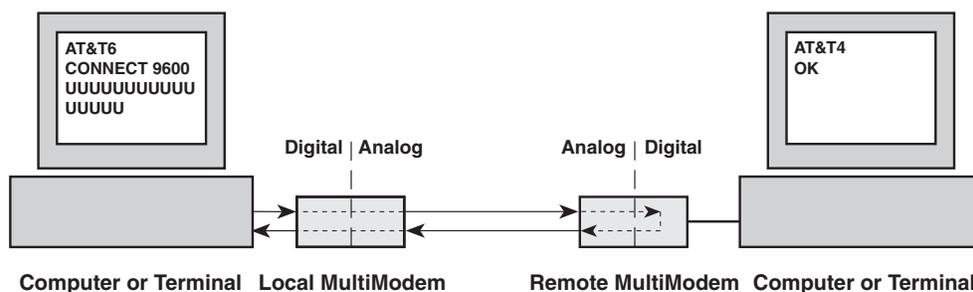


Figure C-2. Remote digital loopback test.

Test procedure

1. Arrange to have **&T4** set on the remote test modem. This command enables the remote modem to respond to an **&T6** request for a remote digital loopback test from the local modem.
2. Open your communications software and go into terminal mode. Type **AT** and press **ENTER**; you should get an **OK** message. Type **AT\N** and press **ENTER** to disable error correction. Type **AT+MS=9,1,9600,9600** and press **ENTER** to set the local modem to V.32 mode at 9600 bps.

3. Dial the remote modem and establish your online connection.
4. Type the escape sequence `+++AT` and press `ENTER` to bring your modem into online command mode.
5. Type `AT&T6` and press `ENTER`. The local modem responds to this command by transmitting an unscrambled marking signal, which causes the remote modem to place itself in digital loopback mode. Then the local modem exits online command mode and enters data mode.
6. Enter data from your keyboard. For this test, typing multiple uppercase *U* characters is a good way to send an alternating test pattern of binary ones and zeroes. Data received by the remote modem enters its analog receiver, is converted to digital data, is reconverted into analog, and then is transmitted back to your modem. Your modem passes this test if the characters received on your monitor are the same as entered from your keyboard.
7. To exit the test, type the escape sequence `+++AT` and press `ENTER`. This puts the modem in online command mode. The modem should respond with an `OK` message. If you wish to stay on line with the remote modem for normal data transmission, type `AT&T` and press `ENTER` to exit the test, then type `ATO` and press `ENTER` to return on line. If you wish to terminate the call, type `ATH` and press `ENTER` to hang up.

Local Digital Loopback Test (V.54 Loop 2)

The local digital loopback test is identical to the remote digital loopback test with one exception. Instead of using your modem to signal a remote modem to place itself in digital loopback mode, your modem is placed in digital loopback mode while the remote modem is not. Data is entered and transmitted from the remote modem, sent across the phone line to your modem, and looped back to the remote modem.

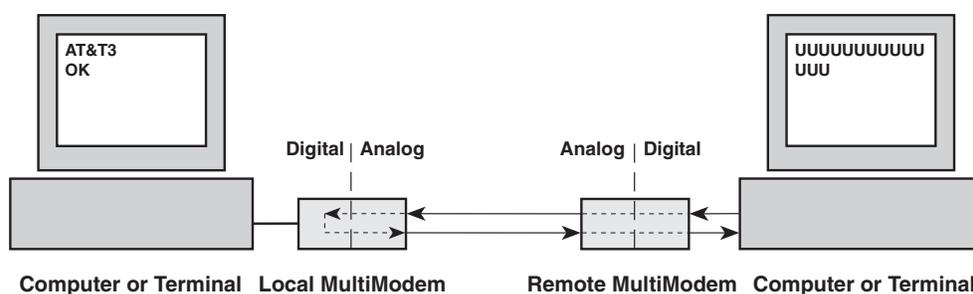


Figure C-3. Local digital loopback test

Test procedure

1. Open your communication software and go into terminal mode. Type `AT` and press `ENTER`; you should get an `OK` message. Type `AT\N` and press `ENTER` to disable error correction. Type `AT+MS=9,1,9600,9600` and press `ENTER` to set the local modem to V.32 mode at 9600 bps.
2. Dial the remote modem and establish your online connection.

3. Type the escape sequence **+++AT** and press **ENTER** to bring your modem into online command mode.
4. Type **AT&T3** and press **ENTER**. Once you receive an *OK* message from your modem (if responses are enabled), your modem is placed in digital loopback mode.
5. Have someone enter data from the remote keyboard. For this test, typing multiple uppercase *U* characters is a good way to send an alternating test pattern of binary ones and zeros. The data received by your modem enters its analog receiver, is converted to digital data, is reconverted into analog, and then is transmitted back to the remote modem. Your modem passes this test if the characters received on the remote monitor are the same as those entered from the remote keyboard.
6. To exit the test, turn off the modems.

Appendix D: Warranty, Service, and Technical Support

Limited Warranty

Multi-Tech Systems, Inc. (MTS) warrants that this product will be free from defects in material or workmanship for a period of five years from the date of purchase or, if date of purchase is not provided, five years from the date of shipment, unless otherwise limited or prohibited by law.

MTS MAKES NO OTHER WARRANTY, EXPRESSED OR IMPLIED, AND ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED.

This warranty does not apply to any products that have been damaged by lightning storms, water, or power surges, or that have been neglected, altered, abused, used for a purpose other than the one for which they were manufactured, repaired by the customer or any party without MTS's written authorization, or used in any manner inconsistent with MTS's instructions.

MTS's entire obligation under this warranty shall be limited (at MTS's option) to repair or replacement of any products that prove to be defective within the warranty period, or, at MTS's option, issuance of a refund of the purchase price. Defective products must be returned by Customer to MTS's factory with transportation prepaid.

MTS WILL NOT BE LIABLE FOR CONSEQUENTIAL DAMAGES AND UNDER NO CIRCUMSTANCES WILL ITS LIABILITY EXCEED THE PURCHASE PRICE FOR DEFECTIVE PRODUCTS.

Online Warranty Registration

If you have access to the World Wide Web, you can register your Multi-Tech product online at the following URL:

<http://www.multitech.com/register/>

Service

North American Products

In the event that service is required, products may be shipped, freight prepaid, to our Mounds View, Minnesota, factory. Please send modems that require repairs to the following address:

Multi-Tech Systems, Inc.
2205 Woodale Drive
Mounds View, MN 55112
Attn: Repairs, Serial # _____

A Returned Materials Authorization (RMA) is not required. Return shipping charges (surface) will be paid by MTS. Please include inside the shipping box a description of the problem, a return shipping address (must have street address, not P.O. Box), a telephone number, and if the product is out of warranty, a check or purchase order for repair charges.

Extended two-year overnight replacement agreements are available for selected products. Please refer to our Overnight Replacement Agreement at <http://www.multitech.com/PROGRAMS/orc/> for details on rates and coverages. Please direct your questions regarding technical matters, product configuration, verification that the product is defective, etc., to our Technical Support department at 800 972-2439.

Please direct your questions regarding repair expediting, receiving, shipping, billing, etc., to our Repair Accounting department at 800 328-9717 or 763 785-3500.

Repairs for damages caused by lightning storms, water, power surges, incorrect installation, physical abuse, or user-caused damages are billed on a time-plus-materials basis.

International Products

Your distributor should contact Amex, Inc., for information about repairs for your Multi-Tech product:

Amex, Inc.
2724 Summer Street NE
Minneapolis, MN 55413
U.S.A.

Tel: +612 331-3251
Fax: +612 331-3180

Please direct questions regarding technical matters, product configuration, verification that the product is defective, etc., to our Technical Support department nearest you, listed at <http://www.multitech.com/COMPANY/offices/DEFAULT.ASP>. When calling the U.S., please direct questions regarding repair expediting, receiving, shipping, billing, etc., to our Repair Accounting department at +763 785-3500.

Repairs for damages caused by lightning storms, water, power surges, incorrect installation, physical abuse, or user-caused damages are billed on a time-plus-materials basis.

Technical Support

Multi-Tech Systems has an excellent staff of technical support personnel available to help you get the most out of your Multi-Tech product. If you have any questions about the operation of this unit, please call 800 972-2439 (USA and Canada) or 763 785-3500 (international and local). Please have modem information available. You can also contact Technical Support by e-mail at the following addresses:

U.S., Canada & Europe: support@multitech.com

France: support@multitech.fr

India: support@multitechindia.com

U.K.: support@multitech.co.uk

Internet Sites

Multi-Tech maintains a Web site at

<http://www.multitech.com>

and an ftp site at

<ftp://ftp.multitech.com>

Ordering Accessories

SupplyNet, Inc., can supply you with replacement power supplies, cables and connectors for select Multi-Tech products. You can place an order with SupplyNet via mail, phone, fax or the Internet at the following addresses:

Mail: SupplyNet, Inc.
614 Corporate Way
Valley Cottage, NY 10989

Phone: 800 826-0279

Fax: 914 267-2420

Email: info@thesupplynet.com

Internet: <http://www.thesupplynet.com>

Appendix E: Upgrading the Modem

Introduction

Your modem is controlled by semi-permanent software, called *firmware*, which is stored in flash memory. Firmware is nonvolatile; that is, it remains stored in memory when the modem is turned off. However, it can be changed by either the manufacturer or the user as bugs are fixed or new features are added.

Since the firmware in your modem is stored in flash memory, you can upgrade it yourself in a few minutes by using the following procedures.

Upgrade Overview

The upgrade procedure consists of the following steps, which are described in greater detail in the following sections.

1. Identify the model number and firmware version of your modem.
2. Identify the current version of the firmware at the Multi-Tech Web site or BBS. If your modem already has the current firmware, there is no need to update it.
3. Download the upgrade file for your modem.
4. Extract the firmware .HEX file and the appropriate flash upgrade program from the file you downloaded.
5. Document and clear your stored parameters.
6. Upgrade the modem's firmware using the .HEX file and the flash upgrade program.
7. Restore your parameters.

Step 1: Identify the Modem Firmware

You must know the model number and firmware version of your Multi-Tech modem to know whether or not you should update it.

1. Run your favorite terminal program. If you are using Windows 95, Windows 98, Windows NT, or Windows 2000, you can use HyperTerminal.
2. In the program's terminal window, type **AT&F**. Even if you cannot see the **AT&F** command on your screen, be sure to type it completely, and then press ENTER. If the modem does not respond with *OK*, repeat the **AT&F** command.
3. Now type **ATI3**, press ENTER, and record your results. The firmware version should appear first in the response, which should look similar to the following:

```
V2.210-V90_DS
```

Step 2: Identify the Current Firmware Version

Identify the current version of the firmware at the Multi-Tech Web site. If your modem already has the current firmware, there is no need to update it.

1. Using your favorite Web browser, go to <http://www.multitech.com/SUPPORT/MultiModemDSVD/firmware.asp>.
2. Scroll down the table to your modem model number.
3. Look at the firmware version number for your modem (the first number after the model number).
4. If the firmware version number matches the firmware version number found in “Step 1: Identify the Modem Firmware,” your modem has the current firmware version, and does not need to be updated.
5. If the firmware version number is greater than the firmware version number found in “Step 1: Identify the Modem Firmware,” your modem has an older firmware version. Continue with “Step 3: Download the Upgrade File.”

Warning: The first digit of the new firmware must match the first digit of the old firmware, or the modem may not work properly. E.g., if your current firmware version is 4.16, replace it only with 4.xx firmware, not 6.xx firmware.

Step 3: Download the Upgrade File

1. If you are not already at the [MultiModemDSVD Firmware page](#) of the Multi-Tech Web site, follow the procedure in “Step 2: Identify the Current Firmware.”
2. Download the upgrade file for your modem by clicking its name, and save the file in a temporary folder on your hard disk.
3. In the same section of the Web page, find the Flash Wizard utility for your operating system, and download it to the same folder.

Step 4: Extract the Upgrade Files

1. Install the Flash Wizard utility by double-clicking the file name in Windows Explorer.
2. Extract the upgrade files by double-clicking the upgrade file name. The extracted files include a .HEX file, which contains the upgrade data, and a Readme file.
3. Copy the upgrade .HEX file into the Flash Wizard folder, which, in a default installation, is at C:\Program Files\MultiTech Systems\Flash Wizard\.

Step 5: Clear Your Stored Parameters

Before you flash your modem, you should record the parameters that are currently stored in it, so you can reprogram it after flashing. After you have recorded them, send the AT&F command to the the modem to clear the stored parameters.

1. Run your favorite terminal program. If you are using Windows 95, Windows 98, Windows Me, Windows NT, or Windows 2000, you can use HyperTerminal.

2. In the program's terminal window, type **AT&V** and press **ENTER** to list your modem's current parameters.
3. Record your parameters by saving the screens and sending them to your printer.
4. Type **AT&F** and press **ENTER** to clear your stored parameters and reset your modem to factory default.
5. Close the terminal program.

Step 6: Upgrade the Modem's Firmware

Before you begin the following procedure, read the README.TXT file extracted from the upgrade archive file, and note the file name for the new firmware (e.g., BLQX210.HEX).

WARNING: Never install an older version of firmware over a newer version. Doing this **WILL DESTROY THE FLASH PROM!** If the flash PROM is destroyed, the modem must be sent in for repair.

1. Run Flash Wizard by double-clicking its icon or file name, or by selecting it from the Start menu. The **Identifying Devices** dialog box is displayed as Flash Wizard locates and identifies the devices connected to your system.

Note: If the message *ERROR: No valid devices detected* is displayed, verify that the modem is turned on and that all cables are correctly and securely attached.

2. Click the modem to be upgraded, and then click **Next** to proceed.
3. Select the port to be upgraded from the **Port** list, select the appropriate .HEX file from the **Hex File** list, and then click **Next** to continue.

Note: Do not use FLASHLDR.HEX. This file is used internally by Flash Wizard.

 
4. The **Progress** dialog box appears, showing a status bar that indicates the progress of the upgrade.

Caution: Any disruption of the program during this stage of the upgrade can cause your modem to become inoperable. Wait for the **Next** button to become active before proceeding.

5. When the flash upgrade is complete, the message *Programming Complete* appears. Click **Next** to continue.
6. The **Results** dialog box appears next. Click **Finish** to exit Flash Wizard.

Step 7: Restore Your Parameters

Your modem has been updated. You can now open your terminal program to reprogram your modem parameters or to confirm the update by typing **ATI3** in the terminal window and pressing **ENTER**.



Index

A

abort timer, 41
 analog loopback test, 64
 Answer command, 24
 answering machine capabilities, 3
 assembling the modem, 7
 Asynchronous Communications
 Mode command, 31
 AT commands, 3, 23–39
 #BDR=, 40
 #CID=, 38
 #CLS=, 40
 #MDL?, 40
 #MFR?, 40
 #REV?, 40
 #VLS=, 40
 \$SB, 39
 %C, 33
 %E, 33
 %L, 33
 %Q, 33
 %U, 34, 37
 &C, 29
 &D, 12, 29
 &E, 29, 30
 &F, 12, 30
 &G, 30
 &J, 30
 &K, 30
 &M, 31
 &P, 31
 &Q, 31
 &S, 31
 &T, 31
 &V, 32
 &W, 12, 32
 &Y, 32
 &Z=, 33
 **, 38
 +++AT, 39
 +MS=, 36
 +MS=?, 36
 +MS?, 36
 -K, 37
 -SDR, 38
 -SMS=, 39
 -SSE=, 40
 \A, 34
 \B, 34
 \K, 34
 \N, 35
 \V, 35
 A, 24
 A/, 24
 AT, 24
 B, 24
 C, 24
 D, 24

definition, 23
 descriptions, 24–39
 DS=, 25
 E, 25
 format, 23
 H, 25
 I, 25
 L, 26
 L5, 26
 M, 26
 N, 26
 O, 27
 P, 27
 Q, 27, 35
 S=, 27
 S?, 27
 T, 27
 V, 27, 35
 W, 28, 35
 X, 28, 35
 Y, 28
 Z, 12, 28
 attention code, 24
 autoanswer, 23, 41, 53
 autobaud, 12

B

backspace character, setting, 41
 baud rate, 12
 Baud Rate Select command, 40
 Bell 212A mode, 24
 Break Control command, 34
 break signal, 34

C

call card tone, 25
 Call Waiting, 52
 Caller ID, 12, 53, 54
 Caller ID command, 38
 Canadian regulations, 58
 carriage return character, 41
 Carrier Control command, 24
 carrier loss disconnect time,
 setting, 41
 CD indicator, 65
 cellular operation, 37
 Client for Microsoft Networks, 16
 COMM.DRV, 53, 54
 comma, setting pause time, 41
 command mode, 23
 command string, 23
 communication programs, 12
 Communication Standard
 command, 24
 Communications Mode
 command, 31
 communications programs, 23, 50

compression, data, 3, 53
 configuration
 communications programs, 12
 selecting reset configuration, 32
 storing, 12, 32
 Connect Message Control
 command, 28
 connect messages, 12, 45
 connecting the modem, 9
 country code, displaying, 25

D

data buffering, 31
 data calling tone, 42
 Data Carrier Detect command, 29
 data compression, 3, 53
 AT command, 30
 selection (S46), 43
 Data Compression Control
 command, 33
 Data, Fax, or Voice/Audio Select
 command, 40
 data mode, 23, 27, 66
 Data Set Ready Control command, 31
 Data Terminal Ready
 command, 12, 29
 Data/DSVD Mode command, 39
 DCD Control command, 29
 default settings, 12, 30
 Dial command, 24
 Dial Stored Telephone Number
 command, 25
 dial string modifiers, 24
 Dial-Up Networking, 16–18
 dialing tones, 41
 digital loopback tests, 65–67
 disconnect delay, 41
 Display Current Configuration
 command, 32
 Display Legacy Parameters
 command, 26
 Distinctive Ring Control
 command, 38
 DOC regulations, 58
 DSR Control command, 31
 DSVD Enable/Disable command, 40
 DSVD operation, 19–21
 DTE rate, 12
 DTR (Data Terminal Ready)
 AT command, 12
 DTR Control command, 29
 DTR delay (S25), 42
 DTR dialing, 33

E

Echo Command Mode Characters
 command, 25
 ENTER key, 24

- error control, setting, 43
 - error correction, 3
 - disabling, 64, 65, 66
 - Error Correction Mode Selection
 - command, 35
 - escape character, 41
 - escape sequence, 23, 39
 - escape sequence guard time (S12), 41
- F**
- fallback, 26
 - fax, 3
 - fax communications, 19
 - faxing from a Windows program, 19
 - FCC regulations, 56–57
 - firmware
 - displaying version, 25
 - upgrading, 71–73
 - flash dial modifier (!), 42
 - flash memory, 71
 - Flash Memory Download
 - command, 38
 - Flash Wizard upgrade utility, 72
 - flow control, 30, 54
 - Flow Control Selection
 - command, 30
 - front panel, 14–21, 49
- G**
- garbage characters, 54
 - Guard Tone Control command, 30
- H**
- handshake, 26
 - hangup command, 25
 - hangup delay, 41, 43
 - Hook Control command, 25
- I**
- Identify Manufacturer
 - command, 40
 - Identify Model command, 40
 - Identify Revision Level
 - command, 40
 - inactivity timer, 42
 - indicators, 14–21, 49
 - Information Request command, 25
 - initialization strings, 12, 23, 50
 - installation and setup, 6–10
- K**
- K56flex protocol, 2
- L**
- LED indicators, 14–21, 49
 - line connection, 9
 - line feed character, 41
 - Line Quality Monitor command, 33
 - Line Signal Level command, 33
 - Line Signal Quality command, 33
 - Load Factory Settings
 - command, 12, 30
 - local analog loopback test, 64
 - local digital loopback test, 66
 - Long Space Disconnect
 - command, 28
 - loopback tests, 64–67
 - lost data, 53
- M**
- messages, 45–47
 - microphone, 6, 10
 - MNP 5 data compression, 3, 33, 53
 - MNP error correction, 3, 35
 - MNP Extended Services
 - command, 37
 - modem reset
 - AT command, 12
 - Modem Reset command, 28
 - Modem-Initiated Flow Control
 - command, 29
 - Modulation Handshake
 - command, 26
 - Modulation Selection command, 36
 - Monitor Speaker Mode
 - command, 26
 - Monitor Speaker Volume
 - command, 26
 - mounting the feet, 7
- N**
- NetWare, 16
 - NO CARRIER message (S86), 44
- O**
- on-hook/off-hook, 25
 - online command mode, 23
 - opening the modem, 7
 - ordering replacement parts, 70
- P**
- package contents, 4
 - patch cord for sound card, 6, 10
 - pause time for comma, setting, 41
 - PCM Code Selection command, 34
 - phone connection, 10
- power**
- connection, 10
 - supply, 49
- programs, communication, 12
- protocols, 53
- Pulse Dial Make/Break Ratio
 - command, 31
- Pulse Dialing command, 27
- R**
- rate, maximum data, 43
 - Read Register Value command, 27
 - reference materials, 21
 - registering your product, 68
 - regulatory compliance, 56–60
 - related manuals, 4
 - remote digital loopback test, 65
 - remote node operation, 16–18
 - removing a modem from
 - Windows, 11
 - Repeat command, 24
 - replacement parts, 70
 - required equipment, 6
 - resetting the modem, 12, 28, 30
 - Result Code Format command, 27
 - Result Code Selection command, 28
 - result codes, 23, 44, 45–47, 51
 - Result Codes Enable/Disable
 - command, 27
 - Return Online to Data Mode
 - command, 27
 - rings, setting number of, 12, 41
 - ROM checksum, 25
 - RS232 connection, 9
- S**
- S-registers, 41–47
 - reading, 27
 - S0, 12, 41
 - S1, 41
 - S2, 41
 - S3, 41
 - S4, 41
 - S5, 41
 - S6, 41
 - S7, 41
 - S8, 41
 - S9, 41
 - S10, 41
 - S11, 41
 - S12, 41
 - S18, 42
 - S24, 42
 - S29, 42
 - S30, 42

- S32, 42
 - S33, 42
 - S35, 42
 - S36, 42
 - S37, 43
 - S38, 43
 - S46, 43
 - S48, 43
 - S86, 44
 - S95, 35, 44
 - setting, 27
 - safety, 6
 - Select Maximum MNP Block Size
 - command, 34
 - Select Profile command, 32
 - serial cable, 50
 - serial port, 12, 39, 50, 51, 53
 - Serial Port Baud Rate command, 39
 - servicing your modem, 57
 - Set Register Value command, 27
 - Single Line Connect Message
 - command, 35
 - sleep mode timer (S24), 42
 - software, communication, 12
 - solving problems, 49–54
 - sound card, 6, 8, 10
 - speaker, 7, 8
 - internal jumper, 8
 - speaker, connecting a, 10
 - Speaker Mode command, 26
 - specifications, technical, 61–63
 - speed
 - maximum, 43
 - serial port, 12, 39
 - speed conversion (data buffer), 31
 - static electricity, 7
 - Store Current Configuration
 - command, 12, 32
 - Store Telephone Number command, 33
 - surge protector, 10
- T**
- technical specifications, 61–63
 - telephone
 - connecting a, 10
 - line, 51
 - number, storing, 33
 - Telephone Jack Control command, 30
 - terminal mode, 50, 65
 - test timer (S18), 42
 - testing the modem, 10, 31, 51
 - fax, 19
 - loopback tests, 64–67
 - self-test, 49
 - Tone Dialing command, 27
 - tones, dialing, 41
 - Transmit Break command, 34
 - troubleshooting, 49–54
- U**
- UARTs, 53, 54
 - uninstalling a modem from
 - Windows, 11
 - upgrading the modem, 71–73
- V**
- V.22 mode, 24
 - V.22bis Guard Tone Control
 - command, 30
 - V.25 data calling tone, 42
 - V.42 error correction, 3, 29, 35
 - V.42bis data compression, 3, 33
 - V.54 tests, 31, 64–67
 - voice commands, 40
 - Voice Line Select command, 40
 - voice operation, 19–21
- W**
- wait time for dial tone, 41
 - warranty, 56, 68
 - Windows 3.1, 50, 53, 54
 - Windows 9x, 51
 - Windows NT, 51
 - Windows operating systems, 11
 - uninstalling a modem, 11
 - World Wide Web, 21
- X**
- Xmodem, 53
 - XOFF character (S33), 42
 - XON character (S32), 42
- Y**
- Ymodem/G protocol, 53
- Z**
- Zmodem protocol, 53