



HP Wireless USB Keyboard and Mouse

User's Manual

© Copyright 2004 Hewlett-Packard Development Company, L.P.
The information contained herein is subject to change without notice.
The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Product Number P2360AA #ABA
Printed in China



HEALTH WARNING

There may be a risk of **serious physical injuries** from working at your computer workstation.

Some studies have suggested that long periods of typing, improper workstation setup, incorrect work habits, stressful work conditions and relationships, or problems in your personal health may be linked to injuries. These injuries could include carpal tunnel syndrome, tendonitis, tenosynovitis, and other musculoskeletal disorders.

The warning signs of these disorders can occur in the hands, wrists, arms, shoulders, neck, or back, and can include:

- Numbness, burning, or tingling
- Soreness, aching, or tenderness
- Pain, throbbing, or swelling
- Tightness or stiffness
- Weakness or coldness

Symptoms may be felt during typing, while using a mouse, or at other times when no work with the hands is being performed, including during the night when these symptoms might awaken you. If you experience these symptoms, or any other persistent or recurring pain or discomfort that you think may be related to using a computer, you should promptly consult a qualified physician and, if available, your company's health and safety department. The earlier a problem is properly diagnosed and treated, the less chance there is that it will progress to a disabling condition.

HP created a "Safety & Comfort Guide" that describes proper workstation setup, posture, and health and work habits for computer users. In addition, it also contains product safety information applicable to all HP products. This guide can be downloaded from the internet at <http://www.hp.com/ergo>

Product Registration

Registration is quick, easy and offers: Email updates containing notifications about product enhancements, the most recent support alerts, and driver updates specific to the product(s) you own.

For faster help, be sure to register your recently purchased product at <http://www.microinv.com/hp/register.cfm>

Contents

Welcome.....	4
Installation.....	5
User Setup.....	7
Identifying Special Keyboard Buttons.....	10
Special Keyboard Buttons.....	11
Troubleshooting.....	16

Welcome

Congratulations on the purchase of your new HP Wireless USB Keyboard and Mouse. This guide will provide you the necessary steps to installing and maintaining your keyboard and mouse.

Package Contents




HP Wireless Keyboard and Mouse



USB Receiver



CD with
Driver/Software

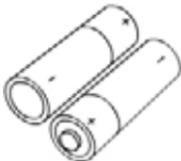

4 AA Batteries



User's Manual



Quick Start Guide



Warranty Card

System Requirements:

- Available USB port

Compatible with Microsoft® Windows® 98SE/Me/2000/XP

Installation

Software Installation

Insert the CD into your CD-ROM drive. If the setup program does not appear, click Start, then click Run. Type <drive letter>:\setup. Click Ok. (For example, if the disk is in drive D, enter D:\Setup.) Follow the onscreen instructions. You will be asked to reboot your PC.




Hardware Installation

STEP 1 - Power on your system.

STEP 2 - Connect the USB receiver to any available USB port or hub connected to your computer.

STEP 3 - Continue on to the User Setup on Page 7.

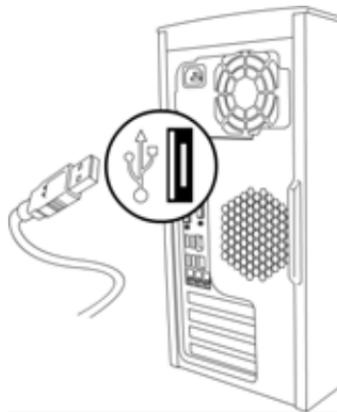

Battery Installation

Mouse

STEP 1 - Press the battery compartment release located on the bottom of the mouse to open the battery compartment.

STEP 2 - Install the two batteries into the compartment paying close attention to proper polarities.

STEP 3 - Close the battery compartment cover.




Keyboard

STEP 1 - Press the battery compartment release located on the bottom of the keyboard to open the battery compartment


STEP 2 - Install the two batteries into the compartment paying close attention to proper polarities.

STEP 3 - Close the battery compartment cover.

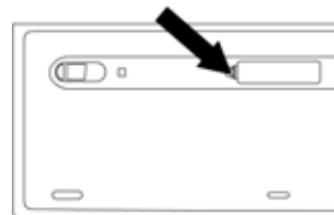


User Setup


By default your keyboard and mouse should work immediately. If not, the receiver and the keyboard and mouse must be synchronized and you need to perform the following procedure.

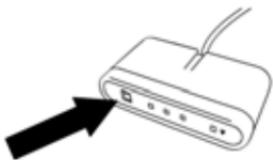


STEP 1 - Press the Connect button located on the receiver.

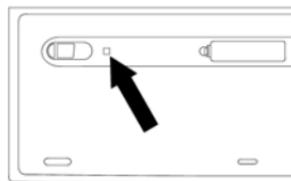

STEP 2 - Press the Connect button located on the bottom of the keyboard.

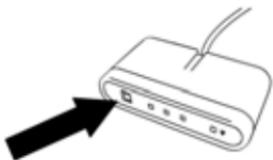

STEP 3 - Press the Connect button located on the receiver again.

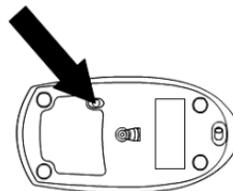

STEP 4 - Press the Connect button located on the bottom of the mouse.

Configuration

Customize your keyboard settings using "Control Panel"

Windows XP – Category View

Click on Start, select Settings / Control Panel / Printers and Other Hardware / Keyboard, to customize your keyboard settings.

Windows 98SE, Me, 2000 and XP – Classic View

Click on Start, select Settings / Control Panel / Keyboard, to customize your keyboard settings.

Configuration continued

Customize your keyboard's special keyboard buttons


Once the software is correctly installed, you can customize your keyboard's special keyboard buttons. To access the configuration screen, click on the  icon in your system tray.



On this screen, you can change the preset actions of your keyboard's special keyboard buttons. To change a preset button, click on the button you wish to change, then select the function you want the keyboard to do. You can even customize the buttons to perform combination key shortcuts, such as ALT + F4 to close the currently selected window.

There is also an internet link to the support site on the configuration screen. Clicking on the link will open your default internet browser and display the support page.

Identifying Special Keyboard Buttons

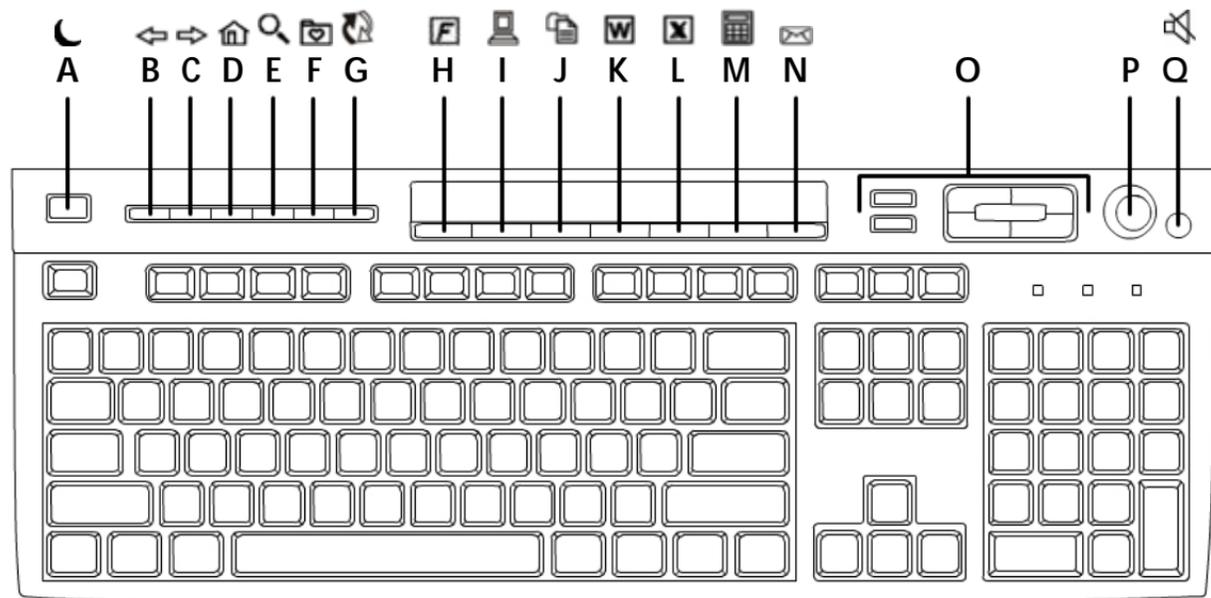

Special Keyboard Buttons

Access and Internet Buttons

Figure Key	Icon	Feature	Description
A		Standby	Puts PC into or out of power-saving mode. Hold key for 5 seconds. May take 10-30 seconds before screen reappears.
B		Back	Returns to the last web page you visited.
C		Forward	Views the next web page you viewed before.
D		Home	Opens your home page using your default browser.
E		Search	Opens the search menu.
F		Favorites	Opens the Internet "My Favorites" folder.
G		Refresh	Refreshes the current web page you are viewing.

Special Keyboard Buttons Continued

Office Buttons

Figure Key	Icon	Feature	Description
H		F Lock	Toggles F Lock (See page 13 for more information)
I		My Computer	Opens the My Computer folder.
J		My Documents	Opens the My Documents folder.
K		Word	Opens Microsoft Word.
L		Excel	Opens Microsoft Excel.
M		Calculator	Opens Microsoft Calculator.
N		Email	Opens the default program you use for email.* [after this, starts the "Media Control or Playback Buttons"]

* Note: For Internet Explorer, you can select "Tools / Internet Options / Programs / Email" to change the default program you use for email.

Special Keyboard Buttons Continued

Office Hot Keys

This keyboard features 12 integrated Office Hot Keys along the row of the F1 through F12 keys. This feature is toggled by the **F** key. When you press the **F** key the Office Keys feature is activated. To turn off the Office Keys feature, press the **F** key again.

F1: New	Creates a new file in the application you are using (new e-mail for instance).
F2: Forward	Forwards the selected email in Microsoft Outlook or Outlook Express.
F3: Reply	Replies to the selected email in Microsoft Outlook or Outlook Express.
F4: Reply All	Replies to the selected email to all in Microsoft Outlook or Outlook Express.
F5: Undo	Reverses the last command or deletes the last entry you typed or action.
F6: Redo	Reverses the action of the Undo command.
F7: Save	Saves the active file with current file name, location and file format.
F8: Send	Sends the selected email in Microsoft Outlook or Outlook Express.
F9: Cut	Removes the selection from the active document and copies it to the clipboard.
F10: Copy	Copies the selection to the clipboard.
F11: Paste	Pastes the previously cut or copied items from the clipboard.
F12: Spell	Starts the spelling-check program in the active document.

Special Keyboard Buttons Continued

Media Control or Playback Options

Figure Key	Icon	Feature	Description
O		Media controls	Operates CD or DVD player. See table on page 15.
P		Volume Control	Volume knob: Increase speaker volume when turned clockwise and decreases when turned counterclockwise. It can be turned indefinitely, even after maximum sound has been reached.
Q		Mute	Mute sound. Push again to turn the mute off.

*Note: To change your default media player, open "My Computer", then click on "Tools" and go to "Folder Options". In the "Folder Options" screen, click on the "File Types" tab, and then select "MP3" from the list. Once you have selected "MP3", you will see that the lower portion of the window will say "Details for 'MP3' extension". Click on the button that says "Change" and you will have a choice of which programs to open your MP3s with. You can also right click on the file you wish to open, and choose "Open With" and select the "Choose Program" option. To make it so the file always opens with that application, select the application and check mark the box that says "Always use the selected program to open this kind of file".

Special Keyboard Buttons Continued

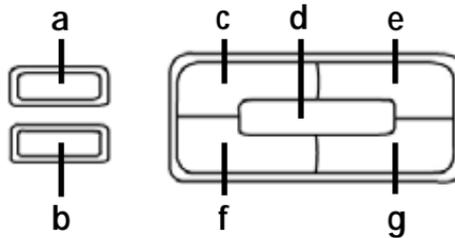


Figure Key	Icon	Feature	Description
a	Eject	Eject	Opens/Closes the CD-ROM tray.
b	Log off	Log Off	Logs the user out of Windows.
c	Media	Media	Opens your default media player (Windows Media Player or iTunes in most cases). * (see page 14)
d	▶/	Play / Pause	Plays/Pauses the current track/file.
e	■	Stop	Stops the current track/file.
f	◀◀	Previous	Skips to the previous track/file.
g	▶▶	Next	Skips to the next track/file.

Troubleshooting

- If you have Windows 95 or Windows NT, these operating systems do not support this device.
- The Universal Serial Bus Controller and USB root hub may not be properly installed on your system. Contact your computer manufacturer for details.

Technical Support

For technical assistance call 1-866-314-7239 or visit www.microinv.com/hp
Technical Support hours of operation: Monday - Friday 8:30am to 10:00pm E.S.T.

FCC STATEMENT

This device complies with part 15 of FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction guide, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult a service representative for help.

Properly shielded and grounded cables and connectors must be used in order to comply with FCC emission limits. Hewlett-Packard is not responsible for any radio or television interference caused by using other than recommended cables and connectors or by unauthorized changes or modifications to this equipment. Unauthorized changes or modifications could void the user's authority to operate the equipment.

For regulatory compliance information only, contact:

Hardware Quality Eng. Manager
Hewlett-Packard Company - CPC
10500 Ridgeview Court
Cupertino, CA95014

Telephone: 1(408) 343-5000



Tested To Comply With FCC Standards
FOR HOME OR OFFICE USE

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de classe B est conforme à la norme NMB-003 du Canada.



i n v e n t