SONY

HOME AUDIO

Operating Instructions

RDH-GTK33iP

http://www.sony.net/

la iPod 🗍 iPhone

as lighted candles on the apparatus.

bookcase or built-in cabinet.

been turned off.

Owner's Record

dealer regarding this product.

1) Read these instructions.

2) Keep these instructions.

4) Follow all instructions.

6) Clean only with dry cloth.

3) Heed all warnings.

obsolete outlet.

apparatus.

manufacturer.

avoid injury from tip-over.

Model No. <u>RDH-GTK33iP</u>

U.S.A.

Serial No. _

curtains, etc. Do not place the naked flame sources such

To reduce the risk of fire or electric shock, do not expose

this apparatus to dripping or splashing, and do not place

objects filled with liquids, such as vases, on the apparatus.

Do not install the appliance in a confined space, such as a

As the main plug is used to disconnect the unit from the

mains, connect the unit to an easily accessible AC outlet.

Should you notice an abnormality in the unit, disconnect

the main plug from the AC outlet immediately.

Do not expose batteries or apparatus with battery-

installed to excessive heat such as sunshine, fire or the

The unit is not disconnected from the mains as long as it

The model and serial numbers are located on the rear of

the unit. Record these numbers in the space provided

Important Safety Instructions

7) Do not block any ventilation openings. Install in

accordance with the manufacturer's instructions.

8) Do not install near any heat sources such as radiators,

9) Do not defeat the safety purpose of the polarized or

with one wider than the other. A grounding type

plug has two blades and a third grounding prong.

10) Protect the power cord from being walked on

or pinched particularly at plugs, convenience

11) Only use attachments/accessories specified by the

receptacles, and the point where they exit from the

The wide blade or the third prong are provided for

heat registers, stoves, or other apparatus (including

grounding-type plug. A polarized plug has two blades

5) Do not use this apparatus near water.

amplifiers) that produce heat.

below. Refer to them whenever you call upon your Sony

is connected to the AC outlet, even if the unit itself has

Notice for the customers in the

Made for

moisture.

WARNING

DOCKING SYSTEM

4-418-234-11 (1)

Location of Controls

Unit (Top)

Getting Started

©2012 Sony Corporation Printed in China

13) Unplug this apparatus during lightning storms or when unused for long periods of time.



Unit (Front)

GB



Headphone output is not available as this system does not have a headphone jack. Remot



This manual mainly explains operations using the remote, but the same operations can also be performed using the buttons on the unit having the same or similar

To lock the buttons on the unit (Child lock function)

You can lock the buttons except I/\bigcirc (on/standby) **5** on the unit to prevent them from being operated by mistake. Hold down ■ 14 on the unit until "CHILD LOCK ON" or "CHILD LOCK OFF" appears on the display **8**. The buttons except I/\bigcirc 5 on the unit will be locked or unlocked.

The child lock will be cancelled when you disconnect the power cord

Tip

ions using the buttons of the remote are possible even when the child lock function is enabled.



Installing the system

Horizontal installation

The system can be installed either vertically or horizontally. Select the installation style based on your preferences (except for iPod nano model users). Note that with this system, horizontal installation is required when using iPod nano models.





damage.

mistake.

this system.

Operations

Playing the iPod/iPhone

- Select the iPod function.
- Press FUNCTION +/- 7 repeatedly.
- 2 Place the iPod/iPhone onto the iPod/iPhone connector 12
- **3** Press the PUSH button and secure the iPod/iPhone.
- 4 Start playback.
- Press ► 14.

To control the iPod/iPhone		
То	Press	
Pause playback	II (pause) 14/■ (stop) 14.	
Select a track or chapter of audiobook/ podcast	 (go back)/▶►I (go forward) To fast-forward or fast-rewind, hold down the button. 	
Find a point in a track or chapter of audiobook/ podcast	Hold down ◀◀ (rewind)/▶▶ (fast forward) [1] during playback, and release the button at the desired point.	
Choose the selected item	(+) (enter) 17.	
Scroll up/down the iPod menus	★ / ▼ [20].	
Return to the	TOOL MENU 18/RETURN	

previous menu or (return) 19. select a menu

You can use the system as a battery charger for an iPod/ iPhone whether the system is on or off.

on, make sure to select a function other than the USB function

on the iPod/iPhone connector 12. The charging status appears on the iPod/iPhone display. When charging the iPod/iPhone, place the iPod/iPhone on the connector with the iPod/iPhone player stopped.

To stop charging an iPod/iPhone

Remove the iPod/iPhone

normally, or has been dropped.

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or To reduce the risk of fire, do not cover the ventilation regulations. opening of the apparatus with newspapers, tablecloths,

NOTE:

turning the equipment off and on, the user is encouraged

- receiver. - Connect the equipment into an outlet on a circuit
- different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help.

CAUTION

You are cautioned that any changes or modifications authority to operate this equipment.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance

- MPEG Layer-3 audio coding technology and patents licensed from Fraunhofer IIS and Thomson.
- trademark of Microsoft Corporation in the United
- States and/or other countries. •This product contains technology subject to certain
- intellectual property rights of Microsoft. Use or distribution of this technology outside of this product is prohibited without the appropriate license(s) from Microsoft.

•All other trademarks and registered trademarks are of

14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate

The following FCC statement applies only to the version of this model manufactured for sale in the U.S.A. Other versions may not comply with FCC technical

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and

not expressly approved in this manual could void your



License and Trademark Notice

•iPhone®, iPod®, iPod classic®, iPod nano®, and iPod touch® are trademarks of Apple Inc., registered in the

- Windows Media is either a registered trademark or

- bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to







their respective holders. In this manual, [™] and [®] marks are not specified.



To use the system as a battery charger

When charging the iPod/iPhone while the system is

The charging begins when the iPod/iPhone is placed

For details, see the user's guide of your iPod/iPhone.

A Power

Connect the power cord to a wall outlet.

The demonstration appears on the display [8]. When you press 1/(1) [5], the system turns on and the demonstration automatically ends If the supplied adaptor on the plug does not fit your wall outlet, detach it from the plug (only for models equipped with an adaptor).

B Audio in L/R (DVD/PC IN jacks)

Connect an optional component such as digital audio players or a device with analog audio outputs, using a commercially available RCA audio input cable.

C Antennas

When inserting the connector of FM lead/AM loop antenna, make sure to insert it in the correct orientation. Find a location and an orientation that provide good reception when you set up

the antennas.

Keep the antennas away from the power cord to avoid picking up noise.

Setting the clock

- **1** Press I/\bigcirc **5** to turn on the system.
- 2 Press TIMER MENU 16 to select the clock set mode.
- If "PLAY SET" flashes, press ♠/♥ 20 repeatedly to select "CLOCK," and then press ⊕ (enter) 17.
- 3 Press ♠/♥ 20 repeatedly to set the hour, then press ⊕ 17.
- 4 Use the same procedure to set the minutes.

The clock settings are reset when you disconnect the power cord or if a power failure occurs.

To display the clock when the system is off Press DISPLAY 25. The clock is displayed for about 8 seconds.

Using the iPod/iPhone

To prevent the iPod/iPhone from falling, always secure the iPod/iPhone with the holding arm when using the iPod/ iPhone with this system. When removing the iPod/iPhone, lift up the holding arm until it clicks and snaps into position, and then disconnect the iPod/iPhone from the iPod/iPhone connector.

- 1 Place the iPod/iPhone onto the iPod/iPhone connector.
- 2 Press the PUSH button until the holding arm is released with a click.
- The holding arm flips out to secure the iPod/iPhone.

Using the remote

Insert the two R6 (size AA) batteries (supplied), matching the polarities shown below.



Α

(A) To wall outlet

(B) AM loop antenna

C To DVD/PC IN L iack

D To DVD/PC IN R jack

horizontally.)

E) FM lead antenna (Extend it)



Notes on using the remote • With normal use, the batteries should last for about 6 months

• Do not mix an old battery with a new one or mix different types of batteries

and corrosior



• If you do not use the remote for a long period of time, remove the batteries to avoid damage from battery leakage

PUSH button Holding arm iPod/iPhone connector

Note for iPod nano model users DO NOT install the system vertically when using iPod nano models with this system. iPod nano models cannot be secured with the holding arm

because of their height. Install the system horizontally

Note on carrying the system DO NOT carry the system with the iPod/iPhone connected. If you do, the iPod/iPhone may fall and be damaged. Sony cannot accept responsibility for any damage caused by inappropriate usage

• When using commercially available iPod/iPhone cases, the connected iPod/iPhone may not be recognized by the system. If this happens, remove the case from the iPod/iPhone and reconnect it to the iPod/iPhone connector • When using a vertically installed system, make sure that the connected iPod/iPhone remains upright, not tilted.

function.

your USB device.

2 Perform tuning.

station is found.

AUTO

manual tuning (below).

For manual tuning

Listening to the radio

For automatic scanning

Notes on charging an iPod/iPhone

• When the USB function is selected while the system is on, you cannot charge an iPod/iPhone.

- If the display mode is demonstration or clock, you cannot charge an iPod/iPhone even if the system is off.
- If you press DISPLAY 25 while charging when the system is off, the system stops charging an iPod/iPhone. To restart charging of an iPod/iPhone, reconnect the iPod/iPhone when the display mode is Power Saving mode.
- Turn the "Shake to Shuffle" function off on the iPod/iPhone to avoid unexpected track changes when listening to music at high volumes • If the battery of the iPod/iPhone is empty, the system may not recognize it. In such a case, recharge it with a computer, etc. then
- connect it to the system. • The performance of the system may vary, depending on the specifications of your iPod/iPhone.
- When placing or removing the iPod/iPhone, handle the iPod/iPhone in the same angle as that of the iPod/iPhone connector on the unit and do not twist or sway the iPod/iPhone to prevent connector
- Do not carry the unit with an iPod/iPhone set on the connector.
- Doing so may cause a malfunction • When placing or removing the iPod/iPhone, brace the unit with one hand and take care not to press the controls of the iPod/iPhone by
- Before disconnecting the iPod/iPhone, pause playback. • Hold down I / II to fast-rewind (or fast-forward) while playing video if ◀◀/▶▶ 11 does not function.
- To change the volume level, use VOLUME +/- 1. The volume level does not change if you adjust it on the iPod/iPhone
- This system is designed for iPod/iPhone only. You cannot connect any other portable audio players to the iPod/iPhone connector.
- To use an iPod/iPhone, refer to the user's guide of your iPod/iPhone. • Sony cannot accept responsibility in the event that data recorded to iPod/iPhone is lost or damaged when using an iPod/iPhone with

Playing a file of the USB device

- The audio format that can be played back on this system is MP3/WMA*/AAC*
- * Files with DRM (Digital Rights Management) copyright protection or files downloaded from an online music store cannot be played
- on this system. If you try to play one of these files, the system plays the next unprotected audio file Check the websites below for the information about
- compatible USB devices.
- For customers in the U.S.A.:
- <http://www.esupport.sonv.com/> For customers in Canada:

English <http://www.sony.ca/ElectronicsSupport/> French <http://fr.sony.ca/ElectronicsSupport/>

- **1** Select the USB function.
- Press FUNCTION +/- 7 repeatedly.
- 2 Connect the USB device to the ⊷ (USB) port 13.
- **3** Start playback. Press ► 14.

Other operations

Press II (pause) 14. To resume play, press Pause playback the button again. (stop) 14. To resume play, press Stop playback \blacktriangleright (play) 14^{*1} . To cancel resume play, press 🔳 1 again Select a folder +/-10 repeatedly. (go back)/►► (go forward) Select a file

Hold down ◀◀ (rewind)/▶▶ (fast Find a point in a file forward) **11** during playback, and release the button at the desired point. Select Repeat Play REPEAT 23 repeatedly until " (repeat all tracks) or " (repeat

one track) appears.

- *1 When playing a VBR MP3/WMA file, the system may resume playback from a different point.
- *2 Resume play returns to the top folder.

To change the play mode

Press PLAY MODE 22 repeatedly. You can select Normal Play mode (playback in sequence of all files on the USB device), Folder Play mode ("FLDR" for all files in the specified folder on the USB device), or Shuffle Play mode ("SHUF").

Notes on the play mode

- When you select Shuffle Play mode "SHUF," the system shuffle-plays all audio files on the connected USB device in random order. Shuffle Play mode may play the same file repeatedly.
 When the play mode is set to Folder Play mode, "
 →1" is not
- •When the play mode is set to Shuffle Play mode, the repeat function is not available.
- When repeat play is set, Shuffle Play mode is not available. When repeat play is set to "," Folder Play mode is not available • When you turn off the system, the selected Shuffle Play mode
- ("SHUF") is cleared and the play mode returns to Normal Play mode

Note on Repeat play If you select " , when the system is in Normal Play mode, the system executes repeat play of all audio files on the USB device until you stop playback. If you select "G" when the system is in Folder Play mode, the system executes repeat play of all audio files in the selected folder until you stop playback.

Notes

- When USB cable connection is necessary, connect the USB cable supplied with the USB device. See the operation manual supplied with the USB device for details on the operation method. • It may take about 10 seconds before "READING" appears depending
- on the type of USB device connected. • Do not connect the system and the USB device through a USB hub.
- When the USB device is c the USB device. If there are many folders or files on the USB device, it may take a long time to finish reading the USB device.
- With some connected USB devices, after an operation is performed there may be a delay before it is performed by this system
- Compatibility with all encoding/writing software cannot be guaranteed. If audio files on the USB device were originally encoded with incompatible software, those files may produce noise or interrupted sound, or may not be played back at all.
- This system cannot play audio files on the USB device in the following cases
- -when the total number of audio files in a folder exceeds 100. -when the total number of audio files on a USB device exceeds
- 10,000. -when the total number of folders on a USB device exceeds 100
- (including the "ROOT" folder and empty folders). These numbers may vary depending on the file and folder structure. Do not save other types of files or unnecessary folders on a USB device that has audio files.
- The system can play back to a depth of 8 folders only.
- This system does not necessarily support all the functions provided with a connected USB device.
- Resume play will be cancelled when you disconnect the power cord. • Folders that have no audio files are skipped.
- The audio formats that you can listen to with this system are as follows:
- -MP3: file extension ".mp3"
- -WMA: file extension ".wma"
- -AAC: file extension ".m4a"

Note that even when file name has the correct file extension, if the actual file differs, the system may produce noise or may malfunction

To use the system as a battery charger

You can use the system as a battery charger for USB devices that have a rechargeable function when the system is on Press FUNCTION +/- 7 repeatedly to select the USB

The charging begins when the USB device is connected

to the ↔ (USB) port **13**. The charge status appears on

1 Select the tuner (TUNER FM/TUNER AM) function.

Press TUNING MODE 22 repeatedly until "AUTO"

appears, and then press +/- 11. Scanning stops

automatically and "TUNED" and "ST" (for stereo

programs only) light up on the display **8** when a

If "TUNED" does not light up and the scanning does

not stop, press \blacksquare 14 to stop scanning, then perform

When you tune to an FM station that provides RDS

Press TUNING MODE 22 repeatedly until "AUTO"

and "PRESET" disappear, and then press +/-11

To reduce static noise on a weak FM stereo station, press FM MODE

23 repeatedly until "MONO" appears to turn off stereo reception. You

services, information such as the service name or

station name is provided by broadcasts.

repeatedly to tune to the desired station.

will lose stereo effect, but reception will improve

875

ST TUNED

Press FUNCTION +/- 7 repeatedly.

the USB device display. For details, see the user's guide of

Presetting radio stations

Tune to the desired station.

2 Press TUNER MEMORY 21 to select the tuner memory mode.



- **3** Press +/- 11 repeatedly to select the desired preset number If another station is already assigned to the selected preset number, the station is replaced by the new
- station. 4 Press 🕀 17 to store the station.
- **5** Repeat steps 1 through 4 to store other stations. You can preset up to 20 FM and 10 AM stations.
- **6** To call up a preset radio station, press TUNING MODE 22 repeatedly until "PRESET" appears, and then press +/-11 repeatedly to select the desired preset number.

Using optional audio components

- Prepare the sound source.
- Connect additional audio component to the DVD/PC IN L/R jacks 15 on the unit using an audio analog cord (not supplied).
- **2** Adjust the volume level to minimum. Press VOLUME – 1 repeatedly until "VOL MIN" appears on the display **8**
- 3 Select the DVD/PC function. Press FUNCTION +/- 7 repeatedly
- 4 Start playback. Start playback of the connected component and adjust the volume.

The system may enter Standby mode automatically if the volume level of the connected component is too low. Adjust the component' olume accordingly. See "To turn off the automatic standby function."

Adjusting the sound

То	Press
Adjust the volume	VOLUME +/- 1.
Generate a more	BASS BOOST 2 repeatedly to
dynamic sound	select "BASS ON."
Set the sound	EQ 3 repeatedly.
effect	- '

Setting the speaker light illumination

You can set a speaker light illumination from a variety of illumination patterns. The speaker light illumination will create lighting effects based on the music source. Press LED SPEAKER 4 repeatedly.

Each time you press the button, the pattern changes.

To turn off the speaker light function Press LED SPEAKER 4 repeatedly until "LED OFF" appears.

Changing the display

То	Press
Change	DISPLAY 25 repeatedly when the
information on	system is on.
the display 8 ¹⁾	
Change Display	DISPLAY 25 repeatedly when the
mode (see below.)	system is off. ²⁾
 ¹⁾ For example, you can be a constructed or file number - track or file name (" a ") - album name (" a ") - folder name (" " ") 	• •
	$\overline{6}$ on the unit lights up when the system is off

The system offers the following display modes.

Display mode	When the system is off ¹⁾	
Demonstration	The demonstration is turned on.	
Power Saving mode ²⁾	The display is turned off to conserve power. The timer and clock continue	
	to operate.	
Clock ³⁾	The clock is displayed.	

¹⁾ The standby indicator $\boxed{6}$ on the unit lights up when the system is off. You cannot set the clock in Power Saving mode. ³⁾ The clock display automatically turns to Power Saving mode after 8

Notes on the display information

• Characters that cannot be displayed appear as "____ Total playing time for a USB device is not displayed.

- The following are not displayed correctly;
- -elapsed playing time of an MP3 file encoded using VBR (variable -folder and file names that do not follow either the ISO9660
- Level 1. Level 2 or Joliet in the expansion format. • ID3 tag information for MP3 files is displayed when ID3 version 1
- and version 2 tags are used (ID3 version 2 tag information display has priority when both ID3 version 1 and version 2 tags are used for a single MP3 file).

Using the timers

The system offers 2 timer functions. If you use both timers, the Sleep Timer has priority.

Sleep Timer: You can fall asleep to music. This function works even if the clock is not set. Press SLEEP 24 repeatedly to select the desired time.

To cancel the Sleep Timer, press SLEEP 24 repeatedly until "OFF" appears.

Play Timer:

You can wake up to FM/AM reception, iPod/iPhone or USB device at a preset time. Make sure you have set the clock.

- 1 Prepare the sound source.
- Prepare the sound source, and then press VOLUME +/- **1** to adjust the volume. 2 Select the timer set mode.
- Press TIMER MENU 16.
- **3** Set the play timer. Press ♠/♥ 20 repeatedly to select "PLAY SET," then
- press 🕀 17. 4 Set the time to start playback. Press 4/4 20 repeatedly to set the hour, then press \oplus
- **17**. Use the same procedure to set the minutes. **5** Use the same procedure as in step 4 to set the time
- to stop playback. **6** Select the sound source. Press **♦**/**♦** 20 repeatedly until the desired sound
- source appears, then press \oplus 17. 7 Turn off the system. Press I/\bigcirc 5. The system automatically turns on before the preset time.

If the system is already on at the preset time, the Play Timer will not be activated. Do not operate the system from the time the system turns on until the playback starts

To check the setting

- 1 Press TIMER MENU 16.
- 2 Press ♠/♥ 20 repeatedly to select "SELECT," and then press 🕀 17.
- 3 Press ◆/◆ 20 repeatedly to select "PLAY SEL," and then press 🕀 17

To cancel the time

Repeat the same procedure as above until "OFF" appears in step 3, and then press (+) **17**.

To change the setting

Start over from step 1 of "Using the timers."

If you select a USB device as a playback source and have many files or folders on that device, it takes time for read processing, causing a slight delay before start of play in response to the time

Notes for the iPod/iPhone user Make sure the iPod/iPhone is not playing when using the Play

• The Play Timer may not be activated depending on the status of the connected iPod/iPhone.

The Play Timer setting remains as long as the setting is not cancelled

Troubleshooting

manually

General

- **1** Make sure the power cord is connected correctly and firmly.
- 2 Find your problem in the checklist below, and take the indicated corrective action.
- If the issue persists, contact your nearest Sony dealer.

If the standby indicator 6 flashes

- Immediately unplug the power cord, and check the following items. \bullet Is anything blocking the ventilation holes of the
- system? • Is the iPod/iPhone connector 12 short-circuited?

the issue persists, contact your nearest Sony dealer.

The demonstration appears on the display 8

after plugging in the power cord even though

• Press DISPLAY **25** once while the system is off. The

the system is not turned on.

• Set the clock. See "Setting the clock."

The system has entered standby mode

• This is not a malfunction. The system enters standby

mode automatically in about 30 minutes when there is

no operation or audio signal output. See "To turn off

The clock setting or the Play Timer operation

• If about a minute elapses with no operation, the clock setting or Play Timer setting is cancelled automatically. Perform the operation again from the beginning.

The system does not turn on.

the automatic standby function."

has been cancelled unexpectedly.

• Is the power cord plugged in?

unexpectedly.

demonstration disappears.

- The ring volume of the iPhone does not After the standby indicator **6** stops flashing, change. reconnect the power cord, and turn on the system. If
 - Adjust the ring volume on the iPhone.

USB device

the unit.

The connected iPod/iPhone or USB device is not being charged, when both are connected at the same time.

• You cannot charge an iPod/iPhone and the USB device at the same time. Select the USB function to charge a USB device.

Are you using a supported USB device?

- If you connect an unsupported USB device, the following problems may occur. Check the information on the websites about compatible USB devices with
- URLs listed under "Playing a file of the USB device." -The USB device is not recognized.
- -File or folder names are not displayed.
- -Playback is not possible.
- -The sound skips.
- -There is noise.
- -A distorted sound is output.

"OVER CURRENT" appears.

Sony dealer

There is no sound.

• A problem has been detected with the level of electrical

current from ⊷ (USB) port 13. Turn off the system

and remove the USB device from the < (USB) port

If this display pattern persists, contact your nearest

• The USB device is not connected correctly. Turn off the

distorted. Noise may have been entered when creating

• The bit rate used when encoding the files was low. Send

files encoded with higher bit rates to the USB device.

"READING" is displayed for an extended time,

or it takes a long time before playback starts.

-There are many folders or files on the USB device.

• The reading process can take a long time in the

• Send the music data to the USB device again, as

• The character codes that can be displayed by this

system are numbers and alphabets only. Other

• Check the information on the websites about

The USB device is not working properly.

Check the information on the websites about

Play does not start from the first track.

• The audio file does not have the extension ".mp3,"

• The data is not created in MP3/WMA/AAC format.

• USB devices formatted with file systems other than

• If you use a partitioned USB device, only files on the

• Files that are encrypted or protected by passwords, etc.

* This system supports FAT16 and FAT32, but some USB devices may not support all of these FAT. For details, see the operation manual

Set the play mode to Normal Play mode.

"Playing a file of the USB device."

• Press **>** 14 to start playback.

Files cannot be played back.

FAT16 or FAT32 are unsupported.*

of each USB device or contact the manufacturer

• Turn off any nearby electrical equipment.

To change the AM tuning interval

2 Press DISPLAY **25** to display the clock.

Severe hum or noise, or stations cannot be

• Try another place and orientation for better antenna

The AM tuning interval is preset to 10 kHz by factory

1 Tune to any AM station, and then turn off the

3 While holding down FUNCTION 7, press 1/05.

All the AM preset stations are erased. To reset the

interval to the factory preset, repeat the procedure.

To reset the system to factory settings

If the system still does not operate properly, reset the

Use buttons on the unit to reset the unit to its factory

1 Disconnect and reconnect the power cord, and then

2 Hold down ►II 14, and press I/⁽¹⁾ 5 until "RESET"

All user-configured settings, such as preset radio

stations, timer, and the clock, are deleted.

default. Use buttons on the unit to change the AM tuning

• Keep the antennas away from the power cord to avoid

received. ("TUNED" or "ST" flashes on the

first partition can be played.

Connect the antenna properly.

cannot be played back.

Tuner

display 8.)

reception

picking up noise

interval (9 kHz or 10 kHz).

system to factory settings.

turn on the system

default settings.

compatible USB devices with URLs listed under

• Refer to the USB device operation manual for how to

• Turn off the system and reconnect the USB device, then

compatible USB devices with URLs listed under

• Turn off the system and reconnect the USB device, then

the data stored on the USB device may have been

- The file structure is extremely complex.

-The memory capacity is excessive.

- The internal memory is fragmented.

characters are not displayed correctly

The USB device is not recognized.

"Playing a file of the USB device."

music data due to the conditions of the computer.

system, then reconnect the USB device

Create the music data again.

following cases.

Erroneous display

turn on the system.

deal with this problem.

Play does not start.

turn on the system.

".wma" or ".m4a".

corrupted

13. Make sure there is no problem with the USB device.

• Is anything blocking the ventilation holes of the system? • The specified station may have temporarily stopped broadcast

Severe hum or noise.

There is no sound.

- Move the system away from sources of noise. • Connect the system to a different wall outlet.
- Install a noise filter (not supplied) to the power cord.

The remote does not function.

- Remove any obstacles between the remote and the There is noise, skipping, or distorted sound. remote sensor **9** on the unit, and position the unit • Turn off the system, then reconnect the USB device. away from fluorescent lights. • The music data itself contains noise, or the sound is
- Point the remote at the system's sensor **9**.
- Move the remote closer to the system.
- The batteries of the remote may be exhausted. Replace the batteries (R6/size AA) with new ones.

The standby indicator 6 remains lit after unplugging the power cord.

• The standby indicator **6** may not turn off immediately after unplugging the power cord. The indicator will turn off after about 40 seconds. This is not a malfunction.

Except I/(1) [5], no buttons on the unit work,

and "CHILD LOCK" appears on the display 8. The child lock function has been enabled. To disable the child lock, hold down ■ 14 on the unit until "CHILD LOCK OFF" appears on the display **8**.

iPod/iPhone

There is no sound.

- Make sure the iPod/iPhone is connected securely.
- Make sure the iPod/iPhone is playing music. • Make sure the iPod/iPhone is updated with the latest software. If not, update the iPod/iPhone before using

• Make sure the iPod/iPhone is connected securely.

• Set the "EQ" setting of the iPod/iPhone to "Off" or

• Turn the "Shake to Shuffle" function (changing tracks

by shaking the iPod/iPhone) off on the iPod/iPhone

when listening to music on the iPod/iPhone at high

changes may occur due to the vibrations caused by

• If the battery of the iPod/iPhone is empty, it may not

• Quit all running applications on your iPod or iPhone

operation manual supplied with the iPod/iPhone.

Make sure the iPod/iPhone is updated with the latest

• Because the operation of the system and the iPod/

iPhone are different, you may not operate the iPod/

iPhone using buttons on the remote or unit. In this

• If the battery of the iPod/iPhone is empty, the system

• Make sure the iPod/iPhone is connected securely.

may not be able to charge it even if you connect it to the

system. In such a case, recharge it with a computer, etc.

• When charging an iPod/iPhone while the system is off

(Standby mode), the system does not perform charging

• Make sure the system is not in USB function mode. An

iPod/iPhone cannot be charged in USB function mode.

• You cannot charge the iPod/iPhone via < (USB) port

13 on the unit, even if using the USB cable supplied

with your iPod/iPhone. For charging, always connect

the iPod/iPhone to the iPod/iPhone connector 12 on

case, use the control buttons on the iPod/iPhone.

The iPod/iPhone cannot be charged.

then connect it to the system.

if the iPod/iPhone is fully charged.

software. If not, update the iPod/iPhone before using

• Make sure the iPod/iPhone is connected securely.

before using it with the system. For details, refer to the

work with this system. In such a case, recharge it with a

volumes. If this function is enabled, unexpected track

Unexpected track changes occur during

with the system. Adjust the volume

sound pressure from the system.

The iPod/iPhone does not function.

computer, etc. then connect it to the system.

The sound is distorted.

• Turn down the volume

playback.

with the system.

To turn off the automatic standby function

This system is equipped with an automatic standby function. With this function, the system enters standby mode automatically in about 30 minutes when there is no operation or audio signal output.

By default, the automatic standby function is turned on. Use buttons on the unit to turn off the automatic standby

Hold down I/\bigcirc 5 while the system is on, until "AUTO.STBY OFF" appears.

To turn on the function, repeat the procedure until "AUTO.STBY ON" appears.

• The message "AUTO.STBY" start flashing on the display about 2 minutes before entering standby mode. • The automatic standby function is invalid for the tuner function

(FM/AM), even when you have enabled it. The system may not enter standby mode automatically in the

-when an audio signal is detected. -when a USB device is connected

-during playback of audio files.

-while the preset Play Timer or Sleep Timer is in process

Messages

function

following cases;

USB device

On safety

CHARGING : The iPod/iPhone is being charged when the system is off (Standby mode).

CHILD LOCK : The child lock function has been enabled. To disable the child lock, hold down **1**4 on the unit until "CHILD LOCK OFF" appears on the display 8. **ERROR :** The USB device could not be recognized or an unknown device is connected.

NoDEVICE : No USB device is connected or the connected USB device has been removed.

NOMEMORY: The memory media is not inserted in the

NO TRACK : Playable file on the USB device is not loaded in the system.

NOT USED : You tried to perform a specific operation under conditions where that operation is prohibited.

NO SUPPORT : An unsupported USB device, iPod/ iPhone model is connected, or the iPod/iPhone whose battery is empty is connected.

TIME NG : The Play Timer start and end times are set to the same time.

Precautions

• Completely disconnect the power cord (mains lead) from the wall outlet (mains) if it is not going to be used for an extended period of time. When unplugging the unit, always grip the plug. Never pull the cord itself. • Should any solid object or liquid get into the system, unplug the system, and have it checked by qualified

personnel before operating it again. • The AC power cord can be changed only by a qualified service facility.

On placement

 Do not place the system in an inclined position or in locations that are extremely hot, cold, dusty, dirty, or humid or lacking adequate ventilation, or subject to vibration, direct sunlight or a bright light.

• Be careful when placing the system on surfaces that have been specially treated (for example, with wax, oil, polish) as staining or discoloration of the surface may

· Condensation may form on outer surfaces or internally, and cause the system to malfunction if the system is suddenly moved from a cold to a warm environment. If condensation forms, turn off the system, and leave the system off until the moisture evaporates. Do not use the system until the condensation has fully evaporated.

On heat buildup

• Heat buildup on the unit during operation is normal and is not cause for alarm.

• Do not touch the cabinet if it has been used continuously at a high volume because the cabinet may have become hot.

• Do not obstruct the ventilation holes.

On the speaker system

The built-in speaker system is not magnetically shielded, and the picture on nearby TV sets magnetically distorted. In this situation, turn off the TV, wait 15 to 30 minutes, and turn it back on. If there is no improvement, move the system far away

Cleaning the cabinet

from the TV.

Clean this system with a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pads, scouring powder, or solvents, such as thinner, benzine, or alcohol.

Specifications

AUDIO POWER SPECIFICATIONS POWER OUTPUT AND TOTAL HARMONIC DISTORTION

Ihe United States model only)
With 3.5 ohm loads, both channels driven, from 120 — 10,000 Hz; rated

50 watts per channel minimum RMS power, with no more than 0.7% total onic distortion from 250 milliwatts to rated output

Amplifier section RMS output power (reference): 210 W + 210 W (per channel at 3.5 Ω, 1 kHz)

Speaker section ker system: 2 way speaker system, Bass reflex Speaker units

Woofer: 200 mm (7.87 in), cone type Tweeter: 66 mm (2.6 in), cone type Rated impedance: 3.5 Ω

DVD/PC IN (audio in L/R): Sensitivity 1,000 mV, impedance 47 kΩ

iPod/iPhone section iPod/iPhone connecto

Output voltage: DC 5 V

Maximum output current: 1 A Compatible iPod/iPhone models:

- iPod touch 4th generation iPod touch 3rd generation

- iPod touch 2nd generation
- iPod nano 6th generation iPod nano 5th generation (video camera)
- iPod nano 4th generation (video)
- iPod nano 3rd generation (video) iPod classi
- iPhone 4S - iPhone 4

or iPhone may affect wireless performance

- iPhone 3GS – iPhone 3G

"Made for iPod," and "Made for iPhone" mean that an electronic accessory ha been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod

USB section

- Supported bit rates MP3 (MPEG 1 Audio Laver-3): 32 kbps - 320 kbps, VBR
- WMA: 48 kbps 192 kbps, VBR AAC: 48 kbps - 320 kbps
- ampling frequencies: MP3 (MPEG 1 Audio Layer-3): 32/44.1/48 kHz
- WMA: 44.1 kHz
- AAC: 44.1 kHz ← (USB) port: Type A, maximum current 500 mA

Tuner section

FM stereo, FM/AM superheterodyne tun Antenna

FM lead antenna AM loop antenn

FM tuner section:

Tuning range: 87.5 MHz – 108.0 MHz (100 kHz step) AM tuner section

Tuning range: 530 kHz — 1,710 kHz (10 kHz step)

531 kHz - 1,710 kHz (9 kHz step) General

Power requ AC 120 V, 60 Hz

75 W (0.5 W at the Power Saving mode)

sions (W/H/D)

Approx. 768.5 mm × 323 mm × 385 mm (30.25 in × 12.71 in × 15.15 in)

Approx. 14.0 kg (30 lb 13 1/2 oz) atity of the unit 1 piece Supplied accessories: Remote Commander (1), R6 (Size AA) batteries (2)

FM lead/AM loop antenna (1 Design and specifications are subject to change without notice