 


DAB+ CD Mico System with Universal Dock for iPod

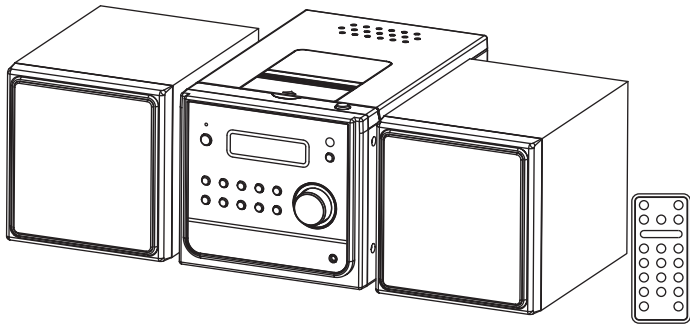

The Gold Technical Support Line: 1902 215 259

Personal Product Support

(Charges will apply at \$2.95 per minute)

BMS05DABIP

Introduction

Thank you for buying this Bush product, which is designed to give you many years of trouble free service.

You may already be familiar with using a similar unit, but please take time to read these instructions. They are designed to familiarise you with the unit's many features and to ensure you get the very best from your purchase.

Safety is important

Your safety and the safety of others is important.

Please therefore, ensure you read the "Safety Instructions" **before** you operate this unit.

Warranty

In the unlikely event that your product fails to work normally, please call the below free phone number to discuss the problem with one of our qualified service engineers.

Australia.

Bush Warranty: 1800 509 394

New Zealand

Bush Warranty: 0800 450 259



iPod is a trademark of Apple Inc., registered in the U.S. and other countries. iPod shown not included.

"Made for iPod" means that an electronic accessory has been designed to connect specifically to iPod and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

SAFETY PRECAUTIONS

To achieve the utmost in enjoyment, performance and in order to become familiar with its features, please read this manual carefully before attempting to operate the unit.

Important Notes

The below safety and operating instructions should be retained for future reference.

- * Do not expose this Micro System to any types of liquid as they will cause serious damage to the unit. Do not place any objects filled with water on or near the unit.
- * Do not place the unit in areas with direct sunlight or close to heat radiating appliances, such as; heaters etc. This may cause the unit to overheat and damage the unit.
- * Keep the unit in area that is well ventilated and is not dusty.
- * Place the unit on a clean flat surface that does not experience vibration or is exposed to humid or moist conditions.
- * Do not place any candles on or near the unit.
- * Make sure you dispose of your old batteries in a safe and eco-friendly way.
- * Do not allow anything to cover or obstruct the units ventilation openings. A minimum of 10cm should be kept around the unit for ventilation.
- * Please operate all features and functions as outlined in this manual. Any modifications or non-outlined activities will make the warranty void.
- * Make sure you connect the power cord correctly and turn the power on at the mains power before operating the unit.
- * Make sure you use the iPod Dock connectors to connect your iPod to the unit. This will protect both the unit and your iPod.
- * Store your CDs in a cool area to avoid any damage.
- * There are no serviceable parts in this unit. If you have any issues with the operation of this unit please contact the Bush Service and Warranty number provided on the front page of this manual.



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK), NO USER SERVICEABLE PARTS INSIDE, REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



DANGEROUS VOLTAGE

This unit is a conductor of dangerous voltage, do not open or modify this unit to avoid any risk of electric shock to persons within this product's enclosure.



ATTENTION

The owner's manual contains important operating and maintenance instructions, for your safety, it is necessary to refer to the manual.




WARNING : TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO DRIPPING OR SPLASHING WATER OR LIQUID .

Note: This unit will become warm when used for a long periods of time. This is normal and does not indicate a problem with the unit. This unit includes micro-processors which may malfunction as a result of external electrical interference/noise or electrostatic discharge . If the unit is not working properly, disconnect the power source and then reconnect it.

Contents

FEATURES AND CONTROLS.....	5
REMOTE CONTROL.....	6
REMOTE BATTERY OPERATION.....	6
LISTENING TO YOUR RADIO.....	7-8
STATION PRESETS (remote control only).....	9
FACTORY RESET.....	9
LISTENING TO YOUR COMPACT DISCS.....	9-11
LISTENING TO YOUR iPod.....	11
CHARGING UP YOUR iPod.....	11
AUX INPUT.....	11
ON TIMER FUNCTION.....	11
SLEEP FUNCTION.....	12
PRESET EQ (remote control only).....	12
X-BASS FUNCTION (remote control only).....	12
MUTE FUNCTION (remote control only).....	12
BACKLIGHT FUNCTION.....	12
HEADPHONE INPUT.....	12
COMPACT DISC.....	13
SPECIFICATION.....	13
SUPPORTED iPod DEVICES.....	14
WARRANTY.....	15

   
FEATURES AND CONTROLS

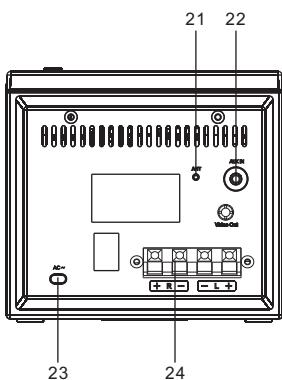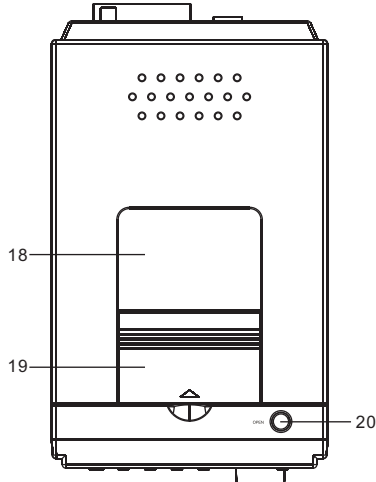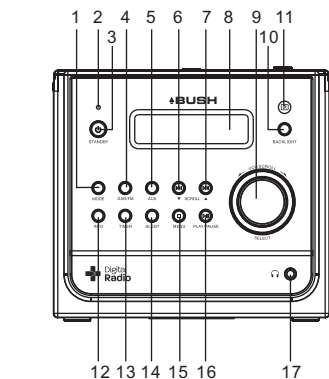

1. **iPod/CD BUTTON:**
Press to select iPod or CD function.
2. **STANDBY INDICATOR:**
This will light up when the unit is in Standby mode.
3. **STANDBY BUTTON:**
Press to turn the unit on or off.
4. **DAB+/FM BUTTON:**
Press to switch between DAB+ and FM Radio mode.
5. **AUX BUTTON:**
Press to select Aux Input mode.
6. **◀◀/SCROLL ▼ BUTTON:**
Press to scroll down through the menu settings or to skip backwards through iPod/CD/AUX In modes.
7. **▶▶/SCROLL ▲ BUTTON:**
Press to scroll up through the menu settings or to skip forwards through iPod/CD/AUX In modes.
8. **LCD DISPLAY:**
The LCD Display will show your Menu, Radio, Music etc information.
9. **VOL/SCROLL CONTROL & SELECT BUTTON:**
Rotate the control to adjust the volume or to scroll through the menu. Press this button to confirm any selections.
10. **BACKLIGHT BUTTON:**
Press to turn the LCD Display backlight on or off.
11. **IR SENSOR:**
This is where your remote control signal is received.
12. **DISPLAY/INFO BUTTON:**
Press to scroll through DAB+ scrolling text information.
13. **TIMER BUTTON:**
Press to set the on timer function.
14. **SLEEP BUTTON:**
Press to set unit sleep time function.
15. **STOP/MENU BUTTON:**
Press to stop play in iPod/CD/Aux In Mode or press to access the Main Menu.
16. **PLAY/PAUSE BUTTON:**
Press to play or pause in iPod/CD/Aux in mode.
17. **HEADPHONE JACK:**
This input allows you to connect your headphones for personal listening.
18. **CD DOOR:**
CD Door will open when you press the open button then load or remove disc.
19. **iPod DOCKING STATION DOOR:**
Slide door to open and then connect your iPod.
20. **OPEN BUTTON:**
Press to open the CD Door.
21. **ANTENNA:**
This is the Antenna Input. Ensure the Antenna wire is straight to receive the best reception.
22. **AUX IN JACK:**
The Aux Input allows you to connect your other audios sources i.e. MP3 Player.
23. **AC CORD:**
The AC Cord input allows you to connect your unit to your main power source.
24. **SPEAKER TERMINALS:**
Extend the speaker wires and connect them to the speaker terminals.

REMOTE CONTROL

 1. STANDBY BUTTON: Press to turn the unit on or off.
2. iPod/CD BUTTON: Press to select iPod or CD function.
3. SELECT/REPEAT BUTTON: Press to confirm selections in the main menu or press to repeat play in CD/iPod/Aux In mode.
4. I◀/SCROLL ▼ BUTTON: Press to scroll down through the menu settings or to skip backwards through iPod/CD/AUX In modes.
5. NAVIGATE DOWN/FOLDER BUTTON: Press to recall stored station presets or to scroll downwards in the MP3 folder.
6. PROGRAM BUTTON: Press to store station presets or to program song playlist.
7. X-BASS BUTTON: Press to turn X-Bass function on or off.
8. VOLUME - BUTTON: Press to decrease the volume.
9. MUTE BUTTON: Press to turn the sound off completely.
10. DAB+/FM BUTTON: Press to switch between DAB+ and FM Radio modes.
11. AUX BUTTON: Press to select Aux Input mode.
12. ▶I/SCROLL ▲ BUTTON: Press to scroll up through the menu settings or to skip forwards through iPod/CD/AUX In modes.
13. PLAY/PAUSE BUTTON: Press to stop play in iPod/CD/Aux In Mode or press to access the Main Menu.
14. NAVIGATE UP /FOLDER BUTTON: Press to recall stored station presets or to scroll upwards in the MP3 folder.
15. STOP/MENU BUTTON: Press to stop play in iPod/CD/Aux In Mode or press to access the Main Menu.
16. RANDOM BUTTON: Press to select random play function.
17. BACKLIGHT BUTTON: Press to turn the LCD Display backlight on or off.
18. DISPLAY/INFO BUTTON: Press to scroll through DAB+ scrolling text information.
19. EQ BUTTON: Press to scroll through the EQ Preset options.
20. VOLUME + BUTTON: Press to increase the volume.

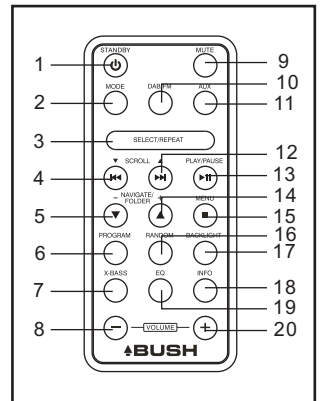


REMOTE BATTERY OPERATION

1. Press downwards on the compartment cover of the remote control to open battery compartment.
2. Place the battery (CR2032) into the battery compartment according to the polarity marking (place the "+" sign upwards).
3. Replace the cover by inserting the cover and pressing downwards. Make sure it snaps in.

Note: Remove the battery from the remote control if not in use for a long period of time. Do not mix normal batteries with rechargeable batteries. When the battery becomes weak, the remote control will not function to the best of its ability. Be sure to replace with a new battery if that happened.

BATTERY PRECAUTIONS

 1. Please only use the battery type outlined in this manual.
2. Place the battery into the remote as outlined above only.
3. Be sure to follow the correct polarity when installing the battery as indicated in the battery compartment. Do not expose battery to heat.

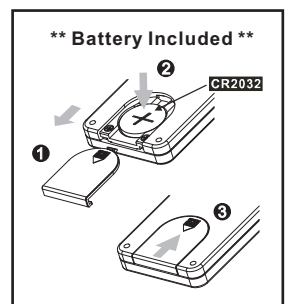

LISTENING TO YOUR RADIO

Hints for better reception

This unit is fitted with a single lead wire DAB+/FM antenna, to obtain the best performance, you should fully extend the wire antenna and adjust the position as well as the direction until you find the best reception. For ideal DAB+ reception, always maintain the lead wire antenna in a vertical position is highly recommended.

Getting started DAB+ mode

When the unit is powered up for the first time, it will be in standby mode. The display will show as "00:00". Press the **STANDBY** Button to turn the on and it will automatically enter into the DAB+ mode and perform full station scan. During the scan the display will show "Scanning ..." together with a slide bar that indicates the progress of the scan and the amount of stations that have been found so far. (F. 1) (F. 2) (F. 3)



Once the scan has finished, the radio will select the first station found. You can now with the **VOL/SCROLL** Control or press the **SCROLL** ▲ or ▼ Buttons explore the new DAB+ stations. Press the **SELECT** Button to select the station you wish to listen to.

Note: If there are no stations found after the full scan, the radio will enter into the Tune Select Menu and you can press the **SCROLL** ▲ or ▼ Buttons and the **SELECT** Button to Manually Scan for the DAB+ stations in your area. Visit www.digitalradioplus.com.au to check your postcodes receives digital radio.

 
Clock

The clock will only be shown and automatically updated if you can receive DAB+ signals in your location. While the clock synchronises to the current local time please keep the unit in DAB+ mode.

DAB+ Full Scan

When you conduct a Full Scan the unit will search for all available DAB+ stations. Once the scan is complete, the stations will be stored in alphanumerical order.

- To conduct a DAB+ Full Scan, press the **MENU** Button and scroll to the Tune Select Menu. Then press the **SCROLL** ▲ or ▼ Buttons to select "Full scan" and press the **SELECT** Button to confirm. The display will show "Scanning..." and a progressing slide bar. (F.4) (F.5)
- All the stations found will be stored automatically. To scroll through the stored stations rotate the **VOL/SCROLL** Control or press the **SCROLL** ▲ or ▼ Buttons and press the **SELECT** Button to confirm and play selected stations.



DAB+ Manual Scan

 
- To conduct a Manual Station Scan, press the **MENU** Button and enter the Tune Select Menu. Then press the **SCROLL** ▲ or ▼ Buttons to select "Manual tune". Press the **SELECT** Button to confirm. (F. 6)
- Rotate the **VOL/SCROLL** Control or press the **SCROLL** ▲ or ▼ Buttons to move through the DAB+ station frequencies. "5A to 13F" will display on the screen with their associated frequencies (F. 7)
- When your desired frequency appears on the display, press the **SELECT** Button to confirm. The name of the station group (ensemble/multiplex) will also be displayed.
- To listen to the station selected, press on the **SELECT** Button again.



LISTENING TO YOUR RADIO

DAB+ Display Modes

Every time you press the **DISPLAY/INFO** Button, the display will cycle through the following display information:



Time and date

The time and date will be the time and date provided by the broadcaster. In the unlikely event that no clock information is received, the display will show “[No Time]”.

Frequency

The frequency of the present station will be displayed.

Audio bit rate

The display will show the digital audio bit rate being received.

Signal strength

The display will show a slide bar to indicate the signal strength, the stronger the signal, the longer the bar will be from left to right.

DLS

DLS stands for Dynamic Label Segment which is the scrolling text information provided by the broadcaster. The information displayed may include song titles, album information etc.

Programme type

This describes the style of the programme that is being broadcast. If the information is not available, the display will show “[No PTY]”.

Ensemble/Multiplex (Group name)

The Ensemble/Multiplex is the station broadcaster information.

Note: Press and hold the **DISPLAY/INFO** Button for longer than 2 seconds to view the software information.

FM Radio

1. To switch to FM, press the **DAB+/FM** Button. (F. 8)
2. To search for the next available frequency, press and hold the **◀◀** or **▶▶** Buttons. The search will stop automatically once a station has been found.
3. To manually search for the next available frequency, press the **◀◀** or **▶▶** Buttons or press the **SELECT** Button then rotate the **VOL/SCROLL** Control until the desired frequency is displayed on the screen.
4. To select audio mode, press the **PLAY/PAUSE** Button to toggle between the “Stereo” or “Mono” selection.

 
 
 
Note: The radio will automatically switch between stereo and mono mode, but you can override this and switch this function manually which is helpful for poor signal reception.



STATION PRESETS (remote control only)

You can store 10 DAB+ or 10 FM Stations Presets for easy access to your favourite stations.

- To store a Station Preset, tune to the desired station and press and hold the **PROGRAM** Button on the remote control until the display shows the preset number. (F. 9)
- Press the **SCROLL ▲** or **▼** Button to select the desired Station Preset number.
- Press the **PROGRAM** Button again to confirm your selection, the display will show "Preset # stored". (F.10)
- To recall a Station Preset that you have stored, press the **NAVIGATE/FOLDER** Buttons on the remote control, the display will show the preset number and the associated information. (F.11)



FACTORY RESET

To conduct a Factory Reset, please follow the below instructions. Please note this will clear all settings.

- Press and hold the **MENU** Button until the display shows "Press SELECT to confirm reset".
- Release the **MENU** Button and press the **SELECT** Button, the display will show "Restarting ..." and once reset is complete it will then perform full station scan.
- After the scan has finished, the radio will select and display the first station found.

Note: All of your stored DAB+ & FM presets will be lost once the reset has taken place.

 
 
 
LISTENING TO YOUR COMPACT DISCS

NOTE : Although this CD/MP3 player can read CD-R and CD-RW discs in addition to normal CDs, the playability of CD-R and CD-RW discs may be affected by the type of software that was used to create the discs, as well as the quality and condition of the blank media you are using.

This is not an indication of a problem with the player.

Playing a CD

- Press the **iPod/CD** Button to select CD function. The display will show "CD" and "NO DISC" if you have not yet inserted your CD. (F.12) (F.13)
- Press the **OPEN** Button on the top panel to open the CD door, load the disc with the printed label side facing up and then close the CD door. The display will first show "READING" and then the total track number and time. (F.14)
- To start playback from the beginning, press the **PLAY/PAUSE** Button, the display will show the current track number and the elapsed time. (F.15)
- If a CD/MP3 disc is being played, the display will show "MP3" together with the current folder and track number. To see the ID3 tag if available, press the **DISPLAY/INFO** Button.
- Press the **PLAY/PAUSE** Button to play or pause the CD. The display will show "II" when the unit is paused. (F.16)
- To resume playback, press the **PLAY/PAUSE** Button again.
- To stop playback, press the **■** Button.



LISTENING TO YOUR COMPACT DISCS

Selecting a different track during play

1. To select a different track during play, press the **I◀◀** or **▶▶I** Buttons until your desired track number is displayed. Release the button for playback.
2. To select other folders in the MP3 disc, press the **NAVIGATE/FOLDER** Buttons on the remote control.
3. To play the next track, press the **▶▶I** Button.
4. To play the current track again from the beginning during play, press the **I◀◀** Button.
5. To play the previous track, press the **I◀◀** Button twice.

Repeat play (remote control only)

During normal playback, you can press the **REPEAT** Button on the remote control to select the repeat play function:

1. To repeat the same track, press the **REPEAT** Button once, the display will show "♫ 1" (F. 17)
2. To repeat the entire disc, press the **REPEAT** Button again, the display will show "♫♫". (F. 18)
3. If you are playing a MP3 disc, an additional "♫📁" option will appear. This will repeat the current folder. (F. 19)
4. To cancel repeat play, repeatedly press the **REPEAT** Button until the repeat icon disappears from the display.

 
Random play (remote control only)

1. During CD operation, press the **RANDOM** Button to start random play, the display will show "RANDOM" and the tracks will be played randomly. (F.20)
2. To resume normal playback, press the **RANDOM** Button again and "RANDOM" will disappear from the display.
3. To cancel random play, press the **■** Button.

Program play (remote control only)

You can use the program play feature to play up to 20 tracks on a disc in any desired order. You may also program a particular track to play several times within a programmed sequence.

1. Load your disc as usual and wait until the display shows the total number of tracks on the disc.
2. Ensure it is in CD mode, press the **PROGRAM** Button on the remote control once, the display will show "MEM" and "P-01".(F.21)
3. Press the **I◀◀** or **▶▶I** Buttons to select the first track number to be programmed. When the desired track number appears in the display, press the **PROGRAM** Button to confirm and it is programmed. The program memory number will advance to "P-02" and ready for the next entry.
4. If a MP3 disc is being loaded, press the **NAVIGATE/FOLDER** Buttons to select the folder.
5. Repeat the above steps to program other tracks, a maximum number of 20 tracks can be programmed. When you have completed programming, press the **PLAY/PAUSE** Button to begin program play, playback will be started on the first track you programmed and will continue until the last programmed track has played.
6. When the program play is completed, the player stops and "PROG" will be displayed. The player remains in the program play mode. Press the **PLAY/PAUSE** Button will play the programmed sequence again.
7. To erase the program, in CD stop mode, press the **■** Button once; in CD play mode, press the **■** Button twice. "PROG" will disappear in the display.

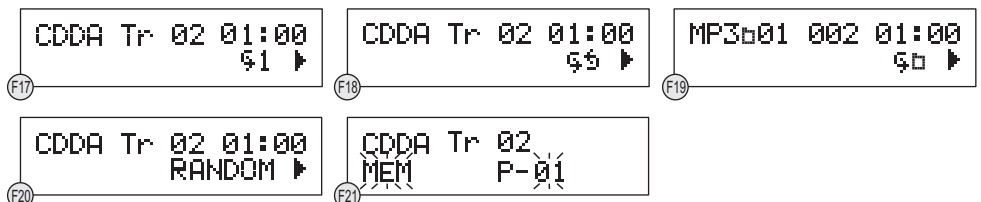

LISTENING TO YOUR COMPACT DISCS

Repeat program play (remote control only)

You may use the program play and the repeat play features together to continuously repeat a programmed playback. First program the desired playback sequence, then press the **REPEAT** Button to select repeating the current track or the entire programmed sequence.

LISTENING TO YOUR iPod

This unit allows you to play all your favorite songs from your iPod through the iPod dock.

1. To select iPod operation, press the **iPod/CD** Button until the display shows "Insert iPod".
2. Slide the door of iPod docking station located on the top of the unit, insert your iPod into the docking tray, once connected the display will show "iPod" on the display.
3. Press the **▶||** Button to Play or Pause tracks on your iPod.
4. Press the **▶▶|** or **|◀◀** Buttons to skips to the next or previous iPod track.
5. To access the "iPod Menu", press the **MENU** button.
6. To scroll up or down in the "iPod Menu", press the **NAVIGATE/FOLDER** Buttons on the remote control.
7. To confirm the selection in the "iPod Menu", press the **SELECT** Button on the remote control.

CHARGING UP YOUR iPod

You can charge your iPod when you dock your iPod in both standby or on modes. It will charge automatically when it is docked.

AUX INPUT

A 3.5mm Stereo AUX IN is located at the back of the unit, you can connect any other music player (MP3 Player) devices you wish to listen to.

1. You will need an Auxiliary Cable (not included) to connect your other audio sources.
2. Press the **AUX** Button to select the AUX Input mode, the display will show "AUX".
3. Adjust the volume control for your desired sound output level.

ON TIMER FUNCTION

You can set the unit to turn on at a selected time

1. Press the **TIMER** Button to select between "On" and "Off", your selection will be displayed on the screen. (F.22)
2. To set the timer, ensure the unit is in standby mode, press and hold the **TIMER** Button until the display shows "Timer Set" and the "hour" digit of the timer clock on the display will flash. (F.23)
3. Press the **▲** or **▼** Buttons to set the time and press the **TIMER** Button to confirm.
4. When the time to switch on the system is set, press the **▲** or **▼** Buttons to select the mode you wish the unit turn on to (FM/DAB/CD/iPod). Press the **TIMER** Button to confirm.
5. The display will then flash the volume level. Press the **▲** or **▼** Buttons to select the on volume level and then press the **TIMER** Button to confirm and the timer setting is now completed.



COMPACT DISC

 
1. Always use compact discs bearing the mark as shown.



2. Notes on handling discs

Removing the disc from its storage case.

- * Do not touch the reflective recorded surface.
- * Do not stick paper or write anything on the surface.
- * Do not bend the disc.

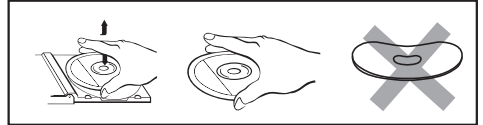


3. Storage

- * Store the disc in its case.
- * Do not expose discs to direct sunlight or high temperatures, high humidity or dusty places.

4. Cleaning a disc

 - * Should the disc become soiled, wipe off dust, dirt and fingerprints with a soft cloth.
- * The disc should be cleaned from the centre to the edge.

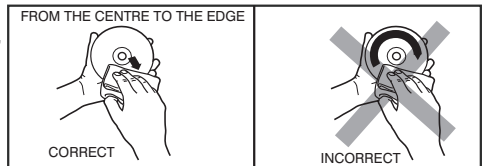

- * Never use benzene, thinners, record cleaner fluid or anti static spray.
- * Be sure to close the CD door so the lens is not contaminated by dust.
- * Do not touch the lens.

SPECIFICATION

POWER SUPPLY:	230V~ 50Hz
OUTPUT POWER:	5W X2
UNIT DIMENSION:	145 (L) x 235 (W) x 130 (H) mm
SPEAKER DIMENSION:	125 (L) x 168 (W) x 130 (H) mm
WEIGHT:	2.71 kg

RADIO SECTION

FREQUENCY RANGE:	DAB+ 174 - 240 MHz FM 87.5 – 108 MHz
------------------	---

COMPACT DISC SECTION

CD MEDIA:	CD-DA, CD-ROM, CD-R, CD-RW
DISC FORMATS:	CD-DA Digital Audio, ISO9660 (CD-R), ISO13346UDF (CD-RW) Mixed mode and Enhanced CD

MP3/WMA SECTION

BIT RATE:	MP3: 32-128kbps, WMA: 32, 48-192kbps, Constant & VBR (Variable Bit Rate)
DISPLAY:	MP3/WMA Tag (V1.0, V1.1& V2.3) – Title, Artist, Album (Up to 32 characters displayed for each tag)
TOTAL NO. OF TRACKS /ALBUM:	999

AUX INPUT

INPUT VOLTAGE RANGE:	350-500mV
IMPEDANCE:	47KΩ

**** SPECIFICATION SUBJECT TO CHANGE WITHOUT FURTHER NOTICE**

SUPPORTED iPod DEVICES



iPod mini
4GB 6GB



iPod nano
1st generation
1GB 2GB 4GB



iPod touch
1st generation
8GB 16GB 32GB



iPod
4th generation
20GB



iPod
5th generation
(video)
30GB



iPod classic
160GB (2007)



iPod
4th generation
40GB



iPod
5th generation
(video)
60GB 80GB



iPod nano
4th generation (video)
8GB 16GB



iPod
4th generation
(color display)
20GB 30GB



iPod nano
2nd generation
(aluminum)
2GB 4GB 8GB



iPod classic
120GB 160GB (2009)



iPod
4th generation
(color display)
40GB 60GB



iPod classic
80GB



iPod touch
2nd generation
8GB 16GB 32GB 64GB



iPod nano
3rd generation
(video)
4GB 8GB



iPod nano
5th generation (video camera)
8GB 16GB

Warranty

Please keep your receipt as proof of purchase. This product is warranted for any defect in materials or workmanship for one year after the original date of purchase. This product is for normal domestic and office use only. This warranty does not cover damage from misuse or neglect, accidental damage, vermin infestation, excessive voltages such as lightning or power surges or any alternation that affects the performance or reliability of the product.

In the unlikely event that your product fails to work normally, please contact the **Bush Warranty on 1800 509 394 (Australia) or 0800 450 259 (New Zealand)** and have your receipt of purchase on hand.

This warranty is subject to the following provisions:

- It is only valid within boundaries of the country of purchase;
- The product must be correctly assembled and operated in accordance with the instructions contained in the manual;
- This product must be used solely for domestic purposes;
- The warranty does not cover accidental damage;
- The warranty will be rendered invalid if the product is resold or has been damaged by inexpert repair;
- The manufacturer disclaims any liability for incidental or consequential damaged.

This warranty is in addition to, and does not diminish, your statutory or legal rights.

PO BOX 6287
Silverwater NSW 1811
www.bushaustralia.com.au

Bush Warranty: 1800 509 394 Australia
Bush Warranty: 0800 450 259 New Zealand

PO BOX 6287
Silverwater NSW 1811
www.bushaustralia.com.au