



High Fidelity Cinema Dock For iPhone & iPod

HS-IPSP1001

Thank you for your purchase of this Hip Street speaker dock and we hope you enjoy using it. Please visit our website at www.hipstreetonline.com.

Please ensure that you fully read and understand the information within this instruction manual prior to using your product. It is advised that you keep this instruction manual in a safe place for future reference. We sincerely hope that this high quality product offers you endless hours of


entertainment.

Play and charge you iPhone or iPod and enjoy your favorite tunes or videos in cinematic landscape or portrait positions. Automatically rotate your viewing position with a touch of a button from the remote control or unit with its unique motorized inner bezel. This unit also has an audio line in jack with cable included to connect any other portable music player with a 3.5mm headphone jack.


Before setting up the unit, check that the following items are included in the box:

1. Rotating speaker system
2. AC power adaptor
3. 3.5mm audio line in cable
4. 5 x various iPod & iPhone cradles
5. Remote control

Product Top View

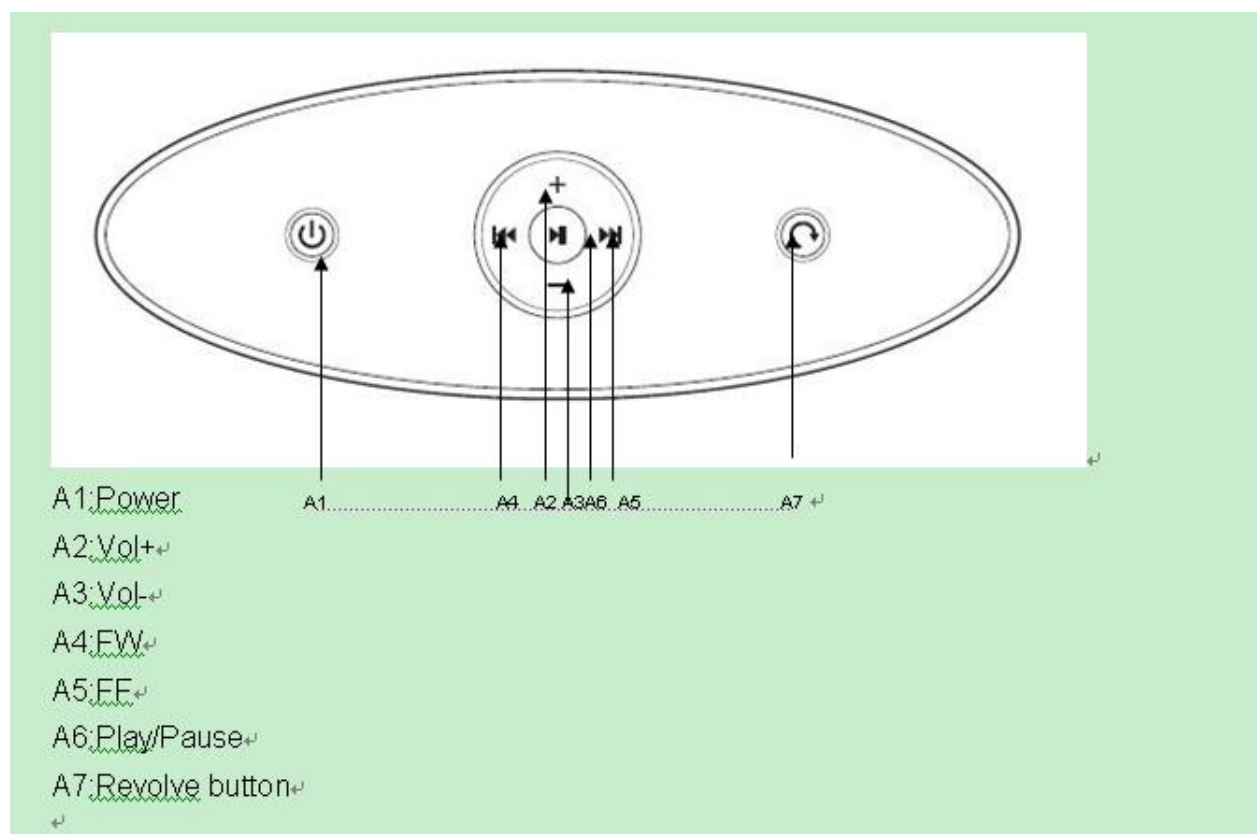

Product Rear View

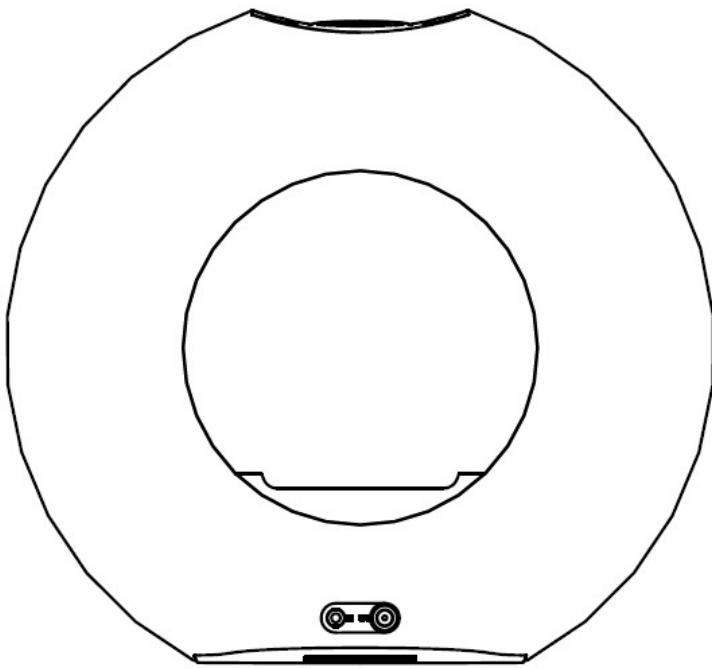


B1 B2

B1: AUX jack

B2: DC jack

Listening music from iPod or iPhone

1. Press the Power button to turn the speaker unit on.
 2. Select the appropriate dock insert (below) for your device, fit the device carefully into the dock.
- ** Note:** Do not force the device. Carefully slide the device over the dock connector to avoid any damages.

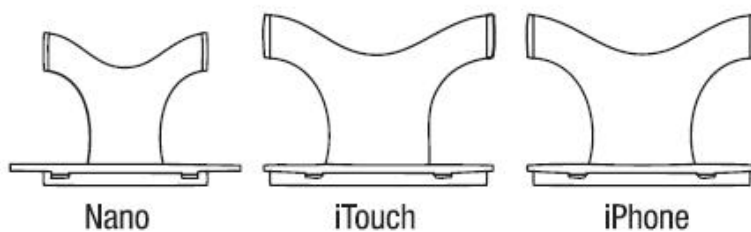

Dock inserts for iPod players

3. Press the PLAY/PAUSE button to pause or resume playback.
4. Press the "+" or "-" button to adjust the volume.
5. Press the "<<" or ">>" button to skip to the next or previous file.
6. Turn speaker unit off by pressing POWER button.

Watching videos from iPod Touch or iPhone:

1. Turn the speaker unit on.
2. Carefully fit the iPod Touch or iPhone into the dock through the cradle.
3. Press the PLAY/PAUSE button to pause or resume playback.
4. Press the “+” or “-” to adjust volume.
5. Press the “<<” or “>>” button to skip to the next or previous file.
6. Press the REVOLVE button on the top control panel to rotate the viewing angle.

Using the remote control:

Your speaker comes with a remote control with the same function buttons as the unit. It also has menu and enter buttons to access the iPod or iPhone menus.

The remote control is provided with a battery that will need replacing over time. The battery compartment can be accessed from the back side of the remote control. Please note to replace the battery with the same size (CR2025).

Playing music via aux in:

1. This speaker unit can also play music via aux in (audio in).
2. Turn on the power and use the aux cable (3.5mm to 3.5mm audio cable) provided to plug one end into the speaker unit on the back and plug the other end into any portable audio device with a 3.5mm headphone jack. (These audio devices can be MP3 players, smartphones, cell phones, portable CD players or radios, etc.)

Need assistance? Please call us!

If you encounter any difficulties with this product, please visit our website at www.hipstreetonline.com and review our support section or call us. Our representatives are ready to help you with any questions about your product. We can guide you through connections, first-time use, or any of the features. Just give us a call or send us an email.

Customer & Technical Support: **1-888-4KOBIA** or **1-888-456-2426**

Monday through Friday: 8:30am – 5:00pm EST

Email: support@hipstreetonline.com

We want you to start enjoying your product right away!