


DockIT Portable Docking Station for your iPod®


**The Perfect Portable Speaker System...
with Stereo Radio and Digital Alarm Clock**



innovative technology™



Made for all iPod® models including iPod® nano, iPod® shuffle and iPod® mini

OWNER'S MANUAL
IT-5022



CAUTION

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

 <p>The lightning flash with arrow-head symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated 'dangerous voltage' within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>	<p>CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK), NO USER SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	 <p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.</p>
--	---	---

The Caution Marking maybe located at the bottom enclosure of the apparatus.

IMPORTANT SAFETY INSTRUCTIONS

- 1.) Read these instructions. Keep these instructions. Follow all instructions. Heed all warnings.
- 2.) Do not use this apparatus near water.
- 3.) Clean only with dry cloth.
- 4.) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 5.) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 6.) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 7.) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 8.) Only use attachments / accessories specified by the manufacturer.
- 9.) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 10.) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 11.) This appliance shall not be exposed to dripping or splashing water and no object filled with liquids such as vases shall be placed on the apparatus.
- 12.) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13.) Do not overload wall outlet. Use only power source as indicated.
- 14.) Use replacement parts as specified by the manufacturer.
- 15.) The product may be mounted to a wall only if recommended by the manufacturer.
- 16.) Upon completion of any service or repairs to this product, ask the service technician to perform safety checks.



Thank you

For purchasing this iPod® Compatible Portable Stereo System.

This compact portable system features a built in iPod® docking station so you can play your iPod® through the speakers of this system when you are in the mood to share your music with others, or when you simply do not want to use earphones. In addition, when this system is connected to an AC outlet with the included AC adapter it will also recharge the battery of any 'dockable' iPod®. We have even included four separate inserts so that every 'dockable' iPod® currently available will fit correctly in the docking area. This system also includes an AM/FM Stereo Radio with digital station frequency display for more precise tuning, and a digital alarm clock that can wake you to the radio or an electronic buzzer.

Finally we have also included an auxiliary input jack so that you can also connect non-dockable iPod® such as the first generation models, or the iPod® Shuffle, or even other brands of MP3 players and portable CD players to this system. The required connection cable is included of course.

We have taken great care to ensure this system was in perfect working order when it left our factory. If you experience any problems with the set up or operation of this system please contact the supplier.

iPod® is a trademark of Apple Computer Inc., registered in the U.S. and other countries.

IMPORTANT NOTES

- Avoid installing this unit in places exposed to direct sunlight or close to heat radiating appliances such as electric heaters, on top of other stereo equipment that radiates too much heat, places lacking ventilation or dusty areas, places subject to constant vibration and/or humid or moist areas.
- Operate controls and switches as described in the manual.
- Before turning on the power, make certain that the AC/DC adapter is properly installed.
- When moving the set, be sure to first disconnect the AC/DC adapter.

FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

PREPARATION FOR USE

Unpacking And Set Up

- Remove the main unit, the AC adapter, the accessory auxiliary device connection cord, and the 2 iPod® adapters from the carton, and remove all packing material from the main unit. We recommend that you save the carton and packing material in the event that the unit ever needs to be returned for service. Using the original carton and packing material is the only way to protect your unit from damage during shipment.
- Remove any descriptive labels or stickers from the top or front panels of the unit but do not remove any labels or stickers from the back or bottom panels.
- Remove the “dummy iPod®” display card from the docking area and discard it.

Power Sources

This system is designed to operate on 6 “C” batteries, not included, or on normal 120V AC house current with the included AC adapter. In addition, this unit requires 2 “AA” batteries for the clock and alarm memory back up. We recommend that you use a well-known brand of alkaline batteries for longest life and best performance.

 
Attempting to operate this system from any other power source may cause damage to the system, and such damage is not covered by your warranty.

Battery Precautions

- Replacement of batteries must be done by an adult.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- The supply terminals are not to be short-circuited.
- Non-rechargeable batteries are not to be recharged.
- Exhausted batteries are to be removed.
- Only batteries of the equivalent type are to be used.
- Batteries are to be inserted with the correct polarity.
- Dispose of batteries properly. Do not dispose of batteries in fire. The batteries may explode or leak. Do not break batteries open internal chemicals will cause skin burn. If you come into contact with the internal contents of a battery, immediately wash the skin in warm water.

Battery Installation

The battery compartments for the 6 “C” batteries and 2 “AA” batteries are located on the back panel. To open the battery compartment covers press the door locking tabs in the direction of the arrows. Remove the doors and insert the 6 “C” and 2 “AA” batteries in their respective compartments. Be sure the batteries are installed correctly according to the polarity markings in the battery compartments. If the batteries are installed incorrectly the unit will not work.

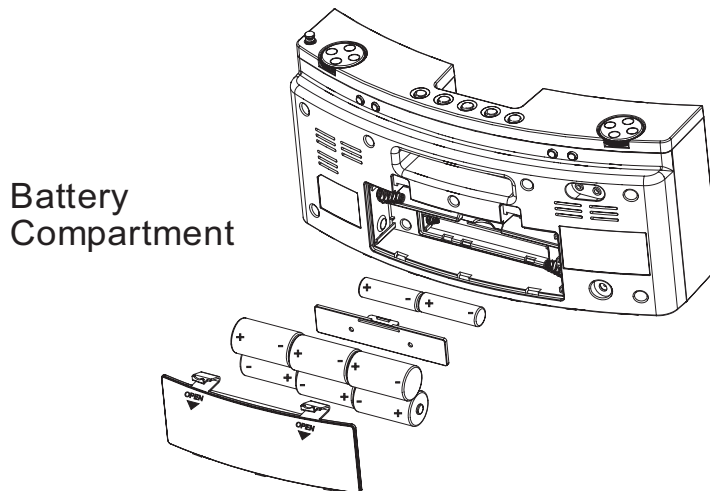

After installing the batteries replace both battery compartment covers and make sure that they lock securely.

 
Battery Replacement

When the sound output becomes weak and distorted during battery operation it is probably time to change the 6 “C” batteries. Try operating the system with the AC adapter. If the sound is normal with the AC adapter this confirms that the batteries are weak and should be replaced as soon as possible. If exhausted batteries are left in the unit they may eventually leak and cause damage to the unit. When changing the 6 “C” batteries always change all 6 at the same time and do not mix different types of batteries such as alkaline, carbon-zinc, and nickel cadmium.

The 2 “AA” batteries are only used for maintaining the clock and timer memory and therefore they will probably last longer than the 6 “C” batteries. Two fresh alkaline “AA” batteries should provide back up power for the clock and timer for a period of 12 month.

Using The AC Adapter

Connect the small female plug of the AC adapter to the DC Input Jack on the back panel. Connect the housing of the AC adapter to the 120V AC outlet.

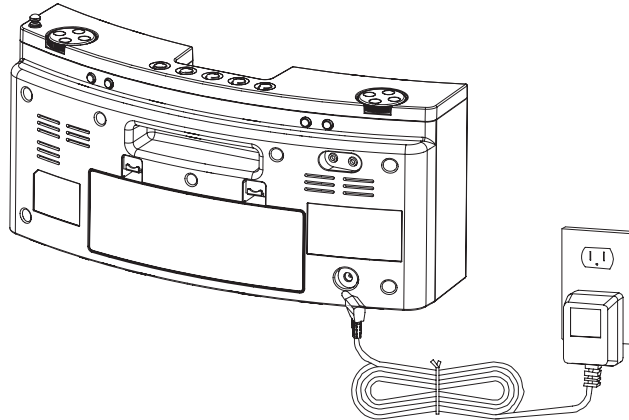

When the adapter is connected to the unit the AC power source is selected automatically, even if there are batteries in the battery compartment. Note: In order to operate the unit on batteries the AC adapter must be completely disconnected from the DC Input Jack on the back panel.

 
NOTES:

- *The housing of the AC adapter may become warm during operation. This is normal.*
- *To reduce the risk of electric shock never connect or disconnect the AC adapter while your hands are wet.*

Protect Your Furniture

This model is equipped with non-skid rubber 'feet' to prevent the product from moving when you operate the controls. These 'feet' are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil based furniture polishes, wood preservatives, or cleaning sprays may cause the rubber 'feet' to soften, and leave marks or a rubber residue on the furniture. To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement centers everywhere, and apply these pads to the bottom of the rubber 'feet' before you place the product on fine wooden furniture.

LOCATION OF CONTROLS AND INDICATORS

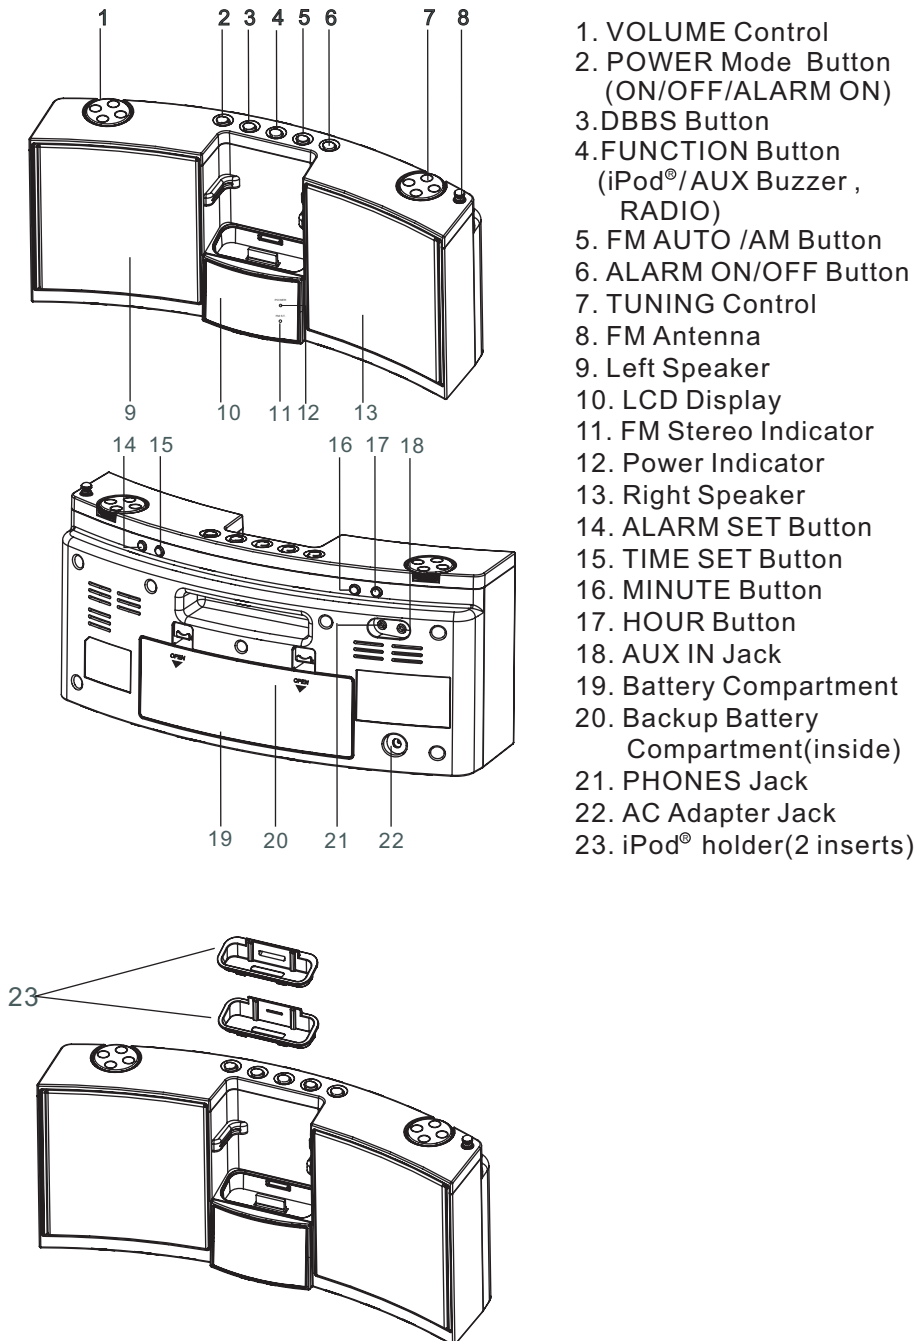

LCD DISPLAY

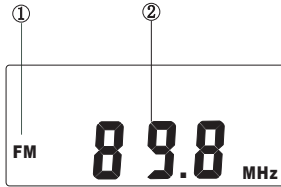 


Fig 1

Radio mode
1. Band Indicator (AM/FM)
2. Radio Frequency


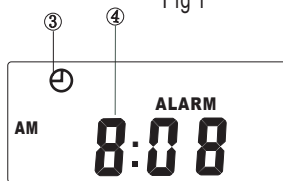 


Fig 2


Clock/Timer Mode
3. Alarm On Indicator
4. Time/Alarm Time Display

OPERATING INSTRUCTIONS

 
SETTING THE CLOCK

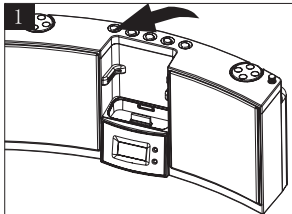

 Make sure the POWER switch is set to the 'Off' position. The time or alarm time cannot be set or adjusted while the unit is 'On'.

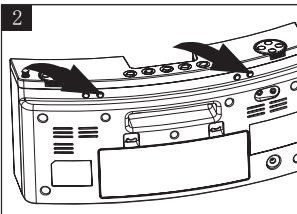

 Press and hold the TIME SET button. While holding the TIME SET button press the HR SET button to adjust the hour.

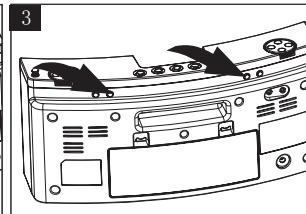



While holding the TIME SET button, press the MINUTE SET button to adjust the minute. Release all buttons to complete time setting.


OPERATING INSTRUCTIONS (CONTINUED)

LISTENING TO THE RADIO

 
NOTE: To prevent any interference between your iPod® and the radio in this unit, your iPod® should be switched 'Off' when listening to the radio.

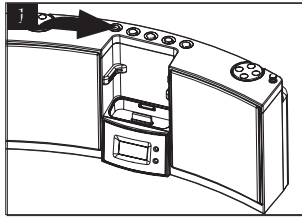

  
Set the POWER button to the 'On'  position, the display lighting turns on.

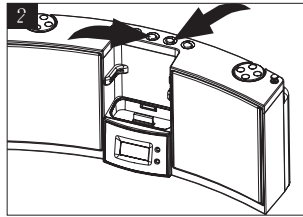

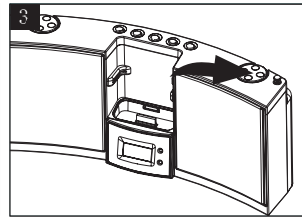

 
Set the FUNCTION button to the Radio position. The display will change from time to radio frequency. Set the BAND selector to the desired band, AM or FM Auto.

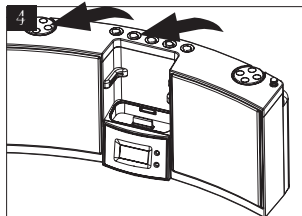



Rotate the TUNING control until the display shows the desired AM or FM station frequency. Turn the TUNING control clockwise to select higher numbered frequencies or counter-clockwise to select lower numbered frequencies. The FM STEREO indicator will light when you tune to an FM Stereo station.



Rotate the VOLUME control to increase or decrease the volume level. If you want to increase the bass response set the DBBS button to the 'On'  position.

 Note: If you are listening to music that contains heavy bass at high volume levels the sound may become distorted if the DBBS switch is set to the 'On'  position. If this occurs set the DBBS switch to the 'Off'  position, or reduce the volume level.

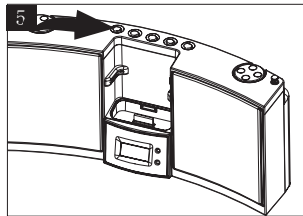

When you are finished listening set the POWER button to the 'Off'  position. The display changes from radio frequency to correct time and the display lighting goes off.

OPERATING INSTRUCTIONS (CONTINUED)

Docking and Charging The iPod®

This system is designed with the same 30-pin connector found in all iPod® docks. By simply connecting the iPod® to the docking station on the front panel of this system you can play the iPod® through the speakers of this system. And you can also recharge the battery in the iPod®.



Note: Recharging is only possible when you are using the system with the included AC adapter. The iPod® battery will not be recharged when you are operating this system on battery power.

To accommodate all models of dockable iPod® we have included four different adapter / inserts to ensure that the iPod® will fit properly in the docking station.

Refer to the chart below to select the proper adapter / insert for your particular model of dockable iPod®. Note: If you have an earlier non-dockable iPod®, or an iPod® Shuffle, please refer to the next section to connect your device to the Auxiliary Input jack.

iPod® inserts

Your unit comes with 2 removable inserts to ensure the iPod® fits properly in the dock on the front of the system.

iPod® version	4G		3G			mini	photo				nano		5G (video)	
	20 GB	40 GB	10 GB	15 GB	30 GB		20 GB	30 GB	40 GB	60 GB	2 GB	4 GB	30 GB	60 GB
A 	A		A	A		A	A	A						
B 		B			B				B	B				
ADAPTOR SUPPLIED WITH iPod										C	C	C	C	

1. Place the proper adaptor / insert into the docking station. The iPod® 30-pin connector should fit through the opening in the bottom of the insert.
2. Gently press the insert into the dock until it is properly seated.
3. With the iPod® in the Power 'Off' mode carefully place it into the insert.
Note: Remove any accessory case or "skin" from the iPod® before inserting it in the dock.
4. To remove or replace an insert, first remove the iPod® from the dock. then grip the insert and gently lift it upward and out of the dock.

 
OPERATING INSTRUCTIONS(CONTINUED)

Playing your iPod


Important

To prevent distortion during iPod® playback you should go to the Main Menu of your iPod®, select the Settings Menu page, select the EQ Setting, and make sure that the EQ function is set to "Off".


(Main Menu → Settings Menu → EQ Setting → Select "Off")

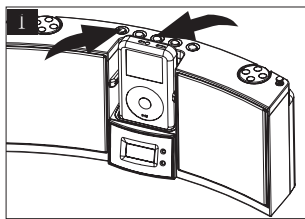

 After inserting the iPod® in the dock as described above, set the POWER switch of this system to the 'On' position, and the FUNCTION switch to the iPod® position. If necessary, release the HOLD switch on the iPod® and turn it on.

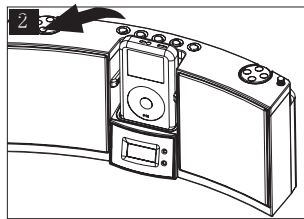

 Select the song or album that you wish to play on the iPod® using the click-wheel navigation controls as usual. Use the VOLUME control on this system to increase or decrease the speaker volume level. The volume control on the iPod® has no effect on the speaker volume level.

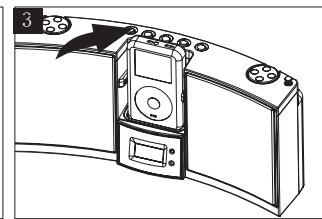

When you are finished listening press the POWER button to turn this system 'Off'. The display lighting will turn off. If you are using the AC adapter, the charging indicator will appear on the iPod® display.

 
Important Note

To prevent damage to the iPod® we recommend that you do not play the iPod® when you are carrying this system around as a portable. The system should be placed in a stable, secure position before connecting and operating the iPod®.


OPERATING INSTRUCTIONS(CONTINUED)

Listening To A Non-Docking iPod® Or Other Portable Music Player


Some early iPod® models and the iPod® Shuffle do not include the 30-pin docking connector found on most other iPods®. We have provided an Auxiliary Input Jack on the back panel of this system and included a stereo connection cable so that you can still connect non-docking iPods®, other MP3 players, or personal CD players to this system.

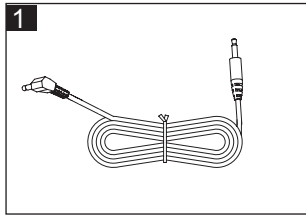

 
1
Locate the stereo connection cable supplied with this system.

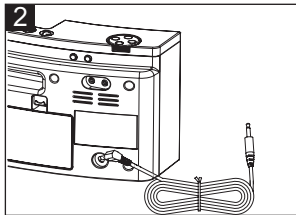

 
2
Connect one end of the 3.5mm stereo cable into the auxiliary input jack (AUX) located on the back of the unit, and other end to the headphone or line out jack on your portable audio device.

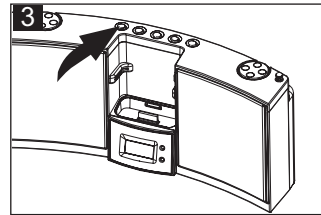

 3
Set the POWER button to the 'On' position and the FUNCTION button to the AUX position. Also turn on your external portable audio player.

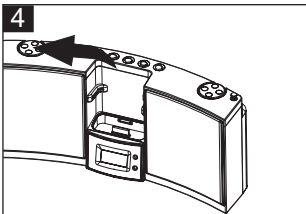

 4
Use the VOLUME control to adjust the system volume. You may need to adjust your device volume, too.

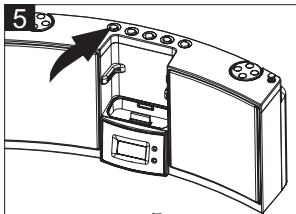


5
When you are finished listening set the POWER button to the 'Off' position. Remember to shut off the power to your portable audio player as well.

Important Note

Remember to disconnect the stereo connection cable from the Aux Jack before inserting an iPod® in the docking station.


OPERATING INSTRUCTIONS(CONTINUED)

 SETTING THE ALARM

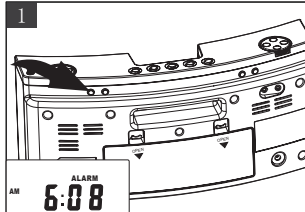


Press and hold the ALARM SET button to enter the alarm Time setting mode. The front panel display will change from current time to alarm time.

 
Note: The POWER switch must be set to the 'Off' position to adjust the Alarm time.

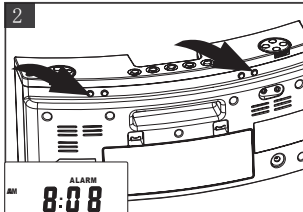

 
While continuing to hold the ALARM SET button press the HOUR button repeatedly until the display shows the desired wake-up hour.

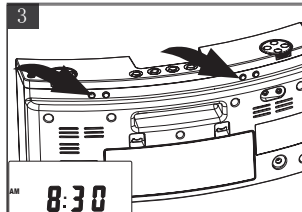

 While continuing to hold the ALARM SET button press the MINUTE button repeatedly to set the desired wake-up minute. When the desired wake-up time appears on the display release all the buttons.

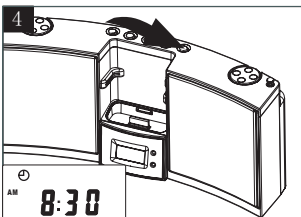

 Press the ALARM ON/OFF button to activate the alarm. The ALARM indicator on the front panel will turn 'On'. Set the FUNCTION selector to the desired alarm mode, Radio or Buzzer.

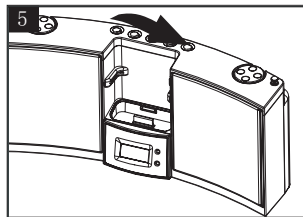

When the actual time matches the alarm time the system will turn on to the radio or buzzer alarm automatically. The radio or buzzer will continue to operate for one hour and then shut off and reset itself for the same time on the following day. To stop the alarm sooner, press the ALARM ON/OFF button to deactivate the alarm. The ALARM indicator on the front panel goes 'Off'.

TROUBLESHOOTING GUIDE

Symptom	Possible Cause	Solution
Radio		
Noise or sound distorted on AM or FM broadcasts.	Station not tuned properly for AM or FM.	Retune the AM or FM broadcast station.
	FM: Rod antenna is not extended.	Extend FM Rod antenna.
	AM: The bar antenna is not positioned correctly.	Reposition the unit until best reception is obtained.
FM STEREO indicator does not light	The BAND switch is not set to FM position.	Set the BAND switch to FM ST. Position
AM or FM, no sound	Function switch is not set to RADIO.	Set the Function switch to RADIO.
	Volume at minimum.	Increase Volume
iPod® Player		
Unit does not respond (no power)	AC adaptor is not plugged into a wall outlet or the connector is not plugged into the power supply jack on the back of the unit.	Plug the AC adaptor into a wall outlet and plug the connector into the supply jack on the unit.
	Using no or wrong iPod® insert	Make sure the dock insert is the proper fit for the iPod®
iPod® does not dock properly	iPod® did not install properly	Remove the iPod® from the dock and check for obstruction on the connections in the dock and on the iPod®, Then reseal it in the dock
iPod® does not respond to the unit	iPod® is not installed properly	Remove the iPod® from the dock and check for obstruction on the connectors in the dock and on the iPod® Then reseal it in the dock
	iPod® is locked up	Please make sure your iPod® is working properly before docking into the unit. Please refer to the iPod® manual for details.
	Using first or second generation iPod®, iPod® Shuffle or other devices.	This unit cannot control those iPods® or other devices.
iPod® did not charge up	iPod® is not installed properly	Remove the iPod® from the dock and check for obstruction on the connectors in the dock and on the iPod®. Then reseal it in the dock
	iPod® is locked up/frozen	Please make sure your iPod® is working properly before docking into the unit. Please refer to your iPod® manual for details.
	iPod® battery has problem	

CARE AND MAINTENANCE

If the cabinet becomes dusty, wipe it with a soft cloth. If the cabinet becomes smudged or dirty, clean it with a soft, slightly dampened cloth. Never allow water or any liquid to get inside the cabinet.

Never use any abrasive cleaners or cleaning pads as these will damage the finish of your unit.

Innovative Technology Electronics Corp.

Limited Warranty

90 Days Labor, One Year Parts

Innovative Technology Electronics Corp. (IT) warrants the product to be free from "Defects" in materials under normal use for a period of "One Year" from the date of the original purchase. The Warranty is "Not" transferable. IT agrees, that within the initial "90 Day" period to repair the product if it is determined to be defective at "No Charge". It is further agreed that IT will cover the cost to repair or replace damaged "Parts" only for a total period of "One Year" from the date of original purchase. The warranty does not cover cosmetic damage, antennas, AC cords, cabinets, headbands, ear-pads, or damage due to line power surges, connection to improper voltage supply or settings, misuse, mishandling, accident, acts of God or attempted repair by an unauthorized service agent.

To obtain service please contact IT for Merchandise Return Authorization (MRA) number by sending a self addressed stamped envelope to the address below. The original purchaser MUST present a sales receipt / proof of purchase indicating date of purchase, amount paid, and place of purchase. Send the unit prepaid to the address below in the original packaging or reasonable substitute to prevent damage. You "Must" include your full name, shipping address and telephone number and Merchandise Return Authorization (MRA) number for our reference. No return will be shipped back to a PO Box. Please include your check or money order in the amount of \$12.00, payable to Innovative Technology Electronics Corp., to cover handling and return shipping charges. IT will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information, Send all inquires or returns to:

Customer Service Dept., Innovative Technology Electronics Corp., 4 Anchor Way,
Port Washington, NY 11050 Tel: 631-265-3220

There are no express warranties except as listed above.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER, IT SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.