 


# iHome®

Model iH64

## Portable Computer Speakers for your iPod

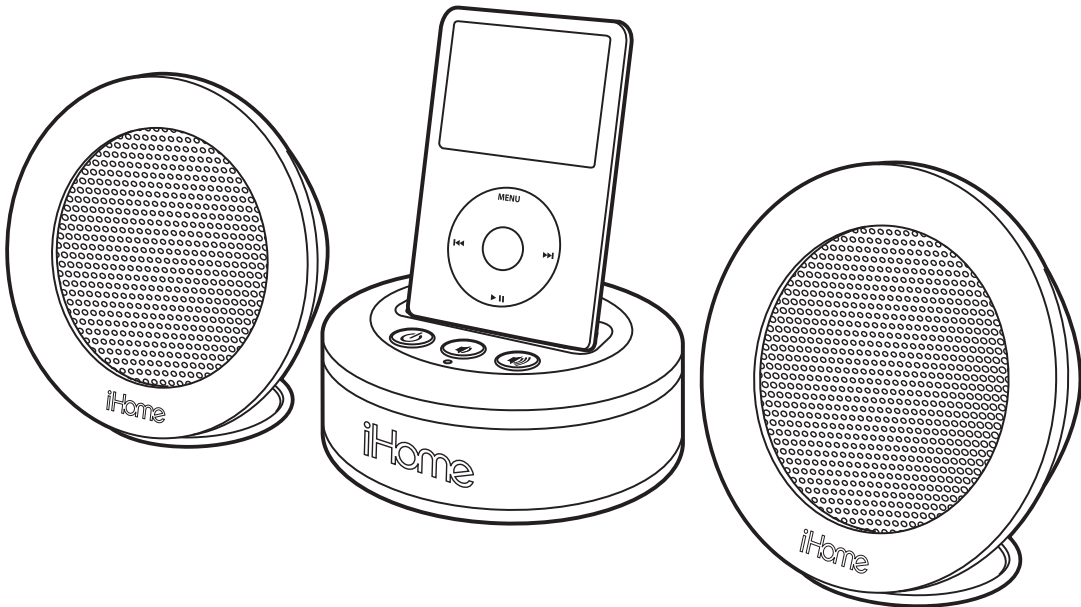

**Questions? Visit [www.ihomeaudio.com](http://www.ihomeaudio.com)**

## Table of Contents

Quick Start .....	1
Controls and Indicators.....	2
Using iH64.....	3
Charging your iPod .....	3
Listening to your iPod.....	3
Listening to non-docking iPod or other audio devices.....	4
Syncing your iPod to a Computer through iH64.....	4
Changing the Speaker Panel .....	4
Operating the Remote On/Off Switch .....	4
Using the Optional Remote Control .....	5
Install/Replace the Remote Control Battery.....	5
A Consumer Guide to Product Safety.....	6
Trouble Shooting .....	7
Solucionando Problemas.....	8
Warranty Information .....	9



TruBass and WOW are registered trademarks of SRS Labs, Inc.  
TruBass and WOW technologies are incorporated under license from SRS Labs, Inc.

## Maintenance

- Place the unit on a level surface away from sources of direct sunlight or excessive heat.
- Protect your furniture when placing your unit on a natural wood and lacquered finish. A cloth or other protective material should be placed between it and the furniture.
- Clean your unit with a soft cloth moistened only with mild soap and water. Stronger cleaning agents, such as Benzene, thinner or similar materials can damage the surface of the unit.

## FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits

*SDI Technologies Inc.  
1299 Main Street,  
Rahway  
NJ 07065  
Tel. No.: (732) 574-9000*

## Getting Started

Thank you for purchasing the iHome iH64 Computer Speaker System for your iPod. Designed specifically to work with your Computer and iPod, this system provides high quality audio performance that brings out the best in your music.

 
Please read this instruction book carefully before operating the iH69 and keep it for future reference.

### Check for iPod compatibility

iH64 is an advanced system and supports most updated iPod features. To make sure your iPod works properly with iH64, please update your iPod firmware with the latest version via iTunes.

# Quick Start: Connections


## 1:connections

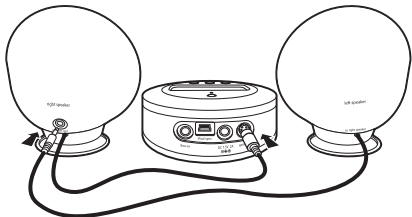

**Important: Turn off iH64 before connecting or disconnecting speakers!**


1. Power off iH64.
2. Connect the right speaker to the speaker jack on the back of main unit.
3. Connect the left speaker to the speaker jack on the back of right speaker.

## 2:power

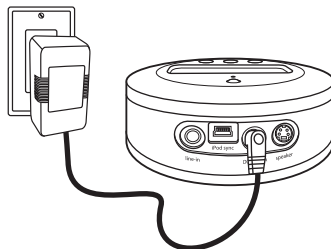

Attach the AC adaptor cable to the jack on the back of the main unit and plug the other end into a working wall socket.

## 3:inserts

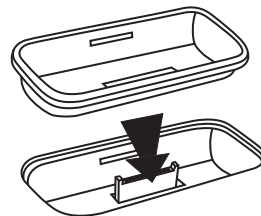

Select the dock insert for your iPod model from the table below and place insert in dock.

**Never dock an iPod without an insert in place.**

Use this insert

thin iPod with video (30 GB)  
Insert 9

iPod with video (60,80 GB)  
Insert 10

3rd Gen nano  
insert 13

iPod Touch  
insert 14

For this iPod

thin (30 GB) iPod with video  
thin (80GB) iPod classic


thick (60, 80 GB) iPod with video  
thick (160 GB) iPod classic

3rd Gen nano

iPod Touch

**NOTE: If the insert for your iPod isn't listed, please visit an Apple store or [www.ihomeaudio.com](http://www.ihomeaudio.com) to purchase the proper insert.**


## 4:iPod

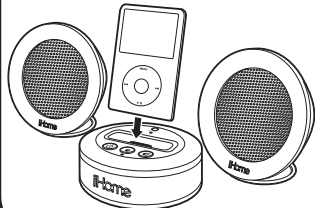

Insert iPod into dock with proper insert (iPod must not be in a skin or case). iPod will charge while docked.

Press the Power button on the iH64 then press play/pause button on your iPod to play the iPod.


## 5:batteries

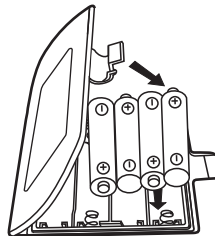


For portable operation, remove the battery compartment door on the bottom of the main unit and insert 4 AAA batteries (match + and - polarity to diagram in compartment). Replace door. Will not charge iPod when operating on batteries.

# Controls and Indicators
 
## Top Panel

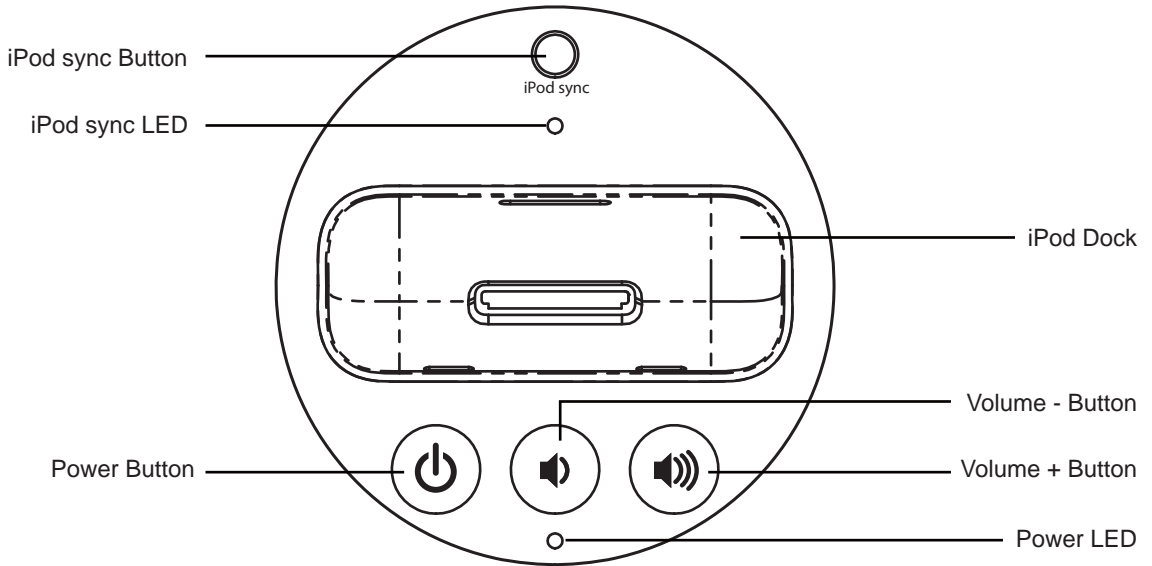

## Rear Panel

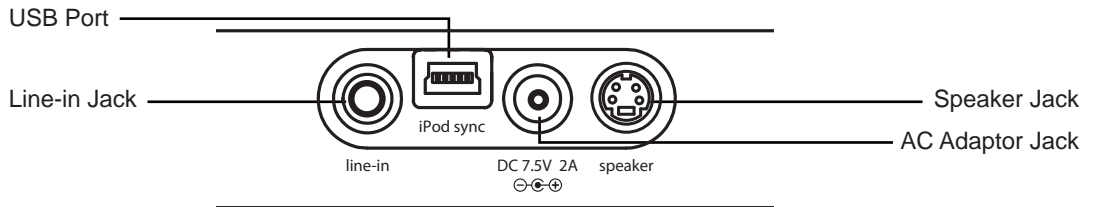 

## Using iH64

### Install iPod Insert

Your iH64 comes with inserts to ensure your iPod fits properly in the dock.

To place an insert:

1. Select the insert for your iPod (see table on page 1).
2. Gently press the iPod insert into the dock.
3. Carefully place your iPod into the dock. The iPod must not be in a case or "skin".

### Connect Speakers

**Important: You must turn off the iH64 before connecting or disconnecting speakers!**

1. Power off iH64.
2. Connect the right speaker to the speaker jack on the back of main unit.
3. Connect the left speaker to the speaker jack on the back of right speaker.

### Install AC Adaptor

Connect the AC adaptor cable plug into the jack on the back of the main unit, then plug the AC adaptor into the wall outlet.

**This AC adaptor is for use with the iH64 only. To avoid damage, do not use other adaptor with the iH64.**


### Install/Replace Battery

1. Open the battery compartment cover located on the bottom of the unit.
2. Insert 4 "AAA" batteries, checking that the polarity (the + and - ends of the batteries) matches the drawing inside the battery compartment. We recommend the use of alkaline batteries for longer life.
3. Close the compartment cover.

### Batteries information:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Make sure you dispose of batteries properly (see your local regulations).

**Note: The iPod does NOT charge when the iH64 is operating on batteries.**

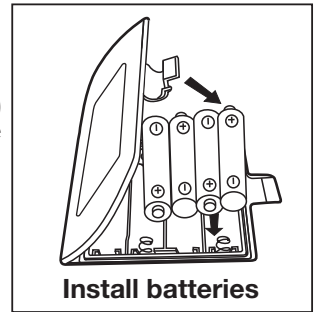

## Charging Your iPod

**Note:** Please make sure you are using the correct insert for your iPod (see Install iPod Insert) and that it is properly docked into the iH64.





1. While your iPod is docked in the unit and the unit is connected to AC power, it recharges until fully charged. iPod will not be overcharged. Note that other non-docking iPods will NOT charge. **Your iPod will NOT charge when the unit is running on battery power.**

## Listening to Your iPod

1. Dock the already playing iPod. The iH64 will automatically turn on and you will hear the music playing from your iPod. **Note:** If the volume of the song/music playing is too low on the iPod itself, iH64 may not detect iPod is in play mode. Press the **Power** Button on the main unit once to play your iPod.
2. When the iPod is docked and in standby mode, press the **Power** Button on the iH64 and then press **Play/Pause** on your iPod to play it. The blue LED Power indicator will stay on to show the power is on.
3. Press **Play/Pause** on your iPod to pause play; press again to resume it.
4. Press the **Volume Up** and **Volume Down** Button on the iH64 to adjust the system volume.
5. Press **Power** Button to turn iH64 and iPod off.

## Listening to non-docking iPod or other audio devices

If you are using an iPod without a docking port or other MP3 player or portable audio device, you can play it through the iH64 via the Line-in Jack.

1. Plug one end of an audio cable (**available at [www.ihomeaudio.com](http://www.ihomeaudio.com)**) into the headphone or line-out jack on your device and the other end of the audio cable into the iH64 Line-in Jack.
2. Press the  Button to turn the iH64 on.
3. Press the  or  Buttons to adjust the system volume. You may need to adjust your device volume, too.
4. Press the  Button to turn the iH64 off. Please remember to turn off your device, too. **Note: do not connect and play an external audio device while a docked iPod is playing or you will hear both audio signals.**

## Syncing your iPod to a Computer through iH64

The iH64 allows you to sync your docked iPod with a computer directly from the iH64 without removing the iPod.


1. Plug the USB cable into a powered USB port on your computer and the other end to the iH64's USB port located on the back of the main unit.
2. Make sure the iPod is properly docked. Press the iPod Sync Button located on the top of iH64. A green LED under the iPod Sync Button will light up to indicate computer sync mode is active. The unit will take a few seconds to start syncing with iTunes. When an iPod is syncing, **DO NOT** undock your iPod or press the iPod Sync Button. During computer sync mode, you cannot control your iPod through the iH64 remote.
3. **Once syncing is completed, you must eject your iPod through iTunes before pressing the iPod Sync Button to exit sync mode.**

**When an iPod is syncing, DO NOT undock your iPod OR press the Sync Button**

## Changing the Speaker Panels


The iH64 comes with 3 pairs of detachable speaker panels (one is already installed).

1. Pull out the speaker panel from speaker to remove the speaker panel.
2. To replace the speaker panel into the speaker, simply line up the panel and press firmly into place. Make sure the panel is placed properly so it does not vibrate.

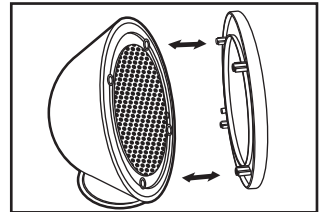


## Operating the Remote On/Off Switch

To save battery power, switch the **Remote On/Off Switch** on the bottom of the main unit to Remote Off. Doing so disables the remote control. The switch will not function while using the AC adaptor.

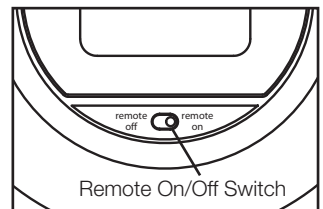

## Using the Optional Remote Control

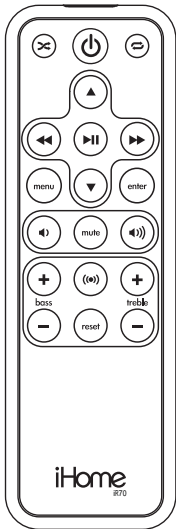 

Remote not included with all iH64 models.

To order a remote, please visit [www.ihomeaudio.com](http://www.ihomeaudio.com)



Power Button turns unit ON and OFF



Volume Buttons raise and lower volume on the unit.



Pressing FWD/REV while iPod is inserted will FWD/REV to next/previous track

Pressing and holding FWD/REV while iPod is docked will scan forward/reverse within currently playing track.



Pressing Play/Pause from power off mode will play iPod.

Pressing Play/Pause while iPod is docked and playing will pause iPod. Press again to resume play.



Pressing the up/down buttons for Bass and Treble, will raise or lower bass or treble



Pressing the SRS WOW button will toggle the SRS WOW sound enhancement effect on and off.



Pressing the reset button will reset Bass and Treble level to 0 and turn SRS WOW sound effect on.



Pressing the mute button will mute unit. While unit is muted, LED will flash as long as unit is muted. Pressing mute again or pressing volume up or down will unmute.



The up, down, fwd, rev, menu, and enter buttons are used to navigate the iPod.




The shuffle and repeat buttons will activate/deactivate the iPod's shuffle and repeat modes.

## Install/Replace the Remote Control Battery

 The remote control battery is already installed at the factory. When the remote control stops operating or its range seems reduced, it is time to replace the battery with a new one.

1. The battery compartment is located on the back end of the unit.
2. Slide the battery compartment door to release the battery door.
3. Remove the old battery and insert a new CR2032 battery, checking that the + and - sides of the battery match the drawing on the battery door.
4. Replace the battery door on the remote control.

**Note:** Make sure you dispose of batteries properly (see your local regulations).

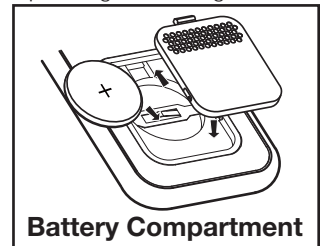

**Battery Compartment**



# **IMPORTANT SAFETY INSTRUCTIONS**

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and on the unit.

1. **Water and Moisture** – The unit should not be used near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
2. **Ventilation** – The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug or similar surface that may block ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet, which may impede the flow of air through the ventilation openings.
3. **Heat** – The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
4. **Power Sources** – The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
5. **Power-Cable Protection** – Power supply cables should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. It is always best to have a clear area from where the cable exits the unit to where it is plugged into an AC socket.
6. **Cleaning** – The unit should be cleaned only as recommended. See the Maintenance section of this manual for cleaning instructions.
7. **Objects and Liquid Entry** – Care should be taken so that objects do not fall and liquids are not spilled into any openings or vents located on the product.
8. **Attachments** – Do not use attachments not recommended by the product manufacturer.
9. **Lightning and Power Surge Protection** – Unplug the unit from the wall socket and disconnect the antenna or cable system during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning and power-line surges.
10. **Overloading** – Do not overload wall sockets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
11. **Damage Requiring Service** – The unit should be serviced by qualified service personnel when:
  - A. the power supply cable or plug has been damaged.
  - B. objects have fallen into or liquid has been spilled into the enclosure.
  - C. the unit has been exposed to rain.
  - D. the unit has been dropped or the enclosure damaged.
  - E. the unit exhibits a marked change in performance or does not operate normally.
12. **Periods of Nonuse** – If the unit is to be left unused for an extended period of time, such as a month or longer, the power cable should be unplugged from the unit to prevent damage or corrosion.
13. **Service** – The user should not attempt to service the unit beyond those methods described in the user's operating instructions. Service methods not covered in the operating instructions should be referred to qualified service personnel.

**Questions? Visit [www.ihomeaudio.com](http://www.ihomeaudio.com)  
or call 1-800-288-2792 Toll Free**

## Trouble Shooting

Symptom	Possible Problem	Solution
Unit doesn't respond (no power)	AC adaptor isn't plugged to a wall outlet or the connector is not plugged into the power supply jack on the back of the unit	Plug the AC adaptor into a wall outlet and plug the connector into the supply jack on the unit
	Wall outlet is not functioning	Plug another device into the same outlet to confirm the outlet is working
iPod does not dock properly	Using no or wrong iPod insert	Make sure the dock insert is the proper one for your iPod
	Dock or connector is obstructed	Remove your iPod from the dock and check for obstruction on the connectors in the dock and on your iPod. Then reseal it in the dock.
iPod does not respond to the unit	iPod is not docked properly	Remove your iPod from the dock and check for obstruction on the connectors in the dock and on your iPod. Then reseal it in the dock.
	Your iPod software is too old	Upgrade software on your iPod via iTunes
	iPod is locked up	Please refer to your iPod manual for details. Please make sure your iPod is working properly before docking in the unit.
iPod doesn't charge up	iPod is not docked properly	Remove your iPod from the dock and check for obstruction on the connectors in the dock and on your iPod. Then reseal it in the dock.
	Using 3rd generation iPod	iH64 doesn't support 3rd generation iPod
	iPod is locked up/frozen	Please refer to your iPod manual for details. Please make sure your iPod is working properly before dock into the unit.
	iPod battery has problem	
	Unit is operating on battery power	Connect to AC outlet with AC adaptor
Sound is distorted	Volume level is set too high	Decrease the volume. Turn off EQ/SRS WOW effect
	Sound source is distorted	If iPod original sound source is poor quality, distortion and noise are easily noticed with high-power speakers. Try a different audio source such as a music CD.
		If you are using an iPod Shuffle or external sound source like older generation iPod, try reducing the output volume on the device itself. Also, try reducing bass.
Remote Control doesn't work	Remote Battery is weak/dead	Replace with new remote battery
	Remote Control is too far way	Use the Remote Control closer to unit
	Remote switch is in OFF position	Make sure Remote switch on bottom of unit is ON

## Solucionando Problemas

Síntoma	Causa Posible	Solución
La unidad no responde (no enciende)	El adaptador de AC no ha sido conectado a la corriente eléctrica o el cable no ha sido conectado a la parte posterior de la unidad.	Conecte el adaptador AC al tomacorrientes y el cable a la ficha de entrada de la unidad.
	El tomacorrientes no funciona.	Conecte otro aparato al mismo tomacorrientes para verificar si se encuentra activo.
El iPod no encastra correctamente	El encastre no es el correcto o no ha colocado encastre alguno.	Verifique tener el encastre correspondiente antes de intentar acoplarlo al aparato.
	La muesca o el encastre están obstruidos.	Retire el iPod de la muesca y elimine la obstrucción. Vuelva a acoplar su iPod.
El iPod no se comunica con la unidad	El iPod no está colocado correctamente.	Retire el iPod de la muesca y elimine la obstrucción. Vuelva a acoplar su iPod.
	El software (programa) de su iPod es obsoleto	Actualice su programa vía iTunes.
	El iPod está trabado	Verifique el correcto funcionamiento de su iPod antes de acoplarlo a la unidad. Por favor, refiérase al Manual del Usuario de su iPod para mayor información.
El iPod no carga	El iPod no está colocado correctamente.	Retire el iPod de la muesca y elimine la obstrucción. Vuelva a acoplar su iPod.
	El iPod es de 3ra generación.	El iH64 no soporta iPods de 3ra generación.
	El iPod está trabado.	Verifique el correcto funcionamiento de su iPod antes de acoplarlo a la unidad. Por favor, refiérase al Manual del Usuario de su iPod para mayor información.
	La batería del iPod tiene algún problema.	
El sonido sale distorsionado	El nivel de volumen está alto	Baje el nivel de volumen. Apague la función EQ/SRS WOW.
	La fuente de sonido está distorsionada	Si la grabación original de sonido del iPod o MP3 era de mala calidad, escuchará ruido/distorsión al ser amplificada mediante los parlantes de alta potencia. Intente utilizar otra fuente de sonido como la música de un CD.
		Si utiliza un iPod Shuffle o una fuente de sonido externa como un iPod de generaciones anteriores, intente bajar el volumen del aparato en sí. También puede intentar reducir los bajos.
El control remoto no funciona	Las pilas están descargadas.	Coloque pilas nuevas.
	El control remoto está fuera del rango del parlante izquierdo.	Acerque el control remoto al parlante izquierdo.

# Limited 90-Day Warranty Information

---

iHome Products, a division of SDI Technologies Inc. (hereafter referred to as SDI Technologies), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of 90 days from the date of original purchase.

Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, SDI Technologies will repair or, at its discretion, replace this product without charge (except for a \$10.00 charge for handling, packing, return UPS/postage, and insurance). This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center listed below. The product must include proof of purchase, including date of purchase. The fee for service without proof of purchase is \$30.00.

Before returning this product for service, please first replace the batteries (if applicable) with fresh ones, as exhausted or defective batteries are the most common cause of problems encountered.

If service is still required:

1. Remove the batteries (if applicable) and pack the unit in a well padded, heavy corrugated box.
2. Enclose a photocopy of your sales receipt, credit card statement, or other proof of the date of purchase, if within the warranty period.
3. Enclose a check or money order payable to the order of SDI Technologies, for the sum of \$10.00 (\$30.00 without proof of purchase).
4. Send the unit prepaid and insured, to the Factory Service Center listed below.

## **Consumer Repair Department**

*SDI Technologies Inc.  
1330 Goodyear Drive  
El Paso, TX 79936-6420*

### Disclaimer of Warranty

**NOTE:** This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will SDI Technologies or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Your acknowledgement and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your SDI Technologies product.

© 2008 SDI Technologies, Inc. All rights reserved

**Questions? Visit [www.ihomeaudio.com](http://www.ihomeaudio.com)  
or call 1-800-288-2792 Toll Free**