



IBR2807DP

INSTRUCTION MANUAL



Warnings and Precautions

TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.



This symbol, located on back or bottom of the unit, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol, located on back or bottom of the unit, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Any use of the controls or an adjustment to the procedures other than those specified herein may result in hazardous radiation.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

To reduce the risk of electric shock, do not remove cover (or back). There are no user-serviceable parts inside. Please refer any servicing to qualified service personnel.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Important Safety Instructions

1. Read these instructions. All the safety and operating instruction should be read before the product is operated.

2. Keep these instructions. The safety and operating instruction should be retained for future reference.

3. Heed all warnings. All warning on the product and in the operating instructions should be adhered to.

4. Follow all instructions. All operating and use instructions should be followed.

5. Water and Moisture: Do not use this product near water - for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement, or near a swimming pool, and the like. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.

6. Cleaning: Clean only with a dry cloth. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners.

7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface.

8. Heat: Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

9. Grounding or Polarization: Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

10. Power-Cord Protection: Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

11. Accessories: Only use attachments/accessories specified by the manufacturer. Do not place this product on an unstable cart, stand tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the

product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.

12. A product and cart combination should be moved with care. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



S3125A

PORTABLE
CART
WARNING

13. Lightning: Unplug this apparatus and disconnect the antenna or cable system during lightning storms or when unused for long periods of time. This will prevent damage to the product due to lightning and power-line surges.

14. Servicing: Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

15. Power Sources: Only connect to the type of house-hold power supply as indicated in the operating instructions and rating label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instruction.

 
16. Overloading: Do not overload wall outlets or extension cords as this can result in a risk of fire or electric shock.

17. Object and Liquid Entry: Never push objects of any kind or spill liquid into this product through openings as this could result in a risk of fire or electric shock.

18. Replacement Parts and Safety Check: When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer. Ask the service technician to perform safety checks to ensure proper operation to avoid possible fire, electric shock, or other hazards.

19. Outdoor Antenna Grounding: If an outside antenna or cable system is connected to the product, be sure the antenna or cable

system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna connection to grounding electrodes, and requirements for the grounding electrode.

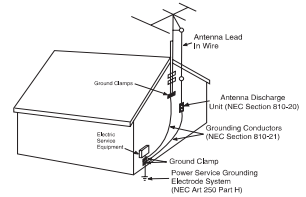

20. Wall or Ceiling Mounting: The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

 
21. Where the AC plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

22. Ventilation: Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

23. Protective Attachment Plug: The product is equipped with an attachment plug having overload protection. This is a safety feature. See Instruction Manual for replacement or resetting of protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug specified by the manufacturer that has the same overload protection as the original plug.

24. Power Lines: An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

Features

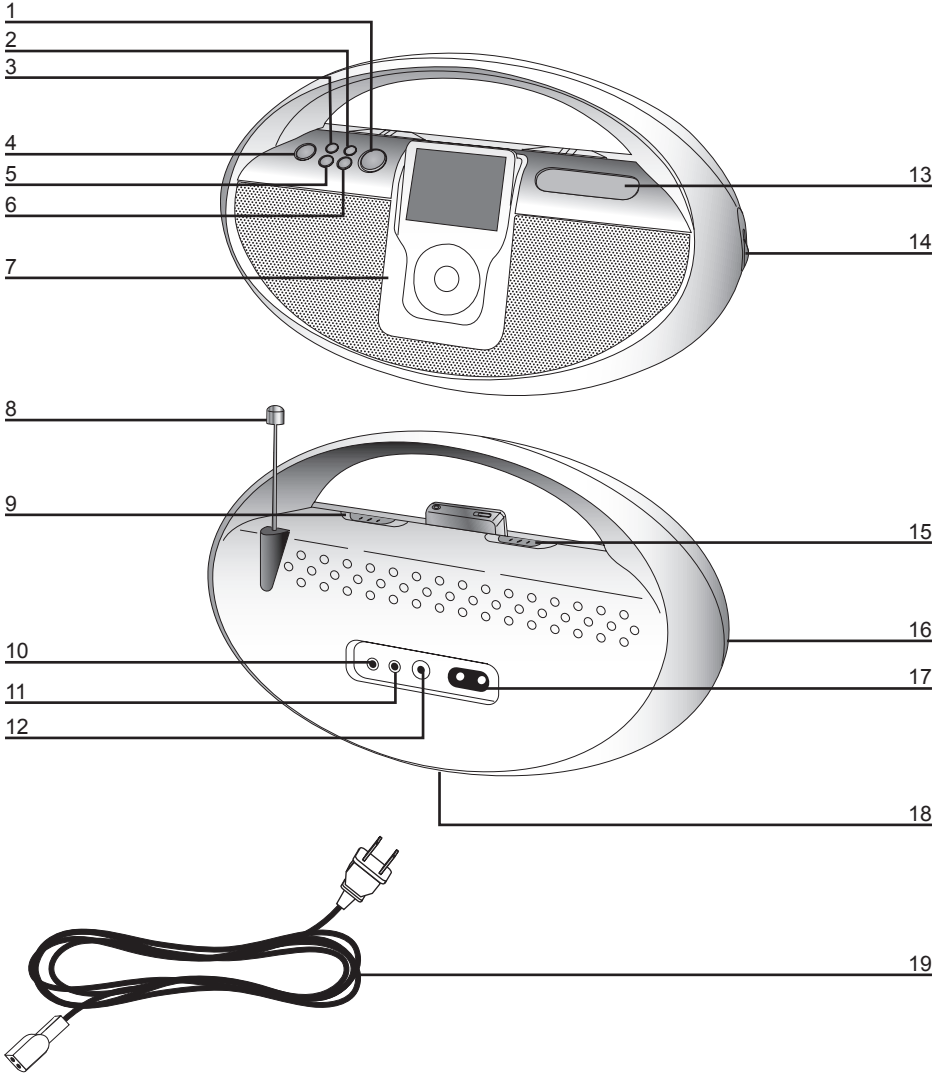

Features Defined

- 1 **PLAY/PAUSE** Press the PLAY/PAUSE button to play or pause an iPod.
 - 2 **NEXT/SEARCH** Press the NEXT/SEARCH button to skip to the next track on an iPod. Press and hold the NEXT/SEARCH button to search forward through a song.
 - 3 **HR** The HR button is used to adjust the hour when setting the clock.
 - 4 **CLOCK SET** Use the CLOCK SET button in conjunction with the MIN and HR buttons, when setting the clock.
 - 5 **MIN** The MIN button is used to adjust the minute when setting the clock.
 - 6 **PREV/SEARCH** Press the PREV/SEARCH button to skip to the previous track on an iPod. Press and hold the PREV/SEARCH button to search backwards through a song.
 - 7 **iPod Docking Station** Connect your iPod, iPod mini, iPod nano.
 - 8 **FM Antenna** The FM Antenna is extendable and adjustable. An AM Antenna is built into the Radio.
 - 9 **AM / FM** Toggle this switch to select between AM or FM Bands.
 - 10 **Aux-In** Use the Aux-In jack to connect an iPod shuffle or other audio device to the player.
 - 11 **Aux-Out** Use the Aux-Out jack to connect the player to external speakers.
 - 12 **Video Out** Plug the yellow connector of an AV Cord in the Video Output to send a video signal from a Video iPod to a source (TV) with a Video Input.
 - 13 **LCD Display** View the Time, PM Indicator, AM Indicator, iPod Indicator, and Radio Frequency through this Liquid Crystal Display.
 - 14 **TUNING** Turn the TUNING dial clockwise to increase the radio frequency and counter-clockwise to decrease the radio frequency.
 - 15 **POWER OFF IPOD/AUX RADIO** Use the Off, iPod/Aux, Radio toggle switch to adjust the player mode between Off, iPod, Aux, or Radio.
 - 16 **VOLUME** Turn the VOLUME dial clockwise to increase the volume and counter-clockwise to decrease the volume.
 - 17 **AC Connector** Plug in the detachable AC Cord here.
 - 18 **Battery Compartment (8 - C Batteries)** The Battery Compartment allows the player to run off of DC Power (batteries not included).
 - 19 **AC Cord (120V / 60 Hz)** The detachable AC Cord provides power to the player.
-

iPod Inserts

Bracket #	iPod Model/Capacity
1	iPod nano (first generation)
2	iPod nano (second generation)
3	iPod mini 4GB & 6GB
4	iPod with video 30GB (fifth generation)
5	iPod (fourth generation), iPod photo 20GB & 30GB, and iPod : U2 Special Edition 20GB
6	iPod with video 60GB & 80GB (fifth generation), and iPod 40GB (fourth generation)
Without Bracket	iPod photo, and iPod with color display 40GB & 60GB.

Operations

Setting the Clock

- a. Press and hold the CLOCK SET button.
- b. While holding the CLOCK SET button, press the HR button to adjust the hour and the MIN button to adjust the minute.
- c. The PM indicator on the LCD Display will tell you if the time is set to PM, and the AM indicator on the LCD Display will tell you if the time is set to AM.

Listening to the Radio

- a. Toggle the POWER OFF / iPod (AUX) / RADIO switch to RADIO.
- b. Choose between AM or FM radio by toggling the AM/FM switch to AM or FM.
- c. Use the TUNING dial to adjust the AM or FM radio frequency.
 - *Extend the FM Antenna for better FM reception. To improve the AM reception, adjust the position of the entire unit, as an AM antenna is built into the unit.*

 
Viewing Video or Photos from your iPod on an External Device

- a. Using a video cable, connect an external device such as a tv to the VIDEO OUT port on the player.
- b. Insert your iPod with video or photo capabilities into the iPod Docking Station with the appropriate insert.
- c. You will now be able to control your iPod from the player's control panel. Using the PLAY/PAUSE, NEXT/SEARCH, and PREV/SEARCH buttons you can move from one video or photograph to the next, play, and pause.

Connecting Other Digital Audio Devices


- a. Use an Aux-In cord to connect an iPod shuffle or other audio device to the Aux-In port.
- b. Switch the POWER OFF / iPod-AUX / RADIO Toggle Switch to iPod/AUX.
- c. The iPod shuffle or other audio device will now play through the speakers of the player.

Video Out Connection Guide

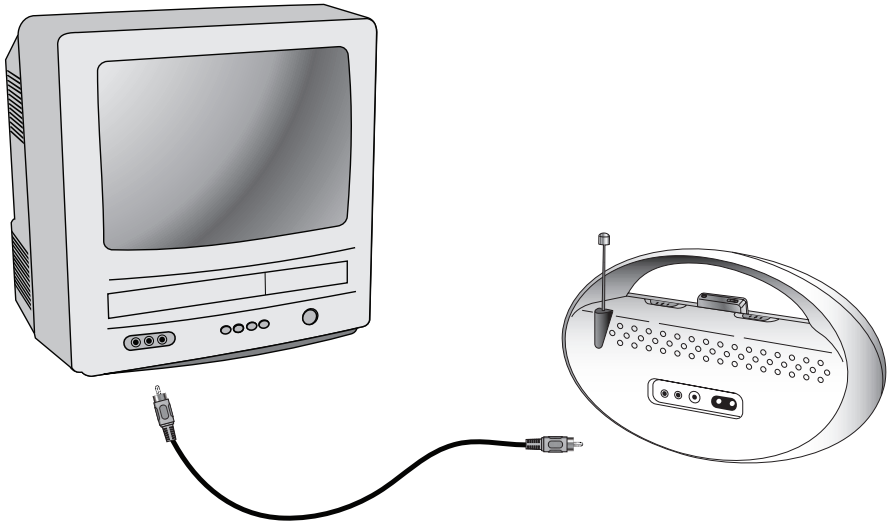

To Television

 Connect to the video input connection.



From Unit

Connect to the video output connection.

• *Be sure to select the appropriate Video Input on the Television set.*



Service Information

Address 2116 Carr Street, St. Louis MO, 63106

Phone 1-314-621-2881

Fax 1-314-588-1805

Email customerservice@ilive.net

Website www.ilive.net

To download this Instruction Manual in English, Spanish, or French visit the Support section at www.ilive.net.

Para descargar este manual de instrucción en inglés, español, o francés visite la sección de la ayuda en www.ilive.net.

Pour télécharger ce manuel d'instruction en anglais, espagnol, ou le Français visitez la section de soutien à www.ilive.net.