Quick Start Guide



What's in the Box?


You should find these items upon opening the box.









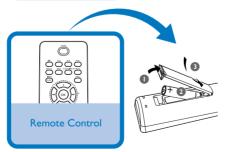






Connection

- 1 Connect the speaker wires to the **SPEAKERS** terminals.
- 2 Connect the power cord of the system to the AC power outlet.

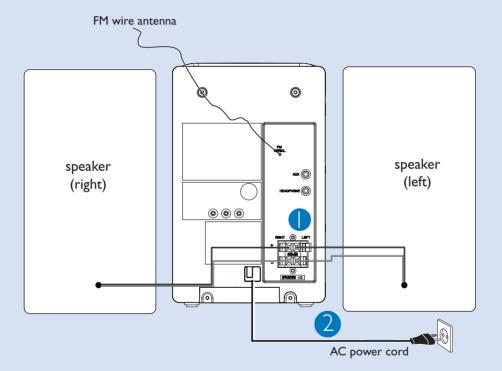


Tip:

It is unnecessary to connect the FM pigtail antenna since it is fixed to the main unit.

Step B Setup

Setting the clock


- 1 In standby mode, press and hold **CLOCK/DISPLAY** on the remote control set for 2 seconds.
- **2** Press **PROG** to select 12-hour or 24-hour display.
- **3** Press **CLOCK/DISPLAY** to confirm.
 - → The clock digits for the hours flash.
- 4 Press **TUNING** I ►► I (I ►► I on the remote control) to set the hours.
- 5 Press CLOCK/DISPLAY again.
 - → The clock digits for the minutes flash.
- 6 Press **TUNING** I ►► I (I ►► I on the remote control) to set the minutes.
- 7 Press **CLOCK/DISPLAY** to confirm the time.

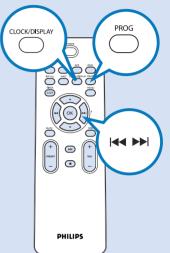

Step C Enjoy

Playing a disc

- 1 Select CD source.
- 2 Lift the CD door on the top of the system to open the CD compartment.
- 3 Insert a disc with the printed side facing up and press down on **PULL TO OPEN** to close the CD door.
- 4 Press ► II to start playback.
- 5 Press to stop playback.

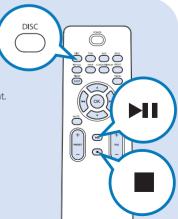



Programming and tuning to radio stations

- 1 Select TUNER source.
- 2 Press PROG on the remote control for more than two seconds to program all available stations in order of waveband.
- 3 Press PRESET +/- until the desired preset station is displayed

Playing iPod using the dock

- 1 Press PUSHTO OPEN to open the dock.
- 2 Select the dock adaptor of the correct type and size, and snap it into the dock.
- **3** Correctly place your iPod in the dock.
- 4 Press SOURCE repeatedly or DOCK on the set (iPOD on the remote control) to select iPod source.
 - → The connected player will play automatically.



Tip:

Detailed playback features and additional functions are described in the accompanied user manual.

Notes for the remote control:

- First, select the source you wish to control by pressing one of the source select keys on the remote control (CD or AUX, for example).
- Then select the desired function (►II,
 I◄, ►►I for example).



© Royal Philips Electronics N.V. 2008 All rights reserved.

