

Microcassette™ - Corder

Operating Instructions
Manual de instrucciones
Manual de instrucciones (no verso)
Istruzioni per l'uso (sul retro)

M-830V/740V

Sony Corporation ©2001 Printed in China





Sony online <http://www.world.sony.com/>

About This Manual

The instructions in this manual are for the M-830V and M-740V. Before you start reading, check your model number. The M-830V is the model used for illustration purposes. Any differences in operation are clearly indicated in the text, for example, "M-830V only".

Acerca de este manual

Las instrucciones de este manual son para los modelos M-830V y M-740V. Antes de comenzar su lectura, compruebe el número de su modelo. El M-830V es el modelo empleado en las ilustraciones. Las diferencias de funcionamiento se indican claramente en el texto, por ejemplo, "solo M-830V".

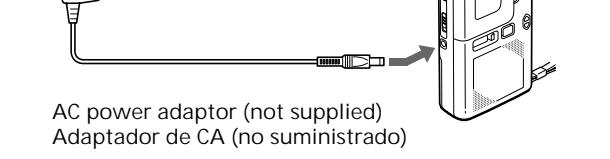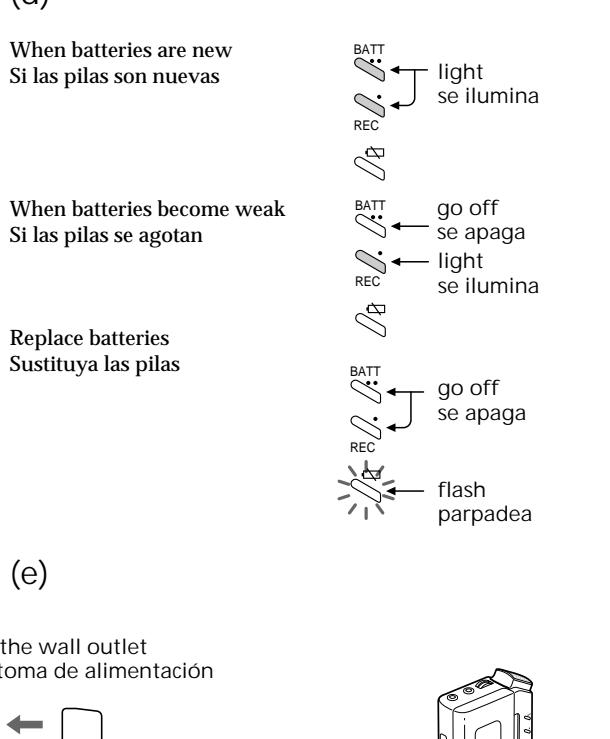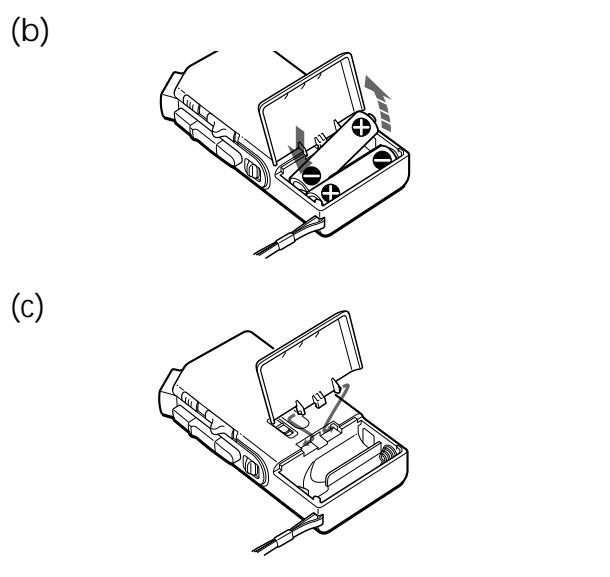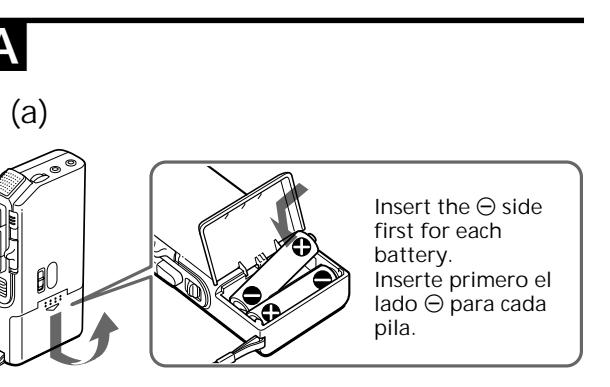


When batteries are new
Si las pilas son nuevas

When batteries become weak
Si las pilas se agotan

Replace batteries
Sustituya las pilas

to the wall outlet
a la toma de alimentación

AC power adaptor (not supplied)
Adaptador de CA (no suministrado)

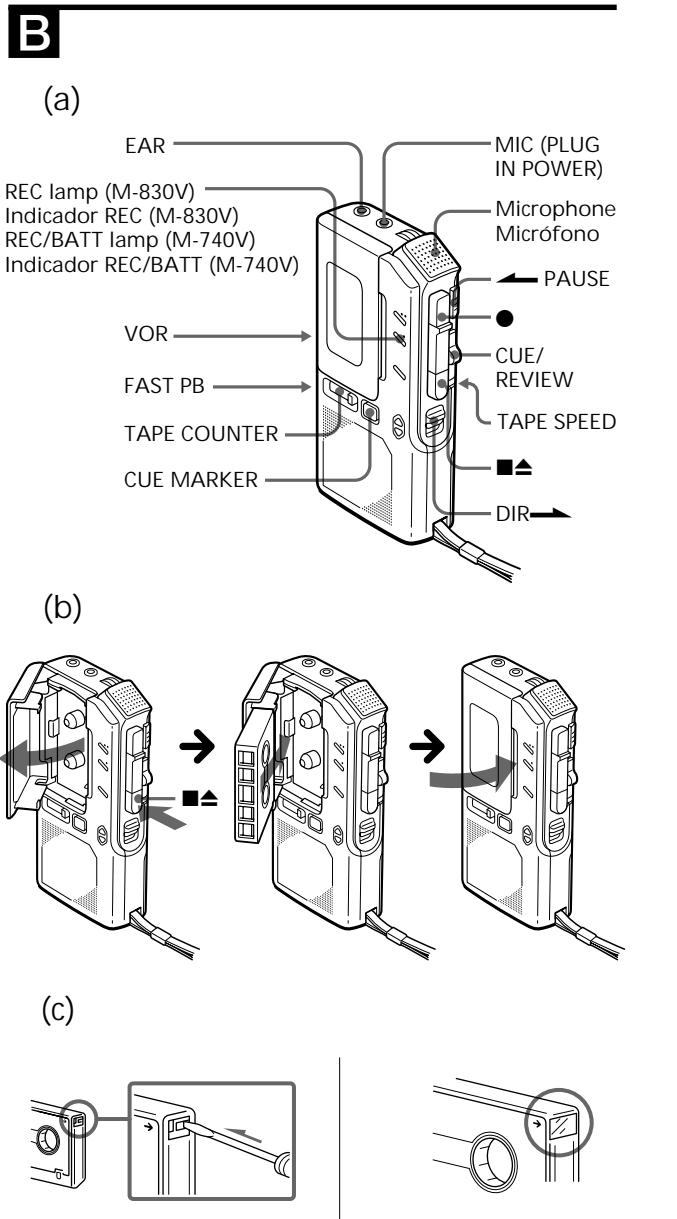

Preparing Power Sources

Choose one of the following power sources.

Dry Batteries (see Fig. A-(a))

Make sure that nothing is connected to the DC IN 3V jack.
1 Open the battery compartment lid.
2 Insert two R6 (size AA) batteries with correct polarity and close the lid.

To take out the batteries (see Fig. A-(b))

If the battery compartment lid is accidentally detached (see Fig. A-(c))
Attach it as illustrated.

When to replace the batteries
For M-740V
Replace the batteries with new ones when the REC/BATT lamp dims.

For M-830V
Replace the batteries with new ones when the BATT lamps go off and the REC lamp flashes.
The BATT lamps change as illustrated (see Fig. A-(d)).

Notes

- The unit will play back normally for a while, even after the REC lamp flashes. However, replace the batteries as soon as you can. If you do not, the playback cannot be made with normal sound noise may be recorded and the recorded sound will not be loud enough (M-830V only).
- In the following cases you do not need to replace the batteries:
 - if the REC/BATT lamp or BATT lamps flash with the playback sound when you turn up the volume.
 - if the REC lamp lights momentarily when the tape starts running or at the end of the tape (M-830V only).
 - if the REC lamp flashes during FF (CUE) orREW (REVIEW) (M-830V only).

Battery life (Approx. hours) (EIAJ*)

Batteries	Recording
Sony manganese RBP (SR)	7
Sony alkaline LR6 (SG)	24

* Measured valued by the standard of EIAJ (Electronic Industries Association of Japan) (Using a Sony Microcassette)

Note

The battery life may shorten depending on the operation of the unit.

House current (see Fig. A-(e))

Connect the AC power adaptor to DC IN 3V and to a wall outlet. Use the AC-E30HG AC power adaptor (not supplied). Do not use any other AC power adaptor.

Polarity of the plug

Note

Specifications for AC-E30HG vary for each area. Check your local voltage and the shape of plug before purchasing.

Recording (see Fig. B-(a))

Make sure that nothing is connected to MIC.

1 Press the reset button of the TAPE COUNTER.

- Note*
The number in the tape counter will increase when playing back the forward side, and decrease when playing back the reverse side.
- Press **■▲** and insert a standard microcassette with the side to start recording facing the lid (see Fig. B-(b)).
 - Select the desired tape speed.
2.4 cm for optimum sound (recommended for normal use); A 30-minute recording can be made using both sides of the MC-30 microcassette.
1.2 cm for longer recording time; A 60-minute recording can be made using both sides of the MC-30 microcassette.
 - Choose recording sides.
To record on both sides
Slide **DIR** so that the FWD indicator turns green.
Recording will start from the side facing the cassette holder window (forward side) and switches automatically to the reverse side at the end of the side (Auto Reverse).

Notes

- Make sure the tabs on both sides are not removed.
- Even if only the tab on the reverse side is removed, recording cannot be made.

To record on a single side
Slide **DIR** so that the REV indicator turns green.

Recording will start from the side facing the unit/reverse side.

Note

Make sure the tab on the reverse side is not removed.

5 Set VOR to H, L or OFF.

If you set VOR to H or L, the unit automatically starts recording the sound and pauses when there is no sound (you can save tapes and batteries).

H: To record at meeting or in a quiet and/or spacious place.
L: To record for dictation or in a noisy place.

When the sound is not loud enough, set it to OFF, or the unit may not start recording.

6 Press **●**.

● is pressed simultaneously and recording starts. While the tape runs, the REC lamp (M-830V) or REC/BATT lamp (M-740V) lights and flashes depending on the strength of the sound.

Recording level is fixed.

At the end of the reverse side, recording stops and the unit turns off automatically.

To
Stop recording
Press or slide

Start recording during playback
● during playback (the unit becomes in the recording mode)

Review the portion just recorded
Push up CUE/REVIEW toward REVIEW during the recording. Release the button at the point to start playback.

Pause recording
Slide **PAUSE** in the direction of the arrow.

Take out a cassette
■▲

Note
Select the 2.4 cm tape speed for recording. If you play back the recorded tape with another unit, otherwise, the sound quality may be changed.

Notes on recording sides

- When recording on both sides, recording will not be made for a few seconds while the tape is switching sides.
- When you open the cassette holder, the direction of the tape is reset to the forward side.
- The **DIR** switch cannot be used during recording.

Notes on VOR (Voice Operated Recording)

- The VOR system operates under the environmental conditions. If you cannot get the desired results, set VOR to OFF.
- When you use the system in a noisy place, the unit will stay in the recording mode. If the sound is too soft, on the contrary, the unit will not start recording. Set VOR to H (high) or L (low) depending on the conditions.

To monitor the sound

- Connect an earphone to EAR jack. The monitor volume cannot be adjusted by VOL.

To prevent a cassette from being accidentally recorded over (see Fig. B-(c))

Replace the batteries with new ones when the REC/BATT lamp dims.

Recording cue markers (M-830V only)

- While recording, you can record a special signal on the tape to mark a specific position.

At the desired position, press CUE MARKER to record a signal. The REC lamp goes off and a signal will be recorded on the tape. If you want to record a signal longer than that, press CUE MARKER as long as you want.

During cue and review, you will hear the beep sound at the signal position. During playback with the headphones plugged in, you will hear the signal with low frequency sound at the signal position.

Notes

- We recommend recording cue markers when there is a break in the sound.
- The beep sound may differ depending on the marked position on the tape because the winding speed varies from the beginning to the end of the tape.

Playing a Tape (see Fig. C)

- Insert a cassette with the side to start playing facing the lid.
- Select the tape speed to the same speed as that used for recording.
- Press **▶**.
- Adjust the volume.

At the end of the reverse side, playback stops and the unit turns off automatically.

If you plug in headphones (not supplied) to the EAR jack, you will get monaural output from both left and right channels.

To
Press or slide
Stop playback/stop forward or rewind*

Pause playback
Slide **PAUSE** in the direction of the arrow.

Play back only the reverse side
DIR so that the REV indicator turns green and press **▶**.

Fast forward
Slide CUE/REVIEW toward CUE during stop.

Rewind
Slide CUE/REVIEW toward REVIEW during stop.

Search forward during playback (CUE)
Keep CUE/REVIEW pushed down during playback and release it at the point you want.

Search backward during playback (REVIEW)
Keep CUE/REVIEW pushed up during playback and release it at the point you want.

Switch playback
DIR—

* If you leave the unit after the tape has been wound or rewound, the batteries will be consumed rapidly. Be sure to depress **■▲**.

Recording

If the tape is completely wound or rewound while searching forward/backward during playback (CUE/REVIEW), the CUE/REVIEW switch may not return to the center position when you release the switch. In this case, push back the switch to the center to start playback.

To increase the playback speed (M-830V only)

Slide the FAST PB switch in the direction of the arrow. The playback speed will be increased.

To return to the original speed, slide the FAST PB switch to the original position.

At the end of the tape

In the recording or playback mode, the tape stops at the end of the reverse side and the locked button will be released automatically (Automatic shut-off mechanism).

After fast forward or rewind, be sure to set CUE/REVIEW back to the center.

Notes

- Make sure the tabs on both sides are not removed.
- Even if only the tab on the reverse side is removed, recording cannot be made.

To

Slide **DIR** so that the REV indicator turns green.

Recording will start from the side facing the unit/reverse side.

Note

Make sure the tab on the reverse side is not removed.

5

Set VOR to H, L or OFF.

If you set VOR to H or L, the unit automatically starts recording the sound and pauses when there is no sound (you can save tapes and batteries).

H: To record at meeting or in a quiet and/or spacious place.

L: To record for dictation or in a noisy place.

When the sound is not loud enough, set it to OFF, or the unit may not start recording.

6

● is pressed simultaneously and recording starts.

While the tape runs, the REC lamp (M-830V) or REC/BATT lamp (M-740V) lights and flashes depending on the strength of the sound.

Recording level is fixed.

At the end of the reverse side, recording stops and the unit turns off automatically.

To

Press or slide
Stop recording

Start recording during playback
● during playback (the unit becomes in the recording mode)

Review the portion just recorded
Push up CUE/REVIEW toward REVIEW during the recording. Release the button at the point to start playback.

Pause recording
Slide **PAUSE** in the direction of the arrow.

Take out a cassette
■▲

Note

Select the 2.4 cm tape speed for recording. If you play back the recorded tape with another unit, otherwise, the sound quality may be changed.

Precautions

On power

- Operate the unit only on 3 V DC.
- For AC operation, use the AC power adaptor recommended for the unit. Do not use any other type. For battery operation, use two R6 (size AA) batteries.

Notes on recording sides

- The VOR system operates under the environmental conditions. If you cannot get the desired results, set VOR to OFF.
- When you use the system in a noisy place, the unit will stay in the recording mode. If the sound is too soft, on the contrary, the unit will not start recording. Set VOR to H (high) or L (low) depending on the conditions.

To monitor the sound


Sobre este manual

As instruções deste manual dizem respeito ao M-830V e ao M-740V. Antes de iniciar a leitura, verifique o número do modelo. Nas ilustrações foi utilizado o modelo M-830V. Todas as diferenças de funcionamento estão claramente indicadas no texto, por exemplo, "Só no modelo M-830V".

Informações su questo manuale


Le istruzioni contenute in questo manuale si riferiscono ai modelli M-830V e M-740V. Prima di procedere alla lettura, controllare il numero del modello acquistato. Nelle illustrazioni è stato utilizzato il modello M-830V. Qualsiasi differenza nel funzionamento dei modelli è stata chiaramente indicata, ad esempio "solo modello M-830V".

A

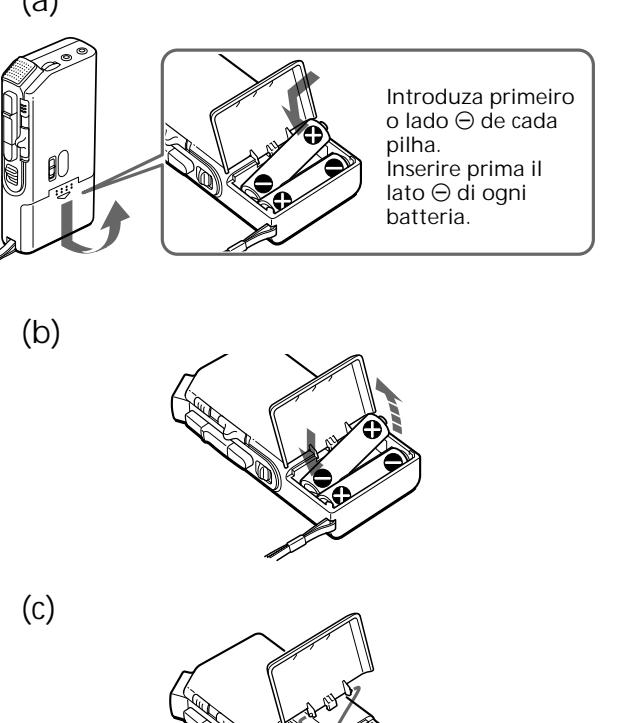


Introduza primeiro o lado \ominus de cada pilha. Inserir primeiramente o lado \ominus de cada pilha.


(b)

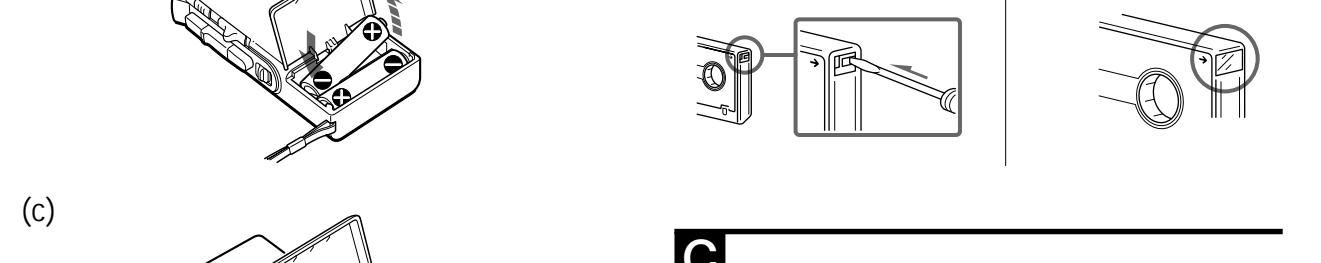

(c)

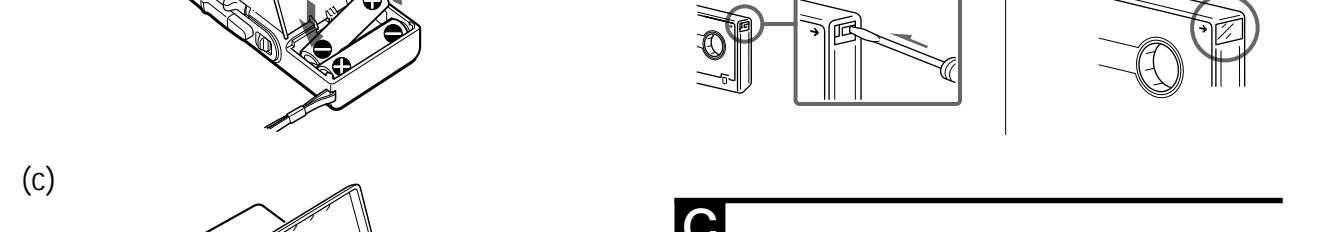

(d)

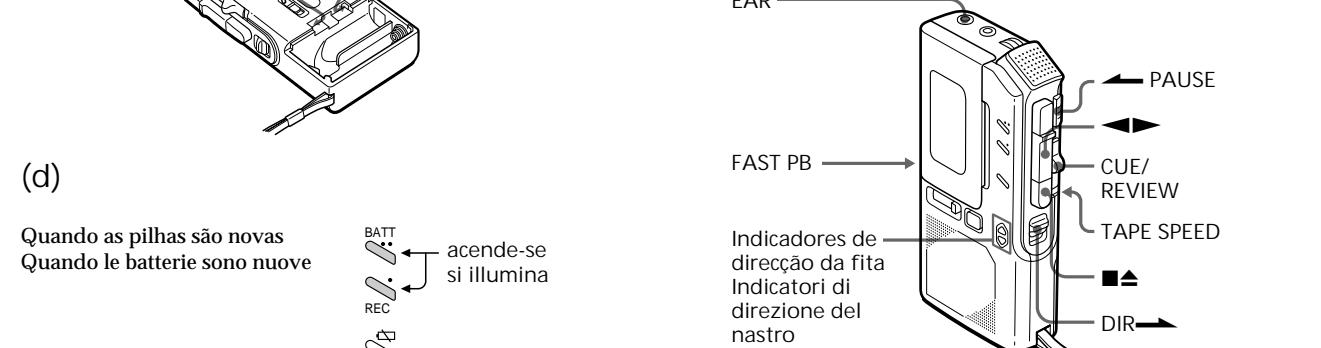


(e)



(f)



 (g)




(h)



(i)



 (j)



(k)



 
(l)



(m)



(n)



(o)



(p)



(q)



(r)



(s)

(t)

(u)

(v)

(w)

(x)

(y)

(z)

(aa)

(ab)

(ac)

(ad)

(ae)

(af)

(ag)

(ah)

(ai)

(aj)

(ak)

(al)

(am)

(an)

(ao)

(ap)

(aq)

(ar)

(as)

(at)

(au)

(av)

(aw)

(ax)

(ay)

(az)

(ba)

(bb)

(bc)

(bd)

(be)

(bf)

(bg)

(bh)

(bi)

(bj)

(bk)

(bl)

(bm)

(bn)

(bo)

(bp)

(bq)

(br)

(bs)

(bt)

(bu)