



# myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for SONY NWZ-E463. You'll find the answers to all your questions on the SONY NWZ-E463 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual SONY NWZ-E463**  
**User guide SONY NWZ-E463**  
**Operating instructions SONY NWZ-E463**  
**Instructions for use SONY NWZ-E463**  
**Instruction manual SONY NWZ-E463**

SONY

WALKMAN

**Operation Guide for enjoying  
"Music Unlimited" function**  
NWZ-E463 / E464 / E465 / E463K / E463HK

©2011 Sony Corporation 4-287-668-11 (1)



[Your user manual  
SONY NWZ-E463](#)

#### **Manual abstract:**

Using "Music Unlimited" Service About [Like]/[Dislike] While listening to "Channels," you can mark a song with [Like] or [Dislike] according to your impression. This will be reflected in both "Channels" and "Favorites Channel." Note This function does not work on "Favorites Channel." Tip Like/Dislike info will be reflected in and personalize "Channels" next time sync with the Music Unlimited Transfer application. About "Favorites Channel" Songs on "Favorites Channel" are organized by songs that are marked with [Like] (including songs marked by another device). Note Songs on "Favorites Channel" cannot be marked with [Like]/[Dislike]. Using "Music Unlimited" Service Listening to songs in "My Library" You can listen to specific songs by selecting from [All Songs], [Album], [Artist], or [Playlists]. You can also search for a desired song with the search function. All Songs Album Artist Playlists BACK/HOME button 5-way button Press and hold the BACK/HOME button until the Home menu appears. Press the /// button to select press the button to confirm.

The [Music Unlimited] screen appears. button to confirm. The [My Library] screen appears. [Music Unlimited], then Press the /// button to select [My Library], then press the Select the desired search method, select the desired items until a song list appears, then select a desired song. Displayed items and playback operations are the same as details on operations refer to "WALKMAN User Guide.

" [Music]. For Note For playback of songs in "My Library," you can use various functions during song playback in [Music], except for the following: Adding a song to a bookmark list Displaying lyrics Karaoke function Language study function DPC (Speed Control) function Setting a song for the alarm sound If appears and the channel cannot be played back, the channel may contain transfer errors. Connect your "WALKMAN" to your computer and use Music Sync to sync again. Using "Music Unlimited" Service About the "Music Unlimited" licence You can enjoy "Music Unlimited" by purchasing the "Music Unlimited" licence (Basic or Premium) on your computer. The "Music Unlimited" licence has an expiry date depending on your contract.

This chapter will explain about the licence when enjoying "Music Unlimited" on your "WALKMAN." Expiry date of your "WALKMAN" The expiry date for using the "Music Unlimited" function on your "WALKMAN" depends on your plan (Basic or Premium). (This is just the expiry date for using the "Music Unlimited" function on your "WALKMAN," which is different from the "Music Unlimited" licence on your computer.) Before expiry, you will need to connect your "WALKMAN" to your computer and access the server to update the licence. (As the expiry date nears, an alert message will be displayed, alerting you to update the licence.) If the licence is expired, you cannot use the "Music Unlimited" function. In this case, connect your "WALKMAN" to your computer and access the server to update the licence. Note If the licence expires while listening to a song on "Music Unlimited," an alert message appears and your "WALKMAN" returns to the Home menu automatically when the current song playback is finished, then the "Music Unlimited" function will not be available.

Expiration date of the "Music Unlimited" licence on your computer When the "Music Unlimited" licence on your computer expires all contents of "Music Unlimited" on your "WALKMAN" are deleted, and the "Music Unlimited" function cannot be used when connecting your "WALKMAN" to your computer. (As the expiry date nears, an alert message will be displayed.

) When you reset your "WALKMAN" The licence on your "WALKMAN" will not be deleted if you perform [Reset All Settings]. The licence on your "WALKMAN" will be deleted if you perform [Format]. In this case, connect your "WALKMAN" to your computer and transfer the "Music Unlimited" contents to your "WALKMAN..



[Your user manual](#)  
[SONY NWZ-E463](#)