

# COBY

MP-C858

## USER'S MANUAL

### DIGITAL AUDIO PLAYER W/VOICE RECORDER



Coby Electronics Corp.  
56-65 Rust Street  
Maspeth, NY 11378

[www.cobyusa.com](http://www.cobyusa.com)  
[www.ecoby.com](http://www.ecoby.com)

Please read manual before operation

*Technical Support Hours*  
Monday-Friday 8:30 AM - 8:30 PM EST, 1-800-681-2629 or 718-416-3197  
Saturday-Sunday 9:00 AM - 5:30 PM EST, 1-800-727-3592  
Or Send E-Mail to: [techsupport@cobyusa.com](mailto:techsupport@cobyusa.com)

**Getting Started**

Features .....	3
Package Contents .....	4
Safety Instructions .....	5
Battery Installation .....	6
Location of Controls .....	7
LCD Screen Display .....	8

**Connecting to Computer**

USB Driver Installation .....	9
Connecting/Disconnecting Your Player .....	9
Transferring Files .....	10

**Basic Operation**

Power On/Off .....	11
Playing Music .....	12
Menu Overview .....	13
Voice Recording .....	15
FM Tuner Operation .....	16
Deleting Files .....	18

**Other Functions**

Settings .....	19
A-B Repeat Mode .....	22
Firmware Upgrade .....	23


**Customer Support**

Troubleshooting .....	25
Specifications .....	27


- 128 MB Integrated Flash Memory
- MP3 and WMA Playback
- Integrated FM Tuner
- Integrated Microphone for Voice Recording
- Portable Storage Device (Music, Data, and Pictures)
- Integrated USB Plug (no cable required)
- Plug and Play (no driver installation required for Windows 2000/ME/XP or Mac OS X 10.2.6 or greater)
- 7-color LCD Backlight
- Digital Preset Equalizer
- Song Title and Synchronized Lyric Support
- Multi-Language Support
- Upgradeable Firmware




Mp3 player

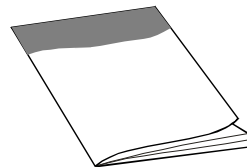

User's Manual

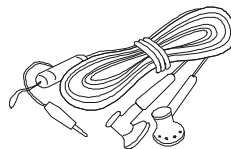

Earphones w/neck strap

 

USB Extension Cable



Installation CD  
(for Windows 98 SE)

1. Read these instructions carefully. Keep these instructions for future reference.
2. Heed all warnings and follow all instructions.
3. Do not expose to water or moisture.
4. Clean only with a dry cloth.
5. Do not install near any apparatus that produces heat such as stoves, radiators, amplifiers, etc.
6. Remove the battery when the device will be unused for long periods of time.
7. Do not use headphones/earphones while cycling, driving, or operating a motorized vehicle.
8. Do not drop or otherwise subject the device to impact. Physical impact may result in loss of data. Users are responsible for creating backups of their data. Coby Electronics cannot be held liable or be otherwise responsible for loss of data.
9. Do not disconnect the USB cable or turn off the device while transferring files to or from your device. Data loss may occur as a result.
10. Do not open or attempt to repair this device. Refer all repairs to authorized service personnel.


## Protect your ears:

Hearing experts advise against the constant use of personal stereo equipment played at high volumes. Constant high-volume use can lead to hearing loss. If you experience ringing in your ears or hearing loss, discontinue use and seek medical advice.


For recycling or disposal information about this product, please contact your local authorities or the Electronics Industries Alliance: [www.eiae.org](http://www.eiae.org)

**WARNING:** Handling the cord on the earphones will expose you to lead, a chemical known to the State of California to cause [cancer, and] birth defects or other reproductive harm.  
*Wash hands after handling.*

1. Remove the USB cap.

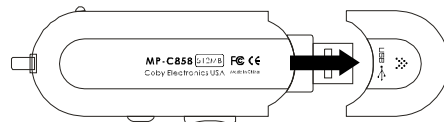





2. Open the battery cover.

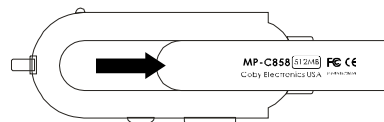

3. Insert the AAA battery.

Make sure to match the + and - ends of the battery with the markings inside the battery compartment.

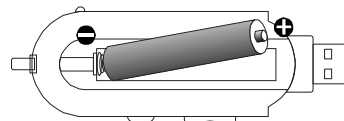

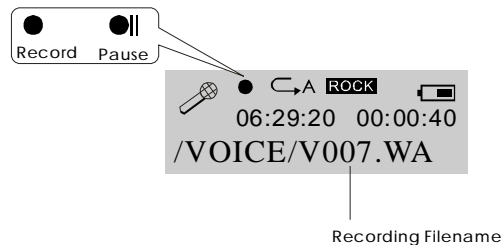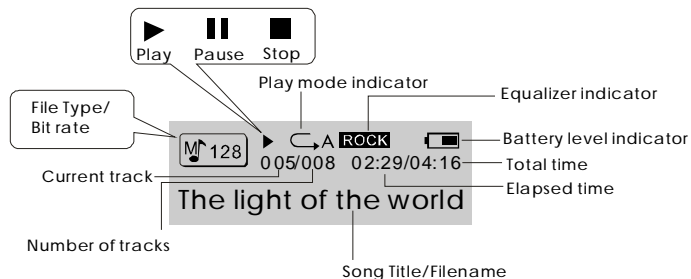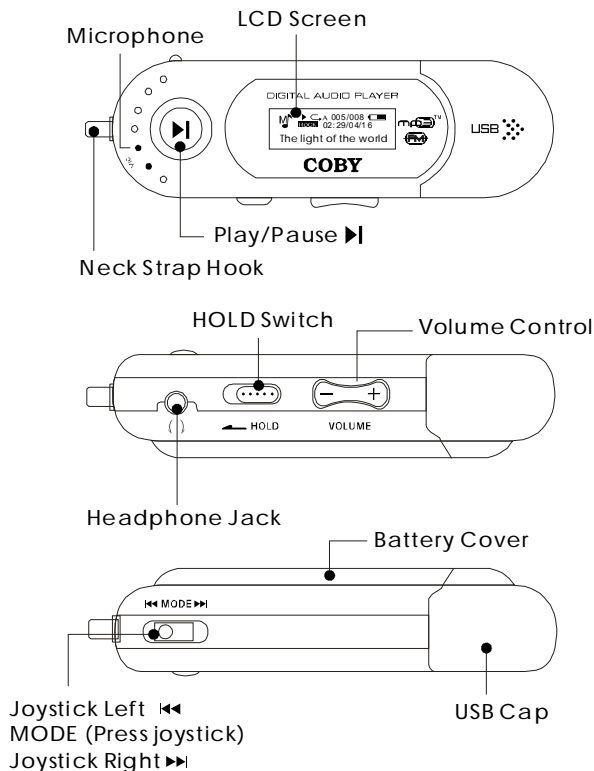

## Connect to a Computer

### USB Driver Installation (Windows 98 SE Only)

*If you are using Windows 98 SE, you must install the USB driver and update utility.*

1. Place the Installation CD in your computer's CD-ROM drive.
2. In My Computer, double-click the disc drive (D:) icon (where D: is your CD-ROM drive).
3. Find and double-click "Win98Driver.exe" to start the installation process. A setup dialog window will appear on the screen.
4. Follow the on-screen instructions. When setup is complete, restart your computer.


USB driver installation is not necessary if you are using Windows Me/2K/XP or Mac OS X version 10.2.6 or above. Simply connect your player to the computer; the operating system will then take a moment to set up and a removable disk icon will appear in "My Computer". (For Mac OS X users, a removable disk icon will appear on the "Desktop".)

### Connecting/Disconnecting Your Player

*To connect your player to a computer:*

1. Remove the USB cap to expose the integrated USB plug.
2. Plug your player directly into the computer's USB port or use the USB extension cable (included).

*To safely disconnect your player from a computer:*

1. Double-click the green arrow in the taskbar located at the bottom-right of the computer's screen. A "Safely Remove Hardware" window will appear. 
2. In the list of hardware devices, double-click on "USB Mass Storage Device". A "Stop a Hardware Device" window will appear. Click the OK button.

You may now safely disconnect your player from the computer.

## Transferring Files to Your Player

### Transferring Files

*To transfer files between your player and a computer:*

1. Connect your player to the computer.
2. Open Windows Explorer on the computer.
3. Select the files you want to transfer from your computer and drag-and-drop them to the removable disk icon (ie, your player). You can also transfer files from your player to a computer. *Do not disconnect your player while it is transferring files.* Doing so may corrupt or damage the firmware and/or files on your player. If your player is accidentally disconnected while it is transferring files and does not work properly, remove and replace the battery, and then turn your player on again.

### Deleting Files through a Computer

*With your player connected to a computer:*

1. Open Windows Explorer on the computer.
2. Double-click on the removable disk icon (ie, your player).
3. Use the mouse to select the files you would like to delete. Press delete on your keyboard and click Yes to confirm.

You can also delete files directly from your player. See "DEL" in the [Menu Options](#) section of this manual for more information.

## Hold Function

The Hold switch locks/unlocks the joystick and buttons on your player to prevent them from being pressed accidentally.

**Hold Off:** Slide the HOLD switch in the opposite direction of the arrow marking on your player to unlock the player.

**Hold On:** Slide the HOLD switch in the direction of the arrow to lock your player. The screen will display the "lock" symbol shown below.



## Turning Power On and Off:

**Power On:** Press and hold **▶** to turn your player on.

The screen will display the COBY logo first, and then the remaining storage capacity of your player.

**COBY**

FREE MEMORY  
102.7 MB

**Power Off:** Press and hold **▶**. The screen will display "Continue Holding on To Power Off". Do not release the button until the screen displays "GOOD BYE".

Continue Holding on To  
Power Off



 
GOOD BYE

## Play a Music Track



1. Enter the Music mode (see "Music" in the [Menu Options](#) section of this manual for more information).
2. Press **▶** to start playback.

## Pause/Stop Playback

1. To pause playback, press **▶** once. Press **▶** again to resume playback.



  2. To stop playback, press and hold **▶** for 2 seconds (ie, until the screen displays "Continue Holding on To Power Off"). Press **▶** again to resume playback.



## Forward/Reverse

1. Press **▶▶** to select the next track.
2. Press **◀◀** to select the previous track.

## Fast Forward/Reverse


1. Press and hold **▶▶** to fast forward through a track during playback.
2. Press and hold **◀◀** to reverse through a track during playback.

## Volume Control

1. Press Volume **-** to decrease the volume.
2. Press Volume **+** to increase the volume.

Press and hold MODE to access the Main menu.

- Press ◀ and ▶ to change the selection left and right within the menu.
- Press MODE to confirm a selection.
- Press Volume + to cancel or return to a previous menu.

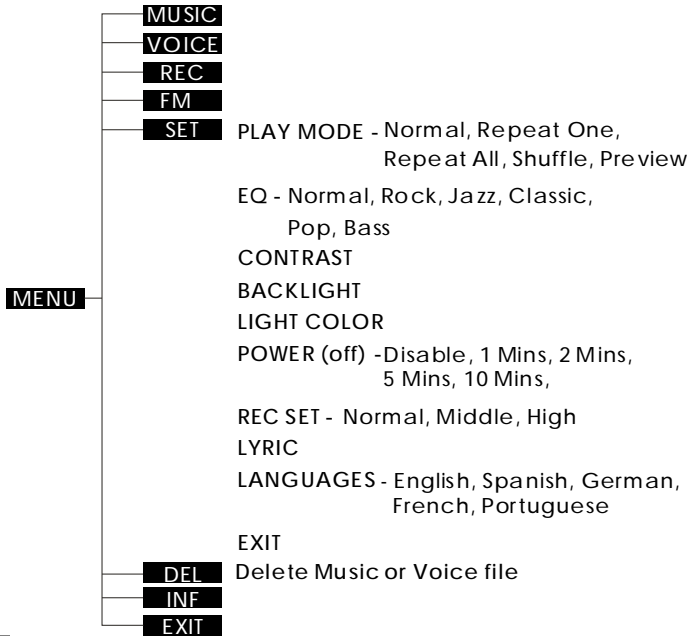

In the Main menu, the following options are available: MUSIC, VOICE, REC, FM, SET, DEL, INF, and EXIT.

Music

Select MUSIC mode to play your digital audio tracks (ie, Mp3 and WMA files). See the Playing Music section of this manual for more information.



Voice

Select VOICE mode to play your voice recording files. Playback operation is the same as in MUSIC mode. See the REC section of this manual for information on how to record from the integrated microphone.






## REC



 Select REC mode to create voice recordings with the integrated microphone.

### Start Recording

- Select REC from the Main menu. The player will start recording immediately. The screen will display a Recording symbol ● to indicate that recording is in progress.



### Pause/Stop Recording

- Press ► to pause recording. The screen will display a Recording Paused symbol ●|| to indicate that recording has been paused. Press ► again to resume recording.
- Press the MODE key to stop recording. The recorded file will be named "VXXX.WAV" where XXX corresponds to the numerical sequence in which the recording was made. (Numbering starts from 001.)

To play your recordings, select VOICE from the Main menu. See "Voice" in the [Menu Options](#) section for more information.

To record FM broadcasts, see the FM Tuner Operation section.

## FM



Select FM mode to listen to FM radio station broadcasts. To exit FM Tuner mode, press MODE briefly.

There are 2 methods of tuning into stations: LISTEN (preset stations) and SEARCH (manual scan).

Press ► to change between LISTEN and SEARCH.

### LISTEN (Preset Stations)

LISTEN is the default method of tuning. Your player can store 30 station presets (CH01CH30). CH00 indicates that the current station has not been preset.

- Press ► to select the next preset station.
- Press ◀ to select the previous preset station.

### SEARCH (Manual Scan)

SEARCH allows you to manually scan and tune to all radio frequencies.

- Press ◀ or ► to decrease or increase the frequency, respectively.
- Press and hold ◀ or ► to seek the previous or next frequency with a broadcast signal, respectively.

## Store Preset Stations

To store preset stations, you must be in SEARCH (manual scan) mode.

*To store your preset stations manually:*

1. Tune to the station you want to store as a preset.
2. Press and hold MODE. The LCD will display "Store".
3. Press ◀ or ▶ to select a preset channel number.
4. Press MODE to store the preset. The LCD will display "Success".

*To store your preset stations automatically:*

- Press and hold ▶ while in Manual mode. The player will automatically scan and store as presets all radio frequencies with a broadcast signal.

## Record FM Broadcasts

The recording process for FM broadcasts is the same as for voice recording. See the [Voice Recording](#) section of this manual for more information.

- Tune to the station you want to record.
- Press and hold ▶ to start recording the FM radio broadcast. Press ▶ again to pause recording.
- Press MODE to stop and save the recording. The recorded file will be named "FXXX.WAV" where XXX corresponds to the numerical sequence in which the recording was made. (Numbering starts from 001.)

 
To play your FM broadcast recordings, select MUSIC from the Main menu. See "Music" in the [Menu Options](#) section for more information.

## DEL




Select DEL mode to delete files from your player. You may also delete files using a computer; see the [Deleting Files Through a Computer](#) section of this manual for more information.

In the Delete Menu, the following options are available: MUSIC, VOICE, or EXIT. Select MUSIC to delete your music files; select VOICE to delete your voice recording files.



 Once you have made your selection, your player will list each music or voice file to be deleted one-by-one.



- Select YES to delete the current file being displayed. The screen will display a quick confirmation that the file has been deleted and then move to the next file.

Files Deleted

- Select NO to skip the current file being displayed and move to the next file.
- Select Exit to return to the previous Delete menu.

## SET



Select SET mode to access the Settings menu of your player. In the Settings menu, the following options are available: MODE, EQ, CON, BL, COL, PWR, REC, LRC, LAN, and EXIT.

**MODE (Playmode)**

Select Playmode to set the Play Mode options.

- ☐ Normal: Play tracks in normal order.
- ☐ 1Repeat One: Play the current track repeatedly.
- ☐ ARepeat All: Play all tracks repeatedly.
- ☐ Shuffle: Play all tracks in random order.
- ☐ Preview: Play the first few seconds of each track.

*Note: Playmode options may also be set by pressing the MODE key while playback has been stopped.*

**EQ (Equalizer)**

Select Equalizer to set the Equalizer options. The options are Normal, Rock, Jazz, Classic, Pop, or Bass.

**CON (Contrast)**

Select Contrast to set the contrast level of the LCD screen. A setting of 0 is lightest; a setting of 10 is darkest.

**BL (Backlight)**

Select Backlight to set the duration of time (in seconds) that the backlight will remain on. The options are 5, 10, 30, Always, or Off.

**COL (Lightcolor)**

Select Lightcolor to set the color of the backlight:

Color 1, Color 2, Color 3, Color 4, Color 5, Color 6, Color 7 or Auto. The Auto setting will change the backlight color each time a button is pressed.

**PWR (Power)**

Select Power to set the amount of time (in minutes) your player can be idle before it turns off automatically. The options are 1, 2, 5, 10, or Disable.

**REC (Rec Set)**

Select Record Set to set the recording quality option of your player.

Normal: Lower quality, small file size.

Middle: Medium quality, medium file size.

High: High quality, largest file size.

### *LRC (Lyric)*

Select Lyric to set your player's lyric display On or Off.

Lyric display requires a ".LRC" lyric file. Lyric files may be found on the internet or can be created with a Lyric file editor. Lyric files should have the same name as its corresponding music file and be placed in the same directory (eg, "SongTitle1.lrc" and "SongTitle1.mp3").

### *LAN (Languages)*

Select Languages to set the language that your player's menus will be displayed in. Options are English, Spanish, German, French and Portuguese.

A-B Repeat mode allows you to define a segment of an audio track to be played repeatedly on a loop.

### Start Point "A"

During music or voice file playback, press the MODE key briefly to set the start point of the audio segment loop. The screen will display "A-".

### End Point "B"

Press the MODE key briefly again to set the end point of the audio segment loop. The screen will display "A-B".

This audio segment will now play repeatedly in a loop.

Press the MODE key briefly again to resume normal playback.

**IMPORTANT:** Make sure your player has a new battery installed before upgrading your firmware. Do not disconnect your player from the computer or otherwise interrupt the upgrade process-doing so could damage your player and render it inoperable.

Firmware updates may be found at [www.cobyusa.com](http://www.cobyusa.com). Check this site periodically for new updates. Firmware updates may add new functionality to your player.

To upgrade your player's firmware:

- 1.Download the latest firmware for your player from [www.cobyusa.com](http://www.cobyusa.com). Save this file to the computer.
- 2.Connect your player to the computer.
- 3.Double-click the downloaded file\*. In the window that appears, double-click the file "stupdaterapp.exe". This will launch the firmware update application.
- 4.A dialog box will appear. Click "OK".



5. The updater will commence searching for your connected player. When it has detected your player, you will see the screen below.



- 6.Click "Start" to begin the firmware update.  
Do NOT disconnect your player while it is updating.
- 7.The update is complete when the green status bar has been filled. Click "Close".
- 8.Disconnect your player from the computer.

Your player will turn on automatically and update its firmware.

For more information on how to safely connect to and disconnect from a computer, refer to the [Connect to a Computer](#) section of this manual.

*\* You must have a file compression utility installed on your computer.*

This troubleshooting guide aims to save you time in case you experience any inconvenience with this digital audio player. If you are still having difficulty, please contact Technical Support.

## My player does not work.

- 1.Ensure that the battery is charged.
- 2.Ensure that the battery has been properly installed.

## File transfer failure.

- 1.Ensure that the USB driver has been installed correctly on the PC.
- 2.Ensure that the USB cable is attached securely to both the PC and your player.
- 3.Ensure that your player's memory capacity limit has not been reached.
- 4.Ensure that the battery is charged.

## Poor sound quality or no sound.

- 1.Ensure that the volume level is not set to "0".
- 2.Ensure that your headphones are attached securely to the headphone jack.
- 3.Poor sound quality may result from corrupt or poorly encoded music files. Try downloading the music file again or encoding the file at a higher bitrate. The recommended minimum bit rate for this player is 128 kbps for Mp3 files and 64 kbps for WMA files.

## Poor FM reception

1. Ensure that your earphones are plugged into the headphone jack. (The cord of the earphones work as an FM antenna.)
2. Adjust the position of your earphone cords and player. Turn off nearby electronic devices.

## There's something wrong with the LCD screen.

- 1.Remove, and then replace the battery.
- 2.Please call Technical Support for a Hot-key reboot.

## Technical Support

Monday to Friday: 8:30 AM - 8:30 PM EST

Saturday and Sunday: 9:00 AM - 5:30 PM EST

Telephone: 800-681-2629 or 718-416-3197

You can also reach us online at [www.cobyusa.com](http://www.cobyusa.com) or by e-mail at [techsupport@cobyusa.com](mailto:techsupport@cobyusa.com).

# Specifications

Power .....	1 "AAA" Battery
Memory .....	512MB Flash
Size .....	3.7"x1.2"x0.9"(WHD)
Interface .....	USB Rev . 2.0 Full Speed
Display .....	128x32 dot-matrix LCD
Processor .....	65MIPS DSP
Audio Playback .....	Mp3 : 96-320 kbps VBR WMA: 32-192 kbps
Voice Recording .....	IMA-ADPCM encoding
Signal-to-Noise Ratio .....	90dB
Frequency Response .....	20-20,000 Hz
Output .....	50mW
Total Harmonic Distortion: .....	0.01%-0.1%