

COBY MPC885 Set<u>up Guide</u>

Thank you for choosing a COBY MP3 player!



~This guide will cover how to transfer your music CD's into your COBY MP3 player using Windows Media Player 11.

~This guide will also provide common troubleshooting solutions for your COBY MP3 player.

Requirements

Windows Media Player 11 (WMP11)

The directions in this guide are given for Windows Media Player 11 (WMP11)

If your computer does not have Windows Media Player installed, please download the latest version of Windows Media Player (WMP) from Microsoft's website www.microsoft.com/windows/windowsmedia/player/download/download.aspx

Getting Started

Transfer your Music CD's into your COBY MP3 player

1) Launch the WMP11 program.



2) Put an audio CD into the CD-ROM drive of your computer.

 If your computer has an internet connection, WMP will automatically retrieve and display the album information.

Click the "**Rip**" tab and select which "Title" to rip.

To rip the entire album, check the top check box.

@ @	Now Playing	Library		Rio Burn	Syr	nc	URGE Sign In	
🞵 🔸 Music 🔸 Comi	ng Home (D:)	_		k				[] • 8 ^r j •
G Coming Home (D:) Album			V	Title	Length	Rip Status	Contributing Artist	Composer
	Audio CD (D:)							
		Coming Home	1	I Call It Love	3:19	Stopped	Lionel Richie	Herman
	60	Lionel Richie	2	Sweet Vacation	3:54		Lionel Richie	Lionel Ri
		Soul and R&B	V 3	Why	4:01		Lionel Richie	Chucki
		2006	4	What You Are	4:12		Lionel Richie	Jermain
		00000	V 5	Up All Night	3:36		Lionel Richie	Chucki
			0	I'm Coming Home	4:18		Lionel Richie	Chucki
			7	All Around the World	3:34		Lionel Richie	Lionel Ri
			8	Out of My Head	3:15		Lionel Richie	Lionel Ri
			9	Reason to Believe	4:46		Lionel Richie	Dallas A
			10	Stand Down	4:02		Lionel Richie	Dallas A
			11	I Love You	4:12		Lionel Richie	Lionel Ri

3) Set the Rip Options (optional).

Click the "**Rip**" button to set the Rip options. The recommended Rip settings are:

- ♦ Select "Bit Rate > 128 Kbps"
- Select "More Options" to change the directory to which WMP saves your ripped music files + WMP will save your music to your "My Documents > My Music" default folder.

	Rip	Burn	Syn	c	U	R©E	Sign In	
	Rip 'Coming Ho	me' (D:)						
V	Format Bit Rate			Windows Media Audio Windows Media Audio Pro				
V			erted 🕨	Windows Media Audio (Variable Bit Rat Windows Media Audio Lossless Vmp3				
	More Options Help with Rippi			WAV (Lossless) Lionel Ri	k chie	Ch
V			4:18	Ripped	to libr	Lionel Ri	chie	Ch

4) Start ripping the CD.

Click the "**Rip**" button and select "Rip" to start converting the audio CD to MP3/WMA

The ripping process will take a few minutes to complete. WMP will save the converted music files in your "My Documents > My Music" default folder.

30		Now Playing	Library		Rip	Burn	Sync
J N	Music + Coming H	iome (D:)			Rip 'Coming I	Home' (D:)	
() ()	Coming Home (D:)	Album	[Format	45	•
		Audio CD (D:)			Bit Rate		•
		60 L	Coming Home	/	Rip CD Auton Eject CD Afte	natically When Inserted r Ripping	•

	Now Playing	Library	1	Rip Burn	Syr	ic UF
Husic + Coming H	lome (D:)					
G Coming Home (D:)	Album			Title	Length	Rip Status
	Audio CD (D:)					
		Coming Home	□ + 1	I Call It Love	3:19	Ripped to libr
	60	ionel Richie	2	Sweet Vacation	3:54	Ripped to libr
	S	Soul and R&B	V 3	Why	4:01	Ripping (30%)
	2	2006	☑ 4	What You Are	4:12	Pending
	CAVE S	and the second	V 5	Up All Night	3:36	Pending
			6	I'm Coming Home	4:18	Pending

Transfer MP3/WMA Files to Your COBY Player


Once you have MP3 or WMA digital music files on your computer, transfer them to your COBY player in order to listen to music anywhere.

Use WMP11 to transfer (sync) music from your computer to your COBY MP3 player.


1) Launch the WMP11 program.

2) Connect your COBY player to a USB port on the computer.

+ WMP11 will detect your COBY player automatically.

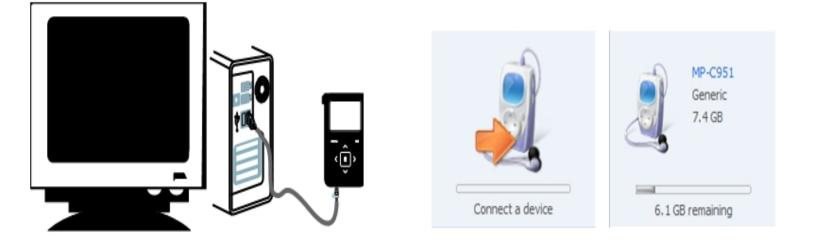

3) Browse your music library to choose songs to sync.

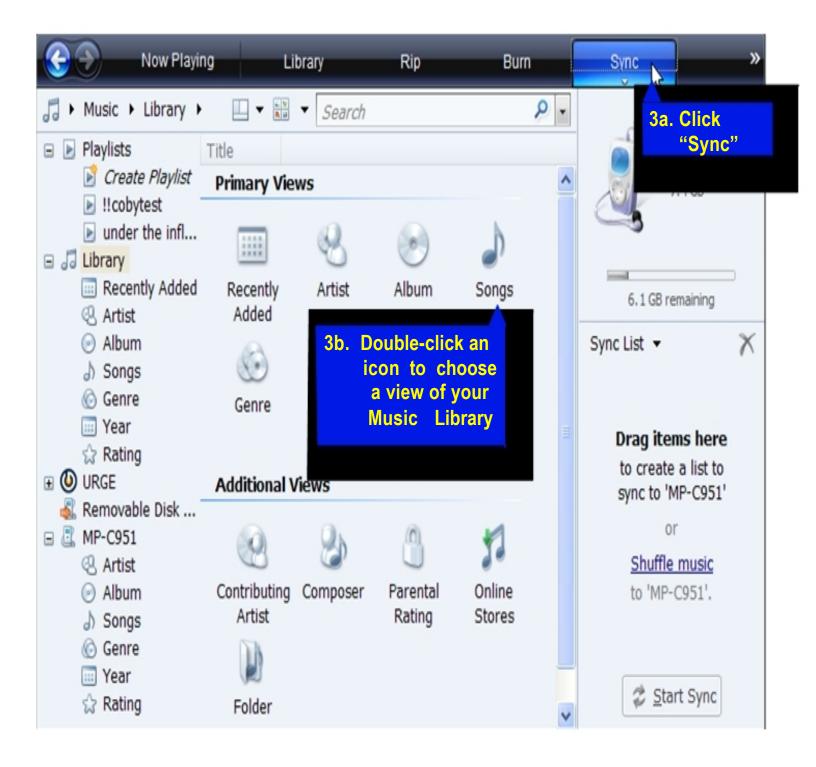

4) Select songs to sync to your COBY player.



5) Disconnect your COBY player from the computer.

Once the sync process is complete, unplug your player from the USB port of the computer. Now you're ready to listen to music on your COBY player.

Now P	layin	g Library	Rip Bu	im Sync	URGE »
♂ → MP-C951 → Sy	nc Re	esults 🔲 🕶 📖	▼ Search	ρ.	
🖃 🕨 Playlists	^ :	Title	Status	Playlist	MP-C951 Generic
Create Pl Itcobytest		Files You Added			7.4 GB
 under the 		Many Rivers To Cross	Synchronized to device	Files You Added	3
Now Playing		Homeland and Hip Hop	Synchronized to device	Files You Added	_
🖃 🎜 Library		Damaged Goods	Synchronized to device	Files You Added	6 GB remaining
Recently		Two-Headed Boy	Synchronized to device	Files You Added	
Artist Album		05 - 53rd & 3rd The Illest (ft. Jean Gr	Synchronized to device Synchronized to device	Files You Added Files You Added	Sync List 👻 📉 📉
) Songs		Hater's Anthem	Synchronized to device	Files You Added	
6 Genre		Hustler's Ambition	Synchronized to device	Files You Added	No
🔤 Year		Holla (Ft. Dr.Dre)	Synchronized to device	Files You Added	You can now disconnect
😭 Rating		Mos Def & Talib Kweli	Synchronized to device	Files You Added	'MP-C951'.
URGE		Revolution 909	Synchronized to device	Files You Added	
Removable D		Daft Punk Is Playing A	Synchronized to device	Files You Added	
MP-C951 Sync Res					
Recently					h.
Artist					R
 Album 					
) Songs	v				🕏 <u>S</u> tart Sync

Common Troubleshooting

Problems	Possible Solutions
No Power	*Replace the Battery. *Hold the Play/Pause/Stop button for 5 seconds. *Reset the MP3 player by removing the battery
Song Freezes	*Make sure your WMA file(s) are not DRM protected. *The file is corrupted or damaged. *Unsupported file format (ACC, WAV Etc)
No sound after file transfer	*Ensure that the headphones are attached securely to the player. *Make sure your WMA file(s) are not DRM protected. *Unsupported file format (ACC, WAVEtc)
MP3 Player not recognized by the Computer	*Check the connection. *Switch USB ports. * Reset the MP3 player by removing the battery.

If you are still having difficulties with your MP3 player, please contact Customer Care, Hours of operation, Monday-Friday 8:00 AM – 8:30:00 PM EST, Saturday and Sunday 9:00 AM – 5:30 PM EST. You can also reach us online at customerservice@cobyusa.com or techsupport@cobyusa.com

1-800-727- 3592