

**Thank you for choosing a COBY MP3 player!**



- ~This guide will cover how to transfer your music CD's into your COBY MP3 player using Windows Media Player 11.
- ~This guide will also provide common troubleshooting solutions for your COBY MP3 player.

## **Requirements**

### **Windows Media Player 11 (WMP11)**


The directions in this guide are given for Windows Media Player 11 (WMP11)

If your computer does not have Windows Media Player installed, please download the latest version of Windows Media Player (WMP) from Microsoft's website  
[www.microsoft.com/windows/windowsmedia/player/download/download.aspx](http://www.microsoft.com/windows/windowsmedia/player/download/download.aspx)

# **AUDIO TRANSFER** – Getting Started

Transfer your Music CD's into your COBY MP3 player

1) Launch the WMP11 program.

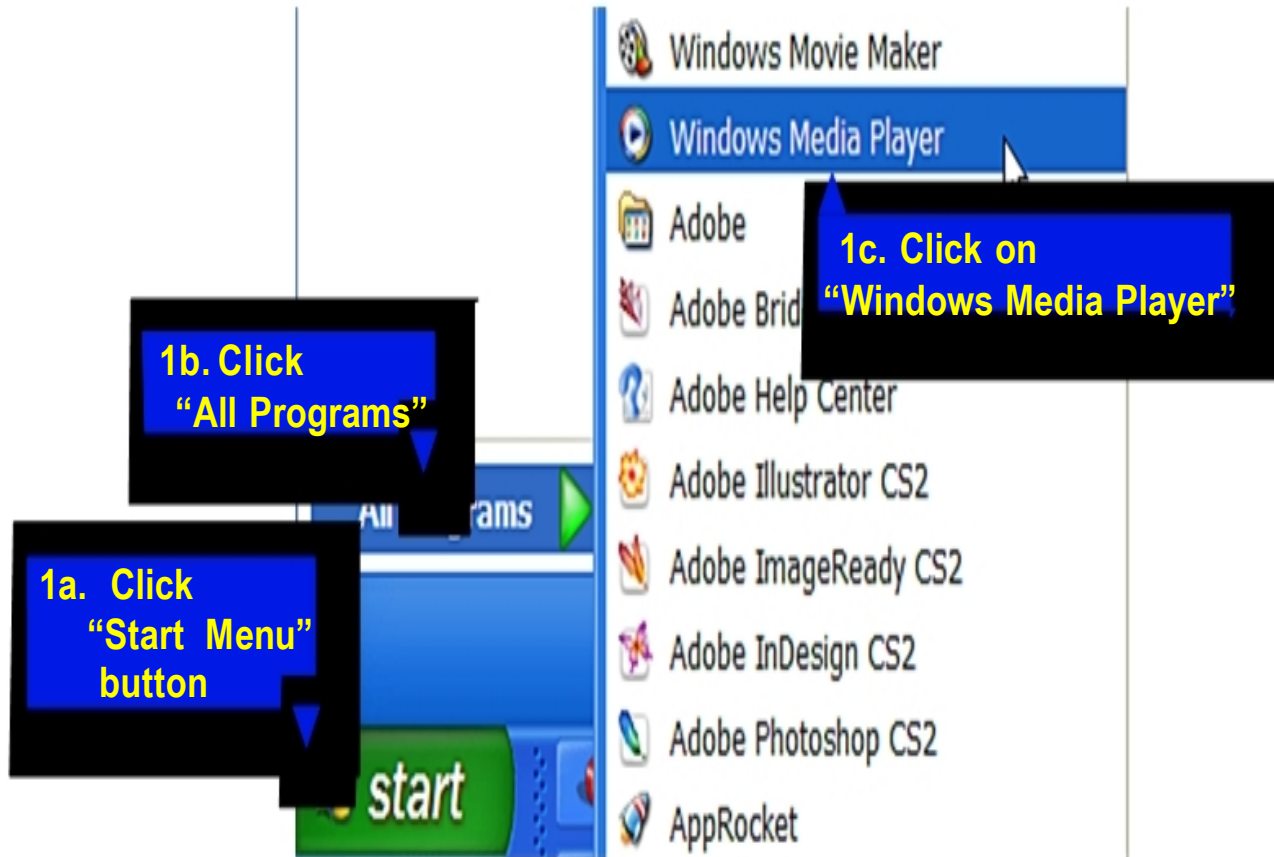

## 2) Put an audio CD into the CD-ROM drive of your computer.

- ✦ If your computer has an internet connection, WMP will automatically retrieve and display the album information.

Click the **“Rip”** tab and select which “Title” to rip.  
To rip the entire album, check all of the check




The screenshot shows the Windows Media Player interface with the 'Rip' tab selected. The album 'Coming Home (D:)' by Lionel Richie is displayed. The track list is as follows:

Album	Title	Length	Rip Status	Contributing Artist	Composer			
Coming Home (D:)								
<b>Audio CD (D:)</b>								
	Coming Home	1	<input checked="" type="checkbox"/>	I Call It Love	3:19	Stopped	Lionel Richie	Herman...
	Lionel Richie	2	<input checked="" type="checkbox"/>	Sweet Vacation	3:54		Lionel Richie	Lionel Ri...
	Soul and R&B	3	<input checked="" type="checkbox"/>	Why	4:01		Lionel Richie	Chuckii ...
	2006	4	<input checked="" type="checkbox"/>	What You Are	4:12		Lionel Richie	Jermain...
	☆☆☆☆☆	5	<input checked="" type="checkbox"/>	Up All Night	3:36		Lionel Richie	Chuckii ...
		6	<input checked="" type="checkbox"/>	I'm Coming Home	4:18		Lionel Richie	Chuckii ...
		7	<input checked="" type="checkbox"/>	All Around the World	3:34		Lionel Richie	Lionel Ri...
		8	<input checked="" type="checkbox"/>	Out of My Head	3:15		Lionel Richie	Lionel Ri...
		9	<input checked="" type="checkbox"/>	Reason to Believe	4:46		Lionel Richie	Dallas A...
		10	<input checked="" type="checkbox"/>	Stand Down	4:02		Lionel Richie	Dallas A...
		11	<input checked="" type="checkbox"/>	I Love You	4:12		Lionel Richie	Lionel Ri...

### 3) Set the Rip Options (optional).

Click the “**Rip**” button to set the Rip options. The recommended Rip settings are:


- ✧ Select “Format > mp3”
- ✧ Select “Bit Rate > 128 Kbps”
- ✧ Select “More Options” to change the directory to which WMP saves your ripped music files. WMP will save your music to your “My Documents > My Music” folder by default.

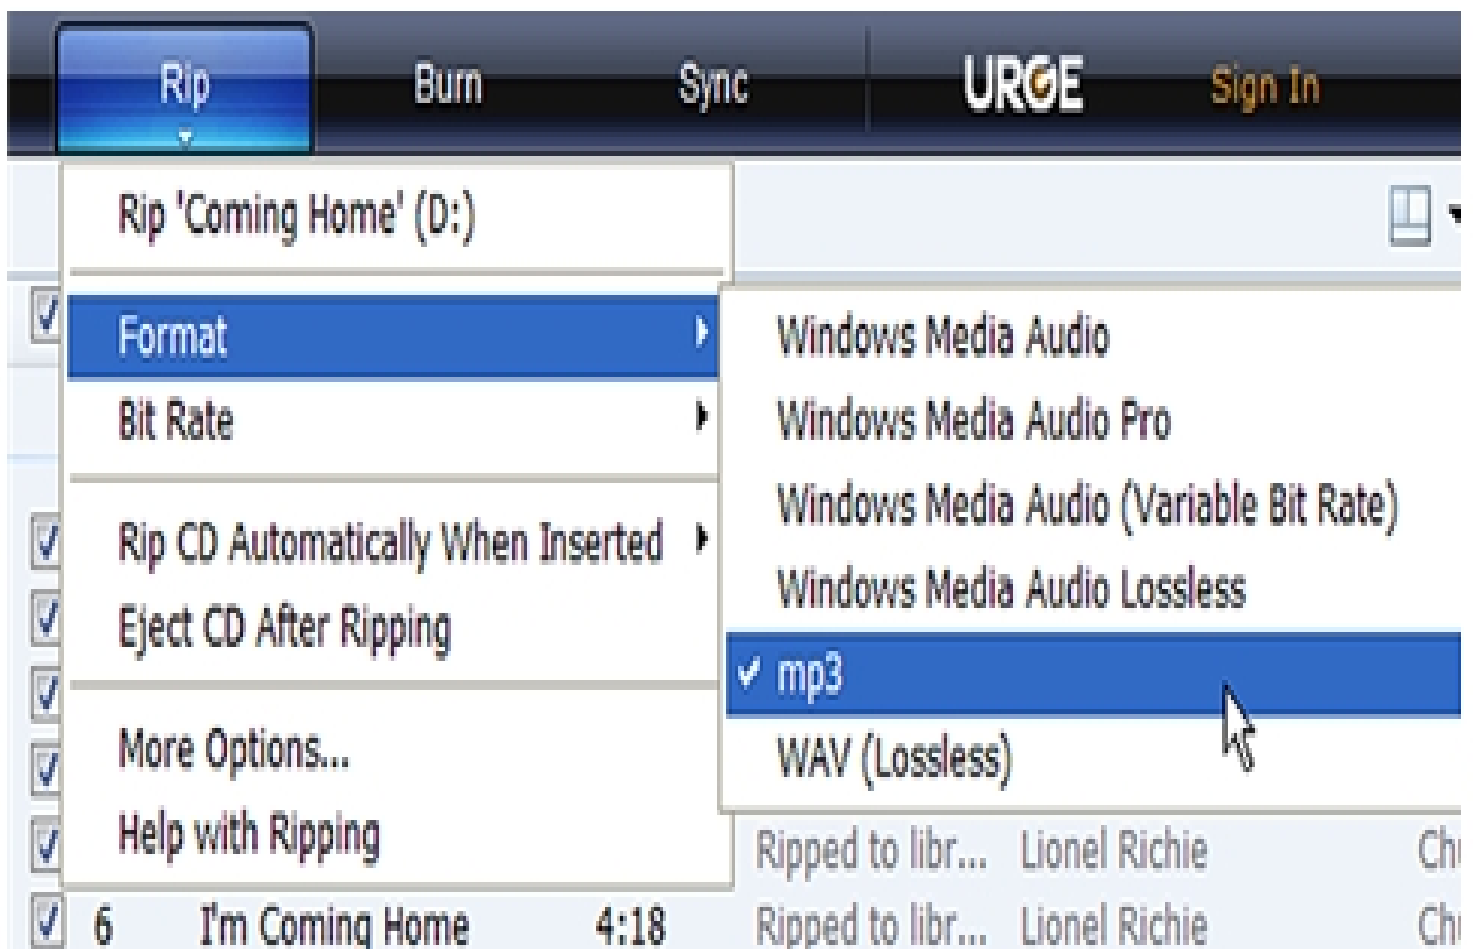

#### 4) Start ripping the CD.

Click the “**Rip**” button and select “Rip” to start converting the audio CD to MP3/WMA

- ✦ The ripping process will take a few minutes to complete. WMP will save the converted music files in your “My Documents > My Music” folder by default.

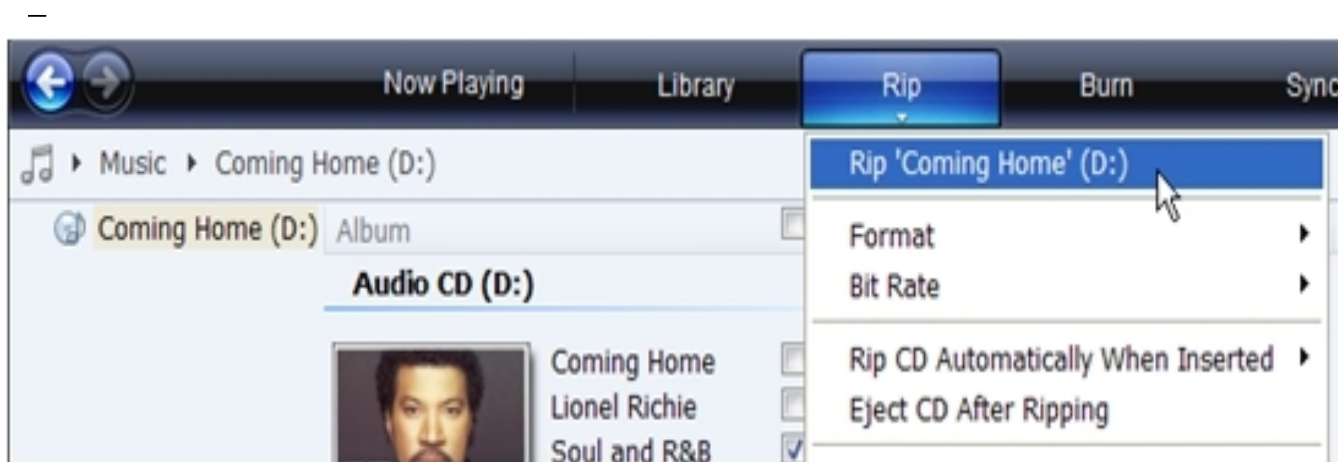

## Transfer MP3/WMA Files to Your COBY Player



Once you have MP3 or WMA digital music files on your computer, transfer them to your COBY player in order to listen to music anywhere.

Use WMP11 to transfer (sync) music from your computer to your COBY MP3 player.

**1) Launch the WMP11 program.**

**2) Connect your COBY player to a USB port on the computer.**

✦ WMP11 will detect your COBY player automatically.

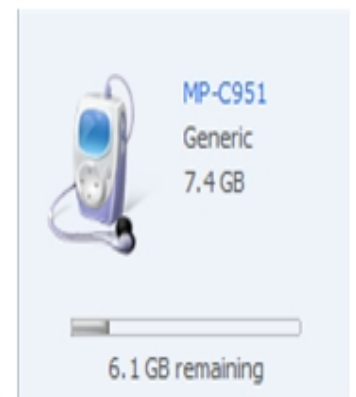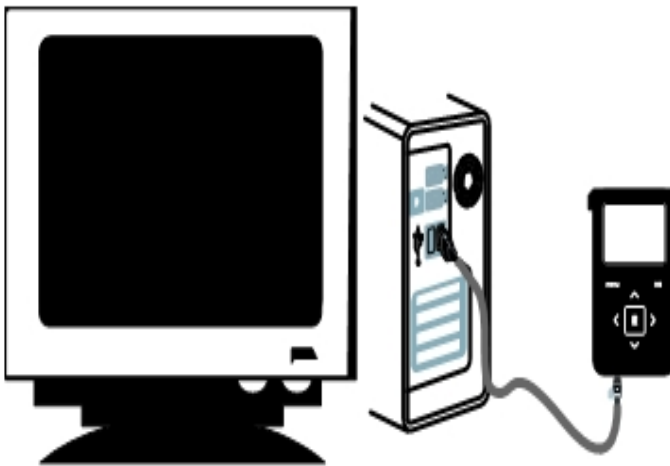

### 3) Browse your music library to choose songs to sync.

The screenshot shows the iTunes application window. At the top, there are tabs for 'Now Playing', 'Library', 'Rip', 'Burn', and 'Sync'. The 'Sync' tab is selected, and a mouse cursor is pointing at it. A blue callout box with yellow text says '3a. Click "Sync"'. Below the tabs is a search bar and a sidebar with 'Playlists' and 'Library' sections. The 'Library' section is expanded, showing 'Recently Added', 'Artist', 'Album', 'Songs', 'Genre', and 'Year'. The main area displays 'Primary Views' with icons for 'Recently Added', 'Artist', 'Album', and 'Songs'. A blue callout box with yellow text says '3b. Double-click an icon to choose a view of your Music Library'. Below this is the 'Additional Views' section with icons for 'Contributing Artist', 'Composer', 'Parental Rating', 'Online Stores', and 'Folder'. On the right side, there is a sync progress bar showing '6.1 GB remaining' and a 'Sync List' section with instructions: 'Drag items here to create a list to sync to 'MP-C951'' or 'Shuffle music to 'MP-C951''. At the bottom right, there is a 'Start Sync' button.



4) Select songs to sync to your COBY player.



4a. Type in the Search bar to quickly find a song.

4c. Drag the selected tracks here to add them to the Sync List.


4b. Click on a track to select it for synchronization. To select multiple tracks, hold the CTRL or SHIFT and click on the tracks.

4d. Click "Start Sync" to transfer the Sync List to your COBY player.



## 5) Disconnect your COBY player from the computer.

Once the sync process is complete, unplug your player from the USB port of the computer. Now you're ready to listen to music on your COBY player.

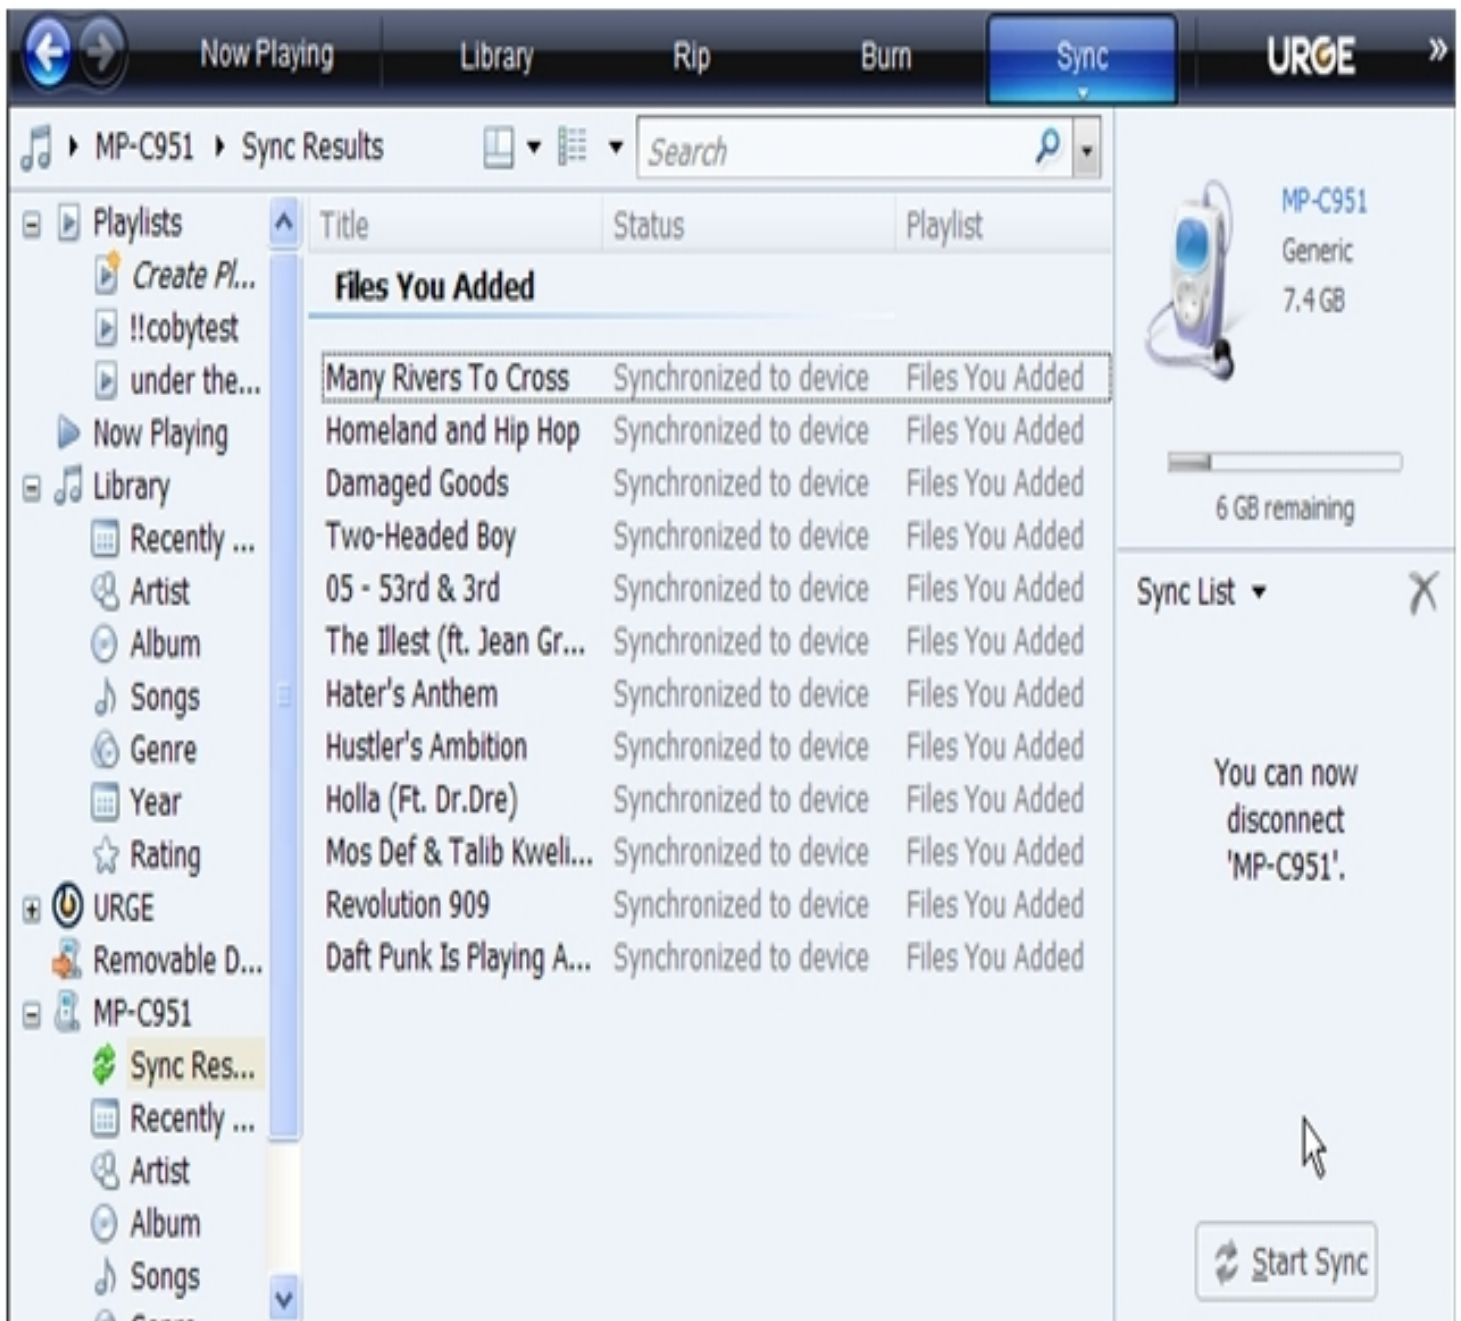

The screenshot shows the iTunes application window with the 'Sync' tab selected. The main window displays a list of songs that have been synchronized to the MP-C951 device. The list is titled 'Files You Added' and includes the following entries:

Title	Status	Playlist
Many Rivers To Cross	Synchronized to device	Files You Added
Homeland and Hip Hop	Synchronized to device	Files You Added
Damaged Goods	Synchronized to device	Files You Added
Two-Headed Boy	Synchronized to device	Files You Added
05 - 53rd & 3rd	Synchronized to device	Files You Added
The Illest (ft. Jean Gr...	Synchronized to device	Files You Added
Hater's Anthem	Synchronized to device	Files You Added
Hustler's Ambition	Synchronized to device	Files You Added
Holla (Ft. Dr.Dre)	Synchronized to device	Files You Added
Mos Def & Talib Kweli...	Synchronized to device	Files You Added
Revolution 909	Synchronized to device	Files You Added
Daft Punk Is Playing A...	Synchronized to device	Files You Added

On the right side of the window, there is a summary for the MP-C951 device, which is a Generic device with 7.4 GB of storage. A progress bar indicates that 6 GB of storage is remaining. Below the progress bar, there is a 'Sync List' section with a close button (X). At the bottom right, there is a message that says 'You can now disconnect 'MP-C951'.' and a 'Start Sync' button.

# **VIDEO TRANSFER** – Getting Started

Converting your VIDEO files and transferring it into your player.

## **Install the Conversion Utility**

1. Insert the driver CD
2. Double click on the “MP3set\_V4.11” folder
3. Double click on the “setup” file.
4. Accept the agreement to install the Video Conversion utility.

## **Run the Conversion Utility**

1. Go to your “Start Menu”
2. Select “All Programs”
3. Select “MP3 Player Utilities 4.11”
4. Select “AMV Converter”


## **Converting Video (See Below)**

- 1.a** Find and Select the video files to convert in the INPUT Field
- 1.b** Select the directory where you want to save the converted file
- 1.c** Start the conversion process

**When the conversion is completed, copy and paste or drag and drop the converted files to your MP3 player.**

**Done!!**

Slide the "green block" to set the start and end point.

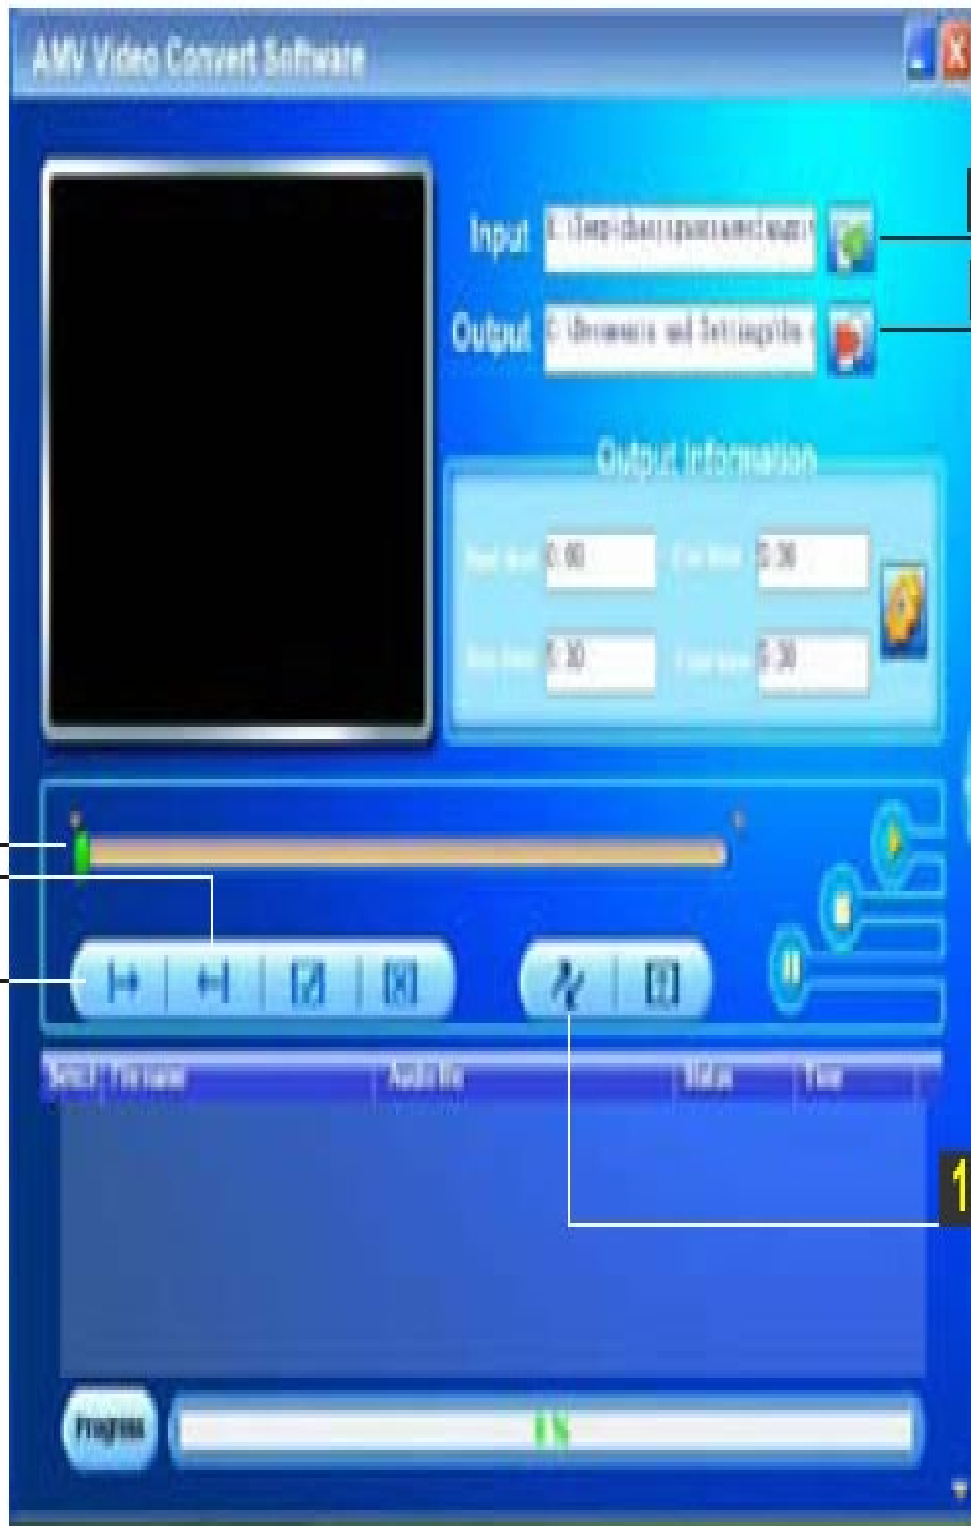

1.a

Select the video file to convert

1.b

Select the direction that the converted file will be saved to.

1.c

Start the conversion process

Select the start point of the file that will be converted.

Select the end point of the file that will be converted.

## Common Troubleshooting

Problems	Possible Solutions
<b>No Power</b>	*The power switch is located on the back of the unit, ensure that the switch is set to the "ON" position.
	*The Battery level may be too low. Charge the unit.
<b>Music does NOT play or Freezes</b>	*Make sure your WMA file(s) are not DRM protected.
	*The file(s) are corrupted or damaged.
	*Unsupported file format (ACC, WAV, M4A...Etc.)
	*Unknown File (WMA file with DRM).
	*Request DRM Time ( WMA file with DRM).
<b>No sound after file transfer</b>	*Ensure that the headphones are attached securely to the player.
	*Make sure your WMA file(s) are not DRM protected.
	*Unsupported file format (ACC, WAV, M4A...Etc.)
<b>MP3 Player not recognized by the Computer</b>	*Check the connections.
	*Switch USB ports
	*Go into the player MP3 player "SETTINGS" and change the "Online Device" from Media Device to USB Disk.
<b>Video Conversion Error</b>	*Ensure that the original file(s) plays on your computer. If not, then you will need to obtain the codec for that file(s).
	*Unsupported format

If you are still having difficulty with your MP3 player, please contact Customer Care, Hours of operation, Monday-Friday 8:00 AM – 8:30:00 PM EST, Saturday and Sunday 9:00 AM – 5:30 PM EST. You can also reach us online at

[customerservice@cobyusa.com](mailto:customerservice@cobyusa.com) or [techsupport@cobyusa.com](mailto:techsupport@cobyusa.com)

**1-800-727- 3592**