

Thank you for choosing a COBY MP3 player!



- ~This guide will cover how to transfer your music CD's into your COBY MP3 player using Windows Media Player 11.
- ~This guide will also provide common troubleshooting solutions for your COBY MP3 player.

Requirements

Windows Media Player 11 (WMP11)

The directions in this guide are given for Windows Media Player 11 (WMP11)


If your computer does not have Windows Media Player installed, please download the latest version of Windows Media Player (WMP) from Microsoft's website

www.microsoft.com/windows/windowsmedia/player/download/download.aspx

Getting Started

Transfer your Music CD's into your COBY MP3 player

1) Launch the WMP11 program.

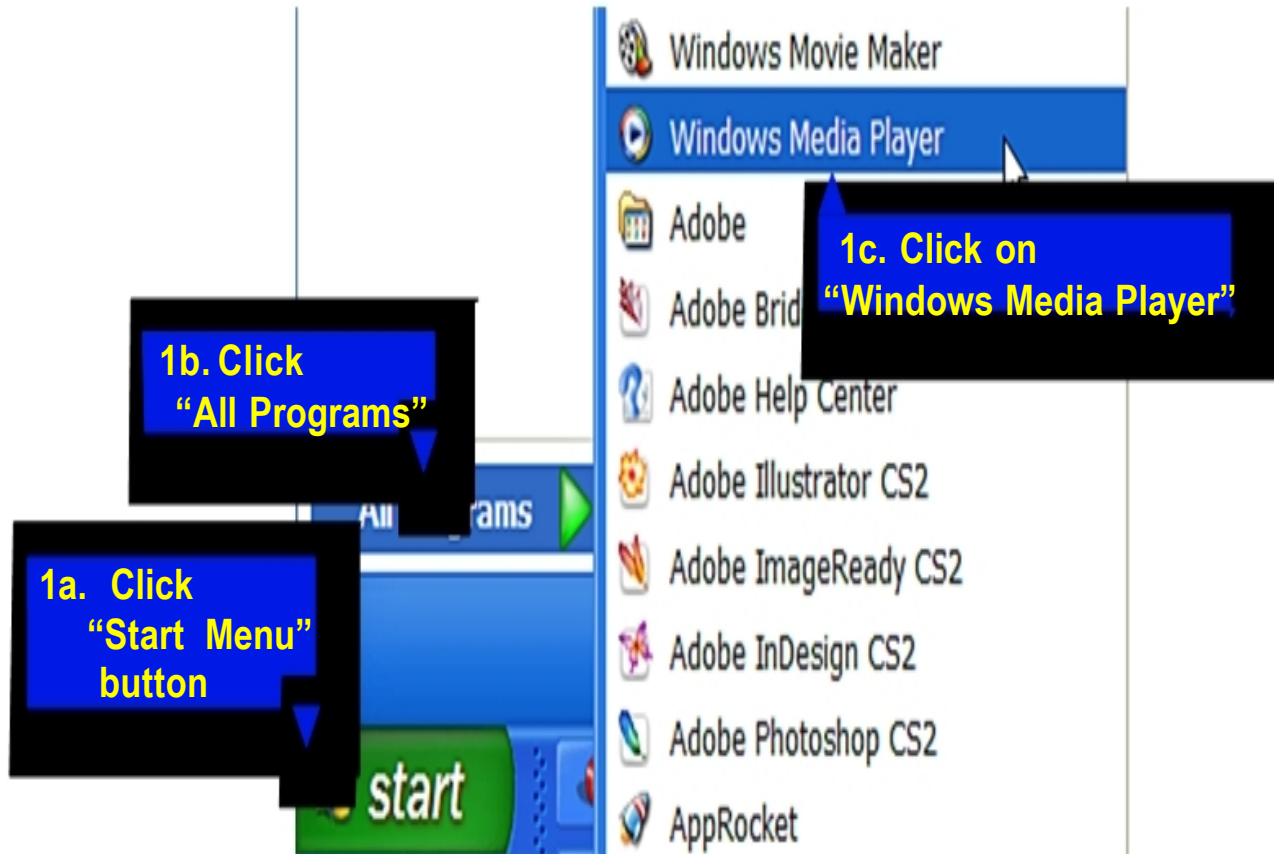

2) Put an audio CD into the CD-ROM drive of your computer.

- ✦ If your computer has an internet connection, WMP will automatically retrieve and display the album information.

Click the “**Rip**” tab and select which “Title” to rip.



To rip the entire album, check the top check box.

Now Playing Library **Rip** Burn Sync URGE Sign In

Music > Coming Home (D:)

Coming Home (D:) Album ☒ Title Length Rip Status Contributing Artist Composer


Audio CD (D:)

Album Art	Album Name	Artist	Genre	Year	Rating	Track #	Title	Length	Rip Status	Contributing Artist	Composer
	Coming Home	Lionel Richie	Soul and R&B	2006	☆☆☆☆☆	1	I Call It Love	3:19	Stopped	Lionel Richie	Herman...
						2	Sweet Vacation	3:54		Lionel Richie	Lionel Ri...
						3	Why	4:01		Lionel Richie	Chuckii ...
						4	What You Are	4:12		Lionel Richie	Jermain...
						5	Up All Night	3:36		Lionel Richie	Chuckii ...
						6	I'm Coming Home	4:18		Lionel Richie	Chuckii ...
						7	All Around the World	3:34		Lionel Richie	Lionel Ri...
						8	Out of My Head	3:15		Lionel Richie	Lionel Ri...
						9	Reason to Believe	4:46		Lionel Richie	Dallas A...
						10	Stand Down	4:02		Lionel Richie	Dallas A...
						11	I Love You	4:12		Lionel Richie	Lionel Ri...

3) Set the Rip Options (optional).

Click the “**Rip**” button to set the Rip options. The recommended Rip settings are:

- ✧ Select “Format > mp3”
- ✧ Select “Bit Rate > 128 Kbps”
- ✧ Select “More Options” to change the directory to which WMP saves your ripped music files ✧ WMP will save your music to your “My Documents > My Music” default folder.

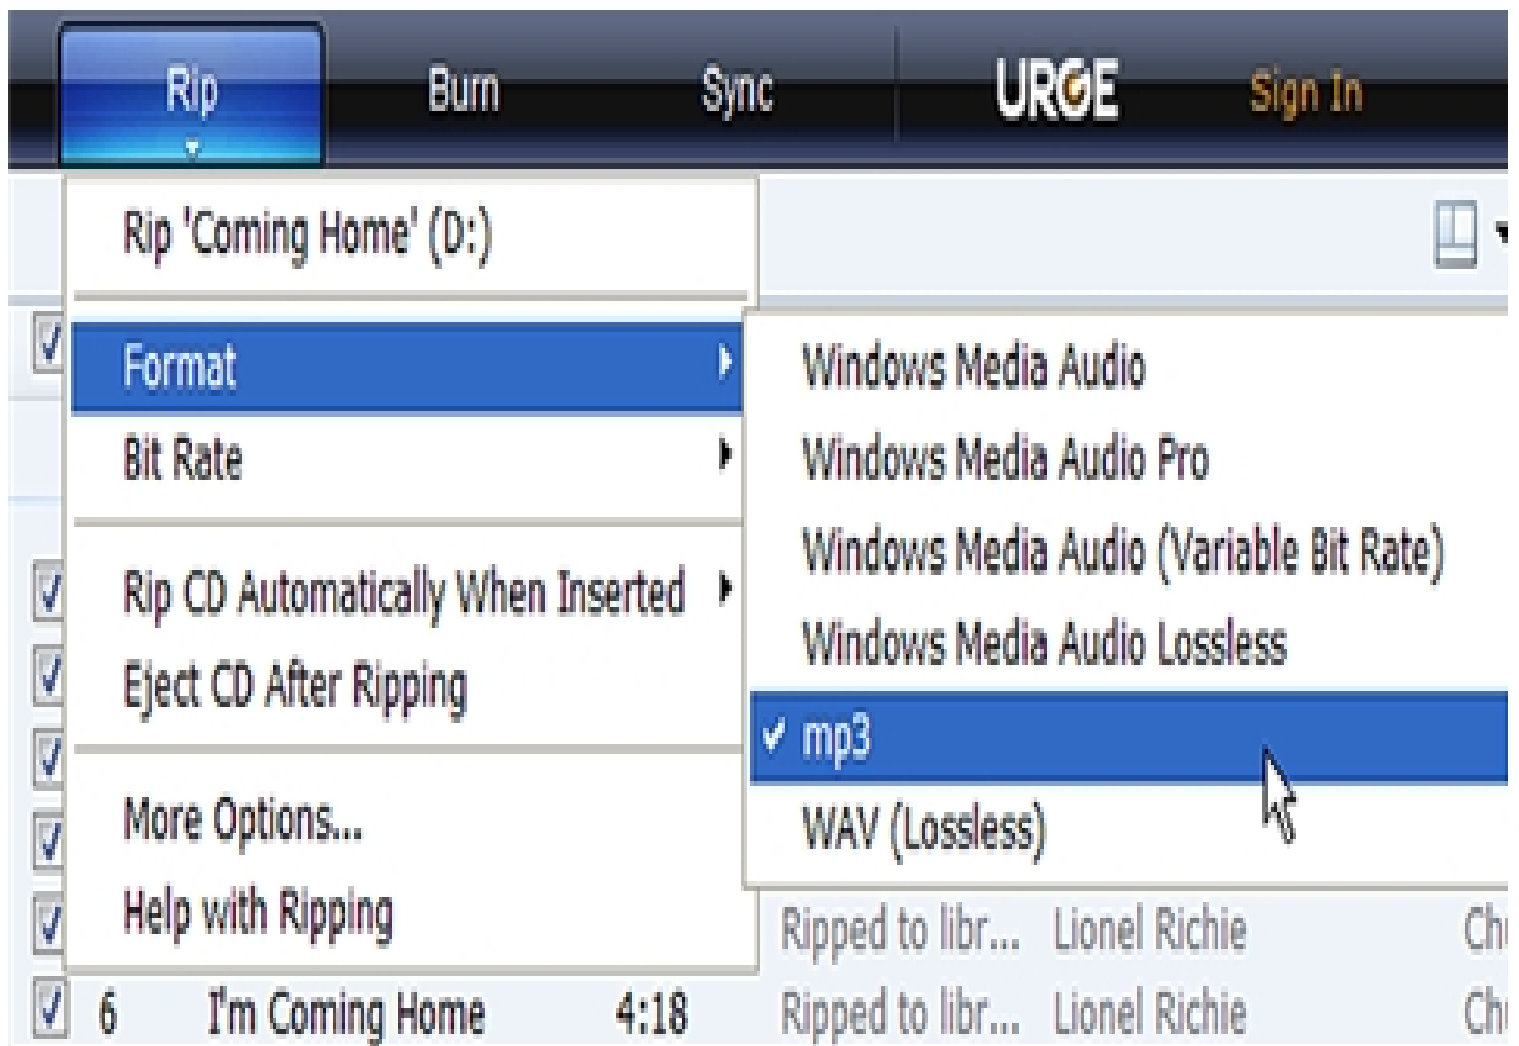


4) Start ripping the CD.

Click the “**Rip**” button and select “Rip” to start converting the audio CD to MP3/WMA



The ripping process will take a few minutes to complete. WMP will save the converted music files in your “My Documents > “My Music” default folder.

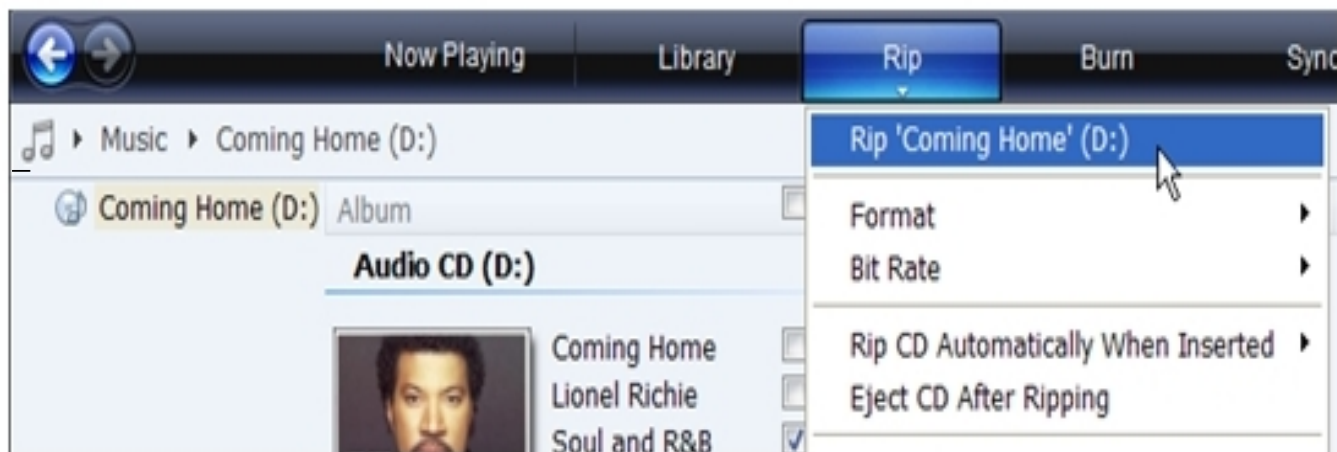

Transfer MP3/WMA Files to Your COBY Player




Once you have MP3 or WMA digital music files on your computer, transfer them to your COBY player in order to listen to music anywhere.

Use WMP11 to transfer (sync) music from your computer to your COBY MP3 player.


1) Launch the WMP11 program.

2) Connect your COBY player to a USB port on the computer.


✦ WMP11 will detect your COBY player automatically.

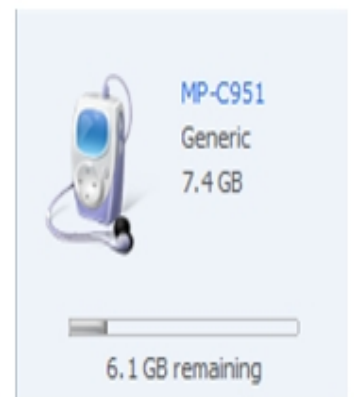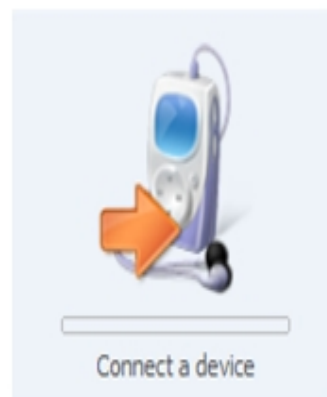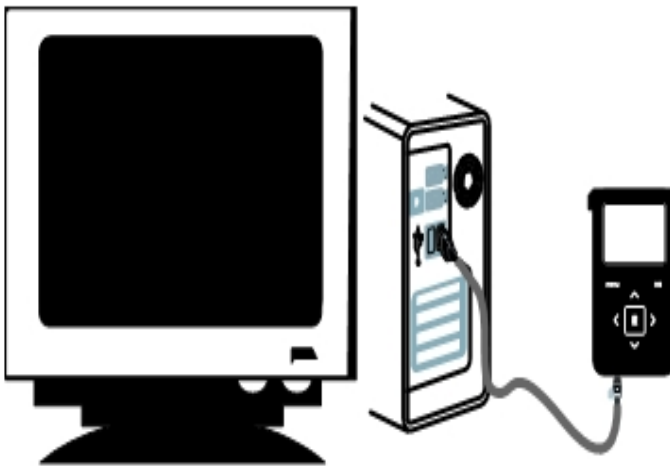

3) Browse your music library to choose songs to sync.

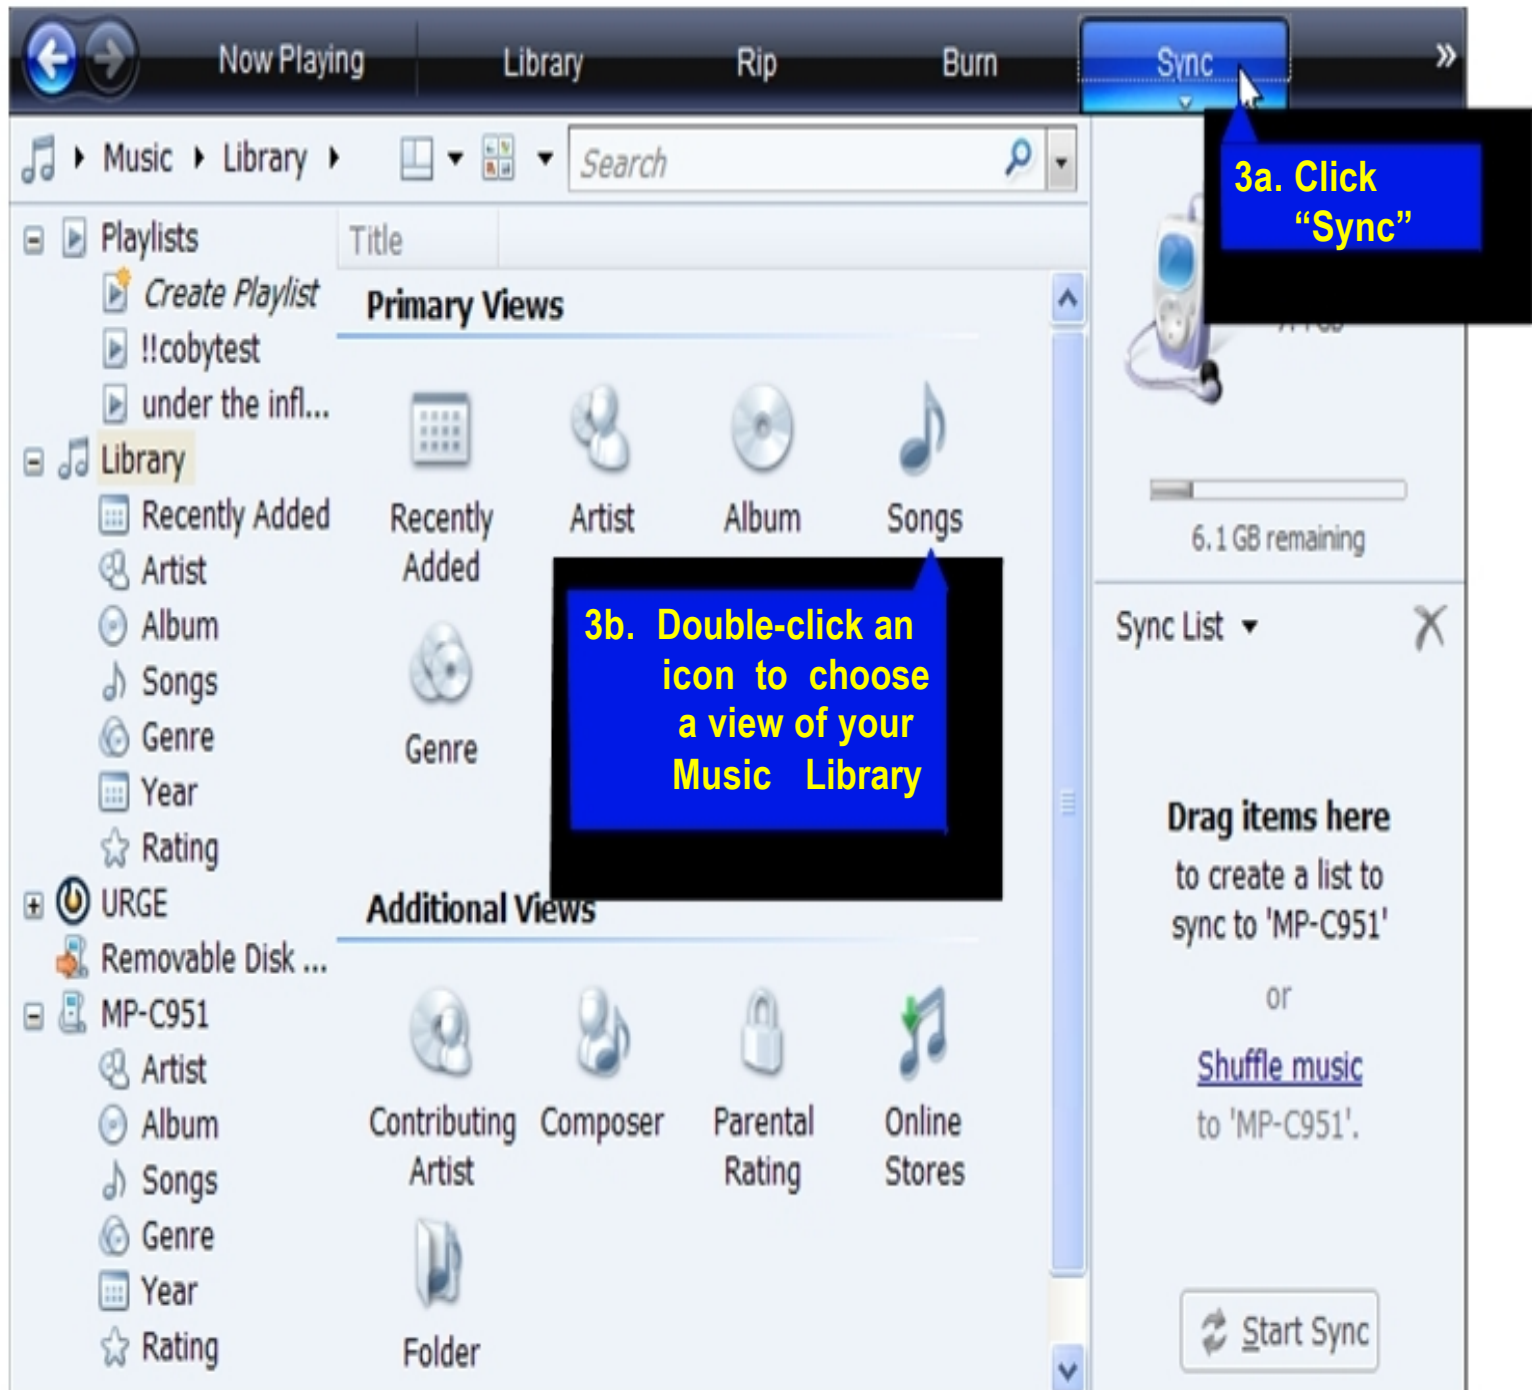

4) Select songs to sync to your COBY player.

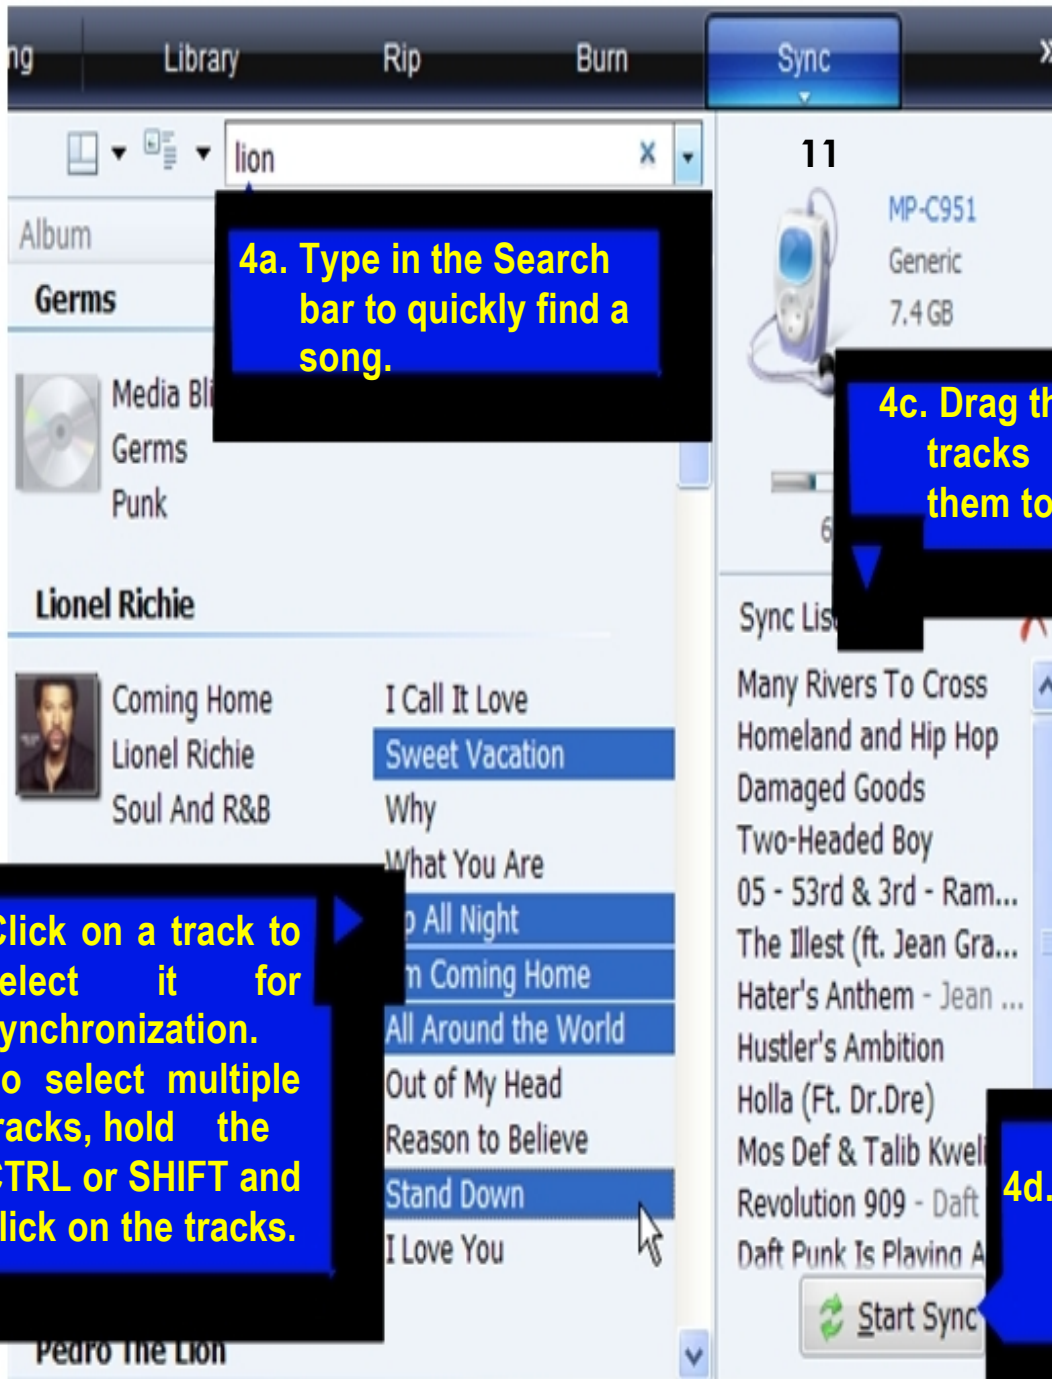

5) Disconnect your COBY player from the computer.

Once the sync process is complete, unplug your player from the USB port of the computer. Now you're ready to listen to music on your COBY player.

The screenshot shows the iTunes application window with the 'Sync' tab selected. The main pane displays 'Sync Results' for the device 'MP-C951'. A table lists the files synchronized to the device, all marked as 'Synchronized to device' and 'Files You Added'. The left sidebar shows the device 'MP-C951' selected under the 'Removable Disks' section. The right sidebar shows the device name 'MP-C951', its capacity '7.4 GB', and a progress bar indicating '6 GB remaining'. Below the progress bar, a message states 'You can now disconnect 'MP-C951''. At the bottom right, there is a 'Start Sync' button.

Title	Status	Playlist
Files You Added		
Many Rivers To Cross	Synchronized to device	Files You Added
Homeland and Hip Hop	Synchronized to device	Files You Added
Damaged Goods	Synchronized to device	Files You Added
Two-Headed Boy	Synchronized to device	Files You Added
05 - 53rd & 3rd	Synchronized to device	Files You Added
The Illest (ft. Jean Gr...	Synchronized to device	Files You Added
Hater's Anthem	Synchronized to device	Files You Added
Hustler's Ambition	Synchronized to device	Files You Added
Holla (Ft. Dr.Dre)	Synchronized to device	Files You Added
Mos Def & Talib Kweli...	Synchronized to device	Files You Added
Revolution 909	Synchronized to device	Files You Added
Daft Punk Is Playing A...	Synchronized to device	Files You Added

MP-C951
Generic
7.4 GB

6 GB remaining

Sync List ▾

You can now disconnect 'MP-C951'.

Start Sync

Common Troubleshooting

Problems	Possible Solutions
No Power	*Replace the Battery. *Hold the Play/Pause/Stop button for 5 seconds. *Reset the MP3 player by removing the battery
Song Freezes	*Make sure your WMA file(s) are not DRM protected. *The file is corrupted or damaged. *Unsupported file format (ACC, WAV..... Etc)
No sound after file transfer	*Ensure that the headphones are attached securely to the player. *Make sure your WMA file(s) are not DRM protected. *Unsupported file format (ACC, WAV.Etc)
MP3 Player not recognized by the Computer	*Check the connection. *Switch USB ports. * Reset the MP3 player by removing the battery.

If you are still having difficulties with your MP3 player, please contact Customer Care, Hours of operation, Monday-Friday 8:00 AM – 8:30:00 PM EST, Saturday and Sunday 9:00 AM – 5:30 PM EST. You can also reach us online at customerservice@cobyusa.com or techsupport@cobyusa.com

1-800-727- 3592