

HIP STREET®

**HS-3245 TOUCH SCREEN
MP3/WMA PLAYER
USER MANUAL**

Support:

Thank you for purchasing a Hip Street product and we hope you enjoy using it

Please visit our website at www.hipstreetonline.com. We have a Frequently Asked Questions FAQ section where you will find answers to most of your questions. If you do not find an answer there, please use the option to contact our technical support department and kindly send us an email detailing your question and we will get back to you promptly.

Note:

The display screen pictures contained in this Guide are used only for indication purpose. Real display pictures may be different.

Preface

Kindly read and retain all the operating instructions before operating the unit. We cannot assume any liability that may arise out of improper operation or incidental/accidental damages. The contents of this user manual are subject to change based on newer developments.

I. Features:

2.8-inch 320x240 dot matrix color TFT display

Touch screen interface

Supports MP3 /WMA playback.

Supports MPEG-4(AVI) video formats

Supports JPEG picture viewing

FM tuner. FM Recording

Game function

Supports T-Flash Memory upgrade card

Built-in microphone, high quality voice recording

Several EQ modes

Built-in Loud Speaker

Supports several languages

Firmware upgradeable (**not recommended if product functioning normally**)

No driver needed under Windows 2000/XP/ME/Vista

II. Note:

1. Do not use the unit in places that are extremely hot, cold, dusty, or humid.
2. The battery life will differ with different usage conditions and modes.
3. Please charge the unit when any of the following cases occur:
 - A. The battery indicator informs of a low battery
 - B. The player turns off automatically, and turns off again after rebooting.
 - C. The keys become inactive
4. Do not disconnect the player while it is formatting or uploading/downloading. This may lead to errors
5. The player is charged while connected with PC via USB / AC adaptor, regardless if it is powered on or not.
6. Do not disassemble. Please contact our support center if you need service.
7. Specifications are subject to change and improvement without notice
8. Avoid water or foreign objects falling on this player.

IMPORTANT:

 
If you need basic help with this product to load songs/photos onto this player, please visit our website at www.hipstreetonline.com or please review the Interactive Product Tutorial that comes with this product and that is stored on the CD that accompanied this product.

You must have songs in .mp3 or .wma file format on your computer to be able to load them onto this player.

You must have photos in .jpg file format on your computer to be able to load them onto this player.


For Video files, please read through this manual and it itemizes a step by step process on how this is done. Again for all help please refer to either the Interactive Product Tutorial or contact us at support@hipstreetonline.com

III. Introduction of main buttons and functional parts:

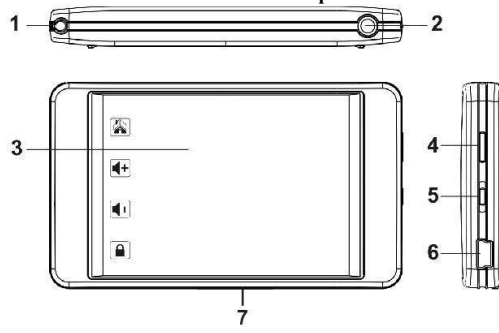

- | | | |
|----------------------|------------------|-----------------|
| 1、 Pen | 2、 Earphone jack | 3、 Touch screen |
| 4、 Power on/off | 5、 power switch | 6、 USB jack |
| 7、 T-Flash card slot | | |

 IV. Main Interface

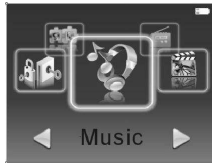

In the main interface, click “◀/▶” in the main interface to select the menu.

V. Audio playback

Select “Music” in the main menu, and click the music icon to enter. The player starts playback automatically.



Operation on buttons:

Click “⏮️/⏭️” icon to select files. Keep on clicking the “⏮️/⏭️” icon to REW/FF.
Click “▶️” icon to start playback. Click the icon again, it pauses, and the icon turns to



Click the “⏮️” icon to A-B repeat. Click “⏮️” once to set the start point of the repeat section “A”; Click “⏮️” again, the end point B is set, and the player starts to repeat the section. Press “⏮️” button the third time to cancel A-B repeat.




Functions:**1. Adjust Volume**

Click the top of the “🔊” icon to increase the volume. Click the bottom of it to decrease the volume.


2. Play list

Click the “🔍” icon to enter the audio file play list, the music will not stop.



Click the top or bottom of the  icon to select the folder you want. Click  icon to enter the sub-folder; click  icon to return to the previous folder.

3. Delete files

Select the file you want to delete and click  icon to delete it.

 
4. FF/REW

Keep on clicking the “” icon to REW/FF.

5. Lyrics Display

While playing music files, if there is a lyric file which has the same name with the music file, and is placed in the folder of the playing music file, the player will display the lyrics directly.

VI. Video playback

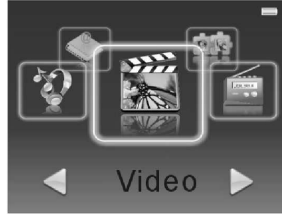




Select "Video" by clicking the "◀/▶" icon in the main menu, and click it to enter. The player enters the video file list first. (If the T-flash card is inserted, the player will display two folders "Card" and "Flash memory". Select one and enter to operate".)



Operation on buttons:




Click the top or bottom of the  icon to select the file you want, and click the  icon. Click " " to return to the main menu.



Functions:

1. Playback/pause

While playing video files, click the  icon to pause. Click it again to resume playback.

2. FF/REW

Keep on clicking the “” icon to REW/FF.


3. Return

Under video playback interface, click  icon to return to the play list.

4. Adjust Volume

Under video playback interface, click “+” icon to increase the volume; click “-” to decrease the volume.

5. Delete files


Select the file you want to delete and click  icon to delete it.

VII. FM tuner [Your earphones MUST be plugged in for FM to work]

 



Select "Radio" in the main interface, and click it to enter.



Click  icon to enter the FM sub-menu:

1. Searching for stations

Select “Manual”, and keep on clicking it for 2 seconds, it enters the manual searching interface to search for the station manually. Keep on clicking “” icon to searching for stations from low or high frequency. There will be no voice while searching for stations. It will stop searching until it searched for the next station. Click “” icon momentarily, the frequency will be decreased or increased 0.1MHz every time.

2. Preset stations

Enter the “Preset” menu, click “” icon to select the preset stations.

3. Store stations

Select “mem”, and keep on clicking it for 2 seconds, it enters the saving interface. and then select the position of saving the station: CH1, CH2....Click “Yes” and then select “Yes” or “No” to save or cancel.

4. Delete stations


Select “Del”, and keep on clicking it for 2 seconds, it enters the deleting interface. Select the station you want to delete: CH1, CH2... and click “Yes” to delete it.

5. Auto searching:


Select “Auto”, and keep on clicking it for 2 seconds, it enters the auto-searching interface and starts to searching for stations automatically.

6. Adjust volume




Click the top of the  icon to increase the volume. Click the bottom of it to decrease the volume.

 
7. FM recording

Click  icon to enter the FM recording interface. Click it again it starts to recording.

8. Return to the main menu

Click  to return to the main menu.

VIII. Picture viewing

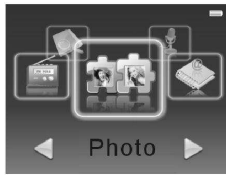





Select "Photo" in the main menu, and click it to enter. The player enters the file list first.




 
 

Operation on buttons:




Click the top or the bottom of the  icon to select files. Click  icon to open the file; click  icon to return to the main menu.

Click  icon to delete the file you selected.




 Click the  icon to browse the pictures automatically. Click " " icon to select the picture you want and press the POWER ON/OFF button to display the picture in full screen. Click  to return.

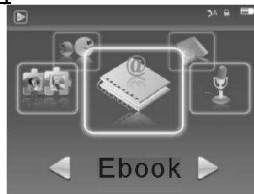


IX. E-book [Reading TEXT]



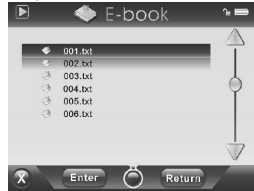 

Select "TEXT" in the main menu, and click it to enter. The player enters the file list first.




Operation on buttons:



Click the top or the bottom of the  icon to select files. Click  icon to open the file; click  icon to return to the main menu.

While reading the e-book, click the top or the bottom of the  icon to turn to the previous page or next page.

 
Click  icon to delete the file you selected.



Click  icon to return.

Click  icon to load bookmark.
Keep on clicking  icon to save bookmark.

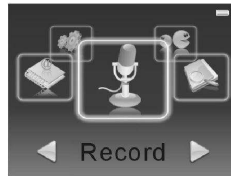


X. Recording






Select "Record" in the main menu, and click it to enter.

 


Operation

Click  icon to start recording, the  icon turns to .



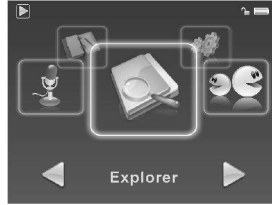

Click  icon to pause, keep on clicking  to stop and save the recorded file.

Click  icon to return to Main menu.

 
XI. Explorer

Select “Explorer” in the main menu, and click it to enter. (If the T-flash card is inserted, the player will display two folders “Card” and “Flash memory”. Select one and enter to operate”.) There list all of the files in the player.



Click the top or the bottom of the  icon to select files. Click  to playback.
Click  icon to return.
Click  to delete the selected file.
Press and hold "M" button to return to the main interface.

XIII. Settings

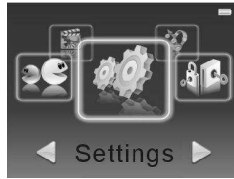

Select "Settings" in the main menu, and click it to enter the setting interface.



After selecting the corresponding setting, click **Enter** icon to enter. Click **Return** icon to return to the previous menu.

1 . Music Playback setting

In this setting interface, there are four options to be selected: repeat mode , play mode , EQ select and user EQ set .

① Repeat mode

In this menu, there are seven options to be selected: once, repeat one, folder once, folder repeat, All once, All repeat and Intro.

② Play mode

In this menu, there are two options to be selected: order and shuffle.

③ EQ selection

In this menu, there are eight options to be selected: Normal/3D/ Rock/Pop/ Classic/ Bass/ Jazz/ User EQ.

④ User EQ set:

In this menu, there are five kinds of frequency , and there are 6 levels in every frequency for user to adjust.

2 . Radio setting

In this menu there are two options: Stereo Switch, FM region.

① Stereo Switch. In this menu, there are two options: On and Off.

② Listening ZONES

In this menu there are four options: China, Europe, Japan, and the U.S.A. **For Canada, please choose U.S.A.**

3 . Record setting

In this setting there are two options: record quality, record volume.

① Record quality

In this menu, there are two options: High quality , General quality.

② Record volume

In this menu, there are five options to be selected: +1, +2, +3, +4, +5. The higher the level is , the bigger the record volume will be.

4 . Display setting

In this menu there are three options: Backlight time, Lum, and Backlight mode.

① Backlight time

In this menu there are 6 options to be selected: 5 seconds, 10 seconds, 15 seconds, 20seconds, 30 seconds, always on.

② Lum

In this menu, there are five options: 1, 2, 3, 4 and 5. The higher the level is, the darker the brightness will be.

③ Backlight mode

In this menu, there are two options: Normal and Power save.

5. Auto Play Set

To set the time of autoplating while viewing pictures or texts.

① Text

In this menu, there are five options: 1 second, 2 seconds, 3 seconds, 4 seconds and 5 seconds.


② Jpeg

In this menu, there are five options: 1 second, 2 seconds, 3 seconds, 4 seconds and 5 seconds.

6. System setting

In this menu, there are three options to be selected: Language, about and upgrade.

1). Language selection

Select the language you want, and click  icon to confirm.

2). About

The following information is displayed: this machine storage capability, remaining capability, system software version, which is read only. Click **Return** icon to exit.

3). Firmware upgrade

In this menu pop up dialog box, click “**Yes**” or “**No**” icon to confirm upgrade firmware.

7 . Power off time

In this menu, there are many options to be selected as follows: OFF, 10 minutes, 15 minutes, 30 minutes, 60minutes and 120 minutes.

8. Default set

In this mane, a dialog box pops up, click “**Yes**” or “**No**” icon to confirm whether to restore the system default or not.

XIV Converting a Video File

AVI is one of the most popular video formats being used today for portable media players. It is also very commonly used for video available on the internet. It adopts

XviD/DivX format to code the video file. The quality of this type of video file is good and the size of the video file is small.

This AVI converter supports converting AVI, MPG, MPEG, RM, RMVB, WMV, DAT, MP4, ASF, MKV, VOB formats to AVI format in high speed and high quality.


System requirements:

- The Converter software needs the basic configuration as follows:

CPU : Intel or AMD processor , Intel Pentium 3 or above , including Intel Celeron series

Operation steps:


1. Insert the CD that came with this player into your CD Drive and look for a file or folder called “**AVIConverter Vista Compatible Setup Package.exe**”
2. Double click on the file and follow steps to install this AVI converter software on your computer’s hard drive. Press ‘FINISH’ to complete the installation.
3. Once the AVI Converter has been installed, please locate this program on your computer and start the program. This is the 1st step in starting to convert files to be played on your player.

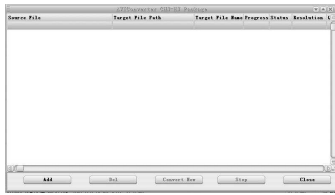


4. The above image shows the starting screen.

Conversion Steps:

① Click on 'Add' to add a file to convert. Then select source file path, as shown in the picture below. This indicates the file that you want converted to play on this player.

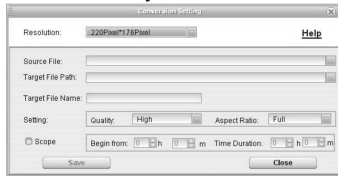


- ② You now have to select where this converted file is to be saved. Select the target file

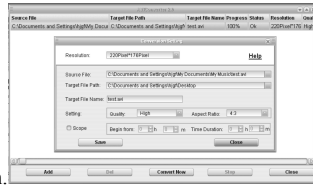

path.

- ③ Select the convert quality and aspect ratio. Make sure resolution is set at 320x240.

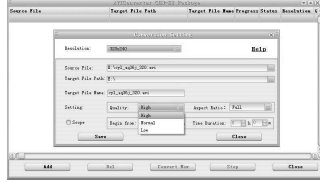

④ Once this is done , press 'Save' key. You may continue to add another file , or press 'Close' key to return previous interface.

5 Press 'Convert Now' to start converting:



After the conversion progress shows 100%, it means that the file is converted successfully. You may now use your USB cable to transfer the file to the player. You are now ready to watch the video file on your player


XV. System / Firmware Upgrade [NOT to be DONE if the player is working fine]

The firmware of player can be upgraded by the upgrade tool in the enclosed CD.


Operations:

1. Run the ConsumerSetup2.4.0.exe in the enclosed CD.

2. Click “Next” as per the promotion on the dialog box. In the “browsing” option of the fourth dialog box, select the “upgrade fool” folder of the enclosed CD, and click “OK” to confirm.

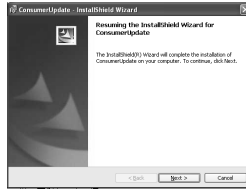


3. Push the power switch to the OFF position, press and hold the POWER ON/OFF button, and then connect the player to the PC via USB cable.
4. The PC displays “rock USB Device”, and asks to install the driver. (If the driver is installed, this progress is skipped.)
5. Run the “Firmware Update” program that you just installed in the START menu.

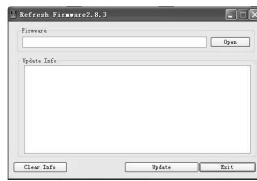

6. Click “Open” and select the firmware.



7. Click “Start” to upgrade.

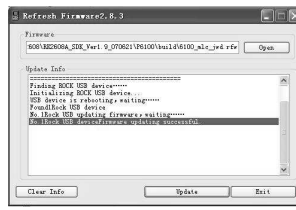

8. Disconnect the player and the PC after upgrading.

XVI. Troubleshooting

1. Failure to start/No response on buttons/ player freezes

- Check if the POWER SWITCH is on the position of “ON”, and check the power of battery;
- Connect the unit with your PC or the AC adaptor and check again;
- Push the power switch to the direction of OFF and push it to ON again. Press OK button to turn on the player.
- If it still fails to start after charge , please contact our customer service center.

2 No voice in the earphone

- Please check the volume is 0.
- Please check the connection of the earphone.

3. Serious noise

- Please check whether the pin of the earphone is dirty, as if this is the case, it could be the cause of noise.
- Please check whether the music file is corrupted in some way. Please try playing another music file. If the file is corrupted, it could cause serious noise or not play at all.

4. No sound from the loud speaker

- Check if the setting on the loudspeaker is set as CLOSE. Please check for this in “Settings-Speaker” menu.

5. Display clobber on the screen

- Please check whether the language is properly selected or not, and please enter <Setting>\<system setting>\<language selection> to set the language.

6. Download file failure

- Be sure the connection between computer and player is secure.

- Check whether the memory is used up or not;
- Check whether the USB cable is broken or not.

7. Does not support WMA format music

The player does not support WMA format music files which are lower than 64kbps bit rate.

Need assistance? Please call us!

If you encounter any difficulties with this product, please visit our website at www.hipstreetonline.com and review our support section or call us. Our representatives are ready to help you with any questions about your product. We can guide you through connections, first-time use, or any of the features. Just give us a call or send us an email.

Customer & Technical Support: **1-888-4KOBIAN** or **1-888-456-2426**

Monday through Friday: 8:30am – 5:00pm EST

Email: support@hipstreetonline.com

We want you to start enjoying your product right away!