



●

## MP3 Video Player with 1.5'' LCD



HS-T29-2GBBL  
(Version 2.0)

## User Guide

Before operating your MP3 Player, please read this guide thoroughly and keep it for future reference.

## Table of contents

<b><u>Table of contents</u></b>	<b>1</b>
<b><u>Features Summary</u></b>	<b>3</b>
<b><u>Preparation before use</u></b>	<b>3</b>
<b><u>Exterior view</u></b>	<b>3</b>
<u>Key action definition</u>	4
<u>Switch on/off</u>	4
<u>Low battery</u>	4
<b><u>Connection with PC</u></b>	<b>4</b>
<b><u>System configuration</u></b>	<b>4</b>
<u>Connection with PC</u>	5
<b><u>Music</u></b>	<b>5</b>
<u>Music play interface</u>	5
<u>Menu options</u>	5
<b><u>Movie</u></b>	<b>8</b>
<u>Menu option</u>	9
<b><u>Recording</u></b>	<b>9</b>
<u>Recording interface</u>	9
<u>Menu options</u>	9
<b><u>Voice Play</u></b>	<b>10</b>
<b><u>FM Radio</u></b>	<b>10</b>
<b><u>Photo browser</u></b>	<b>11</b>
<u>Menu Options</u>	11
<b><u>System settings</u></b>	<b>12</b>
<b><u>E-book (Text)</u></b>	<b>13</b>
<u>Menu Options</u>	14
<b><u>Troubleshooting</u></b>	<b>14</b>

Thank you for your purchase of this Hip Street video MP3 player and we hope you enjoy using it. Please visit our website at [www.hipstreetonline.com](http://www.hipstreetonline.com).

Please ensure that you fully read and understand the information within this instruction

manual prior to using your product. It is advised that you keep this instruction manual in a safe place for future reference. We sincerely hope that this high quality product offers you endless hours of entertainment.

### **Important safety precautions**

- Always follow these basic safety precautions when using your player. This will reduce the risk of product damage and personal injury.
- Do not disassemble, repair or modify the player by yourself. Refer servicing to qualified personnel.
- Do not dispose of the player in extreme heat to avoid explosion.
- Keep the player away from direct sunlight or heat source.
- Do not expose the unit to rain or moisture to avoid any malfunction.
- Do not use the player in a rather dry environment to avoid static.
- Never apply heavy impact on the player like dropping it or placing it on a magnet.
- Clean only with a dry cloth. Make sure the player is turned off before cleaning. Do not use liquid cleanser.
- Be sure to back up your files. We will not be liable for the loss of data due to improper operation, repair or other causes.

### **Precautions in using the earphones**

- Do not use the player with earphones while driving a motor vehicle or riding a bicycle.
- To avoid an accident, do not turn up the volume too high while walking.
- It's not recommended that you use the earphones at a high volume for an extended time as this may cause hearing damage.

### **Product and Battery Disposal**

This product contains a built-in lithium battery and should not be disposed of in normal household waste. For disposal and recycling, please contact your local waste management authorities.

The recycling and processing of electronic waste will make a significant contribution towards helping protect the environment.

### **FCC/IC WARNING:**

This device complies with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules and the Canadian ICES-003. Operation is subject to the following conditions:

 
- this device may not cause harmful interference, and
- this device must accept any interference received, including interference that may cause undesired operation

## **Features Summary**

1. Music play: supports formats such as MP3, WMA and WAV, etc.
2. Recording support: supports MIC recording
3. Photo browsing: supports such formats as JPEG, BMP and GIF.
4. Video play support: supports video play formats such as AMV and AVI (need to be converted through the conversion tool, but may be played through the normal AVI-format play tool on the PC).
5. Supports reading in the form of text documents.
6. Supports USB update method.
7. Support: Multiple languages.
8. Supports games.
9. Auto Power Off

## **Preparation before use**

## Exterior view

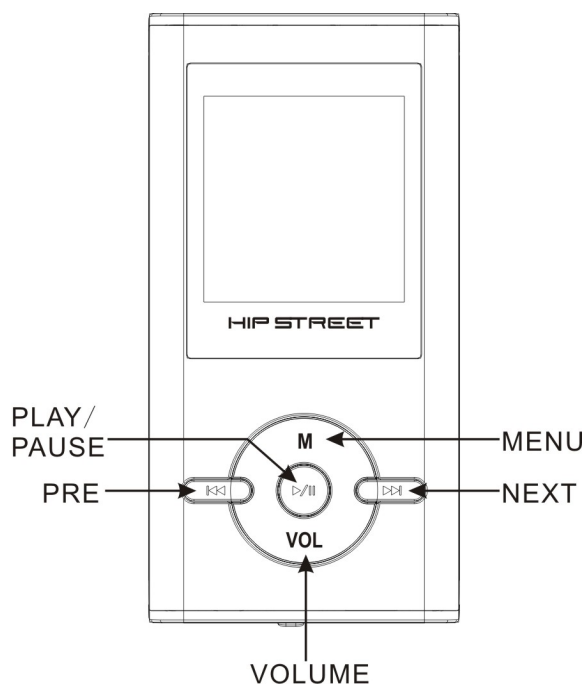

**M** key: refers to the Menu key. The menu will pop up after pressing this key, and then enter the next interface after confirming (Enter or Exit). Hold the key to go back to the main interface, press and hold M button to return to the main menu mode.

1. key: choose the previous option or file.
2. key: choose the next option or file.
3. key: refers to the Play/Stop key, playing the role of backspace key sometimes, that is to say, back to the previous menu from the submenu.
4. **VOL** key: Volume key.

## Key action definition

Action	Basic operations
Press	Key-pressing time is less than 1.2 seconds.
Hold	Key-pressing time is longer than 1.2 seconds.
Press on	Press and hold the key, do not release the key.

Note: Without special instructions, the basic operation in this Manual refers to **press**.

## Switch on/off

Push the toggle switch on the player to the ON position to turn on, and to the OFF position to turn off.

When the idle time of the system reaches the off time customized by the user, the player will automatically be turned off.

**Note:** When the player is connected to a PC or being charged, this function is invalid.

## Low battery

When the battery power is low, the prompt screen will appear and then the player will automatically shut down into the sleep mode. It should then be charged instead of restarting

it.

**Note:** When charging the player, be sure to switch the Power switch to the ON position, or charging will not occur.

## Connection with PC

### System configuration

Operating System: Windows XP/Vista/2000/ME/98 (need to install the driver for 98) / Mac OS 10

CPU: at least Pentium-133MHz

Memory: at least 32MB

Free hard disk space: at least 100MB

Video card: 640 \* 480 or above mode, at least enhanced color (16 bit)

USB port

 
ODD

### Connection with PC

In either the On or Off mode, connect PC to the player using the supplied USB cable and then the window showing the removable disk will appear on the screen/monitor of the PC.

## Music

Select **Music** on the main interface, and press **M** key to enter the music play interface. For the function of playing from the point where the music was stopped last time, the system will automatically enter the song play interface where the song was stopped last time.

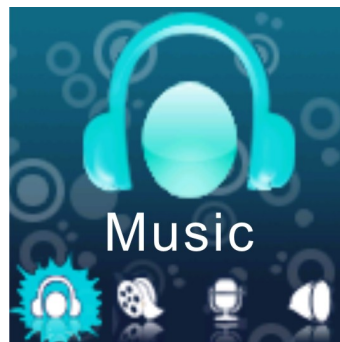


### Music play interface

Press **▶** key to switch modes between **Play** and **Pause**. Press **◀** and **▶** keys to choose the previous file or next file. Hold **◀** and **▶** key to Fast Forward or Fast Reverse.


Press the **VOL** key to enter the **Volume adjustment** mode, and then press **◀** and **▶** to adjust the sound volume, ranging from 0-40.

### Menu options

 
1. Press **M** key when stopping playing the music, when the system will enter Submenu 1, including the items such as **Local Folder**, **Delete files**, **Delete all**, and **Exit**.

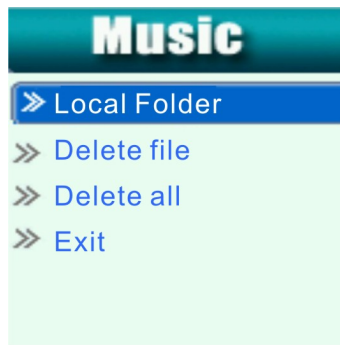

 2. Press **M** key when playing music, and the system will enter Submenu 2, including the items such as **Repeat**, **Equalizer**, **SRS WOW**, **Replay mode** and **Exit**.

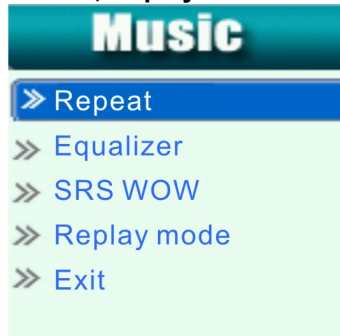

 Viewing Lyrics: With music playing, when the round ball icon in the lower right corner of the display screen is green, hold the **M** key to enter the lyrics display interface. Please note: If the round ball icon is red then the system cannot find the lyrics file and if you hold the **M** key the system returns to the main menu.

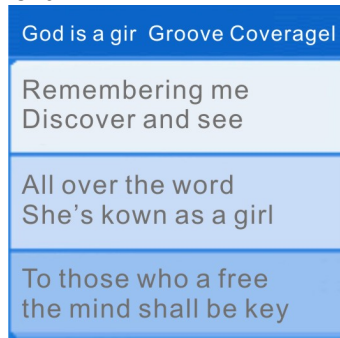

3. Under the Submenu, the system will automatically enter the corresponding music play interface if the non-operation time exceeds 8 seconds (the same for other applications).

#### Submenu 1

**Local Folder:** displays all files on the local disc. Press the **M** key to enter the lower-level submenu for selection. **Root** is used to store the files in the root directory of master disc. Recording files are stored in the **record** folder.

**Delete file:** deletes the selected file in the current directory. Press the **M** key to enter the file list, and press it again to enter the file deletion interface. Select the file to be deleted and then press the **M** key again. Select either No or Yes to confirm the action and press M key again to confirm the selected action.

**Delete all:** delete all files in the current directory. See the above operation process.

**Exit:** exit **Submenu 1**.

#### Submenu 2

**Repeat:** Press the **M** key to confirm the selection and exit.

Cycle mode	Icon	Description
------------	------	-------------

<b>Normal mode</b>		Play all files in order.
<b>Repeat one song</b>		Play one song repeatedly.
<b>Folder Play</b>		Play all files in the current directory in order.
<b>Repeat Folder</b>		Play the files in the current directory repeatedly
<b>Repeat all songs</b>		Play all files repeatedly.
<b>Random play</b>		Play the files in the directory randomly.
<b>Intro play</b>		Browse and play each file, and preview for 10 seconds.

**Sound effect mode:** select the sound effect mode needed: Natural, Rock, Pop, Classical, Soft, Jazz, DBB (Bass Boost). The icon for each mode is as follows:

Natural

Rock

Pop

Classical

Soft

Jazz

DBB

Selectable menu items under the **SRS WOW (stereo surround sound) mode** include: SRS WOW, User setting, and Disable SRS WOW.

Adjustable parameters under the option of User setting: SRS 3D (3D sound field effect) (0 ~ 10), TruBass (Bass) (0 ~ 10), FOCUS (treble) (0 ~ 10). SRS WOW is the preset mode with settings of 8-8-4.

## Replay setting

### 1. Replay mode

①. After selecting the **Replay mode** option, the system will go back to the music play interface, where the repeat mark will appear on the left corner of the LCD, indicating the entry of the replay function. At this moment, **A** (starting point of repeat) will be hidden or flash. After pressing and confirming the current time as the starting point of repeat, **B** (end point of repeat) will be hidden or flash. Re-press and confirm the selection of end time. Thus, A-B replay setting will be completed.

②. The system will begin to replay according to the set **replay times** and **replay interval**.

③. When the system is replaying, press to enter the **contract reading and repeat** function option. Then the original repeat icon will change into the **contract reading and recording** icon indicating the entry of **contract reading and recording** function, when the recording can be started. Recording time will be **10% longer** than the set repeat time. After the end of recording, the icon will change into At this point, the system will start to repeat according to the set repeat times, in the way of **contract reading and repeat** **contract reading and recording**. During this period, pressing will make the system go back to the repeat function.

④. When the system is to cancel the contract reading and repeat function, press to show the icon indicating the entry of contrast repeat function. After completing the repeat, the system will show the icon again, indicating that what is playing is the contract reading and recording contents recorded just now. So far, the system will repeat the contrast in the way of repeat **contract reading and recording**. During this period, press to back to the contrast reading and repeat function, and then press to start the setting of repeat mode again.

 
⑤. Press **M** to exit the repeat interface and back to the music play interface.

2. **Replay times**: press      and      to set repeat times: 1-10. Press **M** to go back to the music player interface after confirming.

3. **Replay gap**: Set the minimum time interval between two times of repeat: 1-10 seconds. Setting function is the same as that of **Repeat times**.

**Exit**: exit Submenu 2.

## Movie

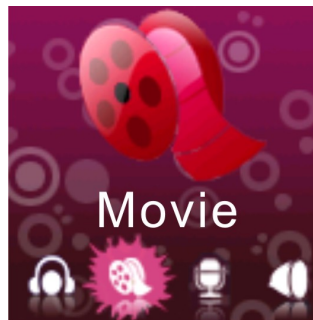


1. Select the video play function on the main interface, and press **M** to enter video interface.
2. Use      to select the video to play. Press to start playback.
3. Video will resume play from the last breakpoint where the movie was paused.

## Menu option

 Under the halted state, press **M** to enter the menu options, including **Local folder**, **Delete file**, **Delete all**, **Repeat mode**, and **Exit**. The functions and operation methods are the same as that of music application.

## Recording

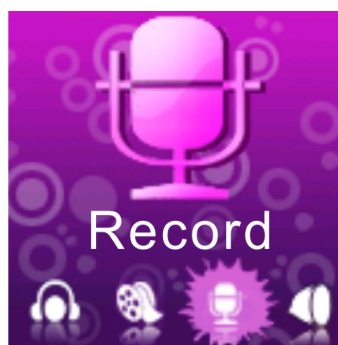

## Recording interface

Select Record on the main interface and press **M**. Press ► to start/pause/restart and continue the recording. Hold ► to save the current recording content, and be ready for new recording. After holding **M**, the system will automatically save the current recording contents, and then back to the main interface.

## Menu options



 
If the low-power signal appears in the process of pause mode, the system will automatically save the recording content and go back to the recording function interface.

Press **M** to enter the menu options, including **Local folder**, **REC (Recording) type**, and **Exit**.

**Local folder:** view and choose the path information to save the current recording file.


**Recording type:** WAV-format music recording, with the type of **32K/64K/128K/256K Kbps**

## Voice Play

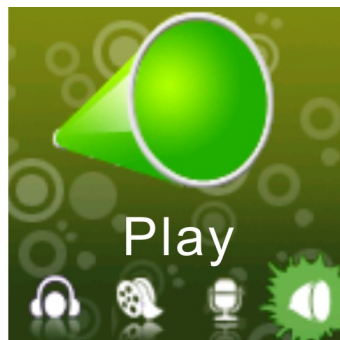

The voice play function operation is the same as that of music play.

## FM Radio

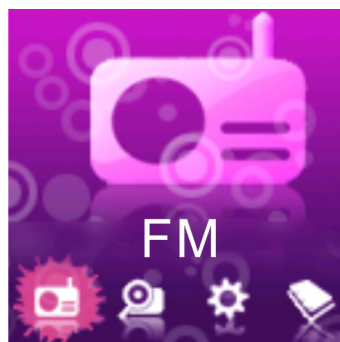 

Note: Plug earphones in to listen to the radio.

1. Press or button to choose FM mode, short press **M** key to enter this option.
- 2) In Normal radio mode, press or button for radio tuning; press button to switch from Normal radio mode to Preset radio mode:
  - a. **Save stations:** in FM mode, short press **M** key when window pops up, press or button to choose "Save Preset", then short press **M** key for storage of the currently received station.
  - b. **AUTO SCAN:** in FM mode, short press **M** key when below window pops up, press or button to choose Auto Scan. Then short press **M** key to start searching automatically and save the stations received. The player can save up to 30 radio stations.
  - c. **Manual SCAN:** in Normal radio mode, short press or button to search channels manually.
  - d. **Delete:** in Preset radio mode, short press **M** key when below window pops up, and press or button to choose "Delete", then short press **M** key to delete the selected radio station.

- **FM radio recording**

The player supports FM radio recording function. While listening to radio program, you can record and save the currently broadcast program. For operation method, please follows below steps:

- 1) In FM mode, short press **M** key when below window pops up, short press **/** button to choose FM REC and press **M** key to enter, now the screen will display as below:
- 2) Pause: short press **▶||** button to pause recording.
- 3) After finishing recording, hold **M** key, the system will automatically save the recorded program.

Play FM recorded file: please refer to the operation steps in playing voice recording files.

## Photo browser



Press the **M** key on the main interface to enter the picture browsing. Press **>** to select the picture to view. Press **▶||** to view the picture browsed, and press it again to exit. Press **< / >** to browse pictures back and forth.

## Menu Options

Submenu items: **Local folder**, **Playback set**, **Delete file**, **Delete all**, **Exit**.

Except for the **Play settings**, functions and operations of other menu items are the same as those of previous applications.

### Play setting

**Manual play:** in case you need to manually play each picture, press **<** or **>** to view the previous or next picture.

**Auto play:** after the entry, adjust the time interval (2-10s) for automatic play, and press **M** to confirm and exit.

## System settings



1. **System time:** press **Volume control** to switch among the options of Second, Minute, Hour, Day, Month and Year, press **←** or **→** to adjust the value, and press **M** to save the settings.

**2. LCD (Screen) settings:**

**Dark (black screen) mode:** The backlight will be turned off in case of no key operation. Setting range is from 0 ~ 50 seconds. Setting step size: 5 seconds. The setting of **Dark mode** is invalid on the following five interfaces: picture display interface, video player interface, e-book reading interface, USB on-line equipment interface, and lyrics play interface.

3. **Language selection:** Supports many languages such as: Simplified Chinese, Traditional Chinese, English, Japanese, Korean, French, German, Italian, Dutch, Portuguese, Spanish, Swedish, Czech, Danish, Polish Russian, Turkish, Hungarian, Romanian, Arabic, Hebrew, Thai, Indonesian, and Greek.

**4. Power off setting:**

**Power-saving mode:** The system shall be automatically turned off in case of no key operation. Setting range is from 0 ~ 200 seconds. Setting step size: 10 seconds. This mode is invalid in the modes such as USB, audio and video playback, recording, FM listening, auto-play of pictures and e-books.

**Sleep time:** Set the sleep and shutdown time in case of no operation, with the range of 0-120 min, and the step interval of 10 min. The sleep mode shall be valid under all other modes than the USB mode.

5. **Memory info:** Displays the total capacity and the used space percentage of master disc or SD card of player. To switch between the information stored in two discs use **←** or **→**.

6. **Format device:** Formats the master disc and the disc where cards can plug in. **CAUTION:** Use of this operation will delete whatever is on the master disc.

7. **Firmware version:** displays the current firmware version information.

**8. Firmware upgrade**

The player can upgrade or repair the player's firmware through the firmware upgrade tool.

1. Download the latest version of firmware to your PC.

2. Connect the player with USB port on PC; confirm the proper connection state and ensure that no other removable disk is connected to the PC.

3. Run this tool.

If the player's internal firmware is intact, the tool will be switched to the firmware upgrade mode, and the information including the version of player's internal firmware will be displayed in the frame on the top left corner of tool interface. Click **Select a new version of firmware file** button to select the firmware file to be upgraded. After tool detects the firmware file to be correct, the information including the version of firmware file will be displayed in the frame on the top right corner of tool interface. Then click **Start Upgrade** to start the firmware upgrade.

If the player's internal firmware is damaged, the tool will be switched to the firmware recovery state. At this point, the frame on the top left corner of the software interface will show the version information of the player's internal firmware is empty, requiring the user to select a correct firmware file to restore the damaged firmware. Similarly, the frame on the top right corner of software interface will also display the version information of firmware file to be recovered. Then, press **Start Upgrade** button to start the firmware upgrade.

 
4. In the process of upgrading or recovering the firmware, do not break off the connection of player with PC. After the completion of the upgrade, the prompt information of "firmware has been successfully upgraded, and the program will automatically quit!" will appear in the message box of software. After the confirmation, the tool will automatically turn off and reset

the player, when the whole upgrade is finished.

9. **Keypad tone**: Set the volume level of keypad tone, with a range from 0 - 40. If the step length is 1.0, it indicates the keypad tone shall be closed.

10. **Exit**: back to the main interface of system setting.

## E-book (Text)

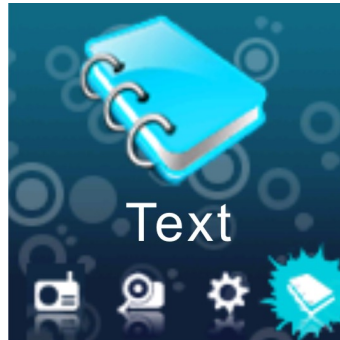

Press **M** key on the main interface to enter the e-book, and press **▶** to enter the text filelist for selection. Press **◀** or **▶** to move back and forth, and press **▶** again to exit.

## Menu Options

On the text file list interface, press **M** to enter Submenu 1, with its menu options including: **Local folder**, **Playback set**, **Delete file**, **Delete all**, and **Exit**. The functions and operations are the same as that of image viewing application.

On the text reading interface, press **M** to enter Submenu 2, with its submenu options including: **Bookmark select**, **Bookmark delete**, **Bookmark add** **Exit**. The bookmark function is the same as that of music application. Each text file supports the maximum of 16 labels.

## Troubleshooting

### Media player does not work or LCD does not display contents.

- Check the battery power.

### Power key does not work.

- The battery is depleted.

### Unable to download files

- Check the connection between computer's USB port and USB cables.
- Format the media player.

### Need assistance? Please call us!

If you encounter any difficulties with this product, please visit our website at [www.hipstreetonline.com](http://www.hipstreetonline.com) and review our support section or call us. Our representatives are ready to help you with any questions about your product. We can guide you through connections, first-time use, or any of the features. Just give us a call or send us an email.

Customer & Technical Support: **1-888-4KOBAN** or **1-888-456-2426**

Monday through Friday: 8:30am – 5:00pm EST

Email: [support@hipstreetonline.com](mailto:support@hipstreetonline.com)

**We want you to start enjoying your product right away!**