

**I-JAM™**  
MP3 PLAYER

**MODEL : IJ-50**

**User's Manual**



visit us at [www.I-JAM.com](http://www.I-JAM.com)

**THE NEW WAY TO**

**GENERAL**

Congratulations on your purchase of the I-JAM IJ-50 MP3 Player. The MP3 technology allows you to conveniently select music from either your own CD collection or from many Internet sites, and record it in a skip-free, high quality digital sound. Now you could listen to music the way that you wanted it.

In order to properly operate your I-JAM Player, please read this manual and understand all the controls and instructions before use.

We sincerely hope that you enjoy your new IJ-50 MP3 player. This unit is designed to be reliable and trouble free. In the event that you might need assistance, please feel free to call us at 888-325-4526 or visit our web site at [www.I-JAM.com](http://www.I-JAM.com).

**NOTE:**

- **Please remove the batteries from the unit if it is not in use for a prolonged period of time (e.g. 2 weeks)**
- **Please observe correct polarity when installing batteries.**
- **Please turn the power OFF before inserting or removing the Compact Flash Memory card.**

**CONTENTS**

The package shall contain the following standard and optional accessories:

- The IJ-50 MP3 Player
- New style back worn earphones
- The USB Compact Flash (CF) Memory Reader
- Installation CD-ROM
- Compact Flash Memory Card (OPTION ONLY)


**POWER REQUIREMENTS**

The unit operates on two 1.5V "AAA" Alkaline batteries (Not included)

## BATTERY INSTALLATION


Install the batteries as indicated in the diagram.

1. Slide open the battery cover on the back of the unit
2. Observe the polarity of the batteries before inserting them into the unit. \*\*\*Batteries installed incorrectly will cause damage to your unit or injuries to the user.\*\*\*
3. Replace the battery cover

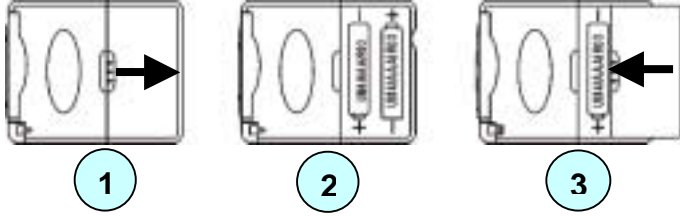

## BASIC OPERATION

Location of Control

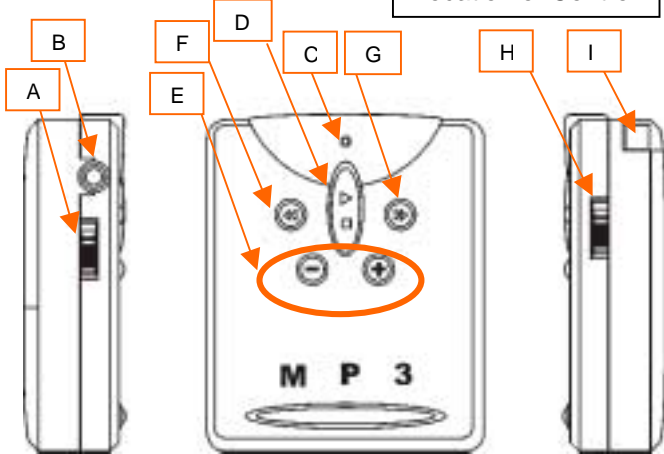


## KEY OPERATION FUNCTION

- A. POWER Switch – Power ON and OFF
- B. 3.5mm Earphone Jack
- C. Pilot Indicator – Flashes = PLAY, Steady = STOP
- D. PLAY/STOP Button - Press once to STOP, press again to PLAY
- E. Volume Up and Down Button
- F. Review - Skip and play the previous title
- G. Skip - Skip and play the next title
- H. HOLD Switch – Disable button actions
- I. CF Card Eject Button – Press to eject the CF Card


## HOW TO START

NOTE: You need to record MP3 files onto the CF card before you could listen to the music. Refer to the "Make Music" Section of this manual for details.

1. Install batteries onto the unit
2. Insert the Compact Flash (CF) memory card into the slot. NOTE: the grip slot of the CF is facing the front and its connector slides into the player.

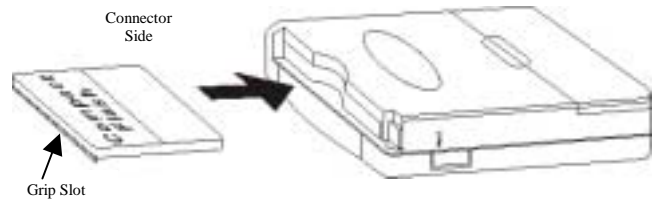

3. Insert the Earphone into the phone jack
4. Turn Power ON – The Player will start playing automatically on the first MP3 sound track.
5. Adjust Volume control to comfortable listening level
6. Use "Review" and "Skip" to select desired sound tracks on the CF Card.

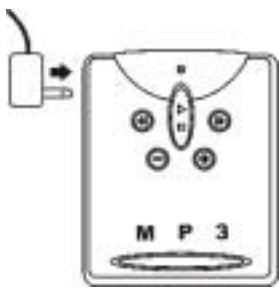

Earphone Connection



CF Card Eject

### TO CHANGE CF CARD

1. Turn Power OFF
2. Press the Eject Button on the back of the player to eject card.
3. Insert another CF card according to previous instructions , turn Power ON to start playing contents on the new Card

### MAKE MUSIC

This package is bundled with a USB Compact Card Reader. The reader connects to the USB port of a computer (PC or MAC). When appropriate software drivers are installed on the computer, this card reader will become a removable drive in "My Computer", for example (E: Drive), with memory capacity equal to those of the Compact Flash card inserted into the reader. Use this drive in the similar way you use a floppy drive.


The contents of the software installation CD-ROM supplied with this package contains:

- USB Reader Driver Installation Program (PC and MAC)
- Free version of Music Match Jukebox (PC Only)
- Free 7 day Trial version of SoundJam Jukebox (Mac Only)
- Free I-JAM Music MP3 files samples (PC and Mac)


You would need to use the jukebox to convert (rip) your own CD music collections into MP3 files, or to play MP3 files on your computer. You could drag and drop your MP3 files into the CF Card memory just like transferring your other files to a floppy drive. The CF card could hold MP3 together with any other files readable by the computer; your IJ-50 player would only play the MP3 files and disregard all other files in the CF Card.

### SOFTWARE INSTALLATION

1. Put the CD-ROM onto your computer's CD-ROM Drive
2. On your computer's Desktop, double click "My Computer", and then double click the CD-ROM Drive. (For MAC, just double click the CD-ROM Drive on the Desktop)

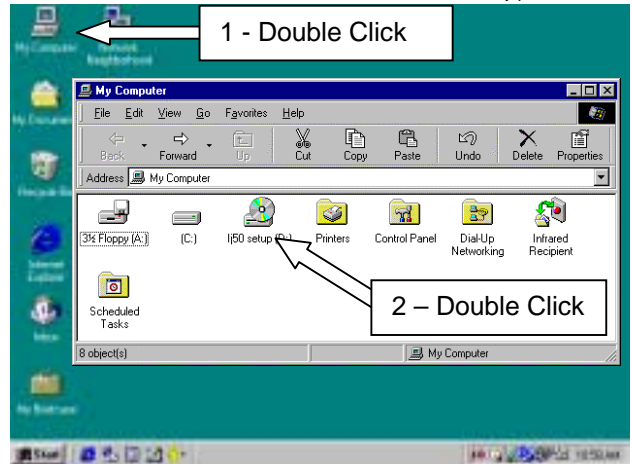

3. Double click "setup.exe" to install USB Drivers
4. After finishing USB Driver installation, double click "mmsetup.exe" to install Music Match Jukebox
5. After Jukebox installation, double click "MUSIC.htm" to sample I-JAM Music.

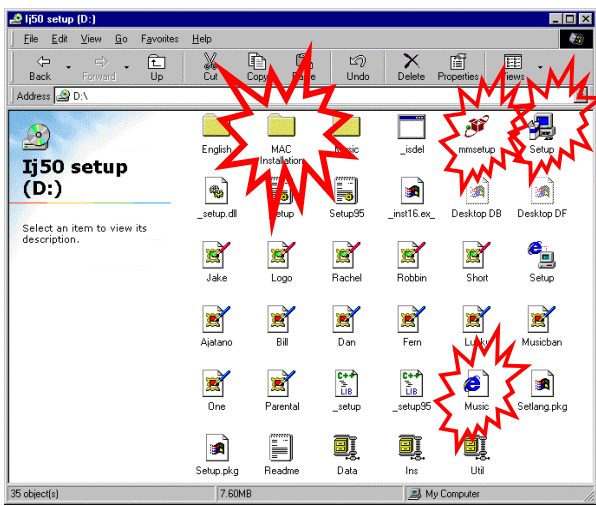

6. For Mac users, please follow the instructions on the "README" file in the "MAC Installation" folder.
7. You could find all the MP3 sample files in "MUSIC" Folder, connect the USB Reader to your computer, drag and drop those files into your CF card and play on your IJ-50 player.
8. Follow the instructions and help files in the Jukebox program to purchase an upgrade from the FREE version to FULL VERSION of the software.

#### TROUBLE SHOOTING

- No response when pressing buttons – Check HOLD switch
- No Pilot Light – Check Batteries
- No Sound – Press Play button. Check Earphone connection. Check if there is any recording in the CF Card

NOTE: The IJ-50 was tested OK with popular memory sizes CF cards supplied by major brands for Digital Camera & PCs.

#### SYSTEM REQUIREMENTS

##### For PC:

- 166MHz Pentium® or higher Multimedia PC
- Windows® 98
- CD-ROM Drive
- A vacant USB port
- Internet Access

##### For MAC:

- iMAC® or G3®
- MAC OS8.5 or higher
- CD-ROM Drive
- A vacant USB port
- Internet Access

Design and specifications subject to change without notice for product improvements.

#### WARRANTY AND EXCLUSIONS

I-JAM Multi-Media, LLC warrants that your IJ-50 MP3 Player, and its components will be free of any defects in workmanship and materials for a period of one (1) year from the date of first consumer purchase, provided that the product is used within the United States or Canada.

I-JAM Multi-Media, LLC will, without charge, repair or replace, at its option, the IJ-50 MP3 Player or any of its component parts upon delivery to the I-JAM Multi-Media, LLC accompanied by the first consumer proof of purchase. You must pay any initial shipping charges required to ship the product for warranty service, but the return charges will be at the expenses of the I-JAM Multi-Media, LLC if the product is repaired or replaced.

The limited warranty does not apply to any product that has been damaged by accident, misuse or abuse of the product, or as a result of unauthorized alteration or repairs, if the serial number has been removed, defaced or changed, or if the owner of the product resides outside of the United States or Canada.

All implied warranties, including warranties of merchantability and fitness for a particular purpose are limited in duration to the length of this warranty. The I-JAM Multi-media, LLC shall not be liable for any incidental, consequential or other damages, including, without limitation, damages resulted from the loss of use or cost of installation.

Some states do not allow limitations on how long an implied warranty lasts and/or do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply. Check with your state authorities for further information

#### I-JAM Multi-Media, LLC

1208 Remington Road, Schaumburg, IL60173, USA  
 Toll Free Tel:1-888-326-4526 ; Web Site: [www.I-JAM.com](http://www.I-JAM.com)  
 MADE IN CHINA

©2000 I-JAM Multi-Media, LLC. All rights reserved All other product names referenced herein are trademarks of their respective companies