

MEIZU

X6

DIGITAL MP3 PLAYER



User's Manual

2OLED
COLORS


TIME

FM
BASS TREBLE

SRS 
WOW

USB 
HIGH SPEED 2.0

 Firmware
Upgradeable



Supports WMA/MP3/WAV File Formats
Direct MP3 Encoding (CD Line-in)
USB Flash Drive, USB 2.0 High Speed

FM Bass/Treble & FM Recording
Digital Voice Recorder/A-B Repeat
Dual colors OLED, Electron Clock



Touching the product with wet hands may cause a malfunction. Do not keep it in high temperatures or dispose in direct sunlight.



Do not drop player or apply impact. Shock is the major cause of breakdown.



Keep away from places of dust and cigarette ash.



Make sure that the player does not get in contact with chemicals such as benzene or thinner.



When leaving the player not used for a long time, be sure to take out the battery.



Do not disassemble the player



Keep away from impact, do not contact with the static objects.



Please keep the SN of your player to register on Meizu's website or for your future's reference.

○ **Thank you for purchasing MEIZU product !**

Please read this manual carefully before use.
We recommend you to keep it for future reference.

○ **Trademark**

This product is the registered trademark of Meizu Electronic Technology Co., Ltd..

○ **Notice**

The various examples, drawings and specifications included in this User Manual are subject to change without prior notice when new product enhancements become available.

○ ** is the registered trademark of SRS Labs, Inc.**

SRS, TruBass, FOCUS and Headphone technology is incorporated under license from SRS Labs, Inc..

Plays MP3,WMA, WAV formats. Voice recording. FM radio broadcast with Bass and Treble adjustable. FM radio recording. Direct MP3 encoding (CD Line-in).
Mobile Disk. Synchronized song lyric showing. Text view.
Stylish design and Super Mini Aluminum body
High speed USB2.0 Interface. 4 Line graphic LCD
Stylish black base screen with yellow and blue dual colors OLED screen
Clock setting, Screen saver settings
Up to 12 hours of long playback with built-in chargeable Li-polymer battery
(The playing time may be shortened if visualization is used.)
128MB/256MB/512MB/1GB flash Memory chip available
First class electronic components coupled with 6 layers PCB ensure the clearness of sound quality.
Enhanced Integrated Navigator
Play/Stop/Power OFF, Recording/ A-B, Hold function
Next Track/Previous Track, Fast Forward/Fast Rewind
Infinite Loop. 40 levels of digital volume
Rich and super sound quality, Various EQ and sound field effects
User adjustable 5-band EQ
Normal, Rock, Jazz, Classic, POP, Bass, User EQ
SRS, WOW, TruBass, 3D Surround Support
Resume function. Auto Power OFF
Scroll speed. MP3 folder. Content manager
Multi-language Support
Firmware download & Logo download. ID3V2, ID3V1, Filename support
Product info display (Firmware version, Memory usage)

CONTENTS

○ PRECAUTIONS	04
○ COPYRIGHT NOTICE	05
○ PRODUCT FEATURES	06
○ PACKAGE	10
○ CONTROLS	11-12
○ CONNECTING THE PLAYER TO A PC	13
○ CONNECTING THE PLAYER TO A USB CHARGER	14
○ LCD WINDOW	15
○ BASIC CONTROLS	16
○ BASIC OPERATION	17-20
○ FOUR OPERATING MODES	21
○ NAVIGATION MODE	22

CONTENTS

○ OPERATING THE CONTROLS	23-26
○ REPEATING PROCEDURES	27
○ MENU LIST	28
○ DETAILED FEATURES BY MENU	29-41
○ INSTALL SOFTWARE ON THE PC	42-44
○ DOWNLOADING FROM THE PC	45-46
○ PLAY MUSIC	47
○ FM RADIO BROADCAST	48
○ AUTO SEARCH RADIO BROADCASTS	49
○ RESERVE THE CURRENT STATION	50
○ LISTEN TO THE MEMORIZED STATION	51
○ DELETE THE MEMORIZED STATION	52

CONTENTS

○ RECORDING FM	53
○ RECORDING VOICE	54
○ LINE-IN RECORDING	55
○ PLAY RECORDING FILE	56
○ DISPLAYING LYRIC	57
○ TEXT VIEW	58
○ FIRMWARE UPGRADE	59-62
○ FORMAT	63-65
○ HANDLING INSTRUCTIONS	66
○ TROUBLE SHOOTING	67
○ PRODUCT SPECIFICATIONS	68
○ MEMO	69-71



MP3 Player Main Body



Earphone



USB Charger



User's Manual / Warranty Card

USB Cable / Simple USB
Connection Jack

Installation CD



Fashionable Necklace



Line-in Recording Cable





Pouch

Front Side




Back Side

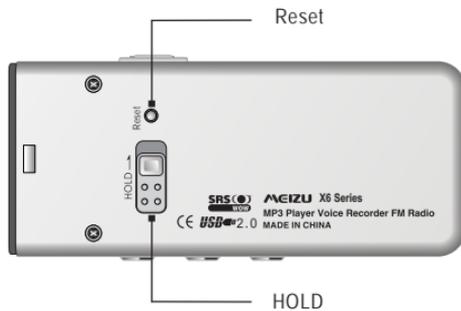

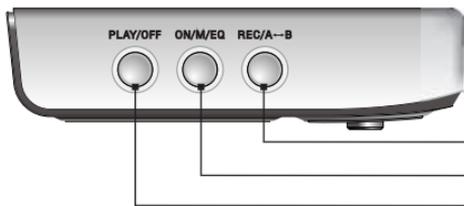

Right Side

REC / A-B
Power ON/ 4-Mode/ EQ
Play / Stop / Power OFF

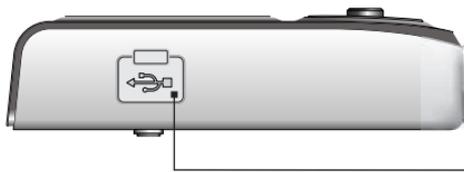

Left Side

USB Connection Port

Neck Strap
Earphone Jack

Line-in Jack



Top




Bottom Side

○ Connecting the Player and a PC

Caution: Before connecting the USB cable to the player, stop playback.

- 1 With the USB cable(provided), connect the USB port of the player and your PC.

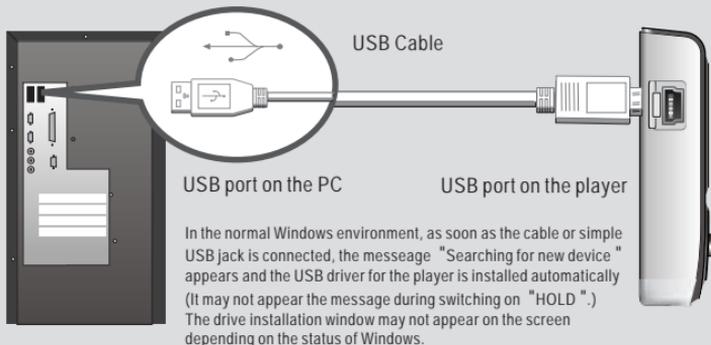

- 2 Connect the player and the PC, it appears on the LCD of the player as figure:



Connecting to a PC


During connecting the USB cable and your PC, USB port can be used as power supply. It takes about two and a half hours to charge the player. During connecting, it cannot play the music. Disconnect the cable before your listening to music.

○ Connecting the Player and USB Charger

1 Connect the USB Chargeable cable(provided) and the player.



Put down the USB cover, connect the player to power supply. During the connecting, USB port is used as power supply.

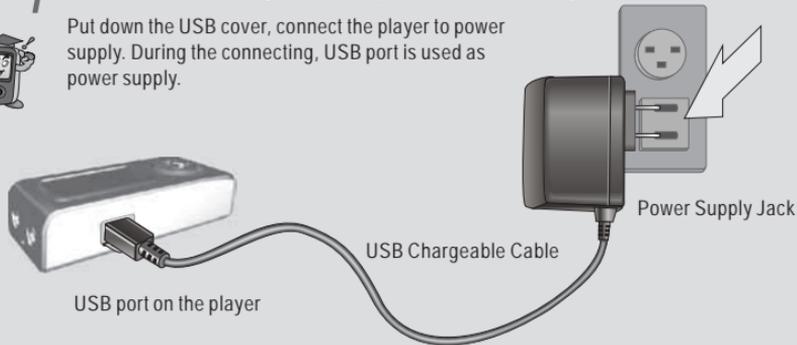


2 Connect the player and power supply, it appears on the LCD of the player as this figure:




3 Switch to Hold mode, the player is charged via the USB power supply.



It takes about two and a half hours to charge the player.

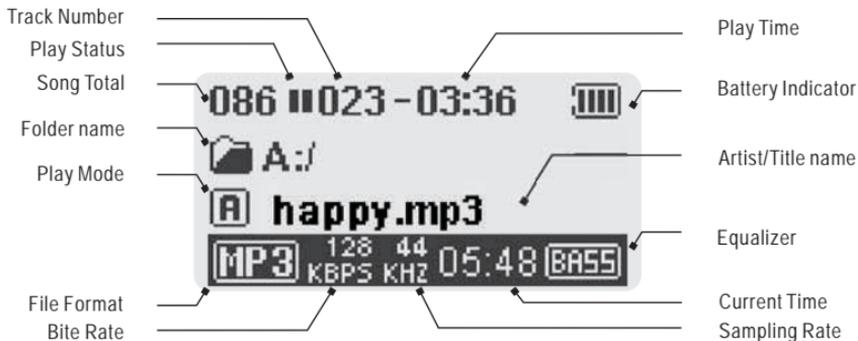

Two-Line Display of Song Title

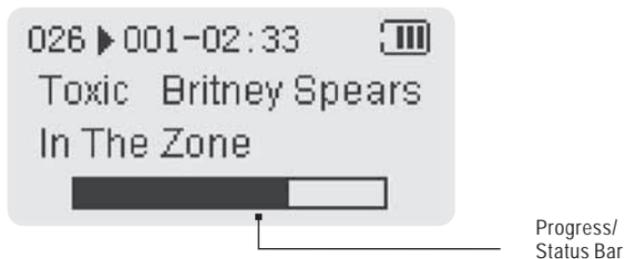



- 1 LCD window
- 2 To select the previous music for MP3 or station for FM. 
- 3 To decrease volume 
- 4 To select the next music for MP3 or station for FM. 
- 5 To select NAVI/MENU function. 
- 6 To increase volume 
- 7 To select HOLD function 
- 8 To select REC/A-B repeat 
- 9 To select turn ON, 4-mode, EQ 
- 10 To select Power OFF/Play/Pause/Stop 

○ When using Menu

Click



○ When using Navigation

Long Click

2S

3S



○ Power ON / Power OFF

During power OFF, click the button  and turn on the player.

Long click the button  for about 3 seconds, it displays the message to power off.

○ Increase / Decrease Volume



Press "+" on volume button to increase volume and press "-" on button to decrease volume.



○ Selecting Modes



○ Selecting Songs

During play music, press or button to search music.

Switch to the next track.

If is pressed after 5 seconds into the track, the track is played again from the beginning and the button is pressed before 5 seconds, the previous track plays.

○ EQ Selecting

During play music, press to select and change EQ modes.



EQ icon is changed accordingly during selecting




○ Hold

Using hold function to make buttons inoperative and prevents unwanted action caused by accidental pressing.

Switch to hold: Function  button to switch to Hold.



Release: While holding, function  button to release.

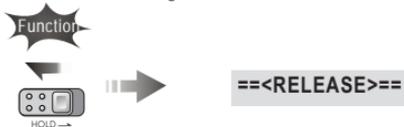

While switch to hold function, all the buttons cannot be operated.
It is irrelevant to listen music or FM stations.

● Turning Power Off

Press  button for more than 3 seconds to turn the play power off.



Power cannot be turned off during the player being connected to your PC through USB cable.

● Play, Stop

Press  button to play tracks, and again to pause, press for more than 2 seconds to stop. When the player is stopped, Repeat Section disable automatically.

● Moving within Track


Press the FF button  for more than 1 second to fast forward. If the FF button is pressed until the end of the track, the position returns back to the start of the next track and fast forwards from thereon.

● Control Volume

Use +VOL  or VOL-  to control volume.
Keep pressing the button to change the volume continuously.

Switching Different Modes

There are four modes, MP3 Mode, FM Radio, Voice Recorder and Repeat Mode. Long press **ON/M/EQ** button into four mode selecting. You can switch to the desired mode by using the button **◀** and **▶**.

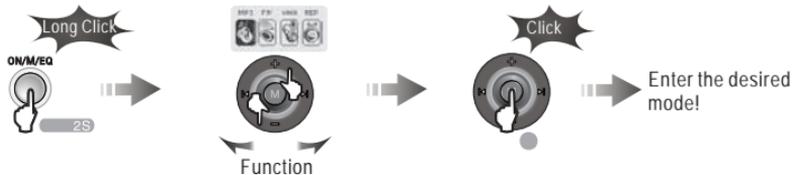

The LCD displays four different modes




Modes Selecting



Play Music



FM Radio

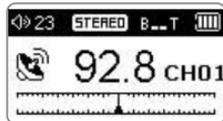

Voice Recorder



Repeat Mode



Navigation Mode

During MP3 mode , long click the Menu button and select Music Folder .



Press the Menu button and find the desired track by pressing **+** or **-** button.
To move to the upper folder, push the  switch.
If there is no upper folder, Navigation exits.

Press the Menu button, it appears the function list as below,

Play Folder
Favorites
Delete
Exit



MP3 Mode



In "Key Action", ● indicates pressing the button for a short second and — indicates pressing the button for more than 1 second.

Button	Key Action	Paused	Playing
	●	Play current track	Pause current track
	— 2S	Inefficacy	Stop current track
	— 3S	Turn power off	Turn power off
	●	Move to previous track	After 5 seconds into track, moves to the start of track. Before 5 seconds, plays previous track.
	— 2S	Rewind	Rewind
	●	Move to next track	Play next track
	— 2S	Fast forward	Fast forward
	●	Volume Up	Volume Up
	— 2S	Volume Up Continuously	Volume Up Continuously
	●	Volume Down	Volume Down
	— 2S	Volume Down Continuously	Volume Down Continuously
	●	Enter Menu	Enter Menu
	— 2S	Navigation	Navigation
REC / A-B	●	Selecting Point A	Repeat A-B
	— 2S	MIC Recording	MIC Recording
ON/M/EQ	●	EQ Mode Selecting	EQ Mode Selecting
	— 2S	4 Modes Selecting	4 Modes Selecting

While recording, long click button to stop. When finish recording, it returns to voice mode.

Only can be controlled during recording.

○ FM Radio Mode

In "Key Action", ● indicates pressing the button for a short second and  indicates pressing the button for more than 1 second.

Button	Key Action	FM Mode	FM Preset Mode
	●	Enter Frequency preset mode	Exit Frequency preset mode
	 	Inefficacy Turn power off	Inefficacy Turn power off
	●	Decrease FM frequency	Move to previous preset
		Rapidly decrease FM frequency	Automatically move to previous preset continuously
	●	Increase FM frequency	Move to next preset
		Rapidly increase FM frequency	Automatically move to next preset continuously
	●	Volume up	Volume up
		Volume up continuously	Volume up continuously
	●	Volume down	Volume down
		Volume down continuously	Volume down continuously
	●	Enter FM Menu	Enter FM Menu
		Enter the Preset Mode	Enter the Preset Mode
	●	Adjusting Treble	Adjusting Treble
		Recording FM radio	Recording FM radio
	●	Adjusting Bass	Adjusting Bass
		4 Modes Selecting	4 Modes Selecting



Earphones function as the antenna.

Repeat Mode

In "Key Action", ● indicates pressing the button for a short second and  indicates pressing the button for more than 1 second.

Button	Key Action	Paused	Playing
	●	Play current track	Pause current track
		Inefficacy	Stop current track
		Turn power off	Turn power off
	●	Move to previous track	After 5 seconds into track, moves to the start of track. Before 3 seconds, plays previous track.
		Rewind	Rewind
	●	Move to next track	Play next track
		Fast forward	Fast forward
	●	Volume Up	Volume Up
		Volume Up Continuously	Volume Up Continuously
	●	Volume Down	Volume Down
		Volume Down Continuously	Volume Down Continuously
	●	Inefficacy	Inefficacy
		Inefficacy	Inefficacy
	●	Selecting Point A	Repeat A-B
		Start Recording	Start Recording
	●	EQ Mode Selecting	EQ Mode Selecting
		4 Modes Selecting	4 Modes Selecting



Select the point B before start the recording.


○ Navigator Mode

In "Key Action", ● indicates pressing the button for a short second and  indicates pressing the button for more than 1 second.

Button	Key Action	Selecting the Folder
	●	Start playing the music
		Start playing the music
		Start playing the music
	●	Exit
		Exit
	●	Start playing the music
		Start playing the music
	●	Move to previous track
		Move to previous continuously
	●	Move to next track
		Move to next continuously
	●	Display the playback menu
		Display the playback menu
	●	Inefficacy
		Inefficacy
	●	Inefficacy
		Inefficacy

Repeating Operation Procedures

Move to:

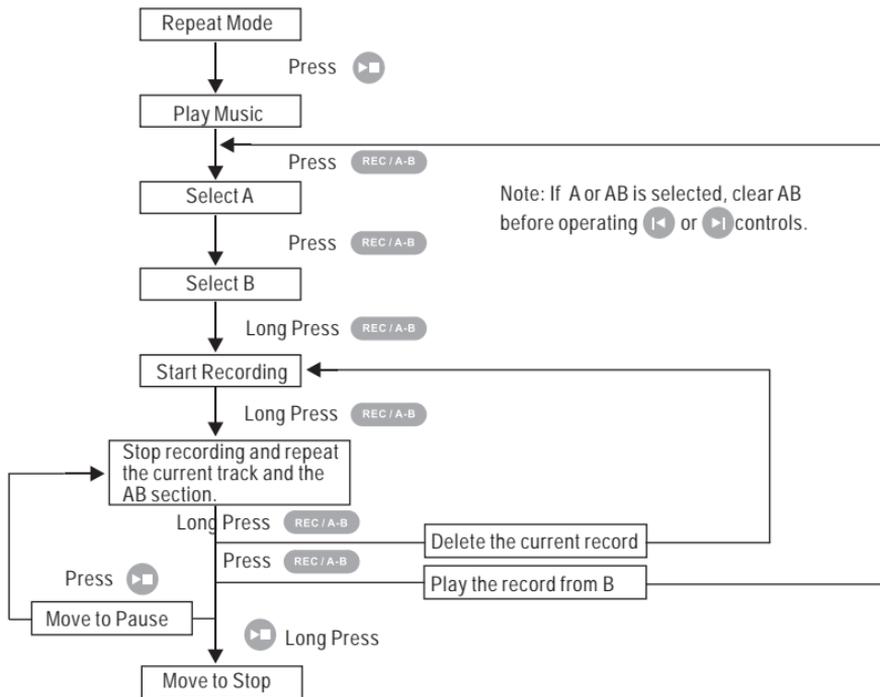

**General**

- Resume
- Auto Play
- Menu Button
- Clock
- Load Default

**Sound Effect**

- EQ
- SRS WOW

**Play Mode**

- Boundary
- Repeat
- Shuffle

**Jog Lamp**

- Time
- Screen Off - Spark

**Display**

- Play Time
- Song Title
- Progress Bar
- Scroll Speed
- Page Sliding
- Displaying Lyric
- Language
- Contrast

**Power Manage**

- Screen Saver Pic
- Screen Savers
- Turn Off Screen
- Auto Off
- Sleep

**Record**

- Record Mode
- Voice bps
- Voice Gain
- FM Radio bps
- L-in bps
- FM/L-in Gain
- FM/L-in Auto Sync

**FM Radio**

- Stereo
- Auto Scan
- FM Recording

**Information**


○ General

1. Resume



- This is the feature to recall the last played position (track).
- On Off
- Select 'Resume' and press the 'Menu' button.

2. Auto Play

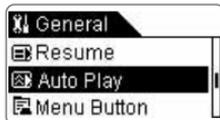


- This is the feature to play the player immediately after it powers on.
- On Off
- Select 'Auto Play' and press the 'Menu' button.

3. MENU Button



 - This is the menu to switch for the feature of long / short pressing the MENU button.
- Select 'MENU-NAVI', short click the Menu button to menu mode; Long click it to switch to navigation mode.
- Select 'NAVI-MENU', short click the Menu button to navigation model; Long click to menu model.
- When you select and option with the '+' and '-', press the 'Menu' button, the selection is applied.



4. Clock

Check date / time




- This is the feature to view the date and time.
- Select the ' Check date/time ' option, and press the ' Menu ' button.
- It displays the week, date, time.
- Press the 'Menu' and return.

Set time




- This is the feature to set the time.
- Select the ' Set time ' option, and press the ' Menu ' button.
- When you select and option with the '+' and '-', press the 'Menu' button, the selection is applied.
- Push **◀** and **▶** buttons to select it and press the 'Menu' button.

Set date

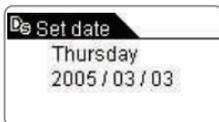

- This is the feature to set the date.
- Select the ' Set date ' option, and press the ' Menu ' button.
- When you select and option with the '+' and '-', press the 'Menu' button, the selection is applied.
- Push **◀** and **▶** buttons to select it and press the 'Menu' button.


5. Load Default

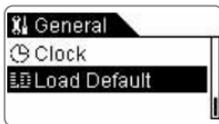


- This is the menu to resume the default setting originally.
- Select 'Load Default' option, push the '+' and '-' to select 'Yes' or 'Cancel' option, and press the 'Menu' button.

○ Sound Effect

1. EQ

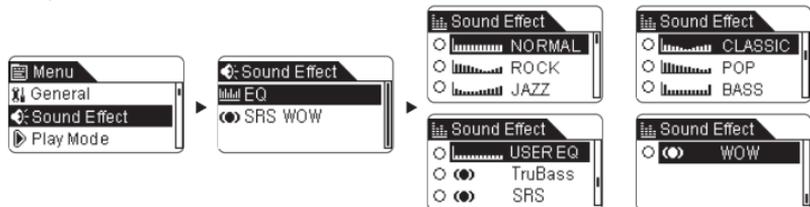


- There are following sound field effects available,
Normal, Rock, Jazz, Classic, Pop, Bass, User, TruBass, SRS, WOW.
- With the '+' and '-' buttons to select the EQ, press the 'Menu' button to confirm.

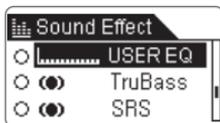

User EQ


- You can use the User EQ to adjust it.
- Select 'USER EQ' and press the 'Menu' button.

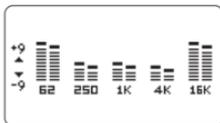

- Change the values with the '+' and '-' button.
- With ◀ and ▶ buttons to select it and press the 'Menu' button.


2. SRS WOW

WOW Level

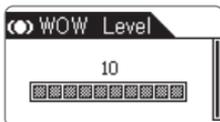

- This is the feature to set SRS, WOW sound effect.
- Function the '+' and '-' to select 'WOW Effect', press the 'Menu' button.
- You can choose a number between 0 and 10.
- Push  and  to adjust it, and press the 'Menu'.

Trubass Sound Effect

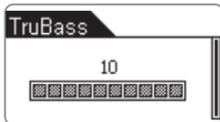


- This is the feature to enhance the bass effect.
- Function the '+' and '-' to select 'Trubass', press the 'Menu' button.
- You can choose a number between 0 and 10.
- Push  and  to adjust the value, and press the 'Menu'.

Speaker Type



- This is the feature to set the type of the speakers.
- You can choose: 'Earphone', 'Headphone', 'Speaker'.
- When you select and option with the '+' and '-', press the 'Menu' button, the selection is applied.


Brightness

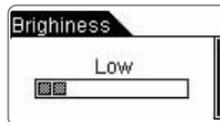

- This is the feature to adjust SRS, WOW sound effect.
- Function the '+' and '-' to select 'Brightness', press the 'Menu' button.
- You can set 'Low', 'Middle' and 'High'.
- Push  and  to adjust it, and press the 'Menu'.

○ Play Mode

1. Boundary

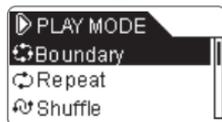


- This menu is for setting various modes of play.
- Select 'Play Mode' and press the 'Menu' button.
- This function is for selecting the boundary,
- All, Folder, Favorite

2. Repeat



- This menu is for adjusting the repeat value to apply to the tracks to be played.
- Normal
- Repeat All
- Repeat One

3. Shuffle

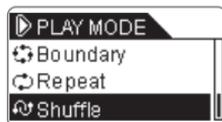


- This sets whether or not to play randomly within the boundary specified in the 'Play' mode.
- On Off
- Select 'Shuffle' and press the 'Menu' button.

○ Jog Lamp



Jog Lamp

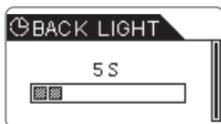

Backlight Time

- This sets to set the Jog Lamp.
- Select the time of backlight, press the 'Menu' button.
- Push **◀** and **▶** to adjust the value, and press the 'Menu'.

○ Display

1. Play Time



- Display and change the time information of the played track.
- When you select the option and press the 'Menu' button, the selection is applied.

2. Song Title




- This is the feature to decide how to display file names.
- On Off
- When you select the option and press the 'Menu' button, the selection is applied.

3. Progress Bar




- This is the feature to display the progress of the playing.
- On Off
- When you select the option and press the 'Menu' button, the selection is applied.

4. Scroll Speed

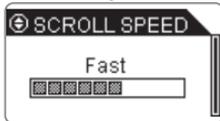


- This is the feature to adjust the scroll speed of texts on the LCD display.
- When you select the option and press the 'Menu' button, the selection is applied.
- Using the and buttons to adjust it.

5. Page Sliding

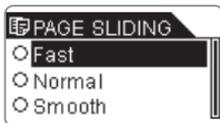

- This is the feature to control the animation effect for the smooth opening and closing of menus.
- You can choose: Fast, Normal, or Smooth.
- Select a value and press the 'Menu' button to apply it.

6. LYRIC display

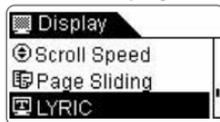


- This is the feature to set the LYRIC display, specified in the 'Play' mode.
- On Off
- Select 'LYRIC' and press the 'Menu' button.

7. Language



- This is the feature to change the menu language.
- You can choose: English, Chinese(Simp), Chinese(Trad).
- When you select the option and press the 'Menu' button, the selection is applied.


8. Contrast

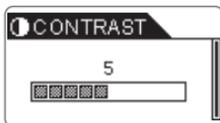


- This is the feature to adjust the brightness of the LCD display.
- You can choose a number between 0 and 10.
- Select Contrast and press the 'Menu' button. Choose a value with the  and  buttons press the 'Menu' button.

○ Power Manage

1. Screen Saver Pic

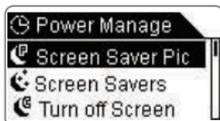


- When there is no button operation, using Power Manage can save battery and extend the playback time.
- Function the '+' and '-' to select 'Screen Saver Pic', press the 'Menu' button.
- Select a value and press the 'Menu' button to apply it.

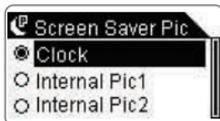


- This feature is to set the screen picture while there is no button operation.
- You can select 'Clock', 'Internal Pic1', 'Internal Pic2'.
- Function the '+' and '-' to select it, and press the 'Menu' button.

2. Screen Savers

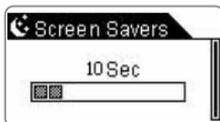

- The screen picture can be displayed automatically after a preset time.
- You can choose '10Sec', '30Sec', '1Min', '5Min' or 'Disable'.
- Function ◀ and ▶ to select it, and press the 'Menu' button.

3. Turn off Screen

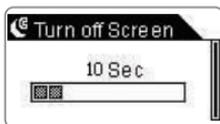

- The screen picture can be automatically turn off after a preset time while it is playing.
- You can choose '10Sec', '30Sec', '1Min', '5Min' or 'Disable'.
- Function ◀ and ▶ to select it, and press the 'Menu' button.

4. Auto Off



- When there is no button operation during a preset time while the player is stopped, it is automatically turned off.
- You can choose: Off, 1 Min, 2 Min, 5 Min, 10 Min
- Select Auto OFF and press the 'Menu' button. Then choose a value with the ◀ and ▶ buttons.

5. Sleep



- The player can be set to automatically turn off after a preset time while it is playing.
- You can choose: Off, 10 Min, 20 Min, 30 Min, 60 Min, 90 Min, 120 Min.
- Select Sleep and press the 'Menu' button. Then choose a value with the ◀ and ▶ buttons.

○ Record

1. Record Mode




- This is the feature to set the mode of the recording.
- Mic Recording
- Line-in Recording

2. Voice bps




- This is the menu for setting the transmission rate (quality) of the MP3 files recorded via the built-in microphone on the top of the player.
- You can choose: 32Kbps, 64 Kbps, 96Kbps, 128 Kbps.
- Select 'Voice bps' and press the 'Menu' button. Then choose a value with the ◀ and ▶ button.

3. Voice Gain

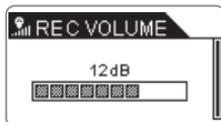


- This adjust the volume level of the sound input to the built-in microphone.
- You can choose: 0dB, 6dB, 12dB, 18dB
- Select 'Mic Volume' and press the 'Menu' button. Then choose a value with the ◀ and ▶ button.

4. FM Radio bps

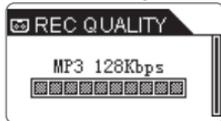


- This is the menu for setting the transmission rate (quality) of the MP3 files recorded by pressing the 'REC' button while listening to FM.
- You can choose: 32Kbps, 64 Kbps, 96Kbps, 128 Kbps.
- Select 'FM Radio bps' and press the 'Menu' button. Then choose a value with the ◀ and ▶ button.

5. L-in bps

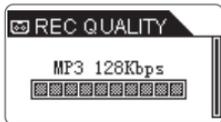

- This is the menu for setting the transmission rate (quality) of the MP3 files recorded via Line In.
- You can choose: 32Kbps, 64 Kbps, 96Kbps, 128 Kbps.
- Select 'Line-in bps' and press the 'Menu' button. Then choose a value with the ◀ and ▶ button.

6. FM/L-in Gain

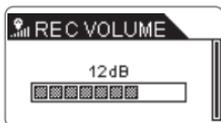

- This adjusts the volume level of the sound input(recording level) from the direct encoding jack.
- You can choose: 0dB, 6dB,12dB,18dB
- Select 'Line-in bps' and press the 'Menu' button. Then choose a value with the ◀ and ▶ button.

7. FM/L-in Auto sync



- This is the feature to automatically detect the sound input from the Line-in jack and recognize blanks between tracks to save the tracks separately as individual files.
- Select 'Line-in bps' and press the 'Menu' button.
 - On
 - Off

Note: It is only valid during FM/L-in for MP3 encoding.

○ FM Radio

1. Stereo



• This is the menu for selecting stereo or mono while listening to the FM radio.

On Off

• Select 'Stereo' and press the 'Menu' button.

2. Auto Scan



• This is the menu for scanning the FM radio broadcast.

• Select 'Auto Scan' and press the 'Menu' button.

3. FM Recording



• This is the menu for recording the FM radio broadcast.

• Select 'FM Recording' and press the 'Menu' button.

○ Information

1. Information



This is feature to display the information:

Firmware Version

Memory

- Information on the flash memory in the Player is displayed.
- You can check usage and remaining memory size.
- Some of the flash memory in the Player is used for system area. Therefore, when we exclude the system area essential for normal operation of the Player, the actual capacity of the flash memory is somewhat reduced.
- For example, with a 256MB product, about 243MB of memory capacity is normal.

Free Memory Space

- Insert the installation CD into the CD-ROM drive. The following screen appears after inserting the CD.



- When installation is automatically not started, execute the setup.exe under the Root folder of the installation CD, and then the Manager program is automatically setup.
- The installation CD contains the following contents:
 - MP3 Driver for Windows98 or lower
 - Firmware Package
 - LOGO DIY tool
- You can update the features of the player by downloading from the internet.
- It is not need to install the program of USB Port Driver for Windows 2000 SP3 system or higher.
- You can use LOGO DIY program to make the desired LOGO interface by yourself.

○ System Requirement

Pentium 133MHz or faster

CD-ROM Drive

32MB Main Memory or Higher

USB Port

19MB Hard Disk Space or More

Windows 98SE / ME / 2000 / XP

○ Install the Manager Software

Set up the player manager software on your PC for the following situations:
MP3 player Formatting; Firmware Upgrade; the player can not be connected to PC.

- 1** Insert the player Installation CD to the CD-ROM in your PC. **Click Meizu MP3 Drive** to start the installation.




- 2** Click [Next>].



- 3** Click [Yes].



- 4** Select the folder to Install. **Click [Next>]**.
Generally assigned as [C Driver -> Program File -> SigmaTel -> MSCN].

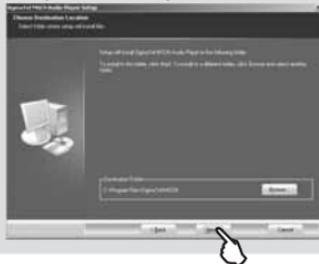

5 Click [Next>].




6 Then necessary files will be copied into your hard disk and updated the driver information. It will take you a few seconds.



7 Click [Finish]. Complete the installation of the player Manager Software.



8 After finishing the setup, from START, it appears [SigmaTelMSCN Audio Player] item as shown in the figure.

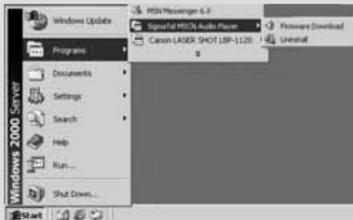

To uninstall the the player Manager Software, select the Start - Programs - SigmaTel MSCN Audio Player - Uninstall

○ Play Music

1 Connect the earphones as below.



2 Turn the player on by pressing the ON button **ON/M/EQ**. Then press **▶** button to start playing music.

 


Note: Put the HOLD switch to "OFF".

○ To select music

◀ To select the previous music

▶ To select the next music

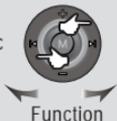

○ To adjust the volume

⊕ To increase volume

⊖ To decrease volume



By turning Hold ON, the buttons on the player will not function.

It plays the music automatically after turning on accordingly to the setting of "Auto Play" on the MENU.


- While playing MP3 music, press the button **ON/M/EQ**.



Modes Selecting

The four modes selecting displays on the LCD.

- Push the **◀**, **▶** button to select FM radio . Press the **NAVI/MENU** button to confirm.

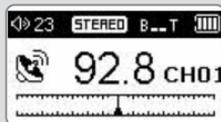

- Press **◀**, **▶** to switch to stations.



During FM radio, press **ON/M/EQ** button to adjust BASS. Press **REC/A-B** button to adjust TREBLE.

Note: Auto memory may not work within weak transmission areas.

○ **Save the auto searching channels
(Memory Function).**




During the FM mode, press the Menu button  to enter Menu.



Push  and  to select the Auto Scan mode , then press  button.

It displays the picture as the right finger on the LCD. Up to 50 channels can be memorized.

After finished, the player turn to FM preset mode and start playing channel 01.

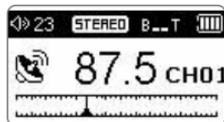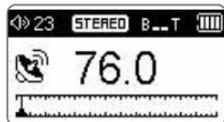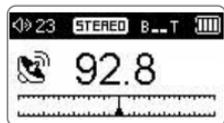

Manual Reserving the Current Station

During FM mode, long click the Menu button  to enter Menu.






Press  or  to select the channels, then click the Menu button .

Press  or  to select Save mode, then press the Menu button to memory it.

Press the Menu button to start listening radio.



Note: You will select the location 1-16 to reserve the stations if the current location come to 15.

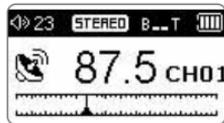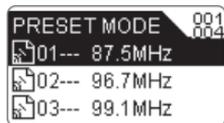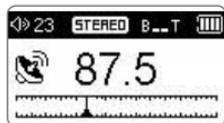


○ Preset mode

To select a channel saved in memory, press the Navi/Menu button and find the channel by pushing **+** or **-** switch to the left or right. It displays CH** on the LCD during preset mode.



○ How to enter Preset mode

During FM mode press the ON/OFF button  to enter preset mode. Press it again and exit.

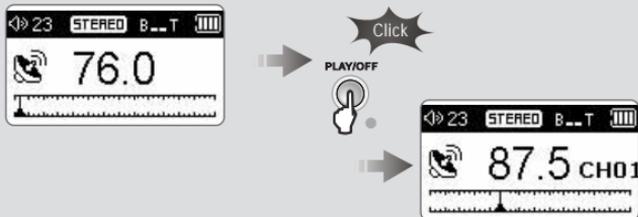

○ How to select channels

To select a memorized channel, with  and  to switch to the previous or the next channel.



○ Delete saved channels (Memory delete function)




During FM mode, long click the Menu button  to enter.



Push  and  to select the channel, then press the Menu button .

Push  or  to select Delete mode, then press  button to finish.

Press  button and exit.

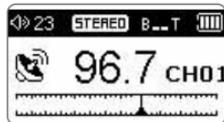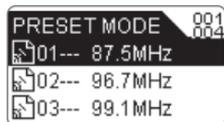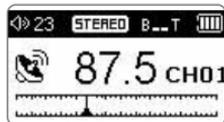

To Record FM

Long press the button , push  and  to enter FM radio .






Press  or  to select the desired music.
For details of FM Radio and Listen to the Memorized Station, see the related pages in this User Guide.

Long press  button to start FM recording. The recorded file is saved as 'M***.MP3' under 'REC' folder in a certain sequence. (***: A3-digit serial number)

Long press  and stop recording. And return to FM Radio automatically to continue to listen.



You can listen FM radio while FM recording in the meantime. Volume is not controlled during recording.

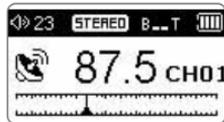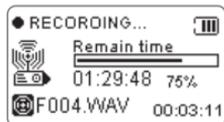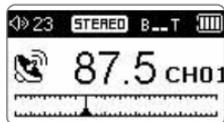

Please make sure that the battery volume is enough during Voice Recording.

Shortcut Recording: During MP3 mode, press **REC/A-B** button for 2 seconds and recording starts.

Starting Recording

Press **REC/A-B** button for more than 2 seconds to start recording.



Stop Recording

Press **REC/A-B** button for more than 2 seconds again to stop the recording.



- The recorded file MP3 format (during FM recording, LINE-IN and Microphone recording) and ADPCM format during the Microphone recording are saved in the REC folder under ROOT. ADPCM format for LINE-IN and FM recording is saved in the FM folder under ROOT.
- If it displays The Memory is Full on the LCD, to record, delete files and/or folders on the player in order to make some space available.



WAV format is recommended to use during MIC recording to get high quality recording. Only **REC/A-B** button is useable during recording.

Line-in Recording


During four mode selecting, select Voice Record .



Push  or  to select Record mode, press the NAVI/MENU button .

With  and  to select MIC/LINE-IN. Press the NAVI/MENU button. Double click  to switch to the recording interface, and long press  to start the recording.


After finishing the recording, long press  to stop it.

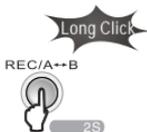

Too high volume level may amplify surrounding noise, degrading the recording quality.




- Click the Menu button, select the Mode and click it.

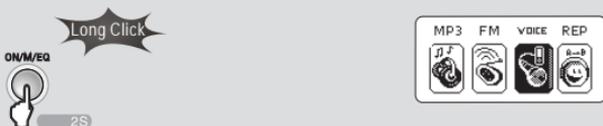


The four modes selecting displays on the LCD.

- Push to select the MP3 mode , press the Menu button .

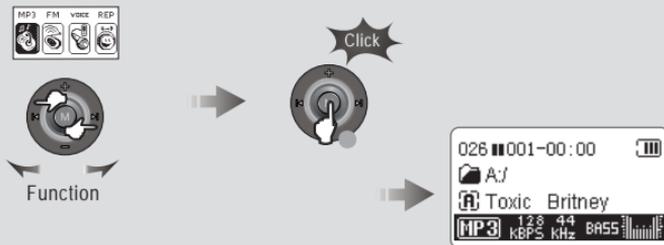

 - Push to select a Rec file in the REC folder, press to start playing.



○ Displaying Lyric


Download the lyric files from the internet to the PC. The lyric file is the format of lrc. as suffix.

- 1 Turn off the player and take out the battery.



Press the button  for about 3 seconds to turn off the player.


- 2 Connect the player and your PC via USB cable.

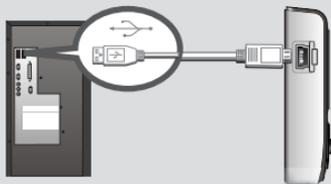

- 3 Copy the lyric files from your PC to the Player.



Insatiable.lrc

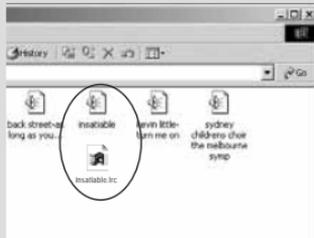

Saved the lyric files and the songs on the same content. The files names should be also the same ones

○ **View the TEXT files (txt. format)**

During the MP3 mode , long press the Menu .





Select the Music Folder . With  and  to select the TEXT file.

Return to the upper folder, press the button .

Press the Menu button. Press it again, display the function list as below,

To bookmark	Move to Bookmark
Set bookmark	Set Bookmark
Auto/Manual	Auto/Manual
Exit Ebook	Exit Ebook

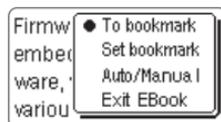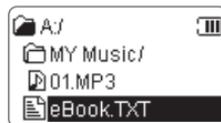

**Update**

The latest firmware upgrade file

What is Firmware?

Firmware is a program embedded in the hardware, which activates various features. By upgrading, you can enhance the features and eliminate the bugs.

Notice for Legal Limitations and Responsibilities Regarding Firmware

The performance and menu of MP3 Player may change without prior notice through firmware upgrades of regular or beta versions supported by the manufacturer.

When you upgrade the firmware, all the data in the flash memory is deleted. Therefore, users should personally back up important MP3 files and data saved in MP3 player to their PC before upgrading the firmware.

All firmware upgrades are intended for overall enhancement of performance. The upgrades will be provided when available based on our company's judgment.

Some beta versions of the firmware included in our development roadmap may have minor bugs that will be corrected in the official versions of the firmware. We are warning you beforehand of this possibility through this Guide.

Conditions for Firmware Upgrade

Upgrading the firmware requires the basic environment where the USB feature of the Windows OS works properly.

You can check "mobile Disk" in "My Computer" on Windows 98/ME/XP/2000/2003.

Either 'Mobile Disk' must be displayed or a firmware upgrade to be possible. If it is not displayed, we recommend that you check the menu that asks whether or not to use a USB Device from the main board CMOS, or reinstall Windows, or have the USB port on the main board examined.


MEIZU Update

- Download Meizu Update package from Meizu's website (Take note of the model no. and version.) Unzip and copy it to the directory of the manager software.

Installing directory
C:\Program Files\SigmaTel\MSCN



Firmware upgrade package

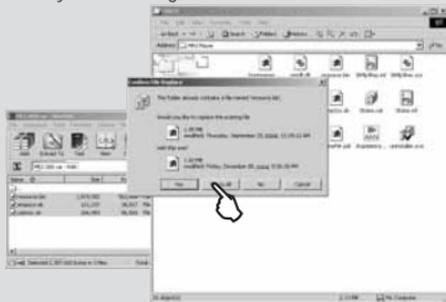


- Turn your player off



Long click  for more than 3 seconds to turn off.

- Connecting the player to your PC through the USB cable.

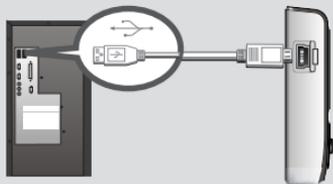


- 4** After connecting your PC and the player, the PC identify with it automatically.



It appears the message to find a new hardware on your PC for the first time to update.

- 5** Select START-[Program]-[SigmaTel MSCN Audio Player]-[firmware Download]

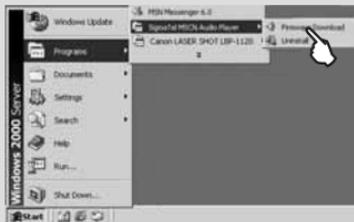

- 6** Update is running.



- 7** Select the **Format Data Area**
Enable : Format ME, then update programs.
Disable: Update program only.



8 Click [Start] to begin to update.



9 While finishing, click [Close] to exit.



After finish the above procedures, disconnect your PC and the player, then connect the m again to finish.

If the player is not able to be used, take out the battery and select **Format Data Area**, then redo the updating again to clear it.

○ Latest Firmware Upgrade

Visit Meizu's website to get the latest firmware.

○ **Formatting the Flash Memory**


The flash Memory of the player can be formatted. If the flash Memory is formatted, all data stored within is lost. Take notice of this fact, examine the following procedures.

○ **Prepare the followings before formatting,**

Finished installation of the player manager program
Connecting the player to your PC.

○ **Operating procedures**

- 1** Connect the player and your PC via USB connection cable.

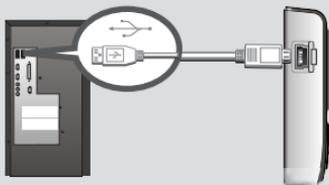

- 2** Double click My Computer.



- 3 Select the Mobile Disk and right click it, then select and click **[Format]**



- 4 Click the **[Start]**.



- 5 It appears the warning window, select **[OK]** to continue.



- 6 The formatting is start running.



7 While finishing, click **[OK]** to finish.



8 Exit the formatting, click **[Close]** to exit.



It is easy to format your MP3 player, please refer to Windows instruction to format on your PC.

- **Do not subject the player to severe impact or jarring.**
Vibration experienced during walking or exercising will not affect the player. However, dropping a heavy object on the player may result in damage or sound distortion.

- **Be careful when storing the set and do not use or place it at the following places:**
 - Places with high humidity;
 - Places with strong magnetic fields;
 - Places with extreme temperatures;
 - Directly under the sunshine or near the equipment that generates heat;
 - Inside a car with closed windows especially in summer.

- **It is necessary to prevent strong shock when reading files or operating, otherwise files may be damaged or deleted.**

- **Please do not repair or disassemble this product by yourself.**

- **Please do not use this product in the place where forbidden to use for electronics products.**

- **Please do not operate this product while driving.**

- **Please backup the important information on your note book, any repair result from electricity shock, static electricity, change of battery or incorrect using may cause change, damage or delete the files stored in the product.**

○ Trouble Shooting

No Power	<p>Check that the battery 's polarity is correct.</p> <p>Check the voltage of battery.</p> <p>Take out the battery for a short while and reinsert.</p>
No sound from earphones	<p>Check whether VOLUME is set to "0". Connect the earphones/ remote plug firmly.</p> <p>Check whether plug is dirty. Clean the plug with a dry and soft cloth.</p> <p>Corrupted MP3 or WMA files may make a static noise & the sound may cut off.</p> <p>Check your files on the PC to see if they are corrupted.</p>
Characters in LCD are corrupted	<p>Check whether you select the correct language.</p>
Poor FM reception	<p>Adjust the position of the player and earphones.</p> <p>Turn off the power of other electric devices nearby the player.</p> <p>Earphones function as the antenna.</p>
Failed download of MP3 file	<p>Check the condition of the battery.</p> <p>Check the connection between your computer and the player to ensure that the cable is secure.</p> <p>Check the Manager program to make sure it is operating.</p> <p>Check whether the player 's Memory is full.</p>



Should any problem persist after you have checked these symptoms, consult the distributors.

○ Product Specifications

Dimensions	63.3mm × 27.3mm × 15mm (H × W × T)	
Weight	33g (Including Battery)	
LCD	128x64 dot, dual colors OLED screen	
PC Interface	USB2.0 High Speed	
Flash Memory	Built-in basic Memory (128MB - 1GB according to product)	
Battery	Chargeable Li-polymer Battery	
	Maximum 12 hrs of continuous playback	
Record	Sampling Rate	32KHz, 44.1KHz
	Recording Format	MP3 ADPCM
	Recording Mode	MIC FM LINE-IN
	Recording Time	MP3 6hrs (32KHz, 96kbps, 256MB) ADPCM 18hrs (8KHz, 32kbps, 256MB)
MP3/WMA	Earphone's Output	(L) 12mW (R) 12mW(32 Ohm)
	MP3 Bit Rate	8kbps - 384kbps
	WMA Bit Rate	5kbps - 192kbps
	Output Frequency Band	20Hz - 20KHz
	S/N Ratio	> 95dB
	Distortion Rate	< 0.05%
FM Radio	FM Receiving Frequency	76MHz - 108MHz
	FM Reserve Channels	50
	Earphone's Output	(L) 12mW (R) 12mW(32 Ohm)
	S/N Ratio	> 50dB
Operational Temperature	-5 degrees ~ 40 degrees Celsius	

A large, empty rectangular box with rounded corners, intended for writing a memo. The box is white and occupies most of the page area below the header.

A large, empty rectangular box with rounded corners, intended for writing a memo. The box is white and occupies most of the page area below the header.



X6
DIGITAL MP3 PLAYER

Meizu Electronic Technology Limited

Add.: 3/F, 7th Pingxi 5 Road, Nanping Technology Park Zhuhai, Gongdong, P.R.China