

Playing your iPod

To see the iPod options press  followed by **Aux, i80**.



Connecting the iPod

The i80 iPod Dock allows you to play the sound from your iPod through the F80.

This section explains how you control the iPod from the F80, using the front panel controls or remote control.

- Select the i80 source by pressing  followed by **Aux, i80**.

After a delay of up to five seconds the iPod displays a message showing that it is connected.

Playing and pausing

To play a track

- Press .

While a track is playing the display shows the elapsed time, the title of the track, and its position in the album or playlist (for example, 1 of 9).

While a track is playing the  label changes to .

To pause the disc

- Press .

While a track is paused a  symbol is displayed at top right of the display and the  label changes to .



To resume play

- Press .

Stepping between tracks

You can step between tracks while the iPod is playing or paused.

To step to the start of the next track

- Press .

To restart the current track

- Press .

To select a track

- Press  or  until the display shows the track you want to play.

Shuffle and repeat

Press  to display the keys for shuffle and repeat.

To shuffle the tracks in the current album/playlist

- Press **Shuffle**.

To repeat the current track/playlist

- Press **Repeat**.

 
Scanning through a track

Press  to display the keys for scanning.

To scan at faster than normal speed

- Press  for reverse scan or  for forward scan.

While scanning a scan symbol is shown at top right of the display:



- Press  to revert to normal play.

Play resumes from the point you reached.

Browsing your iPod



Browsing your music

To browse for music

- Press **Menu** from the playing screen.

The first time you press **Menu** you will see the main MUSIC screen with the first menu, **Playlists**, shown:



- Press  or  to step between the main menus: **Playlists**, **Albums**, **Artists**, **Songs**, **Genres**, **Composers**, **Podcasts**, and **Audiobooks**.

If you subsequently press **Menu** while music is playing you will return to the last menu item you were looking at.

Navigating the menus

To step between items on the current menu

- Press  or .

The name of the current menu or category is shown at the top of the display; for example ALBUMS.



Selecting an item

To show the contents of an item

- Select a playlist, album, artist, genre, composer, podcast, or audiobook.
- Press **Enter**.

To play a track

- Select a song.
- Press **Enter**.

Returning to the previous menu

To return to the previous menu

- Press **Menu**.


Pressing **Menu** from the MUSIC screen returns to the playing screen.

Returning to the playing screen

- Press , or press and hold **Menu** on the remote control.

Alternatively if you do not press anything the display reverts to the playing screen after 20 seconds.

Connecting the i80 dock

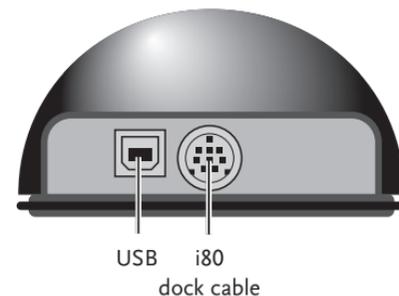

To connect the iPod

- Connect one end of the i80 Dock cable to the connector on the back of the i80 Dock.
- Connect the other end of the cable to the i80 Dock connector on the F80.
- Insert the plastic cover supplied with your iPod onto the i80 Dock.
- Mount your iPod on the i80 Dock.

While connected the iPod battery is recharged from the product.

USB Connector

The USB connector optionally allows you to charge your iPod from an external USB power supply or computer. The i80 light changes from green to red when charging.

Setting iPod control

The instructions on this leaflet explain how to control the iPod from the F80 using the front panel controls or remote control.

If you prefer to disable iPod control, for example to view video on the iPod while playing the sound through the product, proceed as follows:

To enable/disable iPod control

- Press **▲**, **Adjust**, **Setup** to display the SETUP menus.
- Press **➔** to display the **i80 Ctrl** option.

You can choose between **Enabled**, which allows you to control the iPod from the product, or **Disabled**, which allows you to play the iPod without controlling it.

i80 iPod dock for F80

Designed and Engineered by
Meridian Audio Limited
Cambridgeshire England



MERIDIAN

Safety instructions

This product is only intended for use with an iPod in conjunction with a Meridian F80. Please refer to the F80 User Guide for additional safety information.

i80 compatibility

The i80 is fully compatible with the iPod Mini, iPod Nano, iPod Classic, and iPod Touch.

It may also be usable with the iPhone; when connecting select Airplane Mode to avoid incoming calls and messages interrupting the audio.

Acknowledgements

Meridian is a registered trade mark of Meridian Audio Ltd.

iPhone and iPod are trade marks or registered trade marks of Apple Inc.

Copyright © 2007-2008 Meridian Audio Ltd.

Part number: P86017

This guide was produced by:
Human-Computer Interface Ltd,
<http://www.interface.co.uk/>

Sales and service in the UK

Meridian Audio Ltd
Latham Road
Huntingdon
Cambridgeshire
PE29 6YE, England

Tel +44 (0)1480 445678
Fax +44 (0)1480 445686

Sales and service in the USA

Meridian America Inc
8055 Troon Circle
Suite C
Austell
GA30168-7849, USA

Tel +1 (404) 344 7111
Fax +1 (404) 346 7111

Visit us on the Web:
<http://www.meridian-audio.com/>

Designed and manufactured in the UK by Meridian Audio Ltd. Meridian Audio reserves the right to make changes and improvements to any of the products described in this document without prior notice.