



nextar™ 

MA555 | Digital MP3 Player
Instruction Manual

1. INTRODUCTION

Thank you for purchasing our MP3 player. Before using the unit please read this manual carefully to obtain the best possible performance from your player. Keep this manual for future reference

2. SAFETY INSTRUCTIONS

Never use the player during driving or operating other vehicles to avoid traffic accident, which also be written in the law in some districts. Even in walking especially crossing the street, please also do not listen in extremely high volume to avoid any dangerous. Wherever with potential risks, please stop using the player for safety purpose.

Please insert the earphone prior to turn on the player, which can not only avoid damaging the earphone but keep the player in good condition.

Keep the player clean and never store the player close to the heat source or dirty, humid or rainy places and avoid direct sunlight.

If the surface is dirty, please clean with soft cloth wet with clean water or soft abluent and never clean the case with alcohol or diluents.

Never use the player in extremely dry environment to avoid static.

Never disconnect the player from PC abruptly during downloading, uploading and formatting to avoid program failure.

When the player is used as removable disk, please follow the proper file download and upload procedures. Our company resumes no responsibility for any file lost due to misuse.

3. SYSTEM REQUIREMENTS

- Microsoft Windows98/2000/Me/XP
- Pentium 200MHZ or above
- 120MB hard disk space
- USB
- Mouse installed
- CD-ROM drive

4. INSTALLATION

Installing driver for Windows 98. (Windows ME or above without driver required)

Connect the MP3 Player to the USB port of PC, "Find new hardware" appears on the screen, click "Search latest driver for this device"

And insert the driver CD in to CD-ROM, and then click "Next". Select "Look in" to direct the installation directory to the "Drivers" files in driver CD, then click Yes.

PC will install the Win 98 driver automatically.

Installing battery

Install one 7# 1.5V alkaline battery properly upon indicator on the player.

Press and hold((button to enter MP3 standby mode.

5. CONNECTING AND DOWNLOADING

Connecting PC

Before operation, please verify the player is turned off with one end of the included USB cable inserted into PC and another end into the MP3 player.

Downloading MP3 music

Download MP3 music to MP3 player.

 


Removing USB device

Double click the Safely Remove Hardware icon in taskbar:



From Safely Remove Hardware screen, highlight "USB Mass Storage Device" item, then click "Stop" button. "Stop to Hardware Device" window appears on the screen as shown below.

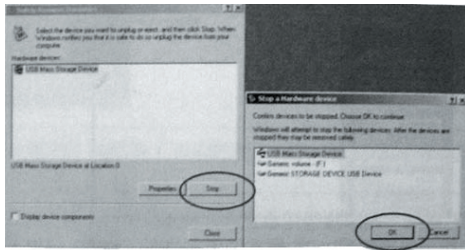

Click "OK" button. After the "Safe to Remove Hardware" window appears, the player can be disconnected from PC safely.



Notice: Never unplug the USB cable during data transmitting to avoid any failure to the Player; after data transmitting, please do not disconnect the player from PC until "Device now be safely removed" appears; while using USB function, all other buttons will be nonfunctional. Any program lost or I/O error and power on issues caused by these improper operations please refer to FAQ.

6. BASIC OPERATION

Buttons and functions

1. Microphone
2. Earphone jack
3. HOLD button
4. REC /A-B play
5. next, fast forward
6. Volume up/ V+
7. last, fast backward
8. Volume down/ V-
9. MENU button
10. Play/ Pause/ Stop
11. USB port



Turning on/off

From shutdown mode, press ► || 3 seconds to power on. Firstly player will update the music library then create new music play list after finish update. Lastly player enter MP3 standby mode.

Welcome



 
updating music library



Creating New music play list



MP3 Standby mode



From MP3 standby, pause and play mode, press and hold ► || seconds, the system will save the data and enter shutdown mode.

Continue Holding To
Power Off



Notice: Please don't take out the battery from the battery cell directly to power off while in the MP3 stand-by mode or during playing music, otherwise, you may lose the unsaved data.

MENU function


From standby, pause or play mode, press MENU button to enter main setting mode. Press ◀◀ or ▶▶ button to select: Music, Voice, Music Library, Settings, About, Exit, and press ◂ button to enter the appointed setting.

7. HOW TO USE THE MP3 PLAYER


Playing MP3 files

From MP3 standby mode, you can press the ► || button to play MP3 music as well as pause and resume playing.

 play



pause

 

From play or pause mode, you can press the ►|| button for 2 seconds to return to MP3 standby mode, and press ►|| button again to resume playing.

From MP3 standby or Play mode, you can press the ◀◀ or ▶▶ button to select last or next music.

From STOP status, you can keep holding the ◀◀ or ▶▶ button to effectively find and play your desired music.

From play mode, you can press the ◀◀ or ▶▶ button to fast backward or forward this music.

f.From play mode, you can press V + or V- button to adjust volume.



From MP3 standby, play or pause mode, press ►|| button for 3 seconds, the player will save the data and enter shutdown mode.

Setting voice mode

From MP3 mode or voice standby mode, you can press the MENU button to enter the main menu setting, and press the ◀◀ or ▶▶ button to select Voice, and then press the ►|| button to enter the voice playing mode, during which you can repress ►|| button to pause and resume

play voice

  pause




From MP3 mode or voice standby mode, you can keep pressing the REC button to enter the setting while the player begin recording, repress REC button to finish recording and save with WAV format into the Voice record folder of the music library, and then press the ►|| button to play voice as well as pause and resume playing.

recording

Record stop



 Voice play mode includes: Normal, repeat one, repeat all, shuffle, shuffle repeat.

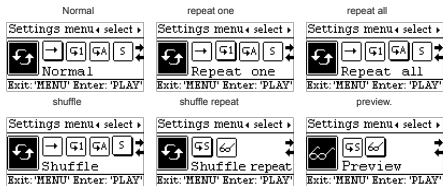

From voice standby or play mode, you can press the ◀ or ▶ button to select last or next voice file.

From the STOP status, you can press the ◀ or ▶ button to effectively find and play your desired music.

From Play mode, press and hold ◀ or ▶ button to fast backward or forward this music.

Voice EQ mode includes: normal ,rock, jazz, classical , pop , bass ,treble.

From Play mode, press the ▶ || button continuous you can turn to the MP3 mode from voice mode.


Music Library

From MP3 mode or voice standby mode, you can press the MENU button to enter the main menu, and push the ◀ or ▶ button to select music library, and press the ▶ || button to enter which includes: Play all, Artist, Album, Track , Genre, Year, Voice record and Exit, press MENU button to return to forward menu.






Play all

Under the Music Library mode, press the ◀◀ or ▶▶ button to select play all function, press the ▶|| button to select and then the player begin playing all the songs saved in it.

 




Artist

Under the Music Library mode, press the ◀◀ or ▶▶ button to select artist function, All the songs will be sorted according to the artist. you can select certain artist which you love, or select the play all then press the ▶|| button to confirm. then the system will play automatically. You can press REC button to enter the delete mode, when you enter the track mode, repress the ◀◀ or ▶▶ button to select "YES" or "NO", repress ▶|| button to confirm delete. Select NO to exit.

   


Album

Under the Music Library mode, press the ◀◀ or ▶▶ button to select Album function, the files saved in it, you can select certain file which you love, or select the play all then press the ▶|| button to confirm. then the system will play automatically. You can press REC button to enter the delete mode, when you enter the track mode, repress the ◀◀ or ▶▶ button to select "YES" or "NO". Repress ▶|| button to confirm delete. Select NO to exit.

   

Track


Under the Music Library mode, press the ◀ or ▶ button to select track function, All the songs will be sorted according to the track. you can select certain track which you love, or select the play all then press the ▶ || button to confirm. then the system will play automatically. You can press REC button to enter the delete mode when you enter the track mode, press the ◀ or ▶ button to select “YES” or ”NO”, repress ▶ || button to confirm delete. Select NO to exit.

 

Genre


Under the Music Library mode, press the ◀ or ▶ button to select genre function, All the songs will be sorted according to the genre. you can select certain genre which you love, or select the play all then press the ▶ || button to confirm. then the system

 will play automatically. You can press REC button to enter the delete mode when you enter the track mode, repress the ◀ or ▶ button to confirm delete. Select NO to exit.




Year

Under the Music Library mode, press the ◀ or ▶ button to select year function, All the songs will be sorted according to the elapsed time. you can select certain song which you love, or select the play all then press the ▶ || button to confirm. then the system will play automatically. You can press REC button to enter the delete mode when you enter the track mode, repress the ◀ or ▶ button to select “YES” or ”NO”, repress ▶ || button to confirm delete. Select NO to exit.

 


Voice record

Under the Music Library mode, press the ◀◀ or ▶▶ button to select Voice record function, All the voice files are saved in this folder, you can select certain file which you love, or select the play all then press the ▶|| button to confirm. then the system will play automatically. You can press REC button to enter the delete mode, when you enter the track mode, repress the ◀◀ or ▶▶ button to select "YES" or "NO", repress ▶|| button to confirm delete. Select NO to exit.

 

Exit

Under the Music Library mode, press the ◀◀ or ▶▶ button to select exit function, press the ▶|| button to return forward mode. repress the ▶|| button or press the MENU button to the play mode.

 


Function Setting

From MP3 mode or voice standby mode, you can press the MENU button to enter the main menu, and press the ◀◀ or ▶▶ button to select the setting menu. The setting menu includes: EQ set, play mode, contrast, display time, power set, record set, text scroll speed, language, load default and exit. press ▶|| button to enter the setting which you want.




Setting EQ mode

Under the function setting mode, press the ◀ or ▶ button to select EQ mode which includes: Normal, Rock, Jazz, Classical, Pop, Bass, and Treble, Press the ▶ || button to enter, and repress the ◀ or ▶ button to select the EQ set. and press the ▶ || button to save the selected EQ mode, Press the MENU button to return to the current mode.

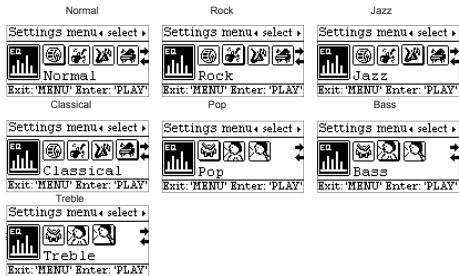 


Play Mode

Under the function setting mode, press the ◀ or ▶ button to select play mode which includes the following options: Normal, Repeat one, Repeat all, Shuffle and Shuffle Repeat. Preview, Press the ▶ || button to enter, Repress the ◀ or ▶ button to select the play mode setting. Press the ▶ || button to save the selected play mode set. Press the MENU button to return to the current mode.

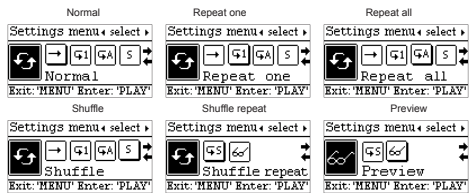 

Setting Contrast


Under the function setting mode, press the ◀ or ▶ button to select the contrast, press the ▶ || button to enter the contrast setting, repress the ◀ or ▶ button to adjust the contrast of LCD, after which you can press the ▶ || button to save the selected setting and press MENU button to return to the current mode.

 

Setting Display time

Under the function setting mode, press the ◀ or ▶ button to select display time. Press the ▶ || button to enter, and repress the ◀ or ▶ button to select display time setting which includes the following options: on(50%), 5 seconds, 10 seconds, on(100%). Press the ▶ || button to save the selected display time setting and press MENU button to return to the current mode.

 on(50%)



5 seconds



10 seconds



on(100%)



Setting Power

Under the function setting mode, press the ◀ or ▶ button to select power, press the ▶ || button to enter, and repress the ◀ or ▶ button to select power setting which includes the following options: disable, 2 minutes, 10 minutes, 30 minutes. Press the ▶ || button to save the selected power setting and press MENU button to return to the current mode.




Recording setting

Under the function setting mode, press the ◀ or ▶ button to select recording setting. Press the ▶ || button to enter, and repress the ◀ or ▶ button to select recording setting which includes the following options: 8kHz, 16kHz, 32kHz, 48kHz. Press the ▶ || button to save the selected recording setting

and press MENU button to return to the current mode.

 8kHz




48kHz




Setting language

Under the function setting mode, press the ◀ or ▶ button to select language setting. press the ▶ || button to enter and repress the ◀ or ▶ button to select language setting which includes the following options: English, German, Press the ▶ || button to save the selected setting and press MENU button to return to the current mode.

 


Text scroll speed

Under the function setting mode, press the ◀◀ or ▶▶ button to select display speed setting. Press the ▶|| button to enter, and repress the ◀◀ or ▶▶ button to select Display speed setting which includes the following options: normal, fastest, slowest, faster, slower. Press the ▶|| button to save the selected setting and press MENU button to return to the current mode.

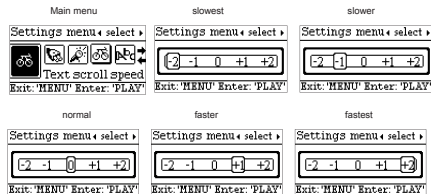 

Load Default Set

Under the function setting mode, press the ◀◀ or ▶▶ button to select load default set. Press the ▶|| button to enter repress the ◀◀ or ▶▶ button to select “YES” or “NO”. Press ▶|| button to confirm. if you select “YES” ,all the setting will come back to the original set, then the player will shut off.

 


Exit

Under the function setting mode, press the ◀◀ or ▶▶ button to select exit set. Press the ▶|| button to enter the exit setting, and the player return main menu.



About

From MP3 mode or voice standby mode, you can press the MENU button to enter the main menu and press the ◀ or ▶ button to select the "About" and press the ▶ || button to view the total capacity and available capacity of the unit and press the MENU button to return to the current mode.

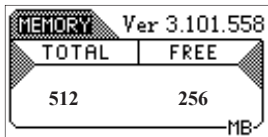 

Exit

Return to MP3 Menu. On any Menu press the MENU to return to the last menu directly.

 
 


A-B Play Mode

From MP3 or voice play mode: Press REC button to select start point A



Press REC button to select end point B, MP3 will play between A-B.

Press REC button again to cancel setting and resume playing MP3 or voice.



Lock function

  Under any mode, press the HOLD switch in the direction of arrow, a lock icon will appear on the LCD. All the buttons will be nonfunctional; to disable the lock function, press the HOLD switch in the opposite direction, then the lock icon will disappear, and all the buttons will be functional.



Lyric sync

This player supports lyric sync function. Notice: The lyric name shall be the same as music with extension of *. LRC and saved in the same directory, and only the lyrics with time indication can be displayed properly.

USB mode

Plug the Player into the USB interface of PC, relative icons appears on the LCD screen. The LCD screen may display relative icon during data transmitting. For software upgrading and formatting the removable disk, please refer to the website.

8. TROUBLESHOOTING

Symptom	Causes	Solution
No display after pressing the power button	The battery is out of power.	Please charge in time.
No sound during playing	1. Volume is too low, or without music in the player, or battery low. 2. The MP3 or WMA file is broken.	1. Adjust the volume, or charge during downloading. 2. Download the documents again.
Unable to download files after connection.	1. The HOLD button is on, the disk is write protected 2. The USB is not connected to PC properly. 3. Wrong storage directory.	1. Press the HOLD switch to the opposite direction 2. Connect to the USB interface again and verify PC identified the removable disk. 3. Maximum 256 folders or files can be saved under root folder (if the file name over 8 characters, the folder or file number will also decrease accordingly); if exceeded, please create another subdirectory under root directory and then copy.
The individually compressed MP3 files can not be played.	The MP3 files currently are compressed with different compress rate and format, while this Player supports the standard compressed MP3 only, please do not adopts layer one or two compression.	Download the standard MP3 files again.
MP3 player can not be recognized by PC.	Improper operation or the driver is not installed.	1. Install the driver properly. 2. Format the removable disk.
No response after pressing button.	HOLD switch is on, button s are locked	Press the HOLD switch to the opposite direction
Can not open the disk or prompt I/O error after connecting PC	Caused by some improper operation.	Press the PLAY button, and then connect USB cable and click relative upgrading problem, release after the upgrading box appears after scanning, then press START to format and upgrade will solve the problem.

9. TECHNICAL SPECIFICATIONS

- Bit rate: 32~320 Kbps (MP3) 32-192Kbps(WMA)
- SNR: >90db
- Dynamic range: >80 (1KHZ)
- Distortion: <0.05%
- Voice recording: 8 KHz / 16 KHz / 32 KHz / 48KHz
- Output: 5 mW*2
- Condition of storage: Humidity <90%, normal temperature
- USB interface: USB 2.0 Full speed
- Memory: 128MB/256MB/512MB/1GB/2GB
- Size: 82*27*20mm
- Working condition: Humidity <85%, -10~40°
- Auto Shutdown: 2min,10min,30min, off
- Language: English, German
- Battery life: >7h, (display on)
- Weight: <26g Adjustable backlight time: 5s, 10s, on(50%), on(100%)
- OLED Contrast: 0-10

Warning: Download operation of WMA music with DRM protection

On Window 98SE / Window ME / Windows 2000 / Windows XP, WMA music with DRM should be transferred by Windows Media Player 9.0 and 10.0 version (10.0 version for Windows XP only) to player

Other download operation probably will cause player can not read the WMA music with DRM file

On Windows Media Player 9.0 version: (Window 98SE/ Window ME / Windows 2000/ Windows XP)

 
Connect player to PC

Open Windows Media Player 9.0

In Windows Media Player 9.0, open the desired WMA music with DRM System maybe request to download the license in case if user does not download the WMA music with DRM properly from the website. In this case, user need down the license from


music publisher as instruction of Microsoft Website showing in the operating window.

In operation windows , click “File ” → “Copy” → “Copy to Portable Device”

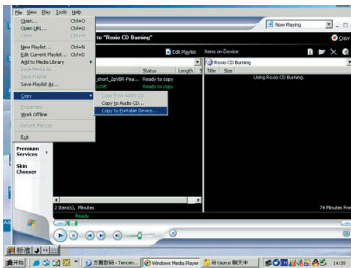

In the opening windows , choose the desired WMA music with DRM as step 2) And choose “Removable Disk”

 Then click Icon “Copy ” to transfer the WMA music with DRM to player

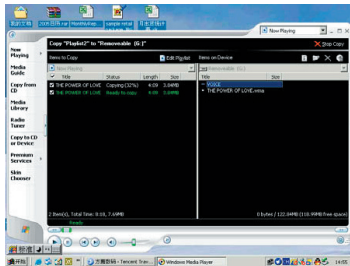


Safely remove player from PC


On Windows Media Player 10.0 version
(Windows XP only)

Connect player to PC

 
Choose the desired WMA music with DRM.

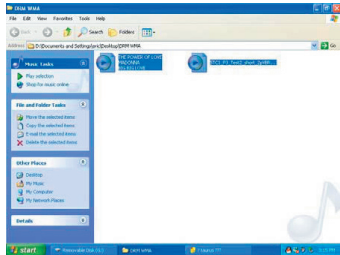

 Click Right button of mouse and choose
“Add to Sync list”

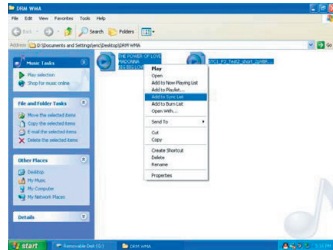


 On the open windows , choose “Sync ”
option

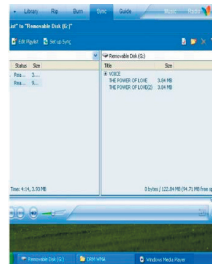

On “Sync ” window , choose the desired WMA music with DRM as step 2) And choose “Removable Disk”

 Click “start Sync “ to transfer the WMA music with DRM to player.

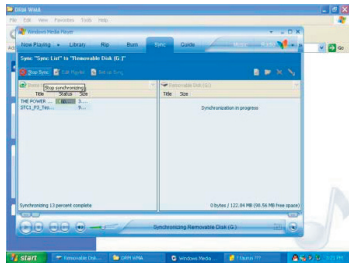

Safely remove player from PC .