



Let's make things better

PHILIPS

AJ 3260 - Clock radio

English

Français

Español


Deutsch

Nederlands

Italiano

Meet Philips at the Internet
http://www.philips.com

Printed in Hong Kong

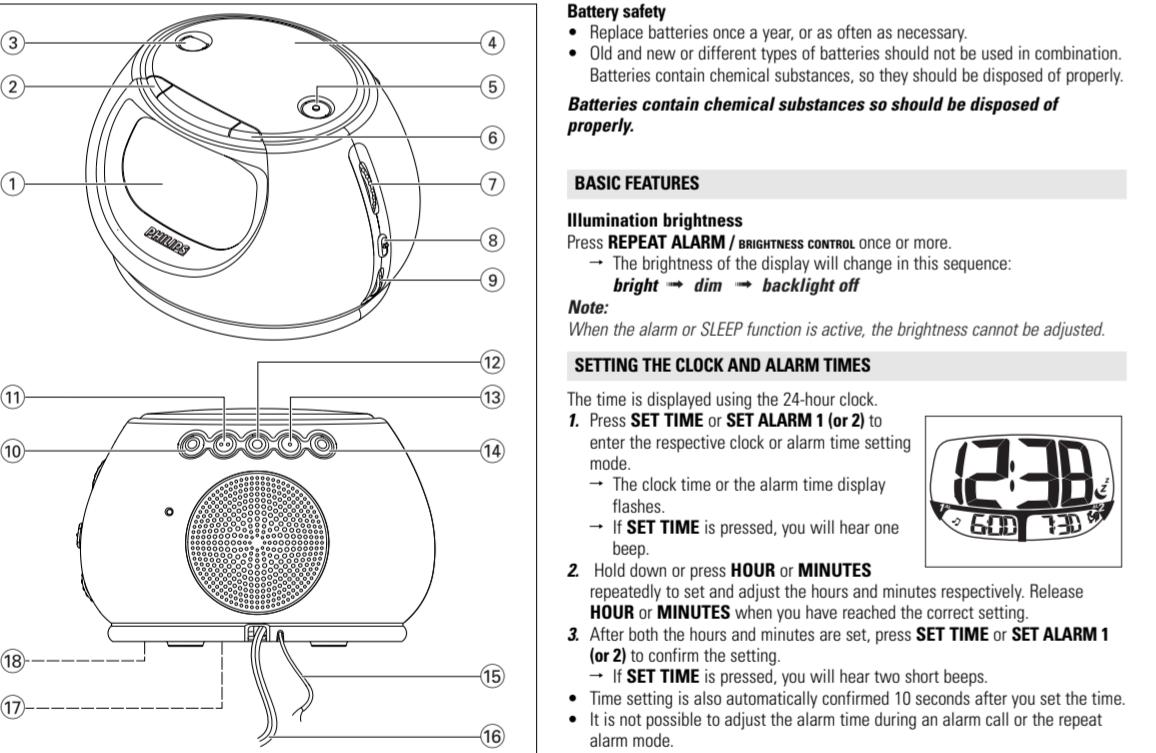

Important notes for users in the U.K.

Mains plug
This apparatus is fitted with an approved 13 Amp plug. To change a fuse in this type of plug proceed as follows:

- Remove fuse cover and fuse.
- Fix new fuse which should be a BS1362 5 Amp, A.S.T.A. or BSI approved type.
- Refit the fuse cover.

If the fitted plug is not suitable for your socket outlets, it should be cut off and an appropriate plug fitted in its place. If the mains plug contains a fuse, this should have a value of 5 Amp. If a plug without a fuse is used, the fuse at the distribution board should not be greater than 5 Amp.

Note: The severed plug must be disposed of to avoid a possible shock hazard should it be inserted into a 13 Amp socket elsewhere.

How to connect a plug

The wires in the mains lead are coloured with the following code: blue = neutral (N), brown = live (L). As these colours may not correspond with the colour markings identifying the terminals in your plug, proceed as follows:

- Connect the blue wire to the terminal marked N or coloured blue.
- Connect the brown wire to the terminal marked L or coloured red.
- Do not connect either wire to the earth terminal in the plug, marked E (or Δ) or coloured green (or green and yellow).

Before replacing the plug cover, make certain that the cord grip is clamped over the sheath of the lead - not simply over the two wires.

Copyright in the U.K.
Recording and playback of material may require consent. See Copyright Act 1956 and The Performer's Protection Acts 1958 to 1972.

English

CONTROLS

- DISPLAY** - shows clock and alarms (small display) times and status
- AL 1** - selects alarm 1 mode: OFF / RADIO
- RADIO ON / SLEEP**
 - activates the radio for sleep function, and to select the sleep time
 - switches the radio on
- REPEAT ALARM / BRIGHTNESS CONTROL**
 - switches off the alarm for a 8-9 minute period
 - changes display illumination brightness
 - stops SLEEP function
- RADIO OFF / ALARM RESET**
 - stops active alarm for 2 hours
 - stops RADIO / SLEEP function
- AL 2** - selects alarm 2 mode: OFF / BUZZER / COCKCROW
- TUNING** - tunes to radio stations
- BAND** - select FM-AM (MW or LW) waveband
- VOLUME** - adjusts the sound level
- MINUTES** - adjusts the minutes for clock and alarm times
- SET ALARM 2**: sets the alarm 2 time
- SET TIME**: sets the clock time
- SET ALARM 1**: sets the alarm 1 time
- HOUR**: adjusts the hours for the clock and alarm times
- Pigtail** - improves FM reception
- Mains lead** - connect to your AC mains supply
- Door** - opens to store a 3 x R6/UM3/AA batteries (not included) for clock memory backup
- RESET** - press if the set / display does not react to operation of any button

SWITCHING OFF THE ALARM

There are three ways of switching off the alarm. Unless you cancel the alarm completely, the **24 HOUR ALARM RESET** option will be automatically selected after 59 minutes from when the alarm first goes off.

24 HOUR ALARM RESET

If you want the alarm mode to be stopped immediately but also wish to retain the same alarm setting for the following day:

- Press **RADIO OFF / ALARM RESET**
- You will hear a beep tone confirming 24 hour reset activation. The respective alarm display appears.

REPEAT ALARM

This repeats your alarm call at 8-9 minute intervals.

- During the alarm call, press **REPEAT ALARM / BRIGHTNESS CONTROL**. The alarm indicator flashes during repeat alarm.
- Repeat if desired.

CANCELING THE ALARM COMPLETELY

During alarm activated or repeat alarm mode, press and hold the **AL 1** or **AL 2** button for more than 2 seconds. Alarm will be switched off completely.

→

The selected alarm symbol and set alarm time disappear.

MAINS SUPPLY AND DEMO MODE

- Check if the mains supply, as shown on the **type plate located on the bottom of the set**, corresponds to your local mains supply. If it does not, consult your dealer or service centre.
- Connect the mains plug to the wall socket. The mains supply is now switched on. The start-up display lights up briefly, followed by the **PHILIPS demo mode**.

→

PHILIPS scrolls across the display continuously.

- Press **AL 2** button during the demo mode to listen to the cockcrow demo.
- Press **SET TIME** or **RADIO ON / SLEEP** to exit the demo mode, before you set the time or switch on the radio.
- To disconnect the set from the mains supply completely, withdraw the mains plug from the wall socket.

For users in the U.K.: please follow the instructions on the bottom of this sheet.

Standby power consumption 3W

CLOCK MEMORY BACKUP

The clock memory backup allows your alarm and clock time settings to be stored for up to a day when there is a power interruption e.g. power failure. The complete clock radio and display illumination will be switched off. Only the clock time will be displayed.

- Remove the battery door and insert a 3 x R6/UM3/AA batteries (not included) for backup.
- Replace the battery door.

To view the clock time:

- Press the **REPEAT ALARM / BRIGHTNESS CONTROL** button. The display lights up for 10 seconds.
- As soon as the power supply returns, the display will indicate the correct time.

Battery safety

- Replace batteries once a year, or as often as necessary.
- Old and new or different types of batteries should not be used in combination. Batteries contain chemical substances, so they should be disposed of properly.

Batteries contain chemical substances so should be disposed of properly.

BASIC FEATURES

Illumination brightness

Press **REPEAT ALARM / BRIGHTNESS CONTROL** once or more.
→ The brightness of the display will change in this sequence:
bright → **dim** → **backlight off**

Note:

When the alarm or SLEEP function is active, the brightness cannot be adjusted.

SETTING THE CLOCK AND ALARM TIMES

The time is displayed using the 24-hour clock.

- Press **SET TIME** or **SET ALARM 1 (or 2)** to enter the respective clock or alarm time setting mode.

→ The clock time or the alarm time display flashes.

- If **SET TIME** is pressed, you will hear one beep.

- Hold down or press **HOUR** or **MINUTES** repeatedly to set and adjust the hours and minutes respectively. Release **HOUR** or **MINUTES** when you have reached the correct setting.

- After both the hours and minutes are set, press **SET TIME** or **SET ALARM 1 (or 2)** to confirm the setting.

- If **SET TIME** is pressed, you will hear two short beeps.

- Time setting is also automatically confirmed 10 seconds after you set the time.

- It is not possible to adjust the alarm time during an alarm call or the repeat alarm mode.

RADIO

- Press **RADIO ON / SLEEP** once to switch on the radio.
- Select your waveband using the **BAND** switch.

- Adjust **TUNING** to find your radio station.
- Adjust the sound using **VOLUME**.

- Press **RADIO OFF / ALARM RESET** to switch off.

To improve reception:

For **FM**, extend and position the pigtail fully to obtain optimum reception.

For **AM (MW or LW)**, the set is provided with a built-in aerial. Direct the aerial by adjusting the position of your clock radio.

SETTING THE ALARM

GENERAL

If you wish to use the alarm, first set the alarm time before selecting your choice of two alarm modes, radio or buzzer/cockcrow. The alarm display is shown constantly, and the alarm indicator appears if the alarm is set.

- To select the radio alarm, press **AL 1** button once. The **AL 1** display and **2** appear.

- Make sure you have adjusted the volume loud enough to wake you up!

- To select the buzzer or cockcrow alarm, press **AL 2** button once or more. The **AL 2** display and **1** or **2** appear.

- Within seconds, your gentle wake alarm:

- Buzzer option - increases its beep tone frequency.

- Cockcrow option - increases volume.

Copyright in the U.K.

Recording and playback of material may require consent. See Copyright Act 1956 and The Performer's Protection Acts 1958 to 1972.

English

Français

Español

CONTROLS

- DISPLAY** - shows clock and alarms (small display) times and status
- AL 1** - selects alarm 1 mode: OFF / RADIO
- RADIO ON / SLEEP**
 - activates the radio for sleep function, and to select the sleep time
 - switches the radio on
- REPEAT ALARM / BRIGHTNESS CONTROL**
 - switches off the alarm for a 8-9 minute period
 - changes display illumination brightness
 - stops SLEEP function
- RADIO OFF / ALARM RESET**
 - stops active alarm for 2 hours
 - stops RADIO / SLEEP function
- AL 2** - selects alarm 2 mode: OFF / BUZZER / COCKCROW
- TUNING** - tunes to radio stations
- BAND** - select FM-AM (MW or LW) waveband
- VOLUME** - adjusts the sound level
- MINUTES** - adjusts the minutes for clock and alarm times
- SET ALARM 2**: sets the alarm 2 time
- SET TIME**: sets the clock time
- SET ALARM 1**: sets the alarm 1 time
- HOUR**: adjusts the hours for the clock and alarm times
- Pigtail** - improves FM reception
- Mains lead** - connect to your AC mains supply
- Door** - opens to store a 3 x R6/UM3/AA batteries (not included) for clock memory backup
- RESET** - press if the set / display does not react to operation of any button

SWITCHING OFF THE ALARM

There are three ways of switching off the alarm. Unless you cancel the alarm completely, the **24 HOUR ALARM RESET** option will be automatically selected after 59 minutes from when the alarm first goes off.

24 HOUR ALARM RESET

If you want the alarm mode to be stopped immediately but also wish to retain the same alarm setting for the following day:

- Press **RADIO OFF / ALARM RESET**
- You will hear a beep tone confirming 24 hour reset activation. The respective alarm display appears.

REPEAT ALARM

This repeats your alarm call at 8-9 minute intervals.

- During the alarm call, press **REPEAT ALARM / BRIGHTNESS CONTROL**. The alarm indicator flashes during repeat alarm.
- Repeat if desired.

REPEAT ALARM

This repeats your alarm call at 8-9 minute intervals.

- During the alarm call, press **REPEAT ALARM / BRIGHTNESS CONTROL**. The alarm indicator flashes during repeat alarm.
- Repeat if desired.

REPEAT ALARM

This repeats your alarm call at 8-9 minute intervals.

- During the alarm call, press **REPEAT ALARM / BRIGHTNESS CONTROL**. The alarm indicator flashes during repeat alarm.
- Repeat if desired.

REPEAT ALARM

This repeats your alarm call at 8-9 minute intervals.

- During the alarm call, press **REPEAT ALARM / BRIGHTNESS CONTROL**. The alarm indicator flashes during repeat alarm.
- Repeat if desired.

REPEAT ALARM

This repeats your alarm call at 8-9 minute intervals.

- During the alarm call, press **REPEAT ALARM / BRIGHTNESS CONTROL**. The alarm indicator flashes during repeat alarm.
- Repeat if desired.

REPEAT ALARM

This repeats your alarm call at 8-9 minute intervals.

- During the alarm call, press **REPEAT ALARM / BRIGHTNESS CONTROL**. The alarm indicator flashes during repeat alarm.
- Repeat if desired.

REPEAT ALARM

This repeats your alarm call at 8-9 minute intervals.

- During the alarm call, press **REPEAT ALARM / BRIGHTNESS CONTROL**. The alarm indicator flashes during repeat alarm.
- Repeat if desired.

REPEAT ALARM

This repeats your alarm call at 8-9 minute intervals.

- During the alarm call, press **REPEAT ALARM / BRIGHTNESS CONTROL**. The alarm indicator flashes during repeat alarm.
- Repeat if desired.

REPEAT ALARM

This repeats your alarm call at 8-9 minute intervals.

- During the alarm call, press **REPEAT ALARM / BRIGHTNESS CONTROL**. The alarm indicator flashes during repeat alarm.
- Repeat if desired.

REPEAT ALARM

This repeats your alarm call at 8-9 minute intervals.

- During the alarm call, press **REPEAT ALARM / BRIGHTNESS CONTROL**. The alarm indicator flashes during repeat alarm.
- Repeat if desired.

REPEAT ALARM

This repeats your alarm call at 8-9 minute intervals.

- During the alarm call, press **REPEAT ALARM / BRIGHTNESS CONTROL**. The alarm indicator flashes during repeat alarm.
- Repeat if desired.

REPEAT ALARM

This repeats your alarm call at 8-9 minute intervals.

- During the alarm call, press **REPEAT ALARM / BRIGHTNESS CONTROL**. The alarm indicator flashes during repeat alarm.
- Repeat if desired.

REPEAT ALARM

This repeats your alarm call at 8-9 minute intervals.

- During the alarm call, press **REPEAT ALARM / BRIGHTNESS CONTROL**. The alarm indicator flashes during repeat alarm.
- Repeat if desired.

REPEAT ALARM

This repeats your alarm call at 8-9 minute intervals.

- During the alarm call, press <