



Philips
CD Soundmachine with
Dynamic Bass Boost

CD
cassette

AZ1022

Program your favorite music

You take pleasure in the simple things in life and delight in convenience. The sleek and portable AZ1022 lets you indulge in the pleasures of enjoying your favorite music with the help of easy-to-use functions.

Enjoy favorite music from three different sources

- CD player
- FM/MW tuner for radio enjoyment
- Stereo cassette deck

Rich and clear sound

- Dynamic Bass Boost for deep and dramatic sound

Easy to use

- CD shuffle/program/repeat for personalized music enjoyment
- Multi-functional LCD display
- Stereo headphone socket

PHILIPS
sense and simplicity

Specifications

Audio Playback

- Loader Type: Top
- Playback Media: CD, CD-R, CD-RW
- Disc Playback Modes: Fast Forward/Backward, Next/Previous Track Search, Repeat Play, Shuffle Play
- Number of decks: 1
- Cassette Deck Technology: Mechanical
- Programmable Tracks: 20

Tuner/Reception/Transmission

- Tuner Bands: FM, MW
- Antenna: FM Antenna

Sound

- Output power (RMS): 2X1.0W
- Sound Enhancement: Dynamic Bass Boost
- Sound System: Stereo
- Speaker diameter: 3.5"
- Volume Control: rotary

Audio Recording

- Tape Recording Enhancement: CD Synchro Start Recording
- Recording Media: Tape



Convenience

- Display Type: LCD

Connectivity

- Headphone: 3.5 mm

Power

- Battery type: LR14
- Battery voltage: 1.5 V
- Mains power
- Number of batteries: 6

Accessories

- Included accessories: AC Power Cord, User Manual, Warranty certificate

Dimensions

- Packaging dimensions (W x H x D): 325 x 180 x 280 mm
- Product dimensions (W x H x D): 290 x 143 x 240 mm
- Weight: 1.99 kg
- Weight incl. Packaging: 2.64 kg
- Product weight: 1.99 kg

Highlights

CD player

CD player

FM/MW tuner

FM/MW (AM) stereo tuner

Stereo cassette deck

Stereo cassette deck

Dynamic Bass Boost

Dynamic Bass Boost maximizes your music enjoyment by emphasizing the bass content of the music throughout the range of volume settings - from low to high - at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

CD shuffle/program/repeat

The "Shuffle/Program/Repeat" function helps you to get rid of the boredom of hearing your music played in the same order all the time. After loading your favorite songs to the player, all you have to do is to select one of the modes - "Shuffle", "Program" or "Repeat" for your tunes to be played in different modes order. Enjoy the different and unique music experience every time you hook up to your player.

Multi-functional LCD display

Multi-functional LCD display

Stereo headphone socket

Connect your own headphone for a more personal listening experience whenever you want it. You can enjoy your favorite music in great sound without disturbing others by connecting your headphones to the player.



Issue date 2011-07-21

Version: 3.1.10

12 NC: 9073 101 02343
EAN: 87 10895 93240 0

© 2011 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com