


PHILIPS MAGNAVOX

AZ 1110 Family CD Radio Cassette Recorder

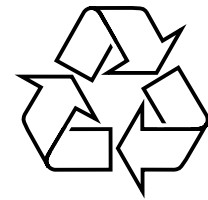

PHILIPS CONSUMER ELECTRONICS COMPANY
A Division of Philips Electronics North America Corporation
Knoxville, Tennessee 37914-1810, U.S.A.

Printed in Hong Kong

TcText/CvB/747

Toll Free Help Line
Ligne d'assistance en service libre
Línea de ayuda telefónica sin cargo
800-531-0039

Owner's Manual
Mode d'emploi
Instructivo de manejo

POWER SUPPLY

CASSETTE RECORDER

Once your Philips Magnavox purchase is registered, you're eligible to receive all the privileges of owning a Philips Magnavox product.

So complete and return the Warranty Registration Card enclosed with your purchase at once. And take advantage of these important benefits.

Warranty Verification
Registering your product within 10 days confirms your right to maximum protection under the terms and conditions of your Philips Magnavox warranty.

Owner Confirmation
Your completed Warranty Registration Card serves as verification of ownership. In the event of product theft or loss.

Model Registration
Returning your Warranty Registration Card right away guarantees you'll receive all the information and special offers which you qualify for as the owner of your model.

Know these **safety symbols**

CAUTION
RISK OF ELECTRIC SHOCK. DO NOT REMOVE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.

CAUTION: To prevent electric shock, match wide blade of plug to wide slot, and fully insert.

BATTERIES (see [3])
Whenever convenient, use the power supply if you want to conserve battery life. Make sure you remove the power plug from the set and wall outlet before inserting batteries.

Batteries (optional)
1. Open the battery compartment and insert as shown six batteries, type R20, or D-cells.
2. Replace the compartment door, making sure the batteries are firmly and correctly in place.
3. Remove the batteries if exhausted or if they will not be used again for a long period.

Environmental information
All redundant packaging material has been omitted. We have done our utmost to make the packaging easily separable into three main materials: cardboard (box), expandable polystyrene (buffer) and polyethylene (bags, protective foam sheet).

Your set consists of materials which can be recycled if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Both the model and production numbers can be found on the bottom of the set.


CASSETTE PLAYBACK
1. Set the source selector to TAPE.
2. Press STOP*OPEN **■** to open the cassette holder.
3. Insert a recorded cassette.
4. Press PLAY **▶** and playback will start.
5. Adjust the sound using the VOLUME, and DBB controls.
6. For brief interruptions, press PAUSE **■**. Press PAUSE **■** again to resume playback.
7. By pressing **◀** or **▶**, just winding of the tape is possible in both directions.
8. To stop playback, press STOP*OPEN **■**.
- The keys are automatically released at the end of the tape.

RECORDING FROM THE RADIO
1. Set the source selector to RADIO.
2. Tune to the desired radio station using the TUNING knob.
3. Press STOP*OPEN **■** to open the cassette holder.
4. Insert a blank cassette.
5. Press RECORD **■** to start recording.
6. For brief interruptions, press PAUSE **■**. To resume recording, press PAUSE **■** again.
7. To stop, press STOP*OPEN **■**.

CD SYNCHRO START RECORDING
1. Set the source selector to CD.
2. Insert a CD and if desired, program track numbers.
3. Press STOP*OPEN **■** to open the cassette holder.
4. Insert a blank cassette.
5. Press RECORD **■** to start recording.
- Playing of the CD program starts automatically from the beginning of the program. It is not necessary to start the CD player separately.
6. For brief interruptions, press PAUSE **■**. To resume recording, press PAUSE **■** again.
7. To stop recording press STOP*OPEN **■**.

To select and record a particular passage within a track
1. Press SEARCH **◀** or **▶** to select a passage.
2. Put the CD player in PAUSE **■** position at the selected passage.
- Recording will start from this exact point when you press RECORD **■**.

CASSETTE RECORDING (see [6] / [7])
General information on cassette recording
- Recording is permissible insofar as copyright or other rights of third parties are not infringed.
- This deck is not suited for recording on GARDME (IEC II) or METAL (IEC IV) type cassettes. For recording you should use NORMAL type cassettes (IEC I) on which the tabs have not been broken.
- The recording level is set automatically. Altering the VOLUME control or, DBB switch will not affect the recording in progress.
- No recording will take place during the first 7 seconds, when the leader tape passes the recorder heads.
- To prevent the accidental erasure of a recording, keep the cassette side to be safeguarded in front of you and break out the left tab. Recording on this side is no longer possible.

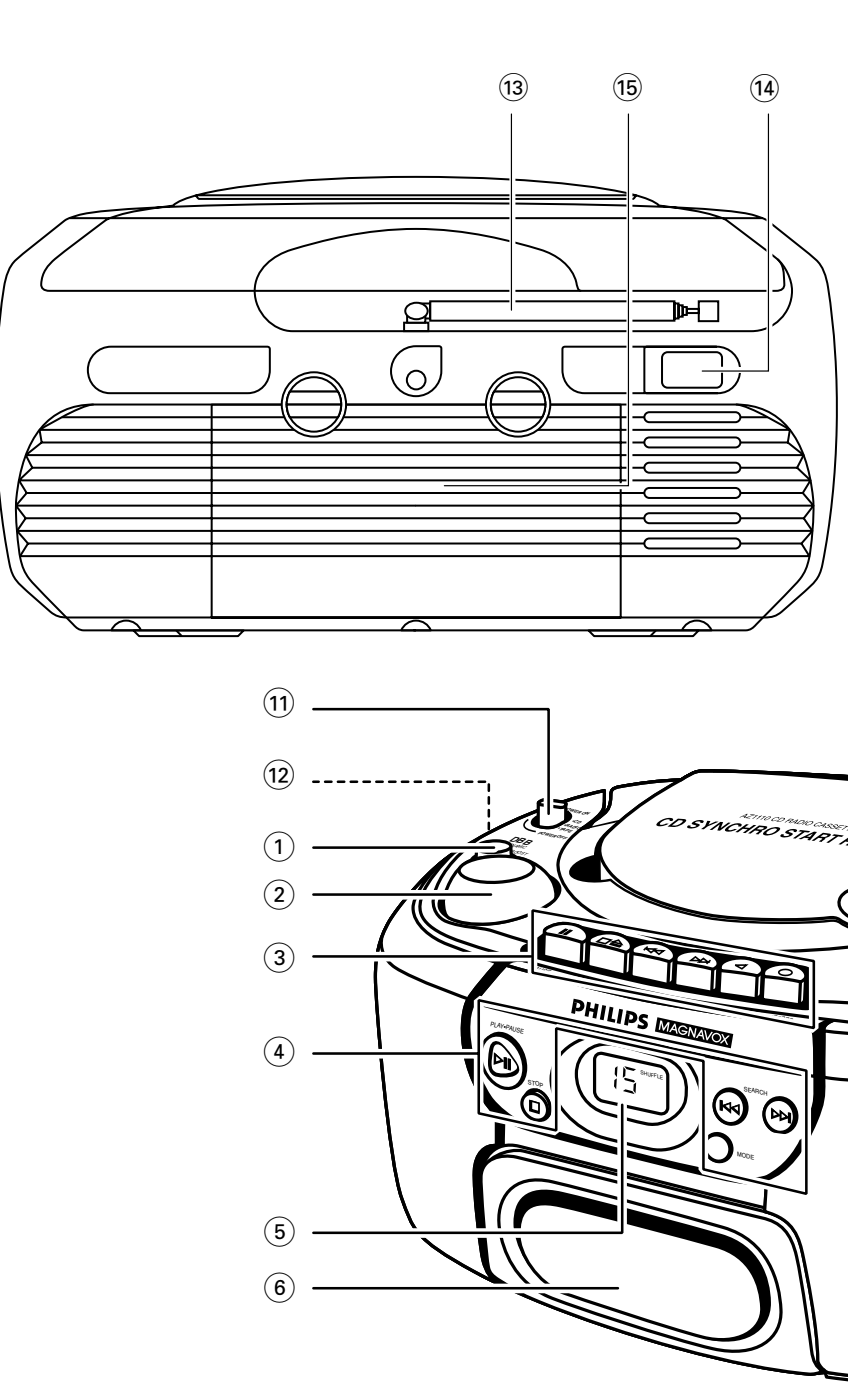

1. 6 x D-cells - R14

2. FM

3. AM

4. REPEAT ALL PROGRAM

5. SHUFFLE

6. CD

7. PAUSE

8. STOP

9. SEARCH

10. OPEN

11. VOLUME

12. DBB

13. TAPE

14. CASSETTE COMPARTMENT

15. STOP

16. PAUSE

English	Français	Español
① DBB (Dynamic Bass Boost) → to increase the bass level	pour amplifier les fréquences basses pour régler le niveau sonore	Refuerzo dinámico de tonos bajos) → para reforzar los tonos bajos para ajustar el volumen
② VOLUME → to adjust the volume level		
③ Cassette keys PAUSE ■ → to interrupt playback STOP*OPEN ■ → to stop playback and open the cassette compartment SEARCH ▶ → to fast forward the tape SEARCH ◀ → to fast rewind the tape PLAY ◀ → to start playback RECORD ■ → to start recording	Touche de la platine cassette pour interrompre la lecture pour interrompre la lecture et ouvrir le compartiment à cassette rembobinage rapide de la cassette vers l'avant rembobinage rapide de la cassette vers l'arrière pour démarrer la lecture pour démarrer l'enregistrement	Teclas del cassette para interrumpir la reproducción para parar la reproducción y abrir el compartimiento del cassette para avance rápido de la cinta para avance rápido de la cinta para iniciar la reproducción para iniciar la grabación
④ CD buttons PLAY*PAUSE ■ → to start or interrupt CD playback STOP ■ → to stop playback SEARCH ◀▶ → to skip or search a passage or a track MODE → to select a different playback mode (e.g. SHUFFLE or REPEAT) and to program track numbers	Touche de lecteur de CD pour démarrer ou interrompre la lecture du CD pour interrompre la lecture pour sauter ou rechercher un passage ou une plage spécifique pour sélectionner un mode de lecture différent (par ex. SHUFFLE ou REPEAT) et pour programmer les numéros de plages	Botones de CD (discos compacto) para iniciar o interrumpir la reproducción del CD para parar la reproducción para buscar o saltar a una parte o a una pista particular para seleccionar un modo de reproducción distinto, por ejemplo, SHUFFLE (mezcla) o REPEAT (repetir) y programar números de pista
⑤ CD display → to indicate CD functions		
⑥ Cassette compartment	Compartiment à cassette pour sélectionner les stations radio	Compartimento del cassette para sintonizar emisoras de radio
⑦ TUNING → to tune to radio stations		
⑧ Tuning dial pointer → to select the wave band (FM-AM)	Indicateur de syntonisation pour sélectionner la bande de longueur d'ondes (FM-AM)	Puntero del dial de sintonización para seleccionar la banda de onda (FM-AM)
⑨ Band selector → to open the CD door		
⑩ OPEN → to open the CD door		
⑪ Power selector → POWER ON/OFF switch and to select the sound source: CD - RADIO - TAPE	POWER ON/OFF et pour sélectionner la source sonore: CD-TUNER-TAPE	interruptor de POWER ON/OFF (apagado/encendido) y selector de la fuente de sonido: CD - TUNER (sintonización) - TAPE (cinta)
⑫ prise casque 3.5 mm		zócalo de auricular de 3.5 mm
BACK PANEL	PANNEAU ARRIÈRE pour améliorer la réception en modulation de fréquence pour améliorer la réception en modulation de fréquence prise pour le branchement sur secteur	PANEL TRASERO para mejorar la recepción de FM para mejorar la recepción de FM enchufe para el cable de la red eléctrica para abrir el compartimiento de la batería
⑬ Telescop antenna → to improve FM reception		
⑭ AC MAINS		
⑮ Battery door → to open the battery compartment		

LIMITED WARRANTY

One Year Free Exchange

This product must be carried in for an exchange.

PHILIPS MAGNAVOX PORTABLE COMPACT DISC

WHO IS COVERED?
Warranty coverage begins the day you buy your product. For one year thereafter a defective or improper product will be replaced with a new, renewed or comparable product at no charge to you. A replacement product is provided only if the original warranty period. When the warranty on the original product expires, the warranty on the replacement product also expires.

WHAT IS EXCLUDED?
Your warranty does not cover:
• labor charges for installation or setup of the product, adjustment of customer controls on the product, and installation or repair of antenna systems outside of the product.
• product repair and/or part replacement because of misuse, accident, unauthorized repair or other cause not within the control of Philips Consumer Electronics Company.
• reception problems caused by signal conditions or cable or antenna systems outside the unit.
• a product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications.
• incidental or consequential damages resulting from the product. (Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you. This includes, but is not limited to, unanticipated costs, whether copyrighted or not, copyright fees.)
• a product that is used for commercial or institutional purposes.

WHERE IS EXCHANGE AVAILABLE?
You may exchange the product in all countries where the product is officially distributed by Philips Consumer Electronics Company. In countries where Philips Consumer Electronics Company does not distribute the product, the local Philips service organization will attempt to provide a replacement product (although there may be a delay if the appropriate product is not readily available).

BEFORE REQUESTING EXCHANGE...
Please check your owner's manual before requesting an exchange. Adjustments of the controls discussed there may save you a trip.

EXCHANGING A PRODUCT IN U.S.A., PUERTO RICO OR U.S. VIRGIN ISLANDS...
Contact your dealer or arrange an exchange. Or, ship the product, insured and freight prepaid, with proof of purchase enclosed, to the address listed below.
Philips Service Company
907 Snaggs Ferry Road, Plant 2, Building 6
Greenville, TN 37416
(In U.S.A., Puerto Rico and U.S. Virgin Islands, all implied warranties, including implied warranties of merchantability and fitness for a particular purpose, are limited in duration to the duration of this express warranty. But, because some states do not allow limitations on how long an implied warranty may last, this limitation may not apply to you.)

EXCHANGING A PRODUCT IN CANADA...
Please contact Philips at:
1-800-641-6162 (French Speaking)
1-800-363-7278 (English Speaking)
(In Canada, this warranty is given in lieu of all other warranties. No other warranties are implied or intended. Philips is not liable under any circumstances for any direct, indirect, special, incidental or consequential damages, however incurred, even if notified of the possibility of such damages.)

TO GET OUT-OF-WARRANTY EXCHANGE...
In U.S.A., Puerto Rico or U.S. Virgin Islands, contact Philips Service Company at (800) 851-0885 to obtain the cost of out-of-warranty exchange. Then carefully pack the product and ship it to the Small Product Service Center (address listed above). In Canada, call the phone number listed above under "Exchanging a Product in Canada" to obtain the cost of out-of-warranty exchange.

REMEMBER...
Please record the model and serial numbers found on the product below. Also, please fill out and mail your warranty registration card promptly. It will be easier for us to notify you if necessary.

MODEL # _____
SERIAL # _____

CD PLAYER

SEARCH ◀ or ▶
Selecting a different track during playback
- You can jump to the next track by pressing SEARCH **▶** once. If you want to skip more than one track, press SEARCH **▶** more than once until the display shows the desired track number.
- If you want to repeat the running track from the beginning, press SEARCH **▶** once. If you want to repeat one of the previous tracks, press SEARCH **▶** more than once until the display shows the desired track number.

Starting with a particular track
1. In the STOP position you can select a desired track using the SEARCH **▶** button.
2. Press PLAY*PAUSE **▶** to start playback.

Searching for a passage within a track
You can search for a passage within a track. The CD is played at low volume and at high speed, however, the sound is still recognizable.
1. Keep the SEARCH **▶** button pressed during playback, and release the button as soon as you recognize the desired passage.
- Normal CD playback will resume from this point.

SHUFFLE/REPEAT (see [3])
The MODE button allows you to select four different modes which can also be combined with PROGRAM. The modes can be selected or changed during playback and will flash for 2 seconds before playing your selected mode.
1. During playback only, press MODE until the desired function appears on the display.
SHUFFLE - Tracks are played in random order.
REPEAT ALL SHUFFLE - Continuous playback of tracks in random order.
REPEAT - Continuous playback of the current track.
REPEAT ALL - Repeats the entire CD.
- During playback you can use SEARCH **▶** or SEARCH **▶** to skip tracks.

2. To leave the SHUFFLE/REPEAT modes, press the MODE button repeatedly until the various SHUFFLE/REPEAT modes are no longer shown on the display. You can also press STOP **■** to quit playback.

PROGRAMMING TRACK NUMBERS
You may store at most 20 tracks in the memory in the desired sequence.
You may store any track more than once.

Programming track numbers
1. In the stop position select the desired track using SEARCH **▶** or SEARCH **▶** until the display shows the desired track number.
2. Store the desired track by pressing MODE **Ⓢ** once.
- The display shows F and PROGRAM followed by your selected track number.
3. Select and store all desired tracks of a CD in this way.

Checking a program
1. To review the set program, in the stop position press and hold MODE for more than 2 seconds.
- The display will show the track numbers you have selected in sequence.
2. To start playback of the program, press PLAY*PAUSE **▶**
- Playback starts with the first track of the program. After the last track, playback stops and the display shows the CD's total number of tracks.

Erasing a program
You can erase the contents of the memory by:
- opening the CD door,
- setting the source selector to the TAPE or RADIO position,
- pressing STOP twice during playback/in the stop position.

The CD skips tracks.
- CD is damaged or dirty.
- PROGRAM/SHUFFLE is active.

TROUBLESHOOTING

If a fault occurs, first check the points listed below before taking the set for repair. If you are unable to remedy a problem by following these hints, consult your dealer or service center.
WARNING: Under no circumstances should you try to repair the set yourself, as this would invalidate the warranty.

PROBLEM	POSSIBLE CAUSE	REMEDY
Set does not react to operation of any control.	- Electrostatic discharge.	• Switch off the set, disconnect the power plug and reconnect after a few seconds.
Display does not function properly.	- Electrostatic discharge.	• Switch off the set, disconnect the power plug and reconnect after a few seconds.
No sound.	- VOLUME is not adjusted. - Headphones are connected. - Batteries are exhausted. - Batteries are incorrectly inserted. - Power cord is not securely connected. - Batteries are exhausted.	• Adjust the VOLUME. • Disconnect headphones. • Insert new batteries. • Insert the batteries correctly. • Connect the power cord properly. • Replace batteries.
Bad sound.	- Set too close to TV, VCR or computer.	• Increase the distance.
Poor radio reception.	- Weak radio signal.	• The FM: aim and extend the telescopic antenna for best reception. (see [2]) • AM: rotate the entire set (see [3]).
Poor cassette sound quality.	- Dust and dirt on the heads, capstan or pressure roller. - Headphones are connected. - Cassette tape(s) are damaged.	• Clean the heads etc., see Maintenance. • Only use NORMAL (IEC I) for recording.
Recording does not work.	- Cassette tape(s) may be broken out.	• Apply a piece of adhesive tape over the missing tab space.
CD playback does not work.	- CD is badly scratched or dirty. - No CD inserted. - CD inserted upside down. - Laser lens is steamed up.	• Replace or clean the CD, see Maintenance. • Insert CD with printed side facing up. • Wait until lens has acclimated.
The CD skips tracks.	- CD is damaged or dirty. - PROGRAM/SHUFFLE is active.	• Replace or clean the CD. • Switch off the PROGRAM/SHUFFLE function.

