


PHILIPS MAGNAVOX

AZ 2700 Portable CD Mini System

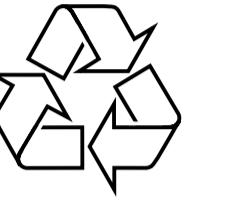

PHILIPS CONSUMER ELECTRONICS COMPANY
A Division of Philips Electronics North America Corporation
Knoxville, Tennessee 37914-1810, U.S.A.

printed in Hong Kong

TC Text/CvB/9804

Toll Free Help Line
Ligne d'aide en service libre
Línea de ayuda telefónica sin cargo
800-531-0039

Owner's Manual
Mode d'emploi
Instructivo de manejo

Return your Warranty Registration card today to ensure you receive all the benefits you're entitled to.

- Once your Philips magnavox purchase is registered, you're eligible to receive all the privileges of owning a Philips magnavox product.

Warranty Verification

Registering your product within 10 days confirms your right to maximum protection under the terms and conditions of your Magnavox warranty.

Owner Confirmation

Your completed Warranty Registration Card serves as verification of ownership in the event of theft or loss.

Model Registration

Returning your Warranty Registration Card right away guarantees you'll receive all the information and special offers which you qualify for as the owner of your model.

Know these Safety symbols



CAUTION!
RISK OF ELECTRIC SHOCK.
DO NOT OPEN.
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

This "bolt of lightning" indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

The "exclamation point" calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

For Customer Use

Enter below the Serial No. which is located on the rear of the cabinet. Retain this information for future reference.

Model No. _____
Serial No. _____

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.

CAUTION:

To prevent electric shock, match wide blade of plug to wide slot, and fully insert.

Note:

The battery supply is switched off when the set is connected to the AC power.

AC power

Check

If the power voltage as shown on the type plate (on the base of the set) corresponds to your local power voltage. If it does not, consult your dealer or service organization.

Clip

the exposed portion of wire into the corresponding terminal.

Repeat

the wiring procedure for the left speaker to terminal L, making sure that you connect the red wire to + and the black to -.

Connecting

the speakers

Slide

the speakers from above in the sleeves on the sides of the set cabinet. The speakers will click into position.

Attaching

the speakers

Set

the source selector to TAPE and do not move this key.

Dubbing: copying from deck 2 to 1

For best results, use the AC power supply or fresh batteries.

Set

the source selector to TAPE and do not move this key.

Press

both STOP-OPEN □▲ keys and insert a recorded tape into deck 2 and a suitable tape for recording in deck 1.

Recording

is possible on deck 1. During recording, the volume of the tape recorder will decrease.

This

This deck is not suited for recording on CHROME IEC II or METAL (IEC IV) type cassettes. For recording you should use NORMAL type cassettes (IEC I) on which the tabs have not been broken.

Note

The incorrect use of batteries can damage the tape.

Speakers

Speakers with an impedance of 4 ohms or higher than as supplied may be used instead. Do not, however, use speakers with a lower impedance as this will result in damage to your set.

Attaching the speakers

Slide

the speakers from above in the sleeves on the sides of the set cabinet. The speakers will click into position.

Power supply

POWER SUPPLY

Batteries

Whenever convenient, use the power supply if you want to extend battery life. Make sure you remove the AC cord from the wall outlet before inserting batteries.

Open

the battery compartment and insert as shown six batteries, type R20, UM1 or D-cells.

Replace

the compartment door, making sure the batteries are firmly and correctly in place.

Remove

the batteries if exhausted or if they will not be used again for a long period.

So

complete and return the Warranty Registration Card enclosed with your purchase at once. And take advantage of these important benefits.

Taking off the speakers

Keep

the levers (found on the back corners of the speakers) pressed and slide the speaker upwards.

The ideal position is obtained when the front speakers and the listening position build an equilateral triangle and the distance between them is equal to the height of the set.

This

This deck is not suited for recording on CHROME IEC II or METAL (IEC IV) type cassettes. For recording you should use NORMAL type cassettes (IEC I) on which the tabs have not been broken.

Note

The incorrect use of batteries can damage the tape.

Speakers

Speakers with an impedance of 4 ohms or higher than as supplied may be used instead. Do not, however, use speakers with a lower impedance as this will result in damage to your set.

Cassette recorder

CASSETTE RECORDING

General information on cassette recording

Recording is permissible insofar as copyright or other rights of third parties are not infringed.

Recording

is possible on deck 1. During recording, the volume of the tape recorder will decrease.

This

This deck is not suited for recording on CHROME IEC II or METAL (IEC IV) type cassettes. For recording you should use NORMAL type cassettes (IEC I) on which the tabs have not been broken.

Note

The incorrect use of batteries can damage the tape.

Dubbing: copying from deck 2 to 1

For best results, use the AC power supply or fresh batteries.

Set

the source selector to TAPE and do not move this key.

Press

both STOP-OPEN □▲ keys and insert a recorded tape into deck 2 and a suitable tape for recording in deck 1.

Recording

is possible on deck 1. During recording, the volume of the tape recorder will decrease.

This

This deck is not suited for recording on CHROME IEC II or METAL (IEC IV) type cassettes. For recording you should use NORMAL type cassettes (IEC I) on which the tabs have not been broken.

Note

The incorrect use of batteries can damage the tape.

Speakers

Speakers with an impedance of 4 ohms or higher than as supplied may be used instead. Do not, however, use speakers with a lower impedance as this will result in damage to your set.

CD syncro - recording from the CD-player

Set

the source selector to CD.

Insert

a CD and if desired, program track numbers.

Insert

a recordable cassette with the full reel on the left-hand side.

Set

the source selector to TUNER.

Tune

to the desired station (see radio reception).

Press

RECORD ● to start recording.

Playing

of the CD program starts automatically from the beginning of the program.

It is

not necessary to start the CD player separately.

For brief interruptions, press PAUSE II.

To resume recording, press PAUSE II again.

To stop recording press STOP-OPEN □▲.

To select and record a particular passage within a track

Press

SEARCH <> or <> to select a passage.

Put

the CD player in PAUSE II position at the selected passage.

Press

RECORD ● to start recording from this exact point.

SAFETY

SAFETY

INFORMATION

