

Register your product and get support at

www.philips.com/welcome

GoGear

SA060304

SA060308



User manual

PHILIPS

Contents

1 Important safety information 5

- General maintenance 5
- Recycling the product 8

2 Your new SA060 9

- What's in the box 9
- Software loaded on the player 9
- Files loaded on the player 9

3 Get started 10

- Charge power 10
- First-time setup 10
- Switch the player on or off 11
 - Automatic standby and shut-down 11

4 Overview 12

- Controls 12
- Home screen 12
 - Navigate on the screens 12
- Lock and unlock the screen 12
- Select the wallpaper 13

5 Build a media library on SA060 14

- Transfer from your PC media library 14
 - Organize your music files 14
 - Transfer files to the player 14
- Use a Micro SD card 14

6 Music 15

- Browse the music library 15
- Play music 15
 - Select play options 15
 - Select sound options 15
- Playlists 16
 - Create a playlist-on-the-go 16
 - Play a playlist 16
- Delete songs 16

7 Videos 17

- Browse the video library 17
- Play videos 17
 - Select play options 17
 - Select sound options 18
 - Select the brightness 18
- Delete videos 18

8 Pictures 19

- Browse the picture library 19
- Play pictures 19
 - Select play options 19
 - View pictures 19
- Set a picture as wallpaper 20
- Favorite pictures 20
 - Add pictures to Favorites 20
 - Remove pictures from Favorites 20
- Delete pictures 21

9 FM radio 22

- Tune in to radio stations 22
- Store preset stations 22

10 Recordings 23

- Make recordings 23
 - Record voices 23
 - Record from the FM radio 23
- Play recordings 23
- Delete recordings 23

11 Text reader 24

- Read text files 24
- Delete text files 24

12 Folder view 25

13 SD Card 26

14 Settings	27
Set power-saving mode	27
Sleep timer	27
Display settings	27
Language	27
Information	27
Format device	27
Factory settings	28

15 Update the firmware through Philips Device Manager	29
--	----

16 Troubleshooting	30
---------------------------	----

17 Technical data	31
Supported music file formats	31
Supported video file formats	31
Supported picture file formats	31
System requirements	32

Need help?

Please visit

www.philips.com/welcome

where you can access a full set of supporting materials such as the user manual, the latest software updates, and answers to frequently asked questions.

1 Important safety information

General maintenance

The translation of this document is for reference only.

In the event of any inconsistency between the English version and the translated version, the English version shall prevail.

! Caution

- To avoid damage or malfunction:
- Do not expose the product to excessive heat caused by heating equipment or direct sunlight.
- Do not drop the product or allow objects to fall on your player.
- Do not allow the product to be submerged in water. Do not expose headphone socket or battery compartment to water; as water entering the set may cause major damage.
- Active mobile phones in the vicinity may cause interference.
- Back up your files. Ensure that you retain the original files you have downloaded to your device. Philips is not responsible for any loss of data if the product becomes damaged or not readable / legible.
- Manage (transfer, delete, etc.) your music files only with the supplied music software to avoid problems.
- Do not use any cleaning agents containing alcohol, ammonia, benzene, or abrasives as these may harm the product.

About operating and storage temperatures

- Operate in a place where temperature is always between 0 and 35°C (32 to 95°F)
- Store in a place where temperature is always between -20 and 45°C (-4 to 113°F).
- Battery life may be shortened in low temperature conditions.

Replacement parts/accessories:

Visit www.philips.com/support to order replacement parts/accessories.

Hearing Safety



Listen at a moderate volume:

Using headphones at a high volume can impair your hearing. This product can produce sounds in decibel ranges that may cause hearing loss for a normal person, even for exposure less than a minute. The higher decibel ranges are offered for those that may have already experienced some hearing loss.

Sound can be deceiving. Over time your hearing 'comfort level' adapts to higher volumes of sound. So after prolonged listening, what sounds 'normal' can actually be loud and harmful to your hearing. To guard against this, set your volume to a safe level before your hearing adapts and leave it there.

To establish a safe volume level:

Set your volume control at a low setting.

Slowly increase the sound until you can hear it comfortably and clearly, without distortion.

Listen for reasonable periods of time:

Prolonged exposure to sound, even at normally 'safe' levels, can also cause hearing loss.

Be sure to use your equipment reasonably and take appropriate breaks.

Be sure to observe the following guidelines when using your headphones.

Listen at reasonable volumes for reasonable periods of time.

Be careful not to adjust the volume as your hearing adapts.

Do not turn up the volume so high that you can't hear what's around you.

You should use caution or temporarily discontinue use in potentially hazardous situations.

Do not use headphones while operating a motorized vehicle, cycling, skateboarding, etc.; it may create a traffic hazard and is illegal in many areas.

Modifications

Modifications not authorized by the manufacturer may void user's authority to operate the product.

Copyright information

All other brands and product names are trademarks of their respective companies or organizations.

Unauthorized duplication of any recordings whether downloaded from the Internet or made from audio CDs is a violation of copyright laws and international treaties.

The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offense. This equipment should not be used for such purposes.

The Windows Media and the Windows logo are registered trademarks of Microsoft Corporation in the United States and/or other countries.

Be responsible! Respect copyrights.



Philips respects the intellectual property of others, and we ask our users to do the same. Multimedia content on the internet may have been created and/or distributed without the original copyright owner's authorization. Copying or distributing unauthorized content may violate copyright laws in various countries including yours. Compliance with copyright laws remains your responsibility.

The recording and transfer to the portable player of video streams downloaded to your computer is intended only for use with public domain or properly licensed content. You may only use such content for your private, non-commercial use and shall respect eventual copyright instructions provided by the copyright owner of the work. Such instruction may state that no further copies shall be made. Video streams may include copy protection technology that prohibits further copying. For such situations the recording function will not work and you will be notified with a message.

Data logging

Philips is committed to improving the quality of your product and enhancing the Philips user experience. To understand the usage profile of this device, this device logs some info / data to the non-volatile memory region of the device. These data are used to identify and detect any failures or problems you as a user may experience while using the device. The data stored, for example, will be the duration of playback in music mode, duration of playback in tuner mode, how many times battery low was encountered, etc. The data stored do not reveal the content or media used on the device or the source of downloads. The data stored on the device are retrieved and used ONLY if the user returns the device to the Philips service center and ONLY to simplify error detection and prevention. The data stored shall be made available to user on user's first request.

Monkey's Audio decoder

- ① **The Monkey's Audio SDK and source code can be freely used to add APE format playback, encoding, or tagging support to any product, free or commercial. Use of the code for proprietary efforts that don't support the official APE format require written consent of the author.**

- ② **Monkey's Audio source can be included in GPL and open-source software, although Monkey's Audio itself will not be subjected to external licensing requirements or other viral source restrictions.**
- ③ **Code changes and improvements must be contributed back to the Monkey's Audio project free from restrictions or royalties, unless exempted by express written consent of the author.**
- ④ **Any source code, ideas, or libraries used must be plainly acknowledged in the software using the code.**
- ⑤ **Although the software has been tested thoroughly, the author is in no way responsible for damages due to bugs or misuse.**

If you do not completely agree with all of the previous stipulations, you must cease using this source code and remove it from your storage device.

FLAC decoder

Copyright (C) 2000,2001,2002,2003,2004,2005, 2006,2007,2008,2009 Josh Coalson

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer:
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/ or other materials provided with the distribution.

- Neither the name of the Xiph.org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

© 2009, Xiph.Org Foundation

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer:
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/ or other materials provided with the distribution.

- Neither the name of the Xiph.org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

This software is provided by the copyright holders and contributors "as is" and any express or implied warranties, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose are disclaimed. In no event shall the foundation or contributors be liable for any direct, indirect, incidental, special, exemplary, or consequential damages (including, but not limited to, procurement of substitute goods or services; loss of use, data, or profits; or business interruption) however caused and on any theory of liability, whether in contract, strict liability, or tort (including negligence or otherwise) arising in any way out of the use of this software, even if advised of the possibility of such damage

Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products. The correct disposal of your old product helps prevent potentially negative consequences on the environment and human health.

 **Warning**

- Removal of the built-in battery invalidates the warranty and can destroy the product.

 
Your product contains a built-in rechargeable battery covered by the European Directive 2006/66/EC, which cannot be disposed of with normal household waste.



To safeguard the functionality and safety of your product, take your product to an official collection point or service centre where a professional can remove or replace the battery. Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health.

Recycling the product

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. When you see the crossed-out wheel bin symbol attached to a product, it means the product is covered by the European Directive 2002/96/EC:

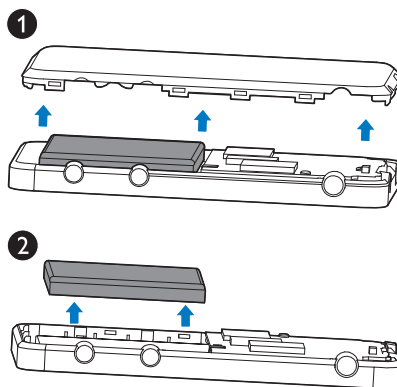

2 Your new SA060

On **SA060**, you can do the following:

- Play music;
- Watch videos;
- View pictures;
- Listen to the FM radio;
- Make recordings;
- Read text files (.txt files);
- Expand the memory by inserting a Micro SD card (sold separately).

 
What's in the box

Make sure that you have received the following items:

Player



Earphones



USB cable



Quick start guide



Note

- The images serve as reference only. Philips reserves the right to change color/design without notice.

Software loaded on the player

SA060 comes with the following software:

- Philips Device Manager (helps you get firmware updates for SA060)

Files loaded on the player

 
The following files are loaded on **SA060**:

- User manual
- Frequently asked questions

3 Get started

Charge power

SA060 has a built-in battery that can be charged through the USB port of a computer. As shown, connect the SA060 to a PC by using the USB cable.

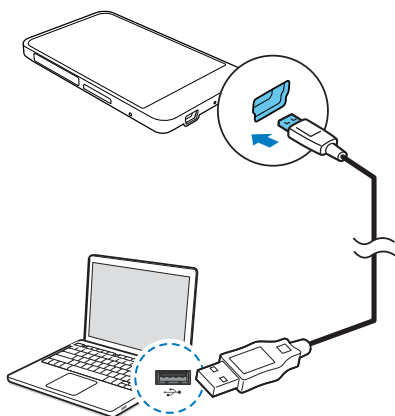

Note

- When you connect SA060 to a computer, you are briefly prompted to select: [Charge & transfer] or [Charge & play]. If no option is selected, [Charge & transfer] applies.
- To play the SA060 when you charge power, select [Charge & play].

Battery level indication

The display indicates the approximate levels of the battery status as follows:

100%	75%	50%	25%	0%

↳ A flashing battery screen indicates that the battery is low. The player saves all settings and switches off within 60 seconds.

Note

- Rechargeable batteries have a limited number of charge cycles. Battery life and number of charge cycles vary by use and settings.
- The charging animation stops and the icon is displayed when the charging process is completed.

To conserve battery power and increase the play time, do the following on SA060:

- Set the backlight timer to a low value (go to * > [Display settings] > [Screen off timer]).

First-time setup

The first time you connect SA060 to a PC, install Philips Device Manager on the PC. Over the Internet, you can update the firmware of the player through Philips Device Manager. When you connect the SA060 to the PC for the first time, a pop-up window appears:

- 1 Select **Install Philips Device Manager**.
- 2 Follow the on-screen instructions to complete the installation of the software.

Note

- The installation requires you to agree to the license terms.


If the pop-up window is not displayed automatically:

 
- 1 Select **My Computer** (Windows XP / Windows 2000) / **Computer** (Windows Vista / Windows 7).
- 2 Right click on the **Philips GoGear SA060** icon.
- 3 Select **Install Philips Device Manager**.
- 4 Follow the on-screen instructions to complete the installation of the software.

Note

- The installation requires you to agree to the license terms.

Switch the player on or off

Press and hold  until the player is switched on or off.

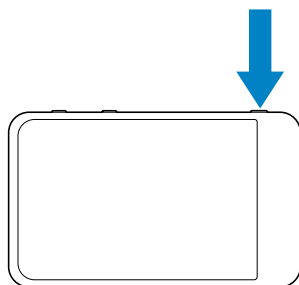

Automatic standby and shut-down

The player has an automatic standby and shut-down feature that can save battery power.

 
If in idle mode (no play, no button is pressed) for a certain time duration, the player switches off automatically.

To define the time duration,

- From the Home screen, go to * > [Set power-saving mode...].

4 Overview

Controls

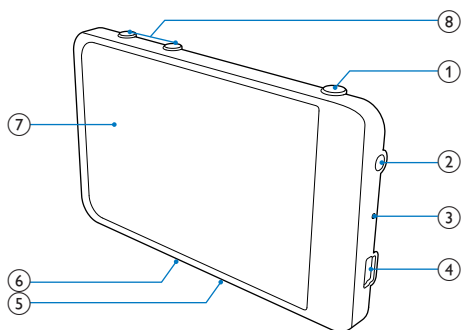

- ①
 - Press and hold: switch on/off the device
 - Press: lock/unlock the screen
- ②
 - 3.5 mm headphone connector
- ③ **MIC**
 - Microphone
- ④
 - USB connector for power charging and data transfer
- ⑤ **RESET**
 - Press the hole by using the tip of a ball pen when the screen does not respond to the pressing of keys
- ⑥ **MICRO SD**
 - Slot for Micro SD card
- ⑦ **Touch screen**
- ⑧
 - Press: increase/decrease the volume
 - Press and hold: increase/decrease fast

Home screen

Menu	Mode	To
	Music	play audio files
	Video	watch videos
	Pictures	view pictures
	FM radio	tune in to the FM radio; record from the FM radio
	Text reader	read text (.txt) files
	Settings	customize the settings of SA060
	Micro SD card	view or play media files on the Micro SD card
	Recordings	create or listen to recordings
	Folder view	view files in folders

Navigate on the screens

On the screens, tap the icons to access menus or options. If necessary, tap the screen to display the icons.

To access functional menus or options,

- Tap the icon or option.

To go back to previous screens,

- Tap repeatedly.

To return to the Home screen,

- Tap .

Lock and unlock the screen

Lock the screen of **SA060**. You can lock all the touch controls on the screen (the volume controls still function). Thus, undesired operations are prevented.

Auto lock

After a time duration, the screen dims and is locked automatically. To set the time duration, go to * > [Display settings] > [Screen off timer].

To lock the screen manually

- Press  / .

To unlock the screen


- Press  / .

Select the wallpaper

To select wallpaper for the Home screen,

- From the Home screen, go to * > [Display settings] > [Wallpaper]. Select a theme.

To set the custom wallpaper,

- Go to . Play a picture and set the wallpaper (see 'Set a picture as wallpaper' on page 20).

To switch from a theme to the last custom wallpaper,

- In * > [Display settings] > [Wallpaper], select [Custom].

5 Build a media library on SA060

Build a media library on **SA060** before you play from the player. To build such a media library, you can

- transfer your PC media library to the player;
- use a micro SD card (up to 32 GB) as media library.

Transfer from your PC media library

Organize your music files

Organize media files by file information

If the files contain file information (meta data or ID3 tag), the files can be sorted automatically by Title, Artist, or Album on **SA060**.

Edit the file information or get the album art through media management software on a PC, for example, **Windows Media Player 11**.

Organize media files by file folder

You can also organize media files in different folders on a PC.

Transfer files to the player

Transfer files in Windows Explorer

 
- 1 Connect **SA060** to a PC.
- 2 On the PC, under **My Computer** or **Computer**,
 - Find **SA060**;
 - Find files/ folders.
- 3 From the PC, drag and drop the files/ folders to **SA060**.

Transfer files through media management software

You can also sync your PC media library to the player through media management software, for example, **Windows Media Player 11**.

Use a Micro SD card

Insert a Micro SD card (up to 32 GB) into the **SA060**. You can expand the memory size of **SA060**.

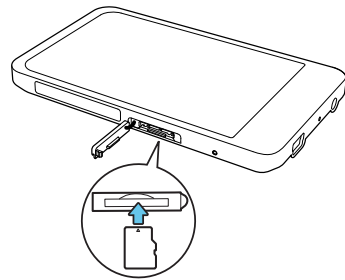

To play from the Micro SD card,

- Under **M**, **I**, or **S** on the player, you can find and play supported media files from the Micro SD card.


Alternatively,

- From the Home screen, tap **M**. Select and play media files that are stored on the Micro SD card.


To copy/move files from the internal memory to SD card,





- 1 From the Home screen, go to **M**.
- 2 On the screen of files or folders, tap **M**, and select options.
 - ↳ You can copy or move files or file folders to the SD card.

6 Music

Go to  to play music from the media library on the player:

Browse the music library

In , music files are organized by meta data (file information). You can browse the music library by song information.




- 1 Tap  to select a library view:
 - Tap , , or  to sort songs by album, artist, or song title.
 - ↳ The music library is sorted by the song information in alphabetical order.
- 2 In the column, swipe your finger up/ down to browse through the list of options.



Play music

- 1 In the music library, browse to find music.
- 2 Tap a song.
 - ↳ Play starts from current song.
 - ↳ The play screen is displayed.



Select play options

On the play screen, tap icons to select play options:


- | | |
|--|---|
|  | Tap to switch to the library or play screen. |
|  | Tap to pause/resume play. |
|  | Tap to skip songs;
Hold to search within current song. |

- | | |
|---|---|
|  | Tap once or more to select repeat options:
Repeat all: Tap to repeat all songs in current folder.
Repeat one: Tap to repeat current song. |
|  | Tap to play all songs in current folder in random order. |

To switch between the play screen and library screen

- Tap  to go to the Home screen;
 - ↳ You return to the play screen automatically a few seconds later.
- Alternatively, to return to the play screen, tap  on the Home screen.

Select sound options

- On the play screen, tap  to select options:

[FullSound]	Restore the sonic details that music compression loses (such as MP3, WMA).
--------------------	--

[Equalizer]	Define sound settings as needed.
--------------------	----------------------------------

[Volume limit]	Set a maximum volume level for the device. In this way, you can always keep the volume within a level safe enough to your hearing. Tap the volume bar to set the maximum level.
-----------------------	--

 Note

- Equalizer is deactivated when you select FullSound.




Playlists

With a playlist, you can access a list of songs from different artists or albums.


Create a playlist-on-the-go

On SA060, you can create five playlists-on-the-go.


Create a playlist-on-the-go

- 1 Tap  and select the library view of .
- 2 Tap  and select **[Create new 'Playlist on the go']**.
↳ A playlist-on-the-go is created.

Add songs to a playlist

- 1 Select or play a song.
- 2 On the list of songs or play screen,
 - tap  and select **[Add to playlist]**.
↳ A list of playlists is displayed.
- 3 Tap to select a playlist. Confirm as prompted.
↳ Current song is added to the playlist.

Play a playlist



 


- 1 Tap  and select the library view of **[Playlists]**.
↳ A list of playlists is displayed.
- 2 Tap to select a playlist and song.
↳ The playlist starts playing from current song.

Delete songs


You can delete songs in the following ways:

- Delete selected songs;
- Delete current song;
- Delete selected playlists.




To delete selected songs,

- 1 Tap  to select a library view: , , or .
↳ The music library is sorted by the song information in alphabetical order.
- 2 Tap  and select **[Delete]**.
- 3 Tap the checkbox next to songs.
- 4 Tap **[Delete [X] items]** ([X] denotes the number of selected songs).
↳ Selected songs are deleted.


To delete current song on the play screen,

- Tap  and select **[Delete]**.
↳ Current song is deleted.

To delete selected playlists,

- 1 Tap  to select the library view of .
- 2 Tap  and select **[Delete a playlist]**.
↳ A list of playlists is displayed.
- 3 Tap the check box to select playlists.
- 4 Confirm as prompted.
↳ Selected playlists are deleted.


7 Videos

Go to  to play videos from the media library on the player:

Browse the video library

 
In the video library, video files are organized by metadata (file information). Browse the video library by video title.

With columns for video artwork, title and total play time, the video library of **SA060** allows you to browse information about video files quickly.

- 1 Tap  to select the library view.
 - ↳ The video library is sorted by title in alphabetical order.
- 2 In the column, swipe your finger up/ down to browse through the list of options.

Play videos

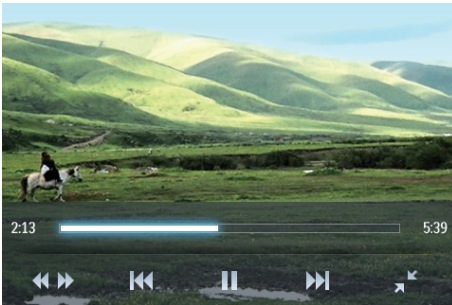

- 1 In the video library, browse to find a video.
- 2 Tap a video.
 - ↳ Play starts from current video.
 - ↳ The play screen is displayed.





Select play options


 
On the play screen, tap icons to select play options:

- If necessary, tap on the screen to display the icons.

 /  Tap to switch to the library or play screen.

 /  Tap to pause/resume play.

 /  Tap to skip titles.

 /  Tap to switch between the full screen and normal view.


Search for a particular section





To select a play position:

- On the play screen, tap on the progress bar.
 - ↳ The video play skips to the selected.


To search backwards or forwards:

- 1 Tap  to show the bar of track ball.
- 2 Tap on the bar to select a speed for fast play:
 - Tap on the left or right to select a play speed (such as 4X).
 - To return to normal speed, tap on the center.
 - ↳ The track ball is displayed where you tap on the bar.


Switch to the Home screen or previous screen

- Tap  to go to the Home screen;
- Tap  to go to the previous screen.



Select sound options

- On the play screen, tap  to select **Surround for movies** (surround sound for movie play).

Select the brightness

- On the play screen, tap  to select **[Brightness]**. Drag the slider to select an option.

Delete videos

- 1 Tap  to select the library view.
- 2 Tap  and select **[Delete]**.
- 3 Tap the check box to select options.
- 4 Confirm as prompted.
 - ↳ Selected items are deleted.

Alternatively,

- Play a video. Tap  and select **[Delete]**.
 - ↳ Current video is deleted.

8 Pictures

Go to to play pictures from the media library on the player:

Browse the picture library

In the picture library, picture files are organized by album or file folder.

- 1 Tap to select the library view.
- 2 Tap to select an album or folder.
 - ↳ Pictures in the folder are shown as thumbnails.
- 3 Swipe your finger up/ down to browse through the thumbnails.
- 4 Tap a thumbnail to play the picture.

Play pictures

 
- 1 In , tap to play a selected picture.
 - ↳ The play screen is displayed.
- 2 Swipe left/ right to select a picture.



To play pictures one by one

- Tap .
- Alternatively,
- Tap and select **[Start slideshow]**.

Select play options

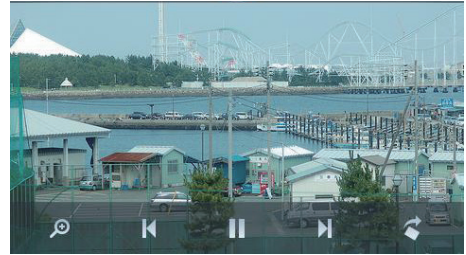

On the play screen, tap icons to select play options:

- If necessary, tap on the screen to display the icons.

/ Tap to switch to the library or play screen.

/ Tap to start/pause/resume slideshow play.

/ Tap to skip pictures.

Select slideshow settings

 
- On the play screen, press to select your options:
 - [Slideshow effect]:** Set the transition mode between two slides.
 - [Set Time per slide]:** Set the time interval before one slide switches to another.
 - [Repeat]:** Play pictures in current folder repeatedly.
 - [Shuffle]:** Play pictures in current folder in random order.

View pictures


Zoom pictures

- 1 On the play screen, tap on to show the zoom control bar.
- 2 Drag the track ball to zoom in/ out the picture.
- 3 In an enlarged picture, swipe to pan through the picture.

4 Tap on the screen to return to normal size.

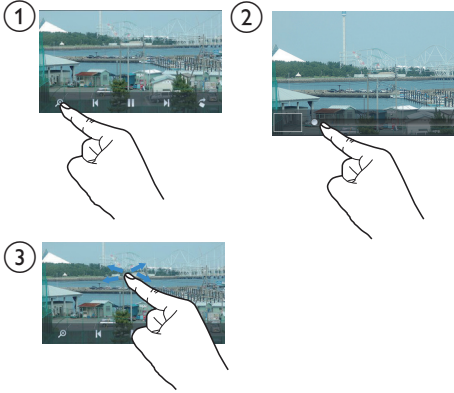


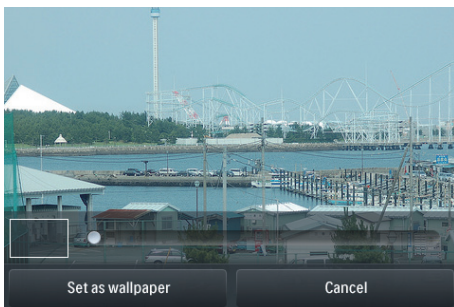 
To rotate the picture,

- Tap  to rotate the picture clockwise by 90 degrees.

Set a picture as wallpaper

To set a picture as the wallpaper of Home screen,


- 1 Tap to play the selected picture.
- 2 On the play screen, press  and select **[Set as wallpaper]**.
- 3 To select part of the picture:
 - drag the track ball to zoom in the picture;
 - swipe to pan through the enlarged picture.



4 Tap **[Set as wallpaper]**.



Tip



- You can also set the wallpaper in  > **[Display settings]** > **[Wallpaper]**.

Favorite pictures

 
With the **[Favorites pictures]** folder, you can access your favorite pictures from different albums.

Add pictures to Favorites

Add selected pictures or albums to Favorites



- 1 Tap  to select the library view.
- 2 On the library screen,
 - tap  and select **[Add to 'Favorites']**.
 - ↳ Checkboxes are displayed next to each album and each picture under the album.
- 3 Tap the checkbox next to options. Confirm as prompted.
 - ↳ Selected albums and pictures are added to the Favorites folder.

Add current picture to Favorites

- 1 Play a picture.
- 2 On the play screen, tap  and select **[Add to 'Favorites']**.
 - ↳ Current picture is added to the Favorites folder.


Remove pictures from Favorites

Remove selected pictures from Favorites

- 1 Tap  to select the library view.
- 2 On the library screen,
 - tap  and select **[Remove from 'Favorites' folder]**.
 - ↳ Checkboxes are displayed next to each picture under the folder.

- 3 Tap the checkbox next to options. Confirm as prompted.
 - ↳ Selected pictures are removed from the Favorites folder.

Remove current picture from Favorites



- 1 Play a picture.
- 2 On the play screen, tap  and select **[Remove from 'Favorites' folder]**.
 - ↳ Current picture is removed from the Favorites folder.

Delete pictures


You can delete pictures in the following ways:

- Delete pictures by album/ folder;
- Delete selected pictures.

To delete selected albums, folders, or songs,

- 1 Tap  to select the library view.
- 2 Tap  and select **[Delete picture]**.
- 3 Tap the checkbox next to options:
 - Select an album to delete all the pictures under the album;
 - Select pictures that you want to delete.
- 4 Tap **[Delete [X] items]** ([X] denotes the number of selected items).
 - ↳ Selected items are deleted.

To delete current picture on the play screen,

- 1 Tap  and select **[Delete picture]**.
- 2 Confirm as prompted.
 - ↳ Current picture is deleted.



Tip

- When you delete albums or pictures, you also remove them from the **[Favorites pictures]** folder.






9 FM radio

Note

- Plug in the supplied earphones when you tune in to radio stations. The earphones double as antenna. For better reception, move the earphone cable in different directions.

Tune in to radio stations

Auto tune

- 1 From the Home screen, go to .
↳ The last played station starts to play.
- 2 To select a preset station, tap  to select the library view of [Presets]. Tap to play a preset station.
- 3 To restart auto tune, press , and select [Auto tune].
↳ Up to 20 available stations are stored to replace the old presets.
- 4 To mute/ unmute the sound, tap  / .




Tip

- When you move to a new place (such as a new city or country), restart auto tune for better reception.

Manual tune


Use Manual tune to search for a frequency.



- 1 From the Home screen, go to .
↳ The last played station starts to play.
- 2 On the radio play screen, search for a frequency:
 - Swipe left/ right on the frequency bar.
- 3 To mute/ unmute the sound, tap  / .

Store preset stations

On SA060, you can store up to 20 preset stations.

- 1 Tune in to a radio station.
- 2 On the radio play screen, press  and select [Save to preset].
↳ The list of presets is displayed
- 3 Tap a location to save the station. Confirm as prompted.
↳ Current station is saved to the selected location.



10 Recordings

Make recordings


With **SA060**, you can record:


- voice through the built-in microphone; or
- radio programs that play on the **SA060**.


Record voices

- 1 From the Home screen, go to .
- 2 Tap  to switch to the recording screen.
- 3 Make sure that the microphone is close to the sound source.
- 4 Do the following to start, pause, or stop recording.

 Tap to start, pause, or resume recording.



 Tap to stop recording.


↳ Recordings are saved to  > **Recordings** > **Voice**. (Filename format: REC-00000000-XXX.MP3, where XXX is the recording number that is generated automatically.)


- 5 Tap  to switch to the recordings library.


Record from the FM radio

Record radio programs when you listen to the FM radio.



- 1 In , tune in to a radio station.
- 2 On the radio play screen, tap  to switch to the recording screen.
↳ Recording starts.

 Tap to pause or resume recording.




 Tap to stop recording.


↳ Recordings are automatically saved to  > **Recordings** > **FM**. (Filename format: FMREC -00000000-XXX.MP3, where XXX is the recording number that is generated automatically.)



Play recordings

- 1 From the Home screen, go to .
- 2 Tap  to switch to the library screen.
↳ In the recordings library, existing recordings are displayed.
- 3 Tap a recording to start play.
↳ The play screen is displayed.




On the play screen, tap icons to select play options:

 /  /  Tap to switch to the library or play screen.


 /  Tap to pause/resume play.

 /  Tap to skip files;
Hold to search within current file.

Delete recordings

- 1 In , tap  to switch to the library screen.
- 2 On the list of recordings,
 - Tap  and select **[Delete]**.
- 3 Tap the checkbox to select options.
- 4 Confirm as prompted.
↳ Selected items are deleted.


Alternatively,

 
- 1 Play a recording.
- 2 On the play screen, tap  and select **[Delete]**.

11 Text reader



Go to  to play text files (.txt) from the media library on the player.

Read text files

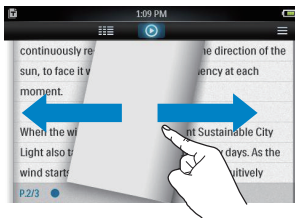
- 1 Tap  to select the library view.
↳ The text files are displayed as a list.
- 2 Swipe your finger up/down to browse through the list of options. Tap an option to start play.
- 3 Swipe your finger right/left to turn over pages.

 
 


To increase or decrease the font size,


- On the play screen, tap  to select an option. If necessary, tap  to go to the play screen.

To add a bookmark,

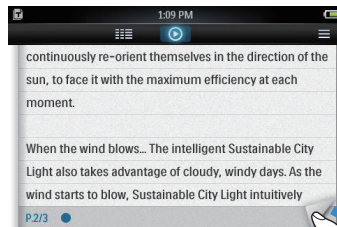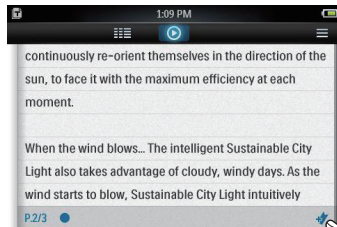

- Tap  at the corner of the page.
↳ Current page is folded at the corner.
- To remove the bookmark, drag your finger on the corner:




To go to the bookmarked section,

- On the play screen, tap  and select [Go to bookmark]. Select an option.

Delete text files

- 1 Tap  to select the library view.
- 2 Tap  and select [Delete].
- 3 Tap the check box to select options.
- 4 Confirm as prompted.
↳ Selected items are deleted.

12 Folder view

Go to  to view and play media files from the media library on the player.

To find files transferred through media management software,

- Go to the default file folders on the player:

Music: for music files that you transfer to SA060;

Video: for video files that you transfer to SA060;

Pictures: for picture files that you transfer to SA060;

Text: for .txt files that you transfer to SA060;


Recordings: for FM radio recordings that you make on SA060;

Playlists: for playlists that you transfer to SA060.

To find files transferred in Windows Explorer,

- Locate the files as you organized in Windows Explorer.

To copy/move files from the internal memory to the SD card,

- On the screen of files or folders, tap , and select options.


To return to the Home screen,

- Tap .


To return to the previous screen,



- Tap .

13 SD Card

Go to  to view and play media files that you store on the Micro SD card (see 'Use a Micro SD card' on page 14).

14 Settings

From the Home screen, go to  to select your settings.

- Tap an option to select it;
- Tap  to go to the Home screen;
- Tap  to go to the previous screen.

Set power-saving mode

If in idle mode (no play, no button is pressed) for a certain time duration, the player switches off automatically.

- In **[Set power-saving mode...]**, tap to select an option.
 - ↳ After the selected time duration, the device is switched off automatically.

Sleep timer

During play or in idle mode, the **SA060** can switch off automatically after a certain time duration.


- In **[Sleep timer]**, tap to select an option.
 - ↳ After the selected time duration, the device is switched off automatically.

Display settings

In **[Display settings]**, select your display options:

[Brightness] Drag the slider to select the display brightness.

[Screen off timer] After the selected time duration, the screen turns off automatically. To save battery power, select a low value.

[Wallpaper] Select a theme. Or; select **[Custom]** to switch to the custom wallpaper that you set in .

Language

In **[Language]**, select a language for the player.

Information

In **[Information]**, learn the following information about the device:

[Capacity:]	memory size
[Free space:]	space available
[SD card capacity:]	memory size of the SD card that is inserted into the player
[SD card free space:]	space available on the SD card that is inserted into the player
[Firmware version:]	current firmware version. Check the firmware version when updating firmware from the support website.
[Model:]	full product name. Check the full product name when updating firmware from the support website.
[Support site:]	web site that provides support for the device

Format device

Format the **SA060**. You remove all the data that are stored on the player:

- Tap **[Format device]**, and select **[Yes]** as prompted.

Factory settings

In **[Factory settings]**, restore the player to factory settings. Files transferred to the player are retained.

15 Update the firmware through Philips Device Manager

SA060 is controlled by an internal program called firmware. Newer versions of the firmware may have been released after you have purchased SA060.

The software program called **Philips Device Manager** can use your computer to check for firmware updates that are available on the Internet.

Install **Philips Device Manager** on your computer from SA060 or download the latest version from www.philips.com/support.



Note

- Your files are not affected by a firmware update.

- 1 Ensure that your computer is connected to the Internet.
- 2 Connect **SA060** to the computer.
- 3 On your computer, click **Start > Programs > Philips > Philips MP3 player > GoGear SA060 Device Manager** to launch **Philips Device Manager**.
- 4 Click **Update**.
↳ **Philips SA060 Device Manager** checks for updates and installs new firmware from the Internet, if available.
- 5 When the display shows **Update completed**, click **OK**.
- 6 Disconnect **SA060** from the computer.
↳ **SA060** restarts after the firmware is updated and is ready for use again.

16 Troubleshooting

If SA060 is not working properly or the display freezes, you can reset it without losing data:

How do I reset SA060?

- Insert a pen tip or other object into the reset hole located at the bottom of SA060. Hold until the player shuts down.
- If the reset option is unsuccessful, follow the steps how to recover SA060 with the

Philips Device Manager:

- 1 On your computer, select **Start > Programs > Philips > Philips MP3 player > GoGear SA060 Device Manager** to launch the **Philips Device Manager**.
- 2 Turn off SA060 before you continue.
- 3 Press and hold the volume button ◀ while you connect SA060 to your computer.
- 4 Keep holding the key until the **Philips Device Manager** acknowledges SA060 and enters the recovery mode.
- 5 On the computer, click the **Repair** button and follow the instructions of the **Philips Device Manager** to complete the recovery process.
- 6 When the recovery is completed, disconnect SA060 from your computer.
- 7 Restart SA060.

17 Technical data

Power

- Power supply: 850 mAh Li-ion polymer internal rechargeable battery
- Play time¹ (music): up to 20 hours
- Play time¹ (video): 4 hours

Software

- Philips Device Manager

Connectivity

- Headphone 3.5 mm
- USB 2.0 High speed

Sound

Headphone:

- Channel separation: >35 dB
- Frequency Response: 45 Hz - 16 kHz
- Output power (RMS): 2 x 10 mW
- Signal to noise ratio: > 80 dB

Audio playback

- MP3 bit rates: 8 - 320 kps and VBR
- MP3 sample rates: 8, 11.025, 16, 22.050, 24, 32, 44.1, 48 kHz
- ID3-tag support

Video playback

- MPEG4 SP: Up to 2 Mbps, 720 x 560 pixels, 25 fps
- MP4 (AVI)/ MPEG4 AVC/ H.264: up to 4 Mbps in .avi/.mp4, 720 x 576 pixels, 25 fps
- RMVB: up to 2 Mbps, 1280 x 720 pixels, 25 fps

Storage media

- Built-in memory capacity²: SA0603 4 GB NAND Flash
- Built-in memory capacity²: SA0603 8 GB NAND Flash

Video transfer³

- Drag and drop in Windows Explorer

Music transfer³

- Drag and drop in Windows Explorer

Data transfer³

- Drag and drop in Windows Explorer

Display

- Touch-sensitive color LCD
- 480 x 320 pixels
- 262 k colors

Note

- ¹ Rechargeable batteries have a limited number of charge cycles. Battery life and number of charge cycles vary by use and settings.
- ² 1GB = 1 billion bytes; available storage capacity is less. Full memory capacity may not be available as some memory is reserved for the player. Storage capacity is based on 4 minutes per song and 128 kbps MP3 encoding.
- ³ Transfer speed depends on operating system and software configuration.

Supported music file formats

SA060 supports the following music formats:

- MP3
- WAV
- FLAC
- Ape

Supported video file formats

SA060 supports the following video formats:

- MPEG4 SP
- MP4 (AVI)/ MPEG4 AVC/ H.264
- RMVB

Supported picture file formats

SA060 supports the following picture formats:

- JPEG
- BMP

System requirements

- Windows® XP (SP3 or above) / Vista / 7
- Pentium III 800 MHz processor or higher
- 512 MB RAM
- 500 MB hard disk space
- Internet connection
- Windows® Internet Explorer 6.0 or later
- CD-ROM drive
- USB port



Specifications are subject to change without notice
© 2011 Koninklijke Philips Electronics N.V.
All rights reserved.

SA060_02_UM_EN_V1.0
wk1141.2

