

# ROKU™



## SoundBridge Network Music Player

User Guide | Software v 2.0

## **Welcome**

Thanks for purchasing a Roku SoundBridge! We hope you enjoy using it as much as we've enjoyed creating it.

SoundBridge lets you play music you have stored on your PC or Mac anywhere in your home. It also lets you access many of the thousands of Internet radio stations that broadcast on the web.

Roku's media players are designed to be upgradeable in the field, and we are always working on improving the software for our products. Your SoundBridge has a menu option to check for, and automatically install, software updates. We recommend you try this as soon as your system is set up to make sure you have the latest software. (See the "Getting Started" section for more information.) We also recommend that you go to [www.rokulabs.com](http://www.rokulabs.com) to register your purchase, so we can notify you when a new update is available. Enjoy!

## **Run the Latest Software!**

SoundBridge software v. 2.0 now includes WMA support and easier music sharing from your Windows PC! After you get SoundBridge up and running, be sure to check for the latest software update. Software updates are easy to download and install, and you can do it from the comfort of your couch, using the SoundBridge remote control. See "Checking for the Latest SoundBridge Software" on page 13 for easy instructions.

## **Download the Latest User Guide!**

When our software changes, so does our user guide. Visit [www.rokulabs.com/support](http://www.rokulabs.com/support) to download the latest version as a PDF document.

## **Register Your SoundBridge!**

It's quick, easy and allows you to receive the latest software updates for SoundBridge. Of course, we won't share your personal information with anyone else.

Visit [www.rokulabs.com/support](http://www.rokulabs.com/support)  
to register your SoundBridge.

## TABLE OF CONTENTS

### Getting Started

I. Music Server Software Requirements.....	3
II. Hooking Up Your Home Network Hardware (Ethernet or Wireless) .....	5
III. Hooking up SoundBridge to Your Speakers or Stereo System .....	6
IV. Connecting SoundBridge to AC Power.....	8
V. Using Your Remote Control.....	8
VI. Establishing a Network Connection .....	9
VII. Enabling Music Sharing .....	11
VIII. Choosing Your Music Library .....	12
IX. Playing Music .....	12
X. Setting Display Preferences (optional) .....	13
XI. Mounting SoundBridge on the Wall (optional).....	13
XII. Checking for the Latest SoundBridge Software (recommended) .....	13

### Music Playback — Overview

Audio File Formats Supported.....	15
Navigation Quick Reference .....	15
Screen Icons Quick Reference .....	16

### Music Playback — Tutorial

The Main Menu .....	17
Browsing by Album .....	18
Building a Song Queue.....	20
Reviewing a Song Queue.....	21
Erasing a Song Queue .....	22
Repeat and Shuffle .....	22

Pausing Music Playback.....	22
Skipping Tracks During Playback.....	23
Playing a Playlist .....	23
Browsing by Artist, Song or Composer.....	24
Browsing by Genre .....	24
Search Options.....	25
Internet Radio.....	26
Changing Music Libraries .....	28
When You Are Finished Using SoundBridge .....	28

### Advanced Features

Control Brightness, Contrast and Text Display ....	29
The Settings Menu .....	29
Music Visualizer Settings.....	29
Safe Mode.....	29
Restoring Factory Default Settings .....	30
Geeks — Read This.....	30

### Wi-Fi Setup and Password Help .....

31	46
----	----

### Appendices

End User Software License Agreement/ iTunes Disclaimer .....	48
Limited Warranty .....	49
FCC Warnings and Safety Information.....	51
EEC Statement.....	53
Technical Specifications .....	55

## GETTING STARTED

To use SoundBridge you will need to:

- I. Make sure you have a compatible music server installed. Compatible music servers include iTunes®, Microsoft® Windows® Media Connect, Musicmatch®, and others.
  - II. Connect SoundBridge Ethernet or Wi-Fi network hardware.
  - III. Connect SoundBridge to powered speakers or your home stereo system's receiver or amplifier.
  - IV. Plug in SoundBridge to AC power (there is no "on/off" switch).
  - V. Put batteries into your SoundBridge remote control.
  - VI. Establish a network connection. If you are using Wi-Fi and have WEP security enabled, you will need to enter your security key with SoundBridge's remote control.
  - VII. Enable any music sharing options required by your service:
    - a. **Windows Media Connect:** authorize SoundBridge as a recognized device.
    - b. **iTunes:** enable Music Sharing feature in Preferences menu.
    - c. **Musicmatch:** enable Music Sharing feature and UPnP option in Options menu.
  - VIII. Select and connect to your music library.
    - IX. Play music: Using your remote control, find a song you want to play, then press **Select** twice to play it immediately or **Add** to add it to the Song Queue.
- Read on for detailed explanations of the steps above.

### I. Music Server Software Requirements

Roku SoundBridge is designed to act as a remote client for several kinds of music jukebox software. With SoundBridge software version 2.0, SoundBridge users can connect directly to their Windows Media Connect or Musicmatch music library, as well as to iTunes. They can also now play WMA and DRM WMA files (purchased from popular online music stores such as Napster™). (Apple's policy does not allow SoundBridge to support protected AAC files.)

With 2.0, you have several options for connecting your music library to SoundBridge:

Music Server	Recommended for Users of ...	Notes
Windows Media Connect	Windows XP with SP2	A free media server from Microsoft, available October 2004. Works with any music jukebox, but optimized for Windows Media Player v.10. (SoundBridge 2.0's new MS DRM10 support plays files purchased from any Microsoft-compatible music store.)
Musicmatch Jukebox	Windows 98 SE/Me/XP/2000 (SP3 or above)	Very popular jukebox software and music service. Has a built-in UPnP AV server supported by SoundBridge 2.0 software. (You can also use Windows Media Connect, a more feature-rich server, with Musicmatch.)
iTunes	PC/Mac	SoundBridge has always included support for iTunes' built-in music server. It works great, but iTunes does not currently allow access to "protected" Apple Music Store content.
WinAmp	Windows	When used with a plugin from twonkyvision, WinAmp enables streaming of Internet radio to SoundBridge.
SlimServer	PC/Mac	Compatible with SoundBridge, but not supported by Roku. Requires download of SlimServer software.

#### A. Instructions for Installing Windows Media Connect

1. If not already installed, install Windows XP Service Pack 2, a free download from Microsoft or via Windows Update Installer.
2. Download the latest version of Windows Media Player, v.10, a free download from Microsoft or via Windows Update Installer.
3. Download Windows Media Connect, a free download from Microsoft available on Oct 12, 2004, or via Windows Update Installer.
4. Check to make sure your SoundBridge software is running v. 2.0 using the "Check for new software" command in the "System Configuration" menu. SoundBridge will then reboot. (See page 13 for additional instructions on updating your SoundBridge software.)
5. Continue to Section II, "Hooking Up Your Home Network Hardware," on the following page.

#### B. Instructions for Installing Musicmatch Jukebox

1. If not already installed, download, install and launch Musicmatch Jukebox 9.0 on your PC (the free download is available at [www.musicmatch.com](http://www.musicmatch.com)).
2. Continue to Section II, "Hooking Up Your Home Network Hardware," below.

#### C. Instructions for Installing iTunes

1. If you don't already have iTunes, download and install it from [www.itunes.com](http://www.itunes.com). SoundBridge requires v. 4.0 or later.
2. Continue to Section II, "Hooking Up Your Home Network Hardware," below.

### II. Hooking Up Your Home Network Hardware (Wired Ethernet or Wireless)

Please remove the left end cap of your SoundBridge to connect your Ethernet cable or your wireless adapter (**never both at once; connecting both may cause your connection not to work**). Note that both end caps have a hole for routing your cables toward the back of the unit.

**Wireless Connection:** Insert the Wi-Fi adapter card (included with most SoundBridge models) into into SoundBridge. It should be inserted into the CompactFlash card slot with the **Roku label facing toward the back of the unit**, and toward the Ethernet jack. Close the end cap by snapping it securely into place.

**Ethernet Connection:** Plug your cable into the jack provided. Connect your Ethernet cable to a hub, switch or router in your home network. Alternatively, you can connect SoundBridge directly to your computer (and bypass a hub/switch/router), but only with a "crossover" cable (not included). Close the end cap by snapping it securely into place. Connect the other end of the cable to your network.

Please note that not all wireless CF adapters are compatible with SoundBridge. If your unit did not include a Wi-Fi adapter, Roku offers a compatible adapter for sale on our web store, [www.rokulabs.com/buy](http://www.rokulabs.com/buy). There you can also find a list of supported wireless CF adapters and wireless network access points.



SoundBridge, left end cap removed

SoundBridge, right end cap removed

### III. Hooking Up SoundBridge to Your Speakers or Stereo System


Both end caps of your SoundBridge unit are removable. The right end cap covers the audio connectors and AC power connector, the left one holds an Ethernet connector and your Wi-Fi Network adapter CompactFlash slot (Wi-Fi adapter may be sold separately depending on your SoundBridge model).

Remove the right end cap to connect audio cables by gently pressing on the flat part of the end cap, while pressing on the dimpled tabs in the back of the end cap, and pivot backward.


Once removed, your right end cap will reveal the connectors shown above.

Your SoundBridge has several audio connection options:

- a. Connect your SoundBridge to a set of powered speakers, using the RCA-to-mini (1/8 inch) Y-audio cable included with your SoundBridge.

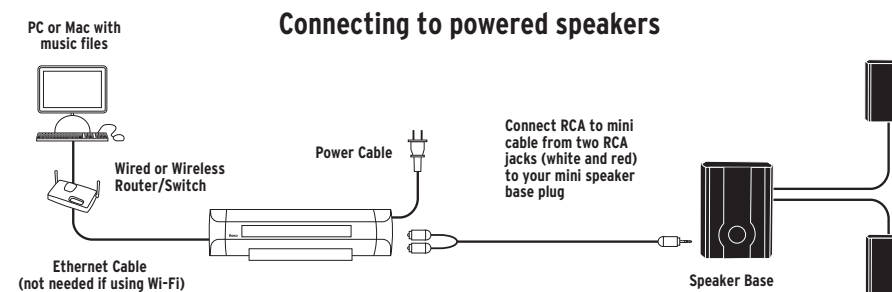

- b. Connect your SoundBridge to your stereo system's Aux or other "Line Input," using an RCA (white/red) audio cable (not included).

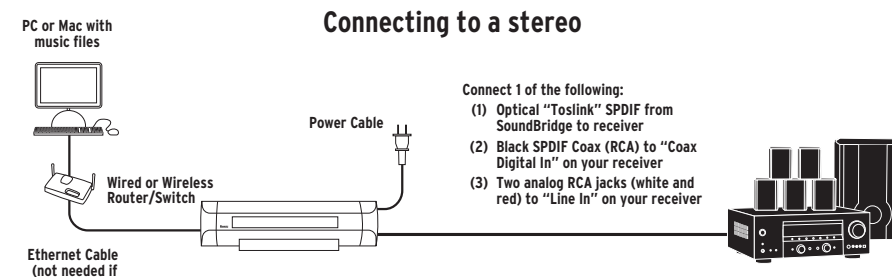

- c. Connect to your stereo system using either coaxial SPDIF digital or optical SPDIF digital (the SoundBridge has connectors for both) — cables not included.

**When you are finished connecting your SoundBridge, be sure to replace the end caps.**

#### IV. Connecting SoundBridge to AC Power

Plug the small power cord into the SoundBridge unit, and plug the other end into to a wall outlet. Note that the back of the end cap has a hole for routing your audio and power cables toward the back of the unit. Close your end cap by snapping it securely into place.

**Hint:** There is no power switch to turn on the SoundBridge. As soon as you plug in the power, you should quickly see the welcome message “Roku SoundBridge.” If not, please stop and ensure that your power cable is connected properly on both ends. You will need to see a working display before moving on to the operation of your SoundBridge.

**Warning:** Do not operate your SoundBridge with the end caps removed. Be sure to disconnect SoundBridge from AC power (by unplugging the power supply from the wall) before connecting or disconnecting any cables or the CompactFlash Wi-Fi card. **Always be sure to replace the end caps on the unit** before plugging in the AC power supply into the wall, in order to avoid abnormal unit operation due to static discharge.

#### V. Using Your Remote Control

First, insert two AAA batteries (included) into your remote control.

Then, point it in the direction of your SoundBridge unit (make sure the IR receiver window is not blocked by a nearby object).



*SoundBridge remote control*

#### VI. Establishing a Network Connection

**Wired Ethernet Network:** After you have connected SoundBridge to your computer via a switch/hub/router (or directly to your computer via crossover cable) and powered up the unit, SoundBridge will auto-configure its network settings (using DHCP or AutoIP). There is nothing you need to do. If for some reason you have trouble connecting to your network, select the “SYSTEM CONFIGURATION” option, then select “SHOW WIRED ETHERNET STATUS.”

**Wireless Network:** If you have a Wi-Fi network in your home, with no security keys set, then SoundBridge will also auto-connect to your wireless network. If SoundBridge detects more than one Wi-Fi network (as some advanced users have in their home, or if your neighbor’s signal is leaking over), then you will be asked to select the SSID (network ID) to connect to.

If you have a security key, you will need to enter your WEP key manually into SoundBridge. This is the same key you have entered into your Access Point and your computer. Your screen will look something like this:

```
[NO MUSIC LIBRARIES FOUND]
SYSTEM CONFIGURATION
```

Scroll down on this screen using your down ▼ arrow until the option “SYSTEM CONFIGURATION” is highlighted, and press **Select** on your remote control. You will see a screen that looks like this:

```
CHECK FOR NEW SOFTWARE-CURRENTLY V1.0.2
SHOW WIRED ETHERNET STATUS
SHOW WI-FI STATUS
SELECT WI-FI SSID & PASSWORD
```


Navigate down to “SELECT WI-FI SSID & PASSWORD” and select your wireless network name and password.

## Personal Firewall (iTunes Users)

If you have trouble connecting and your computer has a firewall installed, make sure your firewall is configured to allow iTunes music sharing:

**Mac:** Open System Preferences. Select the Sharing icon and click on the Firewall tab. Select the option “iTunes Music Sharing.”

**PC:** Refer to your firewall’s documentation for opening incoming ports. Configure your firewall to allow incoming connections on port 3689. For WindowsXP Service Pack 2 users, open “Security Center,” and click on “Windows Firewall” on the bottom right of the window. In the window that pops up, click on the Exceptions tab, and check to see whether iTunes is shown and checked in the list of Programs and Services. If not, press “Add Program” and add iTunes.

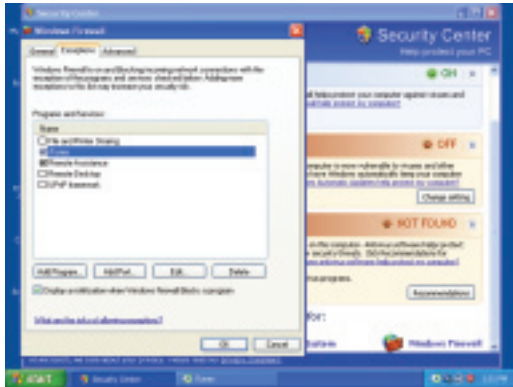


After these changes have been made, restart SoundBridge by disconnecting it from AC power.

For additional help connecting to your network, including password help, see the Wi-Fi Setup section on page 31 of this guide.

## VII. Enabling Music Sharing

Enable any music sharing options required by your music server:

- 1. Windows Media Connect:** Authorize SoundBridge as a permitted client for Windows Media Player via Windows Media Connect by clicking on the tray icon or balloon window to display a list of clients. (You can also open Windows Media Connect through the Windows Control Panel.) On the Wizard window that appears, scroll to the bottom of your devices list and click “Add.” Select your SoundBridge device and click “OK.” Check to ensure that SoundBridge appears on your list of authorized devices. Click “Close.”
- 2. Musicmatch:** Select Options/Settings. Click on the “CD Lookup/Connectivity” tab. Select “Enable Music Server” and then select “Universal. Plug and Play.” You can close Musicmatch if you like — the UPnP server will keep running in the background.
- 3. iTunes:** To turn on the Music Sharing option, select iTunes/Preferences menu (Mac) or Edit/Preferences (PC). In the dialog box that appears, click the Sharing tab. You should see a screen similar to the one below. Check the “Share My Music” option to enable sharing on your local network. Do not quit iTunes.

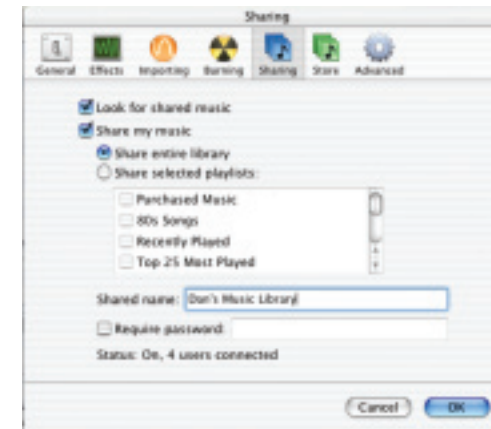

### VIII. Choosing Your Music Library

Once your SoundBridge is successfully connected to your network and your server's music sharing options are enabled, it will automatically find your computer's music server and detect any supported music libraries. After SoundBridge detects your music library, you will be prompted to choose the library you would like to access from a screen that looks something like this:

```
PLAY DAN'S MUSIC LIBRARY
SYSTEM CONFIGURATION
```

Navigate to your preferred library (in this case, "Dan's music library") and press **Select**. You will then see the "Main Menu," where you can begin browsing and playing your music.

If instead you see the message [NO MUSIC LIBRARIES FOUND], your network is not connecting to your computer properly or your music library is not found. Please choose SYSTEM CONFIGURATION for troubleshooting your network connection. (Make sure your computer is turned on, your server is running, and music sharing is enabled.)

After you have successfully connected to your music library, SoundBridge will automatically connect to that library upon startup (provided you only have one music library to choose from). If you would like to return to the screen that allows you to choose your desired libraries manually, select the "CHANGE LIBRARY OR CONFIGURATION" option located at the bottom of SoundBridge's Main Menu (accessible by pressing the **Menu** button).

Visit [www.rokulabs.com/support](http://www.rokulabs.com/support) for help if you are still having trouble connecting to your music library. Check to make sure your router is compatible with SoundBridge — a list of compatible wireless access points is available at [www.rokulabs.com/support](http://www.rokulabs.com/support).

### IX. Playing Music

You are now ready to begin playing music. Using your remote control, find a song you want to play, then press **Select** twice to play it immediately. See page 15, "Music Playback," for more detailed instructions about browsing and playing music.

### X. Setting Display Preferences (optional)

The brightness of your display can be adjusted by pressing the Bright button.

Text size can also be controlled for the SoundBridge M1000 and M2000's VFD display by pressing the Bright button. Contrast can be controlled this way for models that allow contrast control.

Also, from the Main Menu, you can navigate down to the SETTINGS option to change the appearance of the music visualizer, such as whether it appears full screen during playback, and what kind of information is displayed when a song is playing.

For a complete list of SoundBridge settings, please see the "Advanced Features" section of this user guide.

### XI. Mounting SoundBridge on the Wall (optional)

Your SoundBridge ships with a portable black rubber table stand which looks great on your shelf or night stand. An optional wall mounting kit is available for sale at [www.rokulabs.com/buy](http://www.rokulabs.com/buy). This allows the SoundBridge to be mounted to the wall or under a cabinet using a sleek, hidden bracket which screws into your wall. For more information, please visit Roku's web site.

### XII. Checking for the Latest SoundBridge Software (recommended)

Updating your software is quick and easy. You'll need SoundBridge connected to a network which is connected to the Internet via a high-speed connection such as DSL or cable modem. To make sure you have the latest version of SoundBridge software, please follow these instructions:

1. Make sure your SoundBridge is connected to a home network with Internet access.
2. Press the **Menu** button on the remote control.
3. Navigate down to CHANGE LIBRARY OR CONFIGURATION and press **Select**.
4. Navigate down to SYSTEM CONFIGURATION and press **Select**.
5. Navigate down to CHECK FOR NEW SOFTWARE- CURRENTLY V 1.x.x and press **Select**.



You should see a screen with a progress bar:

```
CONTACTING SERVER  
[*****]
```

You will then see one of the following two screens:

```
YOUR SOFTWARE IS UP TO DATE
```

In that case you don't need to do anything. Press **Select** to accept this message and return to the previous "System Configuration" menu. Press **Exit** to return to the "Change Library" menu, navigate to the music library you want to play, and press **Select**.

Alternatively, if your software requires updating, it will be downloaded and installed automatically. After the above "contacting server" message, you will see the following screen:


```
UPGRADE SUCCESSFUL  
SELECT OK TO REBOOT
```

Press **Select** on the OK option and you will see a screen confirming that your unit is rebooting.

After your software has been updated, you may want to check Roku's web site for the latest version of the SoundBridge user guide. Roku will release a new version of the user guide for PDF download if new features or functions have been added to the SoundBridge software. Please visit [www.rokulabs.com/support](http://www.rokulabs.com/support) for the latest version of the manual.

## MUSIC PLAYBACK — OVERVIEW

### Audio File Formats Supported

You are now ready to begin playing music. SoundBridge supports a wide variety of audio formats, including: MP3, AAC, WMA, DRM WMA, AIFF, and WAV. (FLAC and Ogg-Vorbis are supported only with the optional third-party SlimServer software.) Please note that AAC files purchased from the Apple Music Store (also known as DRM AAC files) will appear as menu items with a padlock  icon, and are not available for playback on SoundBridge at this time.

Sample rates supported: (kHz) 8.0, 11.025, 12.0, 16.0, 22.05, 24, 32, 44.1, 48.0

Bit depth supported: 8 bit, 16 bit, mono or stereo.

### Navigation Quick Reference

▲ ▼ The Up and Down arrow buttons take you through a list item by item.

◀ ▶ The Left and Right arrow buttons allow you to "fast browse" — either skip to the next (or previous) letter, or if your list is not arranged alphabetically, by about 5% of your list at a time.

➔ The arrow icon shows current item highlighted.

The **Select** button takes you one level down into the highlighted item. When you can go no lower in your menu structure, the **Select** button calls up options to start song playback. (It may help to think of pressing the **Select** button as clicking on the highlighted item with a mouse.)

The **Add** button adds your current selection to the end of your Song Queue.

▶▶ ◀◀ The Next Track and Previous Track buttons advance or retreat playback of your Song Queue one song at a time.

The **Menu** button takes you to the Main Menu.

The **Search** button takes you to your text-based search options.

The **Exit** button takes you one step backward (think of it as the BACK button on your Internet browser).

Pressing the **Exit** button repeatedly will display the “Now Playing” screen, which displays information about the currently playing song.

### Screen Icons Quick Reference

On your “Song Queue” screen:

- ♪ The music note icon denotes a single track (as opposed to a collection of tracks).
- ◀)) The speaker with audio waves shows current song playing in the “Song Queue” menu.
- ◀ The speaker without audio waves shows current song paused in the “Song Queue” menu.
- 📶 The upward facing radio transmission signal indicates an Internet radio station.
- 🔒 The padlock icon indicates secure AAC songs purchased from the Apple Music Store; these songs are not available for playback by SoundBridge.

On your “Now Playing” screen:

- ▶ The Play icon indicates SoundBridge is in playback mode.
  - ⏸ The Pause icon indicates playback has been paused.
  - The Stop icon indicates playback has been stopped.
  - 🔀 The Shuffle icon (with two crossed arrows) indicates playback of your Song Queue is happening in random order.
  - 🔁 The repeat icon indicates continuous playback of your Song Queue.
  - 🔁 The repeat single track icon indicates continuous playback of the currently playing track.
- The “X” icon indicates an unsupported file format.

## MUSIC PLAYBACK — TUTORIAL

### The Main Menu

To begin navigating through your music, start on your “Main” menu, by pressing the **Menu** button. The display on SoundBridge should look something like this:

```
➔ PLAYLISTS  
   BROWSE
```

Only the first two lines of the Main Menu are displayed at once (or the first four lines, if you are using M2000 with four lines enabled in your display settings, or one line if you are using an M2000 with the largest font size enabled), but the scroll bar at the right of the screen shows you where you are in the list, and how much more information is available above and below your current screen view. Use the Up/Down ▲ ▼ arrow buttons to navigate between the following options on the Main Menu:

```
➔ PLAYLISTS  
   BROWSE  
   SEARCH  
   SHOW SONG QUEUE  
   NOW PLAYING  
   SETTINGS  
   CHANGE LIBRARY OR SYSTEM  
   CONFIGURATION
```

The ➔ arrow to the left of a menu item denotes the current item.

**Hint:** Because you can’t see the whole list of options at once, use the scroll bar (at the right of your display) to see where you are in your list.

## Browsing by Album

Press the Down ▼ button until you see the BROWSE option highlighted and press **Select** on your remote control. You will see a listing of browsing options:

→ BROWSE ALBUMS  
BROWSE ARTISTS



If you scroll down, you will see the other two browsing options:

BROWSE COMPOSERS  
BROWSE GENRES

Now, if you navigate to the BROWSE ALBUMS option and press **Select**, you will see an alphabetical listing of Albums found in your music library. The screen will look something like this:

→ PARACHUTES  
PAUL'S BOUTIQUE

Navigate to the album that you want to hear using the Up/Down ▲ ▼ arrow buttons – in our example, “Parachutes.” When the album you want is selected, press the **Select** button for a listing of songs found on this album.

The music note  next to each song name indicates the selection is an individual track (and not a playlist, album or other collection of songs). Please note that songs purchased from the Apple Music Store will be denoted in the display with a padlock  icon. SoundBridge is not able to play back these “locked” files – they will simply be skipped over during playback.

→  DON'T PANIC  
 SHIVER

Use the Up/Down ▲ ▼ arrows again to highlight the song you want to play. Press the **Select** button *twice* to start that song playing. When the song begins playback, the display will switch to the “Now Playing” screen, which looks something like this:

DON'T PANIC 0:10/2:17 ▶  
COLDPLAY PARACHUTES (2000) (|||-----)

Please note that the artist and album information may be abbreviated, or appear one line at a time, if the total number of characters exceeds what can be displayed at once. See the “Settings” chapter at the end of this manual for more information on display options.

**Hint:** If you would like to go back to the above “Now Playing” screen at any time in order to know what’s playing, press **Exit** several times until you see this screen. Alternatively, press **Menu**, then scroll down to the NOW PLAYING option and press **Select**. This screen also appears by default after a few minutes of inactivity on the remote control.

If you press **Select** twice on an album track, that track will play, followed by each track remaining on the album. For example, if you double-select track #5 on an album with 10 tracks total, then tracks #5-#10 will play. (For continuous playback of the entire album, press the **Repeat** button on your remote control – the album will play until the end, then start again at the beginning.)

**Hint:** While your original selection is playing, if you navigate to a new song and **Select** twice, you will “flush” the old selection (called the “Song Queue”), and replace it with your new selection. Therefore you should only double-press **Select** when you want to erase your existing Song Queue and start a new one. Use the **Add** button to add a song to the Song Queue.

To better understand playback controls, it may help to consider the commands you already use in your music jukebox software:

**Software:** Move your mouse to the song you want to play, and double click to play it.

**SoundBridge:** Navigate to the song you want to play, then double-press **Select** on your remote control to play the song.

In both cases, **Play** and **Pause** buttons determine whether you hear music now or later. As long as you have selected something to play, you can press **Play** on your remote control to hear audio, or **Pause** to put it on hold.

If you are not sure what you have selected to play, simply press the Down arrow ▼ from your “Now Playing” screen (the screen that displays the currently playing song). This will list your upcoming songs, also known as your “Song Queue” (see next section).

## Building a Song Queue

Let's say you would now like to choose several different songs or selections to play in a row. This is called building a "Song Queue." SoundBridge automatically builds a Song Queue every time you select a song or album to play. You can add to that list by navigating to your preferred music and pressing **Add**. The selection will be added to the end of the current Song Queue.

You may add a single song, an entire album, all songs by an artist, all songs in a genre, or any search result – just browse to the selection you prefer and press **Add**. For example, if you would like to play all songs by Coldplay, select the BROWSE ARTISTS option from the Main Menu/Browse option. Navigate to COLDPLAY in your artist list, and press **Add**. All songs on all albums by Coldplay will be played by album, in the order they appear on each album. For more information about browsing and searching options, see the "Browsing" and "Searching" sections later in this user guide.

You have several other options for building a Song Queue. After you press Select while browsing on a song, a "Song" menu appears with the following options:

1. Play, starting with the selected song (and clear previous Song Queue)
2. Get information about the selected song
3. Play the selected song only (and clear previous Song Queue)
4. Insert the selected song into the Song Queue (after the current song)
5. Add this song to the Song Queue (same as pressing the **Add** button)

Note that both "play" options 1 and 3 above are "destructive"; they will clear your previously existing Song Queue. The "add" and "insert" options, however, will add the selected song to your existing queue.

The first, "play these songs" option is described in the section above – it starts playing your album (or other browsed list), beginning with the current track.

**Hint:** Notice that "Play songs" is the first item in the menu. That makes it easy to play a list of songs, starting with a particular track. You can just "double-click" the **Select** button on the track you'd like to play first — the first click brings up the "Song" menu, and the second executes the "Play songs" command. You can think of this as double-clicking on a track listed in your music library.

If you choose "Play songs" on any track in your selection, the entire list is added to the Song Queue, but playback starts on the chosen track. If you have the **Repeat** option selected, the earlier tracks in the queue will play after the last song (and so on indefinitely). If you have the **Shuffle** option selected, then the chosen track will play first, followed by all the other tracks in the list in random order.

The "Add song to Song Queue" option behaves similarly as the **Add** button – it places the current song at the end of your playlist. The "Insert song next in Song Queue" inserts the highlighted song to the Song Queue in second place, after the track that's playing or paused currently.

You can add an almost unlimited number of songs to your Song Queue. Each selection will be played in the order it was entered (unless you have chosen to **Shuffle** your Song Queue).

**Hint:** After you have selected multiple songs to be played in turn, you can use the "Next Track" ►► and "Previous Track" ◀◀ buttons to skip from song to song in your Song Queue.

## Reviewing a Song Queue

At any point, you can review what's in your Song Queue by pressing the down arrow ▼ from the Now Playing screen, which is the default screen that appears while SoundBridge is playing. The Now Playing screen looks something like this:

```
DON'T PANIC           0:10/2:17  ▶
COLDPLAY PARACHUTES (2000) (|||-----)
```

You can also press **Exit** several times from any point in your browsing; eventually, the Now Playing screen appears.

Alternatively, you can press **Menu**, then select the SHOW SONG QUEUE option. You will see the entire list of songs in your song queue; refer to the scroll bar on the right side of the screen to determine where in the list you are located. Press the Up/Down arrows ▲ ▼ to see the entire list of selections in your Song Queue. The currently playing selection is indicated by a speaker ◀ icon.




You cannot save a Song Queue that you have created — it's only held in memory temporarily and then erased when you build your next Song Queue. If you would like to build a Song

Queue that you can save and recall at will, please build a Playlist in your music jukebox software (see “Playing a Saved Playlist” below).


### Erasing a Song Queue

If you change your mind and decide you don’t want to play the Song Queue you’ve just created, simply select something else to play. Navigate to another selection (song, playlist, etc.) and press **Select** (not Add). This selection immediately replaces your old Song Queue.

### Repeat and Shuffle

Pressing **Repeat** once makes your Song Queue play continuously. You will see the Repeat icon  displayed on the right side of your “Now Playing” screen below the Play  icon. Pressing **Repeat** again makes the current song play over and over; you will see another Repeat icon, a circle with just one arrow . Press **Repeat** a third time and you will remove the repeat command altogether.


Pressing shuffle while playing a Song Queue will give you the following options:



**Shuffle On** — will play everything in your Song Queue in random order. (The shuffled order of songs will be displayed in the Song Queue.) An icon with two crossing arrows  will be displayed on your Now Playing screen.



**Shuffle Off** — will play everything in your Song Queue in the original order.

You can execute the **Repeat** and **Shuffle** command from any menu in SoundBridge. Even though you can only see the mode change on the Now Playing screen, the command is taking effect.


### Pausing Music Playback

Press the **Pause** button to halt music playback. Notice a Pause icon  is displayed at the top right of your “Now Playing” screen, indicating that you’re in Pause mode. Pressing the **Play** button (or the Pause button again) will resume playback right where you left off.

When the Song Queue has played all the way through, it will stop. You will see the Stop icon  on the right side of your display. To start playing your Song Queue again at the beginning, press the Play  button.



**Hint:** Press **Repeat** if you would like your Song Queue to play continuously. You will see the Repeat icon  displayed on the right side of your Now Playing screen below the Play  icon.

### Skipping Tracks During Playback

If you’d like to skip a song during playback, press the “Next Track” button  on your remote control. Or, navigate to another song through your browsing options and press **Select**.

**Hint:** Pressing **Pause** to stop playback of your Song Queue will only do so temporarily. If you want to clear the memory of your old Song Queue or selection entirely, simply navigate to something else you want to play, and press **Select** twice to play your new selection. This way, you are effectively flushing your old selections or Song Queue away, to be replaced by your new selection. Therefore, if you want to build on your existing Song Queue, press **Add** instead of **Select** and your prior selections will be preserved.

### Playing a Playlist

Let’s say you have created a playlist of your favorite Disco hits in your music jukebox software, and named it DISCO INFERNO. Press the **Menu** button to go to the Main Menu. Go to the PLAYLISTS option, then press the **Select** button. Use your Up/Down   arrows to browse your playlists one by one, find the one called DISCO INFERNO, then press **Select** twice to play all songs on the playlist immediately or **Add** to add the playlist to your Song Queue.

**Hint:** If your playlist was created in Windows Media Player or other software using Windows Media Connect, be sure to save your playlist in the My Music/My Playlist folder on your hard disk.

## Browsing by Artist, Song or Composer

From the Main Menu, use the Down ▼ arrow to highlight BROWSE and then press **Select**. Navigate to BROWSE ARTISTS and press **Select**. Your screen will look something like this:

```
→ ANNIE LENNOX      ^ <A>
   BEN FOLDS FIVE   v
```

Find the artist you would like to play and press **Select**. You will see a screen that lists the albums available by that artist:

```
→ <SHOW ALL MATCHING SONGS>
   MEDUSA
```

While the first menu option <ALL MATCHING SONGS> is active, press **Add** to add this selection to your existing Song Queue, or press **Select** twice to play all songs by this artist instead and replace your existing Song Queue. (Songs will play in the order they appear on each album, with each album played in alphabetical order).

You can choose specific albums or songs to play by navigating down to your desired album and pressing **Add** to add to an existing Song Queue, or **Select** twice to replace an existing Song Queue. Note: if your selected album contains songs by different artists, such as compilation albums or movie soundtracks, only the song(s) by your artist will be played.

**Hint:** To browse faster, instead of browsing up and down one at a time using Up/Down arrows ▲ ▼, you can “speed browse” through your lists by pressing the left/right arrows ◀ ▶. This will skip by the letter of the alphabet.

Browsing by song or composer works the same way as browsing by artist — see instructions above.

## Browsing by Genre

From the Main Menu, navigate down to the BROWSE option and press **Select**. Scroll down to BROWSE GENRES and press **Select**. You will see an alphabetical listing of genres that are available in the music library that you are browsing. To add all songs within a Genre to your

Song Queue, highlight that Genre and press **Add** (or **Select** to open additional options for playback).

To browse within a genre, such as Hip Hop/Rap, press **Select** on your desired genre. You will have the option to see all available artists in that genre, and a list of individual albums by those artists. At any point, you can press **Add** to add that selection to your Song Queue or press **Select** to navigate to the next level of detail.

**Hint:** Information about your music, including Song Name, Artist, Album, and Genre is usually created automatically by the software you used to save your audio CD files on your computer’s hard drive (aka ripping). This process creates data called “ID3 tags” to describe each track. If this data is missing from your audio files, they will not appear when you browse by that data category. If you need to edit your ID3 tags, or if you are not satisfied with the description of genres (or other data) assigned to your music file, it is possible to edit that data in iTunes, Windows Media Player or other supported music jukebox programs. (In iTunes, select the file(s) to edit, click on File/Get info, then click on the Info tab).

## Search Options

To search for a specific selection by spelling it out, you can press the **Search** button on your remote control, or navigate down to the “Search” option from the Main Menu. Either way, you will have the following options:

```
SEARCH FOR ALBUMS
SEARCH FOR ARTISTS
SEARCH FOR TITLES
SEARCH KEYWORDS
```

Press **Select** on the option you would like to search with. Then, use your Left/Right ◀ ▶ arrows on the remote control to enter characters for spelling your selection and then pressing **Select**. When you are done spelling, use the Down ▼ button to the OK option and press **Select**. (If you make a mistake, use the Down ▼ button to go to the Delete option and press **Select**.)

**Hint:** Partial spelling is OK — for example, if searching for Radiohead, you can enter only the first two letters, “RA”, and the results will return all Artists matching that search (Radiohead, Ratt, etc).

**Hint:** Band names starting with “the,” such as The Beatles, will be found under the first letter of the word following “the” — in this case, “B” for “Beatles.”

When you find the music you like, use the **Add** button to add it to your Song Queue. If searching for albums or artists, you can press **Select** to navigate down one level to individual tracks.

If an exact match is not found, your results will show an empty search.

## Internet Radio

One of SoundBridge’s coolest features is its ability to play Internet radio stations. Currently, iTunes offers the easiest way to play Internet radio on SoundBridge. You can also use WinAmp with a free plugin from twonkyvision.com that will enable http streams for internet radio. Please look out for a software update that will expand Internet radio features for Windows-based music servers. (Note: it is possible to run iTunes just for playing Internet radio while using Windows Media Connect or another server for playing music.)

To play Internet radio stations with the iTunes music server, follow these steps:

1. **Create an iTunes playlist containing your favorite radio stations.** In iTunes, create a new playlist (any name is okay, but let’s use “RadioFavorites”). Next, browse the iTunes Internet radio station list by clicking on the Radio button on the Source tray of iTunes:



Then, drag & drop the radio stations you like onto the new “RadioFavorites” playlist. The result is a standard iTunes playlist that contains your favorite radio stations.

2. **Play your playlist on SoundBridge.** From the SoundBridge Main Menu, select “Playlists.” Scroll down until you find the “RadioFavorites” playlist. Select it. You can now scroll through your favorite radio stations. Press **Select** to start playing your desired station. Use the Up/Down ▲ ▼ arrows to see the list of available stations, or the Next Track ►►, Previous Track ◀◀ buttons to switch stations.

To play Internet radio with WinAmp, follow these steps:

1. Download and install WinAmp Jukebox, from winamp.com.
2. Download and install TwonkyVision’s http streaming plugin, free at twonkyvision.com.
3. Import an Internet radio stream into WinAmp.
4. Add it to your playlist.
5. Browse to the playlist in SoundBridge and play it.


Note: To date, there is unfortunately no standard for Internet radio stations, and many different audio formats and streaming techniques are used in the industry. SoundBridge will support many of the Internet radio stations, but not every one of the many, sometimes proprietary,

standards. The only sure way to know if a radio station will play on SoundBridge is simply to try it.

### Changing Music Libraries

Press **Menu** on your remote control. Navigate down to “Change Library or Configuration” and press **Select**. All your available libraries will be displayed. Press **Select** to access your desired music library.

### When You Are Finished Using SoundBridge







When you are finished playing music and using the SoundBridge altogether, just press the Standby  button on your remote.

If you plan to disconnect the SoundBridge from AC power after you are done using it, be sure to press the Standby button first. This logs you out of the music server software running on your computer.

**Hint:** If you unplug the SoundBridge from AC power five times without pressing **Standby** on your remote first, iTunes will lock you out of connecting to the server. That’s because iTunes allows a maximum of five users to connect at one time., and if you don’t put SoundBridge into standby mode first, iTunes may believe you are still connected. To restore your access to the iTunes server, close iTunes and then restart it. You should then have no trouble connecting to the iTunes server as before.

## ADVANCED FEATURES

### Control Brightness, Contrast and Text Display

The **Bright** button on your remote lets you change the brightness of your display using the Up/Down arrows  . For some SoundBridge models, you will also see the option to change contrast using the left/right arrows  . For SoundBridge M1000 and M2000, text size can be controlled using the left/right arrows  , affecting how many lines of text you see on screen at one time. M1000 can display one line or two lines at once; M2000 can display one, two, or four lines at once.

### The Settings Menu

SoundBridge settings can be changed in the SETTINGS option located at the bottom of the Main Menu. Your Settings screen will show the following options (scroll down using your remote control to see the complete list):

- VISUALIZER SETTINGS...
- ✓ RETURN TO NOW PLAYING WHEN IDLE
- ✓ SCROLL LONG INFO IN NOW PLAYING
- ✓ DISPLAY COMPOSER FOR CLASSICAL WORKS
- SKIP ITEMS UN-CHECKED IN ITUNES

### Music Visualizer Settings

You can customize the kind of visualizer to display, whether it appears full-screen or on the right side of the Now Playing menu, and other options. Use the Main Menu/Settings/Visualizer Settings command to explore these options.

### Safe Mode

SoundBridge includes an option to run in “Safe Mode,” which is a mode with limited features that is enabled automatically when SoundBridge detects that its software has become corrupted. Its goal is to download a new version of software from Roku and to restore factory settings. When SoundBridge enters Safe Mode, you will notice the text “Safe Mode” displayed on the right side of the display. Your menu will only include options to update your software, configure your network, and restore factory defaults.



While in Safe Mode, your stored network settings will not be recalled. Therefore it may be necessary to configure your network before SoundBridge can connect to the Internet in order to download new software.

Safe Mode can also be entered manually by powering SoundBridge off (by unplugging it from power) and on again, while at the same time pressing and holding any button on the remote control.

### Restoring Factory Default Settings

To restore SoundBridge's factory default settings, press Menu, select "Change Library or Configuration," then select System Configuration, then select "Reset to Factory Defaults."

### Geeks — Read This

The SoundBridge has a command line interface that you can "telnet" to for piddling about. You will need to telnet to port 4444. Type "?" at the command prompt to see a list of commands. We will be documenting in more detail how to control a SoundBridge in the coming months, as well as updating the software in this area. When documentation is available, it will be posted on the developer section of our web site.

## WI-FI SETUP AND PASSWORD HELP

### Background

#### Why Wi-Fi?

With SoundBridge's wireless functionality, you can now stream music from computers on your wireless network to one or more Wi-Fi enabled SoundBridge devices via your wireless access point (WAP). You can even connect up to five SoundBridges to one iTunes music library and listen to different tunes in every room of your house.

#### Wi-Fi Hardware

For a list of compatible Wi-Fi access points that Roku has tested with SoundBridge, please visit [www.rokulabs.com/support](http://www.rokulabs.com/support).

### Wi-Fi Setup Instructions

1. Verify that your wireless network is up and running on your computer. If you are setting up this wireless network for the first time, please make sure that you have followed your wireless vendor's instruction manual for proper configuration of your wireless access point.
2. Remove both the left and right end caps of SoundBridge by pressing on the two release tabs labeled "push." If your SoundBridge is currently powered on, press Standby on your remote and then disconnect SoundBridge from power by unplugging the AC power cord.
3. Remove the CompactFlash wireless card from its packaging and insert the card into the CF slot on the left side of SoundBridge. Make sure that the "Roku" label and two small status lights are facing *away* from you as you gently push the card into place. (Note: The LED lights will not be illuminated until you power on SoundBridge). Be careful, forcing the card into position may damage your device.
4. If you had been previously using a wired Ethernet connection, disconnect the cord from the SoundBridge. **Make sure you have only the Wi-Fi card or the wired Ethernet connection attached to the device — never both at the same time.**
5. Run your music server software on the computer connected to your wireless network.

6. Turn on your SoundBridge by plugging the power cord into the right side of the device, then into the wall AC outlet. Verify that the screen displays the Roku logo.
7. Upon startup, SoundBridge will attempt to connect to any wireless access point within range that does not require a password. If your home wireless network requires no password and there are no other wireless networks in the vicinity (such as those spilling over from a neighbor's house), then your SoundBridge should automatically connect with no additional configuration, and you will see a list of music servers on your network to connect to.

However, it's possible you will need to configure your wireless network as described below:

- If your SoundBridge detects more than one available wireless network, then you will need to configure SoundBridge's Wi-Fi settings. Choose "System Configuration" from the main menu, and then select "Select Wi-Fi SSID & Password." You will then see a list of available wireless networks. If you see your desired network, select it. If you don't see the desired network, make sure that your wireless router is within range and that it is functioning properly.
- Some wireless networks don't "advertise" themselves (a.k.a., "closed networks"). If your wireless access point is functioning properly but you do not see the network listed, you should enter your wireless network name by selecting "Specify a wireless network..." (Refer to your wireless access point's documentation or utility software if you don't know the name of your wireless network.)
- Next, your SoundBridge will ask you whether the wireless connection requires a password. If you do not have a wireless password, select "No" and skip to the next section. If you do have a wireless password, select "Yes." Read the instructions on the screen to determine what type of wireless password you have on your network. If you are unsure, you may wish to refer to your wireless router documentation. (See hints below for help finding your wireless access point's password.)
- Select "OK" to reboot the unit. Upon restarting, SoundBridge should automatically connect to the network you have specified.

If the connection is successful, all the available music libraries will be listed on your screen. Use the up and down arrows on your remote to navigate to your desired library and press **Select** to begin browsing your music library.

### **Troubleshooting Wi-Fi Setup**

If you have problems connecting to the SoundBridge to your music library via Wi-Fi, please check the following:


1. Are the LED lights lit up inside the CompactFlash Wi-Fi adapter? If not, your card is not receiving power. Make sure the SoundBridge is powered on (the LED screen is lit). Remove and re-insert the CF card with the label facing away from you. It should require gentle pressure to be inserted into the CF slot.
2. Is SoundBridge within range of your wireless network signal? Performance varies depending on wireless network hardware, physical barriers such as walls, and signal interference.
3. Is your computer on and your wireless access point plugged in?
4. Is your music server software running on your computer? Are your music sharing options enabled? (See page 11.)
5. Did you enter your password correctly (if you have one), including case sensitive characters?

### **Obtaining Your Wireless Access Point's Password**


Follow these instructions to determine your wireless access point password, and be sure to have a pen ready to make a note of the case-sensitive password as well as the password type, either hexadecimal (hex) or ASCII.

### Example 1: Apple AirPort (Mac Users)


The Apple AirPort is a very popular access point. To see its configuration, open your AirPort Admin Utility on your Mac (it is in the Utilities folder). Select your AirPort and choose "Configure."

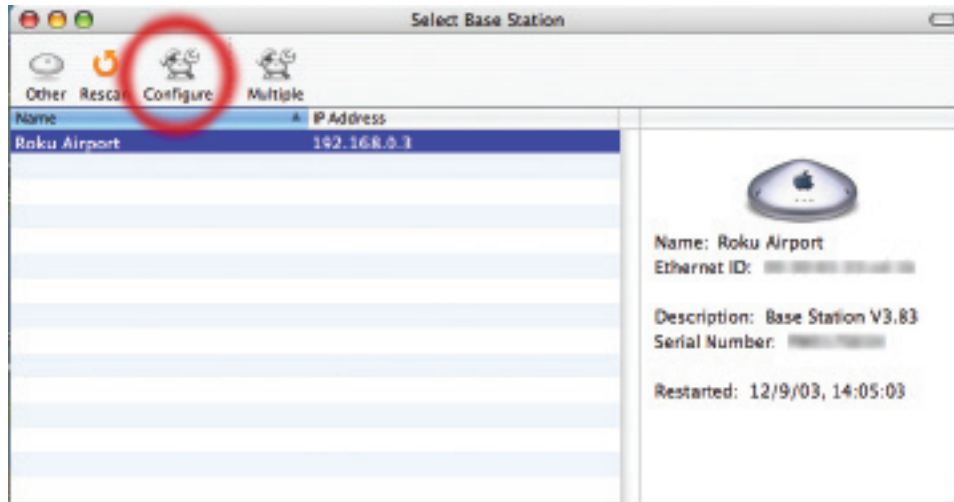

You may need to enter the password for your base station. You should then see the screen below. The line labeled "Wireless Network Name": is the name of your network, also known as an "SSID." You will either select this network on the SoundBridge screen or enter it manually if your network is "closed."

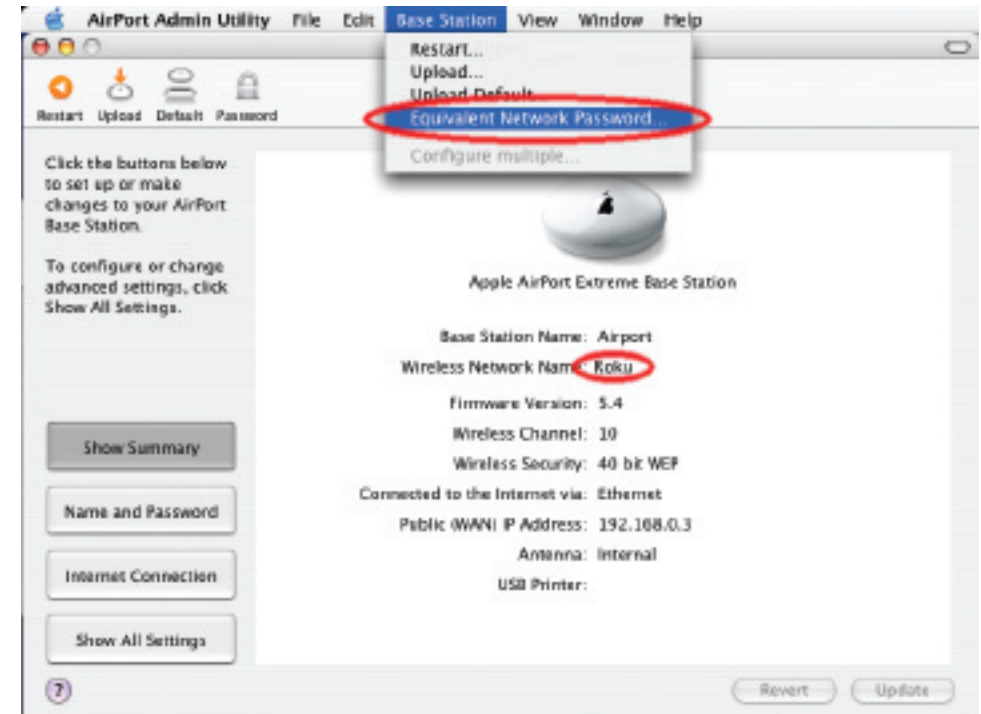


If your network is password protected, you should choose “Equivalent Network Password” from the “Base Station” menu (see illustration above) and write down the value that appears in the dialog (see illustration below). This is the value you will enter into SoundBridge’s wireless setup password field. (Select password type “hex” in the SoundBridge menu.)

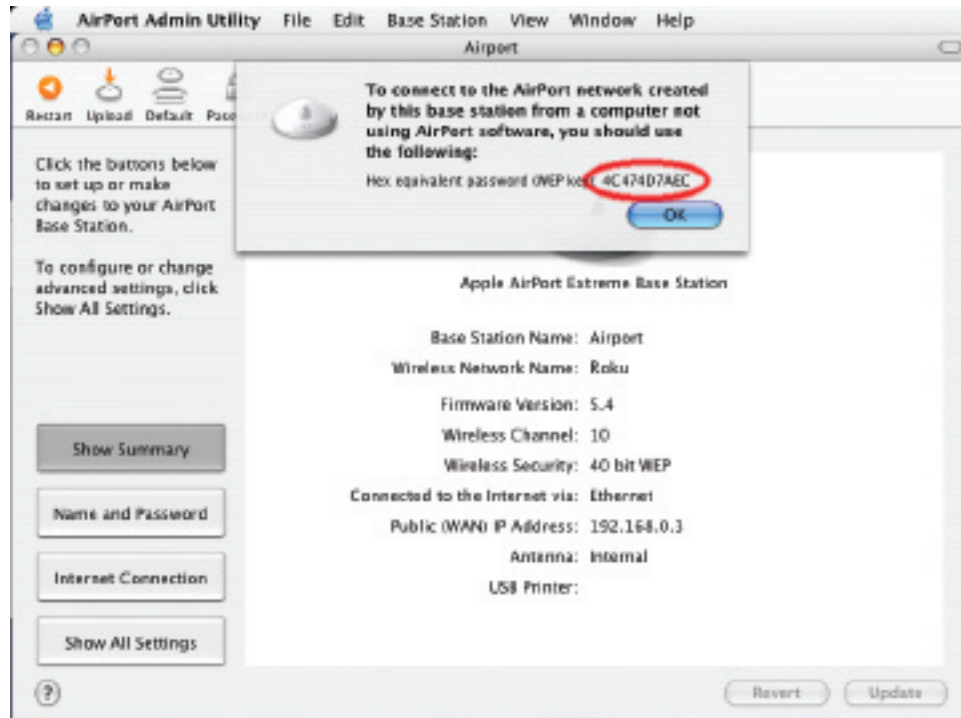


## Example 2: Apple AirPort (PC Users)


Step 1: Open the AirPort Admin utility (Start/Programs/Airport Admin Utility). Select the network you would like to configure. You should then see the configuration screen below.

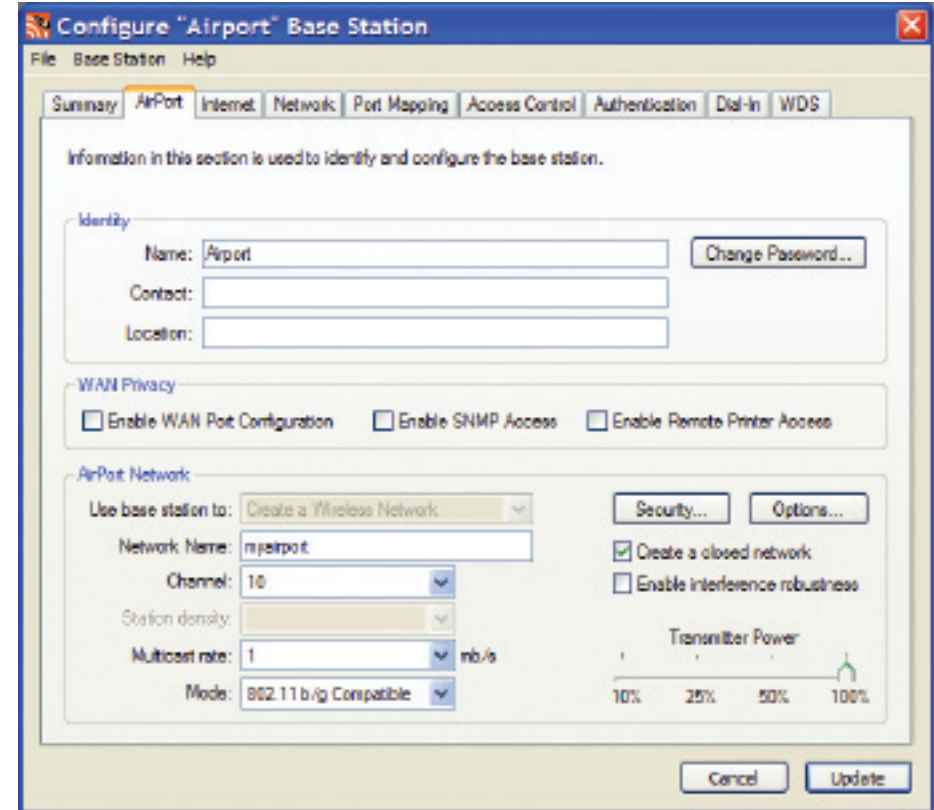


Step 2: Make a note of the name of your wireless network in the "Network Name" field (see below).

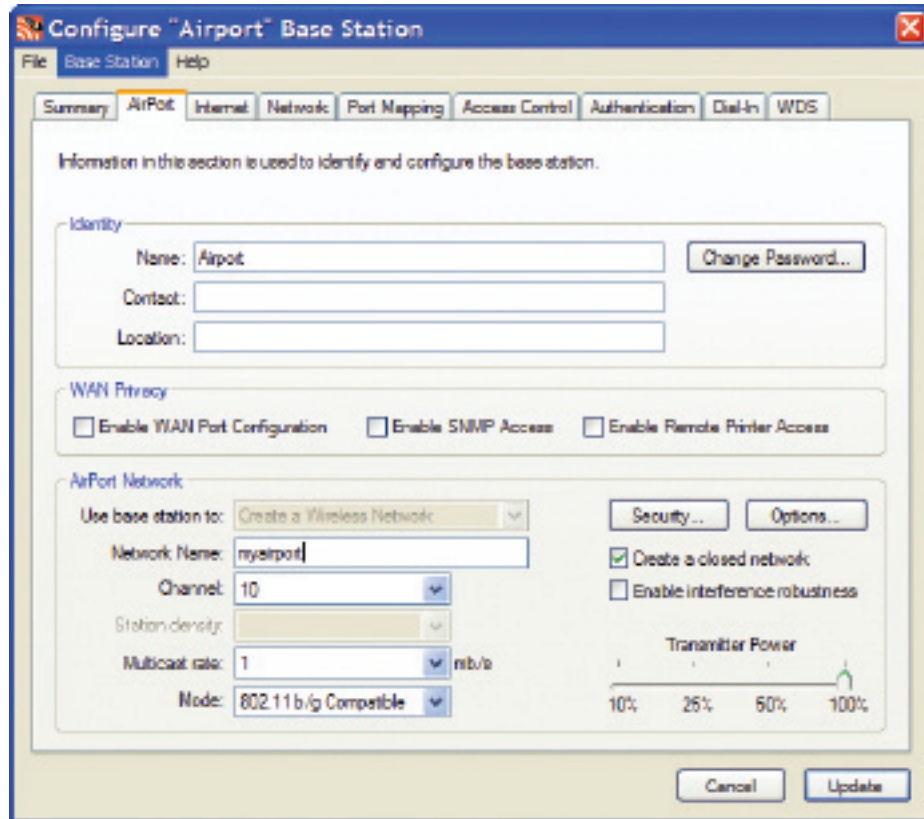

Step 3: Select the "Equivalent Network Password" from the "Base Station" drop down menu.

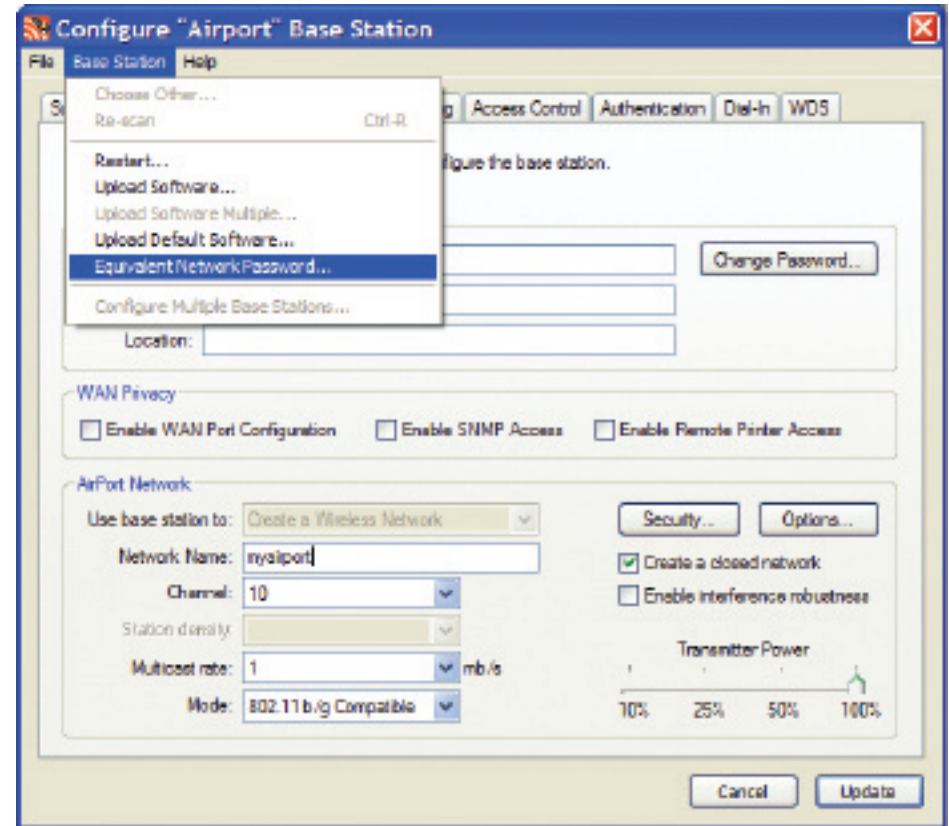

Step 4: Write down the displayed password(s), as well as their format (“hex” in the example below). Press OK to close the dialog box.

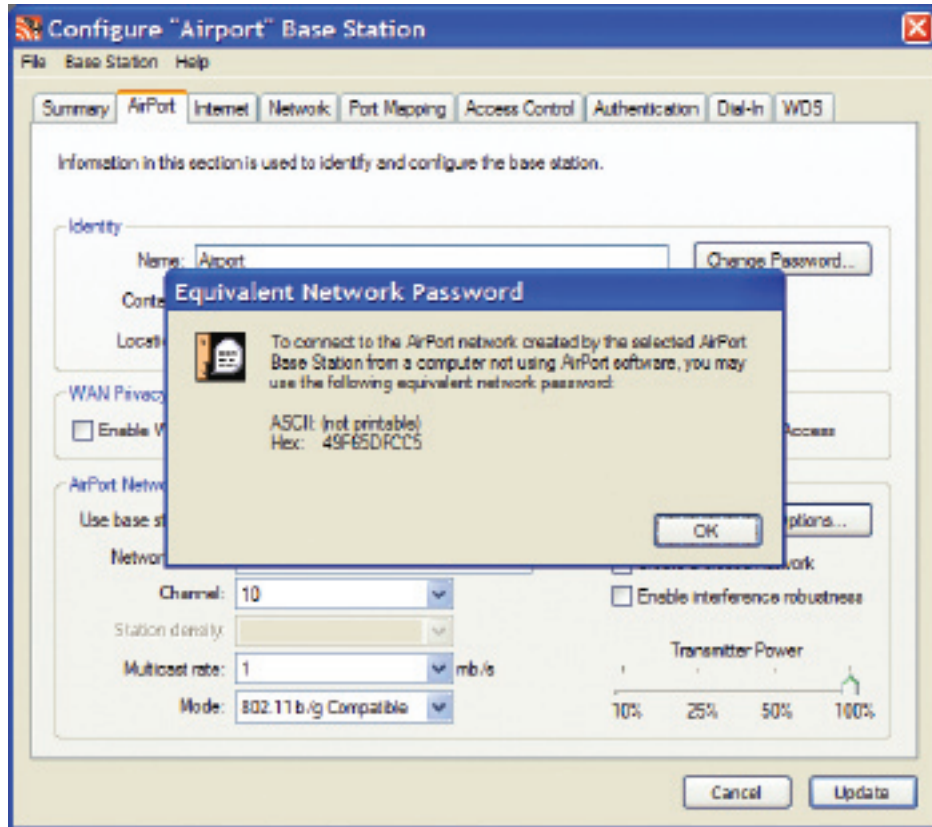

### Example 3: Linksys WAP54G

The Linksys WAP54G access point is a popular 802.11g access point. Getting the hexadecimal WEP key from the WAP54G is an easy process. First, open a web browser and connect to the access point. Connecting to the access point is done by entering the access point's IP address in the location bar of your web browser. If you do not know the IP address of the access point, please refer to the software or manual that came with the access point in order to determine the IP address. After successfully logging in, you will see a page similar to the following:



Make a note of the "SSID" (in this case "wireless"), this you will need to enter into the "SSID" field in SoundBridge's wireless setup.



The value of “Wireless Network Name (SSID)” is the SSID that you will enter into the SoundBridge’s wireless setup. Next, click on “Security Settings” on the left side to access the WEP settings:



If “WEP” is set to “Disable,” then you do not need to enter a password to access your wireless network. If “WEP” is set to “Enable,” you will need to obtain the hexadecimal key for your network. Netgear unfortunately, does not allow you to view the current passphrase or keys. However, if you re-enter the known passphrase and press “Generate Keys,” then it will regenerate the keys as before and allow you to view the keys:



Make a note of the value of the key with the active radio button (the default key, in this case “Key 1”: “562E7FF0A0”). This is the password that you will need to enter into your SoundBridge’s wireless setup “Password” field. You now have the information necessary to set up your wireless network from your SoundBridge. You may close your web browser.



## Getting help

If you are still having trouble setting up your Wi-Fi connection, please browse our web site support resources at [www.rokulabs.com/support](http://www.rokulabs.com/support) or email [support@rokulabs.com](mailto:support@rokulabs.com). We're available for you Monday–Friday 9am–5pm Pacific Time, and usually respond within 24 hours. If you prefer phone support, feel free to email us a phone number where you can be reached during business hours.

## CUSTOMER SUPPORT

Please visit our SoundBridge Troubleshooting area at [www.rokulabs.com/support](http://www.rokulabs.com/support) for detailed troubleshooting help.

Visit our FAQ and User Forum at  
[www.rokulabs.com/support](http://www.rokulabs.com/support)

## APPENDICES

### End User Software License Agreement

**IMPORTANT — READ CAREFULLY:** By using the software in your SoundBridge, you agree to be bound by the license terms and conditions below. If you do not agree to these terms and conditions, you must immediately return your SoundBridge in its original condition and packaging to the point of purchase for a refund of your purchase price (after inspection).

#### iTunes Disclaimer

Roku SoundBridge interfaces to iTunes using the Apple DAAP protocol, under license from Apple. This license gives apple the right to terminate the license for any reason. Roku has no control over this, and is not responsible in the unlikely event Apple does so. In this event, Roku will use commercially reasonable efforts to provide software that installs on your PC via a download that provides similar functionality, but Roku makes no representations or warranties regarding the features available in such a situation.

#### Roku Software License

Subject to these terms and conditions, ROKU grants you a non-exclusive license, with no right to sublicense, to execute the software included with the SoundBridge or subsequently provided to you by ROKU (together, the "Software") on your SoundBridge solely for your personal use of the intended features and functions of the SoundBridge. The license may be transferred only with the transfer of the SoundBridge on which ROKU has installed the software; any transferee will be subject to the terms and conditions of this license. This license will terminate automatically, without notice, if you fail to comply with the terms and conditions, including the restrictions, of this license.

ROKU and its licensors own and retain all proprietary rights, including all patent, copyright, trade secret, trademark and other intellectual property rights, in and to the SoundBridge Software. You acknowledge that the license granted above does not provide you with title to or ownership of the Software, but only a right of limited use under these terms and conditions. The Software embodies ROKU's trade secrets and other proprietary information and materials. Any attempt to modify, enhance, disassemble, decompile, reverse engineer or otherwise gain access to the source code to the Software, to remove or unbundle the Software from the SoundBridge, or to sublicense or distribute the Software is strictly prohibited, except as may be otherwise agreed by ROKU in writing.

#### Third Party License Information

Soundbridge includes AES code Copyright © 2003, Dr. Brian Gladman, Worcester, UK.

This product is protected by certain intellectual property rights of Microsoft Corporation. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary.

## Limited Warranty

Roku SoundBridge is covered by a one year parts and labor warranty.

### Roku SoundBridge Limited Warranty

- 1. Warranty.** ROKU, LLC (“ROKU”) warrants your SoundBridge and any included accessories against defects in material or workmanship as follows:

For a period of one (1) year from the date of purchase (“Warranty Period”), if ROKU determines that the SoundBridge is defective, ROKU will repair the unit or replace the unit (with either a new or rebuilt SoundBridge unit), at its option, at no charge and, if applicable, will pay the labor charges incurred by any SoundBridge authorized service facility. If the Warranty Period has expired, the customer is responsible for the payment of all labor charges and may obtain parts from ROKU authorized service facilities or a SoundBridge service center at his or her own expense.

- 2. Warranty Service Process.** To obtain warranty service, you must first obtain an RMA number (Return Merchandise Authorization) from a Technical Support Representative at ROKU. A Technical Support Representative may be reached by emailing [support@rokulabs.com](mailto:support@rokulabs.com) or calling our toll free number for customer care (1-866-400-7658 from the US). Once an RMA number is obtained, your SoundBridge must be shipped freight prepaid, in either its original packaging or packaging affording an equal degree of protection, to the SoundBridge authorized distribution facility. If ROKU determines that the returned unit is defective, ROKU will either repair the unit or will supply, at no charge and within a reasonable period of time, a new or rebuilt SoundBridge unit in exchange for the defective unit.

In addition, all accessories must be returned with the defective SoundBridge. A new or factory refurbished set of accessories will be furnished with the replacement SoundBridge. Failure to return any of the accessory items could result in a delay in receiving the replacement SoundBridge, and/or result in an invoice for the missing accessories.

*Important:* When emailing for an RMA number, please provide the following information:

- a. model number
- b. serial number
- c. problem description

- d. software version (located in System Configuration menu)
- e. date of purchase
- f. place of purchase (dealer or online place of purchase)
- g. return shipping address (no P.O. boxes)

Note: Proof of purchase will need to be included in the return shipment in order to ensure warranty coverage. In addition, we may attempt to further troubleshoot the problem prior to issuing an RMA number. Please be prepared to provide additional information upon request.

- 3. Scope of and Limitation on Warranty.** The warranty on this product is limited to the repair or replacement of defective units as described in Section 1 above. This warranty does not cover customer training or education, installation, set up adjustments or signal reception problems. This warranty does not cover damage due to acts of God, accident, misuse, abuse, negligence, commercial use or modification of, or to any part of, your SoundBridge. This warranty does not cover damage due to improper operation or maintenance, connection to improper voltage supply or attempted repair by anyone other than a facility authorized by ROKU to service your SoundBridge. This warranty does not cover consumables (such as fuses and batteries). This warranty is valid only in the country of purchase from an authorized ROKU distributor or dealer. This warranty is invalid if the factory-applied serial number and/or “Warranty Void if Removed” sticker has been altered or removed from the SoundBridge.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. ROKU SHALL NOT BE LIABLE FOR ANY DAMAGES, INCLUDING SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, ARISING OUT OF OR RELATED TO THIS PRODUCT OR ITS PURCHASE OR USE. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

THE SOUNDBRIDGE INCLUDES SOFTWARE PROVIDED BY THIRD PARTIES. ROKU’S WARRANTY DOES NOT APPLY TO THIRD PARTY SOFTWARE, AND ROKU IS NOT RESPONSIBLE FOR THIRD PARTY SOFTWARE. ADDITIONAL TERMS AND CONDITIONS, INCLUDING DISCLAIMERS OF WARRANTY, FOR THIRD PARTY SOFTWARE CAN BE FOUND ELSEWHERE IN THE PRODUCT DOCUMENTATION.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

## FCC Warnings and Safety Information

### Communication Regulation & Safety Information

#### FCC Compliance

This section describes the requirements for compliance with Federal Communications Commission (FCC) Rules.

#### FCC Registration and Requirements

The following paragraphs describe requirements and information based on FCC rules.

#### FCC Rules, Part 15

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna;
- Increase the separation between the equipment and receiver;
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected;
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Responsible party (contact for FCC matters only): Roku, LLC, 399 Sherman Ave. #12, Palo Alto, CA 94306, 650-321-1394. For customer service questions go to: <http://www.rokulabs.com/support/>.

CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

#### Canada Class B Statement

This Class B device meets all requirements of the Canadian interference-causing equipment regulations. Cet appareil numérique de la Class B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

#### VCCI Class B Statement

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスB情報処理装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。  
取扱説明書に従って正しい取り扱いをして下さい。

## Safety

### Important Safety Instructions

1. **Read Instructions.** All the safety and operating instructions should be read before the product is operated.
2. **Retain Instructions.** The safety and operating instructions should be retained for future reference.
3. **Heed Warnings.** All warnings on the product and in the operating instructions should be adhered to.
4. **Follow Instructions.** All operating and use instructions should be followed.
5. **Cleaning.** Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
6. **Attachments.** Do not use attachments not recommended by the product manufacturer as they may cause hazards.
7. **Water and Moisture.** To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture. Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus. Do not use this product near water for example, near a bathtub, wash bowl, kitchen sink or laundry tub; in a wet basement; or near a swimming pool; and the like.

- 8. Accessories.** Do not place this product on an unstable cart, stand, tripod, bracket or table. The product may fall, causing serious injury to a child or adult and serious damage to the product. Use only with a cart, stand, tripod, bracket or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer. A product and cart combination should be moved with care. Quick stops, excessive force and uneven surfaces may cause the product and cart combination to overturn.
- 9. Power Sources.** This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.
- 10. Grounding or Polarization.** This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
- 11. Power Cord Protection.** Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles and the point where they exit from the product.
- 12. Overloading.** Do not overload wall outlets, extension cords or integral convenience receptacles as this can result in a risk of fire or electric shock.
- 13. Object and Liquid Entry.** Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
- 14. Servicing.** Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
- 15. Damage Requiring Service.** Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
  - When the power-supply cord or plug is damaged,
  - If liquid has been spilled or objects have fallen into the product,
  - If the product has been exposed to rain or water,
  - If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls

may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation,

- If the product has been dropped or damaged in any way, and
- When the product exhibits a distinct change in performance, this indicates a need for service.

**16. Wall or Ceiling Mounting.** The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

**17. Heat.** The product should be situated away from heat sources such as radiators, heat registers, stoves or other products (including amplifiers) that produce heat.

### Safety/Regulatory Information

#### User/Installer Caution

Your authority to operate this FCC certified equipment could be voided if you make changes or modifications not expressly approved by the manufacturer, who is responsible for compliance with Part 15 FCC rules.

### European Community

Complies with EU Directive 89/336/EEC using EN55022:1998, EN55024:1998, EN61000-3-2:2000 and EN61000-3-3:1995.

CE Warning: This is a class B product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

## TECHNICAL SPECIFICATIONS

### M2000

Dimensions: 17" wide x 2.75" diameter  
Weight: 2.75 lbs  
Graphical Display: 512 x 32-pixel VFD

### M1000

Dimensions: 10" wide x 2.37" diameter  
Weight: 1.5 lbs  
Graphical Display: 280 x 16-pixel VFD

### Left End Cap

10Mbps Wired Ethernet (RJ45)  
Compact Flash Slot (for Wi-Fi adapter)

### Right End Cap

Power  
Analog Stereo Audio Output  
Optical Digital Audio Output  
Coax Digital Audio Output

### Cable Management

All cable connections are under the removable end caps and cables exit through an opening at the back of the end cap

### Audio Output

Analog Left, Right  
Digital S/PDIF Coax  
Digital TOSlink Optical  
Maximum Line Output: 3.2 Volts Peak-to-Peak  
THD +N: 93dB typical

Dynamic Range: 96dB typical  
Frequency Response: <20Hz - >20kHz

### Supported Protocols

Apple Rendezvous™  
TCP, DAAP, AutoIP, HTTP, UPnP AV, Windows Media DRM 10, others  
SlimServer Open Source 5.x-based streaming and control protocols

### Audio Format Support

MP3, AAC, WMA, DRM WMA, WAV, AIFF  
(Apple Lossless, FLAC, Ogg-Vorbis supported with optional third-party software; Protected AAC files purchased from the iTunes Music Store are not supported)

### Sample Rates Supported (kHz)

8.0, 11.025, 12.0, 16.0, 22.05, 24, 32, 44.1, 48.0

### Bit Depth Supported

8 bit, 16 bit, stereo or mono

### Network Connections

10MBit wired Ethernet or 802.11b  
CompactFlash wireless adapter

### Power Supply

Switching 110/220V power supply  
i. Output: 9V, 1.3 amp  
ii. Input: 100-240V; 50/60Hz

### Windows® System Requirements

**iTunes users:** WindowsXP or 2000

**Windows Media Connect users:** Windows XP with Service Pack 2

**Musicmatch users:** Windows 98 SE/Me/XP 2000 (SP3 or above)

**SlimServer users:** Windows 98, ME, 2000, XP, NT

500MHz Pentium class processor or better  
128MB RAM minimum / 256MB RAM recommended

### Macintosh System Requirements

**iTunes users:** Mac OS X v 10.1.5 or later; iTunes v4.0 or later

400MHz G3 processor or better  
128MB RAM minimum / 256RAM recommended

### Other Requirements

Computer with network connection

### Optional Accessories

SoundBridge Mounting Kit — includes mounting brackets for wall and under-shelf mounting  
Additional Remote Control  
Approved CompactFlash Wi-Fi Card (already included in most SoundBridge models)

### Third-Party Accessories

Powered Speakers

## SoundBridge Mounting Kit

Easily mount your SoundBridge on a wall or beneath a cabinet with concealed hardware that highlights SoundBridge's sleek design.

Buy it at [www.rokulabs.com/buy](http://www.rokulabs.com/buy)

\$29<sup>99</sup>



Need help? Go to  
[www.rokulabs.com/support](http://www.rokulabs.com/support)

© 2004 Roku, LLC. All rights reserved. ROKU, the ROKU logo, and SoundBridge are trademarks or registered trademarks of Roku, LLC in the United States and other countries. All other trademark are trademarks or registered trademarks of their respective owners.

Software v 2.0 | revised October 12, 2004

**ROKU™**

[www.rokulabs.com](http://www.rokulabs.com)