

Quick Start

RioVOLT

SP350


For detailed instructions and descriptions please see the User's Guide located on the software CDs and at www.sonicblue.com/support

P/N 41000693-001

Welcome to the RioVOLT SP350, your complete portable solution for audio CD and MP3/WMA CD playback. The SP350 includes Electronic Shock Protection (ESP), which buffers up to 32 minutes of digital audio to help prevent skipping. Follow these steps to get started:

1 Unpack


Make sure your package includes the following:

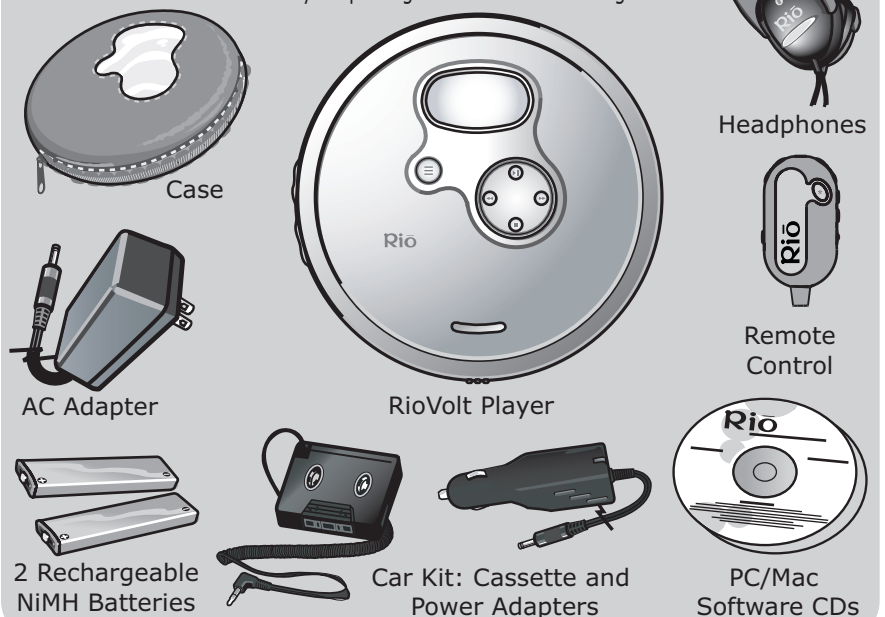

2 Charge Batteries

1. Press the OPEN button to release the latch and open the player.
2. Remove the battery compartment cover inside the player.
3. Insert the two supplied 1400mAH rectangular NiMH rechargeable batteries. Ensure the batteries are inserted properly by matching the + and - on each battery with the symbols on the player.
4. Replace the battery compartment cover. Close the player.
5. Connect the supplied AC adapter into the DC IN JACK on the side of the player. Let the batteries charge for at least five hours before using the player.
6. When the batteries are charged, unplug the AC adapter and disconnect it from the player.

Note: Do not play CDs with the RioVOLT while the batteries are charging.

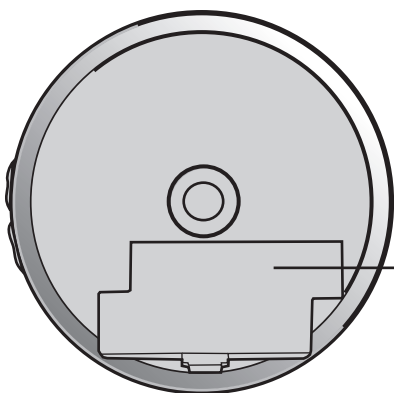

Battery compartment cover (inside player): Remove and insert the 2 rechargeable batteries here

Accessories for your RioVOLT can be found online at store.sonicblue.com

4 Insert Disc

Your RioVOLT supports the following music formats:

- MP3 digital music files
- WMA digital music files
- Standard music CDs (Red Book)

1. Press and slide the OPEN button to release the latch and open the player.
2. Insert an audio CD or MP3/WMA CD into the player, label side up.
3. Close the player.

Tip: The RioVOLT SP350 can play CDs with the following logos:



5 Play Disc


1. Press the PLAY/PAUSE ►|| button to turn on the player and begin playback.

Note: There will be a short delay while the player loads your music tracks and track information.


2. Press the STOP ■ button to stop playback. Press and hold STOP ■ to turn off the player.

Use the software included on the CDs to encode your audio CDs into MP3/WMA formats, organize your digital audio collection, or burn a custom CD. Please refer to the software online help within each application for instructions on using the software.

3 Connect Headphones

Connect the supplied headphones to the MULTIFUNCTION port  on the side of the player. If you are using the remote control, plug the headphones into the remote control, and plug the remote control into the MULTIFUNCTION port on the side of the player.

Tip: You can also use the LINE OUT jack to connect the player to the included Car Kit accessories or to an external audio system.

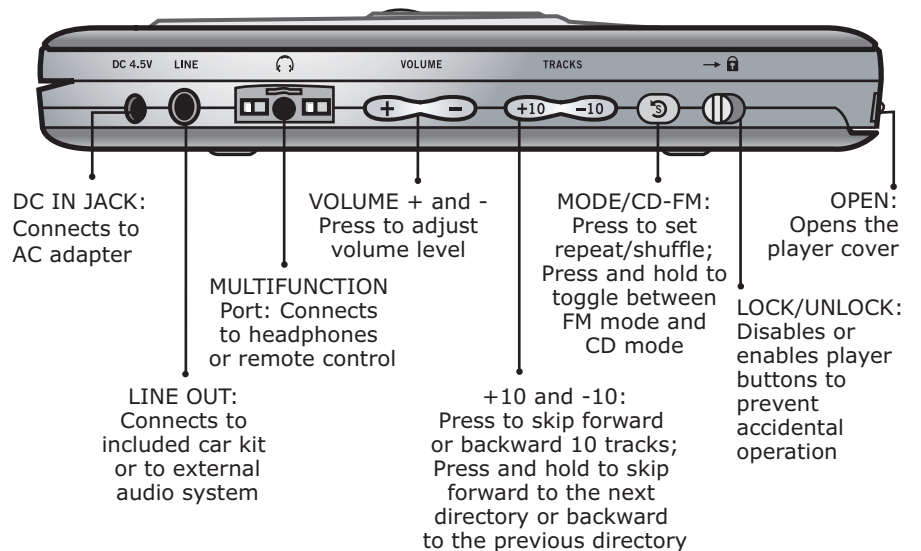

Customer Care

Web site

www.sonicblue.com/support

E-mail

customersupport@sonicblue.com

Technical Support Telephone

Call for answers to technical questions about your product.
(503) 453-1640

Customer Service Telephone

Call for sales and general product information.
(800) 468-5846

Hours

Please check the support Web site for the current hours of operation.

SONICblue™

© 2002 SONICblue Incorporated. All Rights Reserved.

SONICblue Incorporated shall not be liable for any errors contained herein or for any damages arising out of or related to this document or the information contained herein, even if SONICblue has been advised of the possibility of such damages. This document is intended for informational and instructional purposes only. SONICblue reserves the right to make changes in the specifications and other information contained in this document without prior notification. SONICblue disclaims any obligation to update the information contained herein. Rio® is a registered trademark of SONICblue Incorporated. SONICblue and RioVOLT are trademarks of SONICblue Incorporated. Microsoft, Windows Media, and the Windows Logo are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries. All other brand or product names may be trademarks of the companies with which they are associated. Printed in China.