SYLVANIA

1. Overview

SMP2012

User Manual

Sylvania is a registered trademark of OSRAM Sylvania Inc. Used under license

2. Unique Features

- Elegant appearance and easy to use
- Multi-Code Player Supporting MP1, MP2, MP3, WMA 2. formats
- 2.3 Drive Free U Disk You may manage your files directly through "Portable Device" in "My Computer" on Windows2000 Operating System or above without driver

4. Function of the button

- 1.Make sure the switch is ON
- 2.Switch on the power button and it will start to play automatically
- 3.Hold PLAY to turn off the player when the player is working
- 4.Switch on the power button to resume the song
- 5.Short Press PLAY to pause when file is playing 6.The LED light 1 is on when playing music

6. Trouble Shooting

No Power	 Check to see if battery is low Check to see if the player is ON
No sound from earphone	 Check to see Volume is set "0" and connect the earphone connects properly Make sure earphone is clean and in good status Damaged MP3 file may make noise and could not be played. Make sure that the music file are not damaged
Failure of music download	 Check to see if USB cable is damaged and connected properly Check to see if driver is installed correctly Check to see if memory space is enough

Forward button Vol- button Vol+ button Play/Pause button Backward butt USB port Earphone jack ON/OFF button LED light 1 LED light 2

3. Play Music

Connect the earphone to player

- 1. Put the Power switch to ÓN
 - 1.1 Select music
 - To select previous music
 To select next music
- 2. To adjust the volume 2.1 Press+/- to adjust volume

5. USB Disk

1.USB Disk

The player could be use as standard USB disk with operating system of Windows 2000 and above, Mac OS 10.3 and above, Linux Redhat 8.0 and above (no driver needed) while Windows 98 need to set up driver

2. Battery

- 2.1 Make sure the power switch is on to charge, or the player could not be charged properly. The LED light 2 and LED light 1 are on when the player is charging, the light 1 will be off when the battery is full
- 2.2 Disconnect the player and charger if you want to stop charging 2.3 Turn off the player when you do not use player
- 3. Remarks (Additional information for Adaptor purchase)
 - 3.1 The adaptor must be conformed to following standard 3.1.1 Input: 100V 240V, 50/60Hz 3.1.2 Output: 5.2V ± 0.2V 3.1.3 Max.: 350mA 3.1.4 4 pins adaptor



7. Technical Specifications

2GB
NA
USB 2.0 High Speed
Up to 4hrs
Li-Polymer Rechargeable 3.7V 120mAh
Mp1, MP2 ,MP3, WMA
85~95Db
(L)5mW + (R)5mW(320hm)
Compatible with Windows2000/ XP
44.2 x 29.5 x 12.7
18g