

128MB MP3 Player



© 2004 Ultra Computer Products, Inc. www.ultraproducts.com

ULTRA

128MB MP3 Player

USER GUIDE



All In One

ID3 Tags / Voice Recording / FM Radio Tuner / Support
for SD and MMC cards / USB Pocketdrive / Language Learning
Function / MP3 Player / E-mail function / Support WMA Format
Features Soft-touch Cover

Welcome to the ULTRA-MP3 User Guide


Congratulation on your purchase of product. Please read through these operating instruction. After you finish, please put them away in a safe place for further reference.

System Requirement

1. IBM compatible PC
2. Pentium II or above
3. Microsoft Windows 98/SE/ME/2K/XP
4. 64 M RAM
5. USB port
6. CD-ROM

Function Indicator Symbols

These symbols appear on the indicator panel to indicate the current mode .
See the chart below.

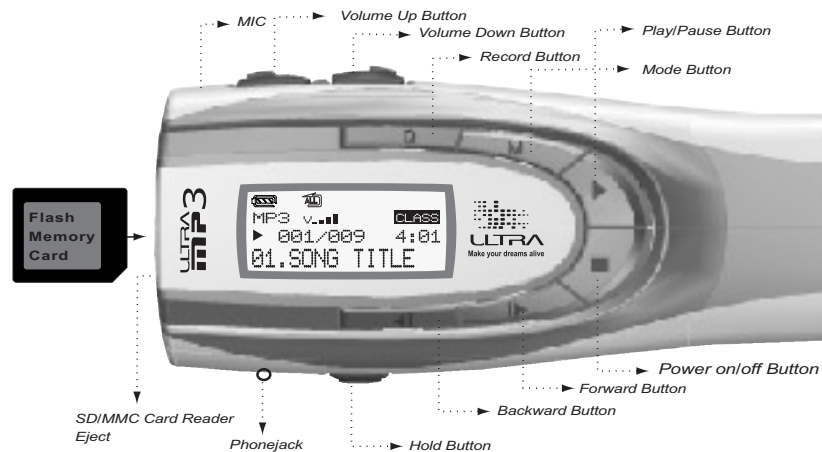

Using the Utility

For windows 98 user

For windows 98 user, please simply insert the enclosed CD into CD-ROM drive.

1. Double Click [My computer] from desktop
2. Select CD-ROM drive
3. Click the right button fo mouse andthen select [Open]
4. Double click the [Set up.exe] to install driver.
5. A series of screens, a wizard will guide you through the software installation.



Firmware updating

ULTRA-MP3 provides a useful utility for updating the latest firmware. To install this utility, simply insert the enclosed CD into CD-ROM drive.

- 1 Double Click [My computer] from desktop.
- 2 Select CD-ROM drive.
- 3 Click the right button for mouse and then select [Open].
- 4 Double click the [Set up.exe] to install driver.
- 5 A series of screens, a wizard will guide you through the software installation.
- 6 Connect the ULTRA-MP3 to USB port.
- 7 Please go to [Start]→[Program file]→and find [SigmaTel MSCNMMC Audio Play]→[Firmware download] to load the firmware.




8 Click [start] to run the firmware installation.

9. A series of screens, a wizard will guide you through the software installation.

ULTRA-MP3 functions Description

Power on

1. Press the Power "  " button
2. In 2 seconds, LCD show ULTRA-MP3 (fig.a)
3. The current track and the playback time indicator will be displayed on LCD. (fig.b)
4. If there is no MP3 files on the memory, it will display NO Files. (fig.c)

 


fig.a




fig.b






fig.c


Power off

Please press Power "  " button for 5 seconds and LCD shows [Continue Holding To Power Off] and [Shut Down].



Navigating the menus

By pressing M button "  ", the menu will pop out. Move FWD "  " and BWD "  " button through menus. Press to select highlighted items.

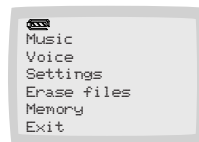

Music





1. After pressing the Power button "  ", please press Play button "  " to play MP3 music.
2. The current track and the playback time indicator will be displayed on LCD (fig.e).





fig.e

3. By pressing Play "  " button again to pause MP3 music.
4. By pressing Play "  " button again to release the pause function.


Stop MP3 Music

By pressing Power button "  " the MP3 Music will stop.




BWD and FWD



1. By pressing the FWD "  " or BWD "  " button, you could play back to the previous track or next track.
2. When the song is playing, it will skip to the prior section & the next section if you press the FWD or BWD button continuously. If you let go the keys, the song will go on.

Voice




1. Press the M button "  " and then select to **Voice**.
2. You can listen the voice recording.


Voice Recording Function

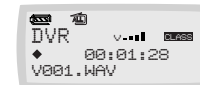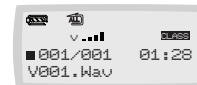1. Press Q button "  " for 3 seconds to start voice recording.
2. Press Power button "  " to stop voice recording.
3. Press Play button "  " to listen the voice recording.



Setting

By pressing M button "  ", the menu will pop out. press FWD "  " and BWD "  " button through menus. Press to select highlighted items.

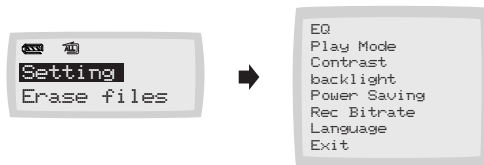


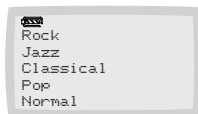
EQ(Equalizer) Mode

There are five modes : Rock, Jazz, Classical, Pop, Normal

1. Select to Settings→EQ



2. By pressing the Play button "  " to select EQ modes between Rock, Jazz, Classical, Pop, Normal.




Play Mode

1. Select to Settings→Play Mode.



2. By pressing the Play button "  " to select Normal, Repeat Track, Repeat All, Shuffle, Shuf. Repeat

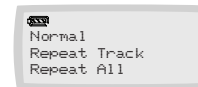

Contrast


1. Select to Settings→Contrast




2. Move FWD "  " and BWD "  " button to adjust LCD contrast.



Power Saving


1. Select to Settings→Power Saving
2. By pressing the Play button "  " to select the timeout after which the ULTRA-MP3 will shut down for power saving.

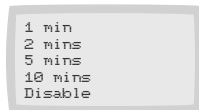


Strongly recommend to set the power saving mode to Disable mode.

Rec Bitrate

1. Select to Settings→Rec Bitrate.

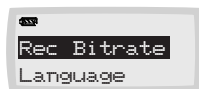


2. You can select the record compress ratio which is between 8000 Hz and 48000 Hz.

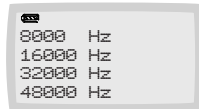


3. The lower compress ratio is for lower record quality, so it's suitable for long time recording, and vice versa.

Language


1. Select to Settings→Language

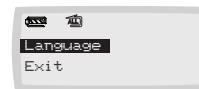


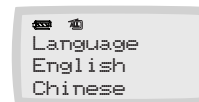

2. Select the language for the display texts.




Erase files

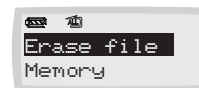1. Press the M button "  " and then select to Erase files.



2. The voice recording file will be erased and press FWD "  " and BWD "  " button to select the file you want to erase.

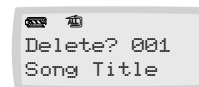


Memory

1. Press the M button "  " and then select to Memory.





2. It shows the internal memory and free memory of ULTRA-MP3 .

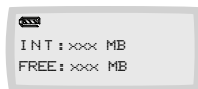


Lock Function

1. Press the Hold button "  ",
you can lock the ULTRA-MP3 to prevent the keys being accidentally pressed.

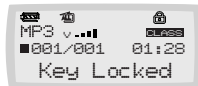



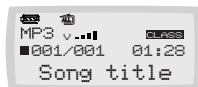

2. Press the Hold button "  " again to release the Lock function.



Repeat A-B function

How to repeat a certain part of track continuously.

1. Press Q button "  ", the A-> "  " icon will show on LCD.(fig.f)
2. It will set the start of the repeat part A.
3. Press Q button again , the A->B icon "  " will show on LCD. (fig.g)
4. It will set the end of the repeat part B.
5. Now, it will repeat the selected part (A-B) of the track continuously.
6. Press Q button "  " , it will stop A-B function.

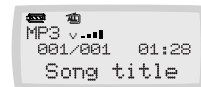


fig.f

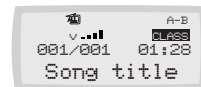




fig.g

Battery Indicator

Please change the battery when indicator appears on the LCD.



Volume control Function


By pressing the VOL+ "  " / VOL- "  " button, the volume steps will increase or decrease.




USB Pock drive Function

How to use USB Pock drive?

1. Attach MP3 player to USB port .
2. The illustration (fig.h) will show on LCD.

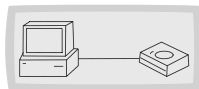

3. You can see TWO Portable drives on you PC. (for windows 2000 user, please make sure to install the Windows Service Pack3 ; For Windows 98 user, please make sure to install the enclosed driver)
4. When data transmitting, the musical note icon will running on LCD.

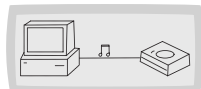



5. When data transmitting finished, the musical note will disappear on LCD.
6. **The ULTRA-MP3 do harm when you take out the ULTRA-MP3 while the transmitting have not completed.**

 
Auto Power Off Function

ULTRA-MP3 will power off in 60 seconds if the Play or REC button is not pressed.

SD/MMC card Function

Support Play and Plug.




1. Insert the SD/MMC card to the card reader.
2. Press FWD "  " /BWD "  " button, the icon will show on LCD.



★ Support SD/MMC card up to 512MB.

Expansion Options

Backlight

1. Press the "  " button, Setting→Back light.(fig.h)
2. Press FWD "  " /BWD "  " button and then select the timeout after which the backlight will off.(fig.i)


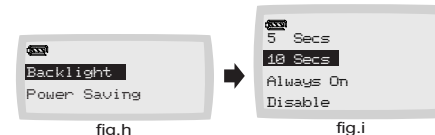


fig.h

fig.i


FM Tuner

1. Press the "  " button, Setting→FM Tuner.

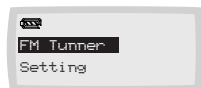


2. You will read the radio frequency shown on the LCD.

3. Press FWD "  " & BWD "  " button to search FM radio stations and set up as preset memory channel by Play "  " button.

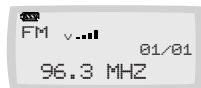


4. It shows "PRESET" icon on LCD screen when setting completed.(fig.h)




5. Under preset memory channel, to press FWD "  " and BWD "  " button for selecting preset FM radio stations.




6. Remember to press Play "  " button again to release "PRESET" icon for searching FM radio stations.

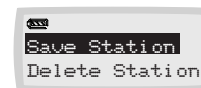
7. In "FM Tuner" mode, save your favorite station by pressing "  " button and select "Save Station" .

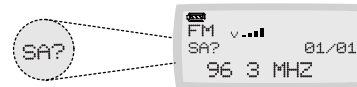


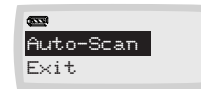
8. It blinks "SA?" on the LCD screen.



9. Select the memory channel number by pressing FWD "  " and "BWD "  " button then press Play "  " button to save.

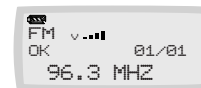

10. In "FM Tuner" mode, to start auto-scan function by pressing "  " button and select "Auto Scan." When the radio is on, searching stops when a channel is found.



11. Press "  " button and select "Delete Station" to delete stations.



E-mail Function

Begin to use Software

1. Click[**My Computer**] and you will see that Windows has automatically assigned a drive letter for every removable disk detected.
2. double-click the [**Removable Disk**].



3. Find the [**My Tools**] folder and double-click the [**My Tools**] icon.



4. Please double-click the [**THMail.exe**] program to start the software.
5. Follow the on-screen instructions to proceed.



Begin to use Software



Setting :

► A. POP 3 Setting

1. Click "Setting: Button"
2. Click on the **POP3** tab
3. In the **POP3** field, type the name of the incoming e-mail server.
4. In the **User** field, type your account name
5. In the **Password** field, type your password
6. Please check in the **Check Leave Mail(s)** in **POP3** server box or you can check in the **Launch thmail.exe after device plugging** box for your preference.





► B. SMTP Setting

1. Click on the **SMTP** tab
2. In the **SMTP** field the name of the outgoing e-mail server
3. In the **User** field, type your account name.
4. In the **Password** field, type your password
5. In the Name field, type your name as you want it to appear to everyone who gets e-mail from you.
6. In the Address field, type your full e-mail address and then Click "OK"



Create Address Book

1. Click [New] "  " Button and then click [Address] "  " Button.
2. Click the New button,
3. Type the person's name and the e-mail address with no spaces and click "ok".




 

Compose and send email :

1. Click in the message area, and type your message as shown below.
2. Click **Send** .



Check your Email Account:

1. Click "Check"  Button
2. Click the message you want to read and then click "Get Mail" Button to download the mail you just select from the message list.

3. Click the message you want to delete from POP3 server and then click "Remove"  button.
4. Click the "Recheck"  button to check POP3 mail server again.



Import email into Microsoft Outlook® Express:

1. Click "Open"  button.
2. On the **File** menu, point to **[Copy to folder]** or **[Move to folder]**



3. Verify the location of your messages, and then click **ok**. Then you will find your email message into outlook express.



Back up and restore the email messenger software

When first time installed, Email messenger software will be automatically backup to your PC. After formatting your ULTRA-MP3 you can still restore the email software by following the procedures below.

1. Click on [My documents] folder
2. You will find [ULTRA-MP3-Backup] folder
3. Find thmail.exe and smail.exe for installation.
4. After executing thmail.exe and smail.exe file, the Email Messenger software will be restored to your ULTRA-MP3.

Attentions

Windows 2000 Service Pack 3 (SP3) provides the latest updates to the Windows 2000 family of operating systems. Windows 2000 SP3 allows you to install all the latest Windows 2000 updates with a single installation. The 2000 Service Pack 3 (SP3) is protected by copyright of Microsoft corporation.

Operation Notes and trouble shooting

1. Please do not drop the ULTRA-MP3 and keep it in areas free from extreme temperature changes, moisture and dirty environment.
2. The ULTRA-MP3 do harm when you take out the ULTRA-MP3 while the transmitting have not completed.
3. Please remove the battery to avoid electrical leakage when you do not use ULTRA-MP3.
4. After turning on the MP3 player, there is no signal on LCD.
 - Please replace or check battery placement.
 - Please check if the battery is inserted.
 - Battery life may vary with different manufacturer.
5. If the key buttons could not work, please check if the " Hold" button is on. Please press it again to release the lock function.
 - Please check if the volume control turn it to level 0 and please turn it up.
 - Please check if the MP3 music file is in the memory
6. For windows 98 user, Please make sure to install the enclosed driver before using ULTRA-MP3.
7. For windows 2000 user, when plugging USB ULTRA-MP3 to PC, you should see two additional drives on PC .if you only see one additional drive on your PC,
 - Please make sure to install Windows 2000 SP3 , which allows you to install all the latest Windows 2000 updates with a single installation.
 - you can visit at [http:// v4.windowsupdate.Microsoft.com/zhtw/default.asp](http://v4.windowsupdate.Microsoft.com/zhtw/default.asp) to update Windows 2000 with a single installation.

The 2000 Service Pack 3 (SP3) is protected by copyright of Microsoft corporation.
8. ULTRA-MP3 can be used as USB mass storage.
 - (Removable disk drive, smart card reader).