

zvuespirit™
MP3 PLAYER


zvue™
products

User Guide

Contents

Welcome to ZVUE	2
Safety Tips	2
Get To Know Your ZVUE Spirit	3
Main Features	3
Key and Control Interface	3 - 4
Getting Started	5
Main Menu	5
Music Playback	6 - 7
Record	7
Browse	8
System Settings	9
Music	9
Record	10
Display	10
System	10
Power Off	11
Language	11
Connecting to Your PC	11 - 12
Notes	13
Need More Help?	14

Welcome to ZVUE

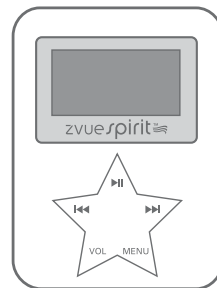

Congratulations on your purchase of the ZVUE Spirit MP3 Player. We hope you enjoy your ZVUE Spirit Player. To get the most out of your ZVUE Spirit Player please read this manual as it provides tips and information about its various features.

Safety Tips:

- Use this unit only as intended.
- To prevent fire or shock hazard, do not expose this unit to rain or moisture.
- Do not submerge the unit in any liquid.
- Do not disassemble.
- Do not touch the USB connection port of the player, as it may become damaged.

Included in the box:

- | | |
|--------------------------|--------------------|
| ■ ZVUE Spirit MP3 Player | ■ USB Wall Adapter |
| ■ ZVUE Sound Headphones | ■ USB Cable |
| ■ Protective cover | ■ User Guide |

Get To Know Your ZVUE Spirit

Main Features

- 1 GB of built-in memory.
- Supports MP3, WMA, and WAV audio formats.
- Seven preset equalizer settings, multiple playing modes, and outstanding sound quality.
- Lyrics file (.lrc) support (3rd party Software needed).
- Microphone for voice recording.
- Multiple language support.
- Supports Windows 2000 or higher.
- High speed USB 2.0 interface.
- ID3 Tag support.


Key and Control Interface Bottom/Back View



USB Port Headphone Jack

NOTE


Your ZVUE Spirit includes an external speaker but for the best listening experience plug your ZVUE Sound headphones into the headphone jack on the player.

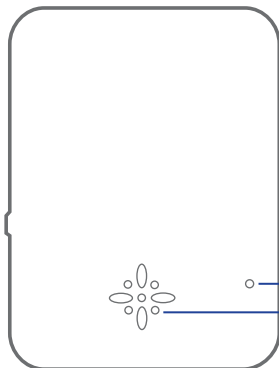

Microphone
Speaker

Get To Know Your ZVUE Spirit

Key and Control Interface Front View

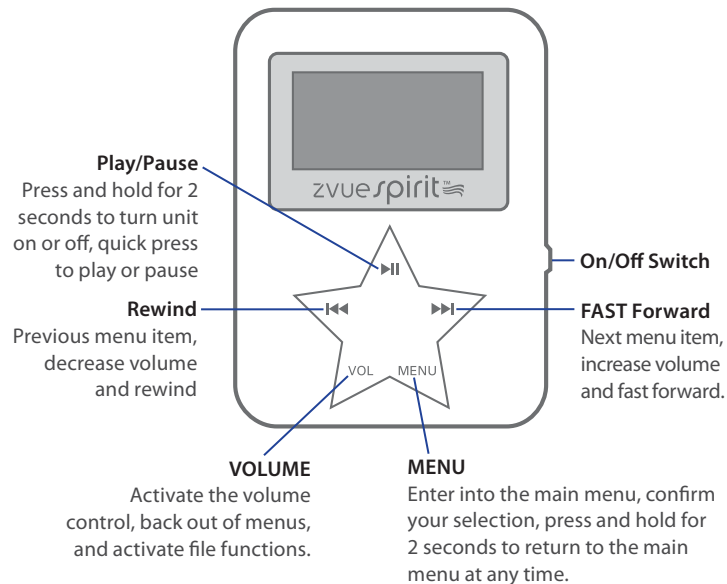

HOLD Feature – Press and hold the **▶▶** and **MENU** buttons to activate and deactivate the Hold feature. While activated this will lock the buttons and prevent them from being pressed accidentally.

Getting Started

Before using your ZVUE Spirit MP3 player, toggle the power switch into the **On** position. Next, press and hold the ►|| button for 2 seconds. The player will start with a brief splash screen and present the main menu.

Connect the ZVUE Spirit MP3 player with the USB cable to the USB power adapter. Plug the USB power adapter into a wall socket and let your player charge for **at least three hours**

Once it's charged, unplug it from the power adapter.

Main Menu

The main menu contains four submenus. Each menu corresponds to a function of the player.

-  **Music** – To play music.
-  **Record** – To record from the microphone.
-  **Browse** – View the file contents of your player.
-  **System Settings** – To change the system settings.

Press ►► or ◀◀ to highlight the desired function.

Press **MENU** to confirm your selection.

Press and hold the **MENU** button for 2 seconds to return to the main menu from any mode or **VOL** to back out of any menus.

Getting Started

Music Playback

From the main menu, highlight the **Music** (🎵) option and press the **MENU** button to confirm your selection.

►|| plays or resumes the current track.

►|| pauses the music.

To change music tracks:

►► to play next music track. Press and hold to fast forward within the current song.

◀◀ to play previous track. Press and hold to rewind within the current song.

To adjust the volume:

VOL To activate the volume control. The volume symbol on the screen will highlight.

►► to increase volume

◀◀ to decrease volume

Press **VOL** to exit the volume control. If you do not press any button, the volume control will be dismissed after several seconds.

Press **MENU** once to browse through your music files while listening to the current track. Use ►► or ◀◀ to browse through the files. Press ►|| to play the highlighted track.

Getting Started

Music Playback *(continued)*

While a track is playing, press **MENU** button twice to go back to the main menu.

You can also press and hold the **MENU** button for 2 seconds to return directly to the main menu. This won't stop playback of current track.

Your voice recordings made in **Record** () mode will play from **Music Playback** () mode.

Record

From the main menu, highlight the **Record** () option and press the **MENU** button to confirm your selection.

Press **▶||** - Start or Pause recording from microphone. The counter on the screen will run while recording.

NOTE

Voice recording supports MS-ADPCM WAV (.wav) formats.
There is a maximum of 99 recordings in any folder.

To listen to your recordings, exit to the main menu by pressing and holding the **MENU** button for 2 seconds.

Highlight the **Music** () option and press **MENU** to confirm your selection.

Press **MENU** to see all your stored files. Find the "Voice" folder and press **▶||** to enter the folder. Highlight the voice track you want and press **▶||** to play it.

Getting Started

Browse

From the main menu, highlight the **Browse** () option and press the **MENU** button to confirm your selection.

To select a file or folder:

▶▶ highlight the next file or folder.

◀◀ highlight the previous file or folder.

VOL - to activate the delete function. Highlight the file you wish to delete and press **VOL**, the player will offer a confirmation option.

Highlight "Yes" and press **MENU** to delete a file.

Highlight "No" and press **MENU** to leave the file alone.

WARNING

Please use the delete feature carefully. Any files deleted from the player will be gone forever, so please be sure to create a backup of the files that come with the player to be able to enjoy them in the future.

System Settings

From the main menu, highlight the **System Settings** (⚙️) option and press the **MENU** button to confirm your selection.

Music

Repeat mode –

Once – Plays current track only once.

Repeat 1 – Repeats current track on a loop.

Folder Once – Plays all tracks in folder only once.

All Once – Plays all tracks only once.

All Repeat – Repeats all tracks on a loop.

Intro – Plays only first seconds of each track.

Play Mode -

Order - Play all tracks in order.

Shuffle – Play all tracks in a random order.

EQ Select – Offers a variety of preset equalizer settings. Choose a setting that best compliments your music preference or tastes. This includes the “User EQ” setting, which is set in the next system setting menu item.

User EQ Set – This option offers your several sound frequency ranges to adjust. Use the ►► and ◀◀ to adjust the currently highlighted frequency band. Press **VOL** to confirm your setting for that frequency band and continue to the next. Once you have set all of the frequency values to your liking press the **MENU** button to return to the main menu.

System Settings

Record

REC Quality – High Quality or General Quality. The higher quality uses more storage per second of recording.

REC Volume – This sets the sensitivity of the microphone. This may take some experimentation to determine which setting is best for you in your recording environment.

Display

Backlight – Set the amount of inactivity in seconds before the backlight turns off. Settings are: 5, 10, 15, 20, and 30 seconds. This also includes “Always On”, which will leave the backlight on for the entire time the player is powered on.

Brightness – This is the brightness setting. This includes settings labeled 1 through 5, with 5 being the brightest setting.

System

About – Displays the version number of the firmware, the date of the firmware, as well as storage available and total capacity of the player's storage.

Upgrade – This is a feature to allow you to upgrade the firmware of the player. This should only be used under the instruction of a ZVUE customer service agent.

Default Set – This option returns all of the player settings to their default factory settings. This will not affect the preloaded content of your player.

System Settings/Connecting to Your PC

System *(continued)*

Power Off

This feature allows for the setting of the amount of inactivity before the player turns off. It includes settings for: 10, 15, 30, 60, and 120 minutes.

The OFF setting ensures the player will remain on regardless of any lack of button or audio playback activity, until such a time as you turn off the power manually or the battery runs out.

Language

Allows you to set the menu to a different language.

NOTE

The ZVUE Spirit player can hold a maximum of 99 folders. Each folder can hold a maximum of 99 audio files each.


Connecting to Your PC

Your ZVUE Spirit will work with Windows XP, 2000, and Vista without any additional drivers.

To connect your ZVUE Spirit MP3 player to your computer:

1. Turn the Spirit player on.
2. Connect the small end of the supplied USB cable to the Spirit MP3 player.
3. Connect the large end of the USB cable to an available USB port on your computer

Connecting to your PC

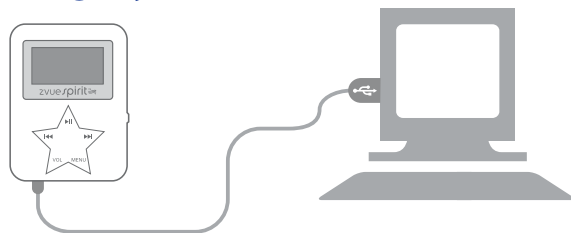

A hard drive icon representing the ZVUE Spirit will appear on your computer's "My Computer" window. It will be identified as a "Removable Disk".

Double-click this icon; it will open up as a new window that shows the card's contents. You can copy and delete files just as you would with files on a hard drive or floppy disk.

Ejecting your player:

When you are finished copying files to the player, "Eject" it from your computer. First close all the windows that belong to your ZVUE Spirit. In the "My Computer" window, right-click the icon for the player and select **Eject**.

Your ZVUE will exit USB mode and display a list of the files and folders you've copied to the player.

Now you can listen to your music.

NOTE

If you do not properly eject the player from your computer before disconnecting your ZVUE Spirit, you may corrupt files on the player. This can be remedied by simply recopying your music files over the files already on the player.

Notes

WARNING

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Need More Help?

For additional questions, online tutorials, and step-by-step instructions, please go to: www.ZVUE.com/support

Additional Help

Toll free number

1.888.553.0967

Email

support@zvue.com



ZVUE Spirit, ZVUE Products, and ZVUE are trademarks of the ZVUE Corporation.
Copyright © 2008 ZVUE Corporation. All rights reserved.