

Yaz lipstick mp3 player

Item no.: 360308

INTRODUCTION

You'll always be runway glamorous with this hot lipstick-shaped Yaz MP3 player! It comes with a mouthful of features, like a multifunction LCD display and earbuds! Put it on the belt clip attachment, and then step out with your best runway walk!

CONTENTS

- 1 Lipstick Yaz MP3 Player (512 MB)
- 1 Set of Earbud Headphones


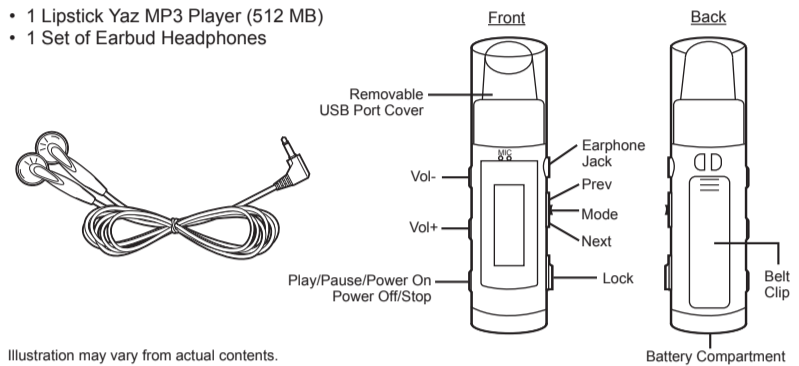


Illustration may vary from actual contents.

BEFORE YOU BEGIN

Ask an adult to help you install batteries. Here's how:

1. Using a Phillips screwdriver (not included) remove the screw on the battery compartment door.
2. Push in slightly on the battery compartment door (see illustration) and pull down.
3. Install one 1.5V AAA battery (not included) with the positive (+) end facing out towards the door.
4. Replace the battery compartment door when finished and tighten the screw.

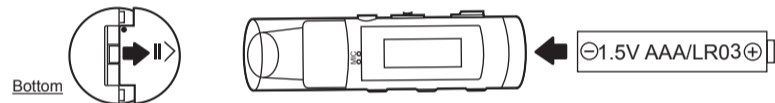

Please keep this manual. It contains important information.

Microsoft and Windows are registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Pentium is the registered trademark of Intel Corporation.



0707-1-E

www.bratz.com
TM & © MGA Entertainment, Inc.
All related logos, names, characters, distinctive likenesses and slogans as well as the packaging and images appearing thereon are the exclusive property of MGA.
16300 Roscoe Blvd.
Van Nuys, CA 91406 USA
(800) 222-4685
Printed in China

The Preferred method of contact for Customer Service is through our e-mail contact form at www.mgae.com



8

REQUIREMENTS

In order to operate and transfer songs to your Yaz Lipstick MP3 player, you will need to use a home computer that meets the following system requirements:

- Compatible with Microsoft® Windows® ME, 2000, XP or VISTA
- Pentium III 800 MHz MMX or equivalent processor
- 128MB RAM (256M recommended)
- Standard mouse and keyboard
- USB port

If your computer meets these requirements:

- Insert the device directly into your computer's USB port.
- A "Removable Disk" will appear on "My Computer".

Windows is either the registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.

PRODUCT FEATURES

Take a moment to review the features provided by your Yaz Lipstick MP3 Player:

- Plays MP3 and WMA digital music files.
- Built-In 512MB memory stores approximately 120 songs*
- Auto Power-Off function saves energy by turning unit off when not in use.
- Illuminated multi-function display w/adjustable contrast provides an at-a-glance readout of track number, track title, battery life, elapsed time and volume.
- Standard USB port makes it easy to transfer music back and forth between your MP3 player and your computer.
- MODE switch lets you skip forward or backward to find a particular track quickly.
- Built-in digital voice recorder with microphone.
- Built-in 6-mode equalizer.
- Repeat play mode.

*Varies depending on song length.

GETTING PLUGGED IN

1. Make sure your PC supports USB devices.
2. Gently remove the USB port cover (see illustration).
3. Connect the Yaz Lipstick MP3 Player directly to the USB port on your computer. The Yaz Lipstick MP3 player should appear as a removable drive in 'My Computer.'

TO DISCONNECT FROM WINDOWS ME/2000/XP/VISTA OPERATING SYSTEM:

- Double click the "Safely Remove Hardware" icon on the right bottom of the task bar.
- Select "USB Mass Storage Device" and click "Stop".
- Click "Enter", and you can safely disconnect the USB cable from the Yaz Lipstick MP3 Player.

2

1

IMPORTING WMA or MP3 FILES:

Your Yaz Lipstick MP3 Player comes with a built-in USB port to make loading and arranging digital music files easy. To import digital music files into your Yaz Lipstick MP3 Player, drag & drop MP3 and WMA files stored on your computer's hard drive. To do this: Highlight the MP3 or WMA selections you want to copy onto the MP3 player and use the mouse to drag and drop them onto the Bratz™ MP3 drive.

USING YOUR YAZ LIPSTICK MP3 PLAYER:

1. Turn the unit ON by pressing and holding the PLAY/PAUSE button.
2. Press and hold the PLAY/PAUSE button to begin or stop playback.
3. To turn the unit OFF press and hold the PLAY/PAUSE button for two seconds.

MULTI-FUNCTION DISPLAY:

The LCD screen features information to make using your Yaz Lipstick MP3 Player easier and more enjoyable. You'll find:

- The **SCROLLING TITLE DISPLAY** shows the title of the track currently being played.
- The **BATTERY INDICATOR** appears in the upper right corner as a series of black bars which decrease as the battery power is used.
- The **TRACK INDICATOR** is visible under the scrolling title display. The first number identifies the current track being played. The second number recaps the total number of tracks stored in memory.
- The **ELAPSED TIME INDICATOR**, in the lower right-hand corner of the display, provides a running tally (in minutes and seconds) of the length of the track being played.

ADDITIONAL FEATURES AND FUNCTIONS:

Press and hold the MODE button to access settings and features. Pressing the MODE button once will highlight the following sub-menus:

PLAY MUSIC

Music playback mode. Move the MODE button to the right to highlight VOICE playback mode.

VOICE FILES

Voice playback mode. Press MODE button down until you see the voice recording you wish to play. Use the PLAY/PAUSE button to start and stop playback. When finished, press and hold the MODE button to exit the Voice Playback mode.

RECORDER

Record menu. Press the MODE button down to begin recording. Elapsed recording time will be visible in the display. Press the MODE button down again to stop recording. Press and hold the MODE button to exit the Recorder mode.

3

SETTINGS:

Enter preset equalizer menu and other settings. Move the MODE button to the right to highlight the following sub-menus:

- Equalizer** This menu lets you control tonal output. Move the MODE button to the right to highlight NORMAL. Move the MODE button again to highlight Pop. Move again for Rock. Move again to highlight Classical. Move again for Jazz. Once you've selected your listening preference, press the MODE button down to confirm and return to the SETTINGS menu. Move the MODE button to the right to highlight the Repeat Mode menu.
- Repeat Mode** Press the MODE button down to access the REPEAT MODE menu. Here you can adjust how the Yaz Lipstick MP3 Player will function in the play mode. Move the MODE button to the right once for NORMAL playback. Move the MODE button to the right again to repeat the current selection. Move the MODE button again to repeat all selections in memory. Move the MODE button to the right again to play all tracks in random sequence. Once you have displayed your preferred Play Mode setting, press the MODE button down to confirm and return to the SETTINGS menu. Move the MODE button to the right to highlight Contrast menu.
- Contrast** Move the MODE button to the right or left to adjust the display's contrast level. When finished, press the MODE button down to confirm. Move the MODE button to the right to highlight Backlight menu.
- Backlight** Press the MODE button down to access the BACKLIGHT menu. Move the MODE button to the left or right to select how long the backlight display remains active after a button has been pressed. There are 4 selections: Always off, 5 sec., 10 sec., and Always on. NOTE: Using longer backlight display will use more battery power. Press the MODE button down to return to the SETTINGS menu.
- Power Set** Press the MODE button down to access POWER SET mode. Move the MODE button to the left or the right to turn the unit off automatically after 2-minutes or 10-minutes or 30 minutes of inactivity. Once you have made your selection, press the MODE button down to return to the SETTINGS menu. Move the MODE button to the right to highlight the RECORD SET menu.
- Record Set** This menu displays several Bit Rate settings for voice recording. The sound quality depends on the Bit Rate selection. When finished, press the MODE button down to return to the SETTINGS menu.
- Language** The Yaz Lipstick MP3 Player menus can be displayed in a variety of different languages. Press the MODE button down to access the LANGUAGE options. Then move the MODE button to the right to scroll through your options. Once you find your preferred display language, press the MODE button down to confirm. Move the MODE button to the right to exit the SETTINGS menu.
- Storage** Move the MODE button to the right again to highlight the STORAGE menu where you can find information regarding total internal memory, free memory and firmware version. Press the MODE button down to return to the MAIN menu.


MODE SWITCH:

When you are not in a menu screen, move the MODE button to the left or the right to skip to the beginning of the next track or return to the beginning of the song in play. Moving the MODE button repeatedly can help to quickly find the beginning of any selection in memory. The TRACK INDICATOR will change each time the MODE button is pressed.

4

TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
The power turns off and pressing the "Play/Pause" button does not activate the player.	The battery is dead.	Replace the battery.
Nothing happens when the buttons are pressed.	The "Hold" switch is on. The battery is dead.	Disengage the "Hold" switch. Replace the battery.
After connecting to a PC, Yaz Lipstick MP3 Player does not seem to communicate with computer.	Bad connection. Disabled port..	Make sure all USB connections are snug and tight. Make sure USB port on PC is enabled (See your PC's owner's manual). For Windows 98, make sure the correct USB driver is installed. (See Total Media software documentation.)

 **WARNING:** To avoid electrical shock, never attempt to break or open the player and touch the electrical component while it is charged. No user serviceable parts are inside.

6

VOLUME:

Press the plus (+) or minus (-) button to raise or lower the volume. As the volume is adjusted, a bar graph display will appear on screen to show the loudness level (from minimum to maximum).

HOLD:

This sliding switch helps prevent accidental mishaps while you and your Yaz Lipstick MP3 Player are in motion. Slide it to the right to activate. With HOLD activated, the player will continue to function, but the volume cannot be adjusted and power cannot be turned off. Deselect HOLD (slide the switch to the left) to unlock the player and make desired adjustments.

BELT CLIP:

This spring-activated clip provides a safe, secure way to attach the player to a belt or pocket for more convenient on-the-go listening.

SAFETY NOTES

IMPORTANT SAFETY INSTRUCTIONS

1. Clean outside of unit with a damp cloth only.
2. Do Not use attachments not recommended by the product manufacturer.
3. Do Not use this product near water or moisture of any kind.
4. Do Not subject this product to extreme heat or cold.
5. Avoid prolonged exposure to excessive noise. Prolonged listening to the MP3 Player at full volume can damage your hearing!
6. Maximum output voltage $\leq 150\text{mV}$.

SAFE BATTERY USAGE

- Use alkaline batteries for best performance and longer life.
- Use only the type battery recommended for the unit.
- Batteries should be replaced only by an adult.
- Insert batteries with the correct polarity (+ and -).
- Do not mix different types of batteries or old and new batteries.
- Do not short-circuit batteries.
- When not used for an extended time, remove batteries to prevent possible leakage and damage to the unit.
- Do not mix rechargeable and non-rechargeable batteries.
- Rechargeable batteries are to be removed from the toy before charging.
- Rechargeable batteries are to be recharged only under adult supervision
- Do not recharge non-rechargeable batteries
- Do not dispose of batteries in fire as they may leak or explode.
- Exhausted batteries are to be removed from the toy.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.

NOTE: The voltage of a fully-charged, rechargeable battery is often lower than that of a fresh alkaline battery. Therefore, it is recommended that alkaline batteries be used instead of rechargeable batteries for best performance and for longest play time.

5

FCC COMPLIANCE

NOTE: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

WARNING!

- Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits.
- Please keep this manual as it contains important information.

7