

This product is for household use only.

## SAVE THESE INSTRUCTIONS.

- When blending hot liquids, remove center piece of two-piece cover.
- Always operate blender with cover in place.
- To reduce the risk of injury, never place cutter-assembly blades on base without jar properly attached.
- Blades are sharp. Handle carefully.
- Blender is not running.
- A scraper may be used, but must be used only when the risk of severe injury to persons or damage to the blender is not running.
- Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used, but must be used only when the risk of severe injury to persons or damage to the blender is not running.
- Do not let container hang over edge of table or counter.
- Do not use outdoors.
- The use of attachments, including canning jars, not recommended by the manufacturer may cause fire, electric shock or injury.
- The use of attachments, including canning jars, not recommended by the manufacturer may cause fire, electric shock or injury.
- Read all instructions.
- To protect against risk of electrical shock do not immerse cord, plugs or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contacting moving parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility or call the appropriate toll-free number on the front of this manual for examination, repair or electrical or mechanical adjustment. Or, call the appropriate toll-free number on the cover of this manual.
- The use of attachments, including canning jars, not recommended by the manufacturer may cause fire, electric shock or injury.
- Do not use outdoors.
- Do not let container hang over edge of table or counter.
- Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used, but must be used only when the risk of severe injury to persons or damage to the blender is not running.
- Blades are sharp. Handle carefully.
- To reduce the risk of injury, never place cutter-assembly blades on base without jar properly attached.
- Always operate blender with cover in place.
- When blending hot liquids, remove center piece of two-piece cover.

## IMPORTANT SAFEGUARDS

Please Read and Save this Use and Care Book.

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions.
- Plugs or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contacting moving parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility or call the appropriate toll-free number on the front of this manual for examination, repair or electrical or mechanical adjustment. Or, call the appropriate toll-free number on the cover of this manual.
- The use of attachments, including canning jars, not recommended by the manufacturer may cause fire, electric shock or injury.
- Do not use outdoors.
- Do not let container hang over edge of table or counter.
- Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used, but must be used only when the risk of severe injury to persons or damage to the blender is not running.
- Blades are sharp. Handle carefully.
- To reduce the risk of injury, never place cutter-assembly blades on base without jar properly attached.
- Always operate blender with cover in place.
- When blending hot liquids, remove center piece of two-piece cover.



## 7-SPEED BLENDER LICUADORA DE 7 VELOCIDADES

### Customer Care Line:

USA  
1-800-231-9786  
Mexico  
01-800 714-2503  
Accessories/Parts (USA)  
Accesorios/Partes (EE.UU.)  
1-800-738-0245

For online customer service and to register your product, go to [www.prodprotect.com/applica](http://www.prodprotect.com/applica) For US residents only.



### MODEL/MODELO

- BLP7600BF

### POLARIZED PLUG (120V Models Only)

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

Sello del Distribuidor:	Comercializado por:
Fecha de compra:	Applca Manufacturing, S. de R. L. de C.V. Presidente Mazarik No 111, 1er Piso Col. Chapultepec Morales, Mexico D.F Deleg. Miguel Hidalgo CP 11570 MEXICO
Modelo:	Servicio y Reparación aArt. 123 No. 95 Col. Centro, C.P. 06050 Deleg. Cuauhtemoc Servicio al Consumidor, Venta de Refacciones y Accesorios 01 800 714 2503

Código de fecha / Date Code	120 V ~ 60 Hz 475 W	220 V ~ 50 Hz 475 W
-----------------------------	---------------------	---------------------



Copyright © 2009 Applica Consumer Products, Inc.  
Fabricado en la República Popular de China  
Impreso en la República Popular de China


Made in People's Republic of China  
Printed in People's Republic of China

Importado por / Imported by:  
APPLICA AMERICAS, INC.  
Av. Juan B Justo 637 Piso 10  
(C1425FSA) Ciudad Autonoma de Buenos Aires  
Argentina  
C.U.I.T No. 30-69729892-0

Importado por / Imported by:  
APPLICA MANUFACTURING, S. DE R. L. DE C. V.  
Presidente Mazarik No 111, 1er Piso  
Col. Chapultepec Morales, Mexico D.F  
Deleg. Miguel Hidalgo  
CP 11570  
MEXICO  
Teléfono: (55) 5263-9900  
Del interior marque sin costo  
01 (800) 714 2503

Note: † indicates consumer replaceable/removable parts

- † 1. Lid cap with measuring lines (Part # 081114FI)
- † 2. Lid (Part # 081113EE)
- † 3. 48-oz. / 6-cup glass jar (Part # 99010)
4. Handle
- † 5. Gasket (Part # 09146-1)
- † 6. Blade assembly (Part # 77906)
- † 7. Jar base (Part # 03486-1EB )
8. Unit base
9. Speed buttons
10. PULSE and ON/OFF button

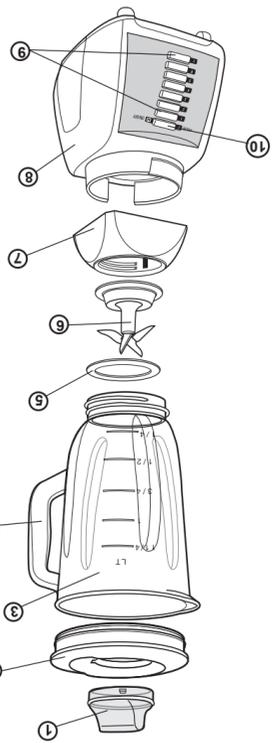


Product may vary slightly from what is illustrated.

1. Lid cap with measuring lines (Part # 081114FI)
2. Lid (Part # 081113EE)
3. 48-oz. / 6-cup glass jar (Part # 99010)
4. Handle
- † 5. Gasket (Part # 09146-1)
- † 6. Blade assembly (Part # 77906)
- † 7. Jar base (Part # 03486-1EB )
8. Unit base
9. Speed buttons
10. PULSE and ON/OFF button



1. Put the gasket on top of the blade assembly.
2. Place the blade assembly into the jar base.
3. Set jar onto jar base and turn clockwise until tight (A).
4. Interlock System: Place the assembled jar onto the unit base and turn toward lock until secured in place. You've engaged the interlock system if you lift the jar handle and the entire blender lifts together as one unit.

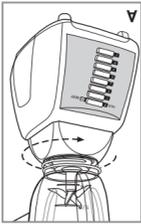

1. Make sure the unit is OFF and plug the cord into a standard electrical outlet.
2. Place the food into the jar and the lid on the jar before blending.
3. Make sure that the lid cap is in place. When crushing hard foods, keep one hand on the lid.
4. Choose the speed that best suits your task for food or beverage blending.
5. When finished blending, press the ON/OFF button.
6. For quick or delicate blending tasks use the PULSE button for a few seconds, then release (B). Releasing the PULSE button automatically turns off the blender.
7. To add ingredients while the blender is on, remove the lid cap and drop ingredients through the lid opening.
8. After blending is complete, remove the jar assembly by grasping the handle, twisting the jar base toward the unlock symbol and lifting it from the unit base.
9. Remove the lid before pouring.

Important (220 V Models Only): This unit has a security system that will allow the blender to operate if the jar is completely assembled and placed on top of the base.

Note: Your unit has a motor overheating protection system that automatically shuts off the motor. Wait for the unit to cool down, unplug the unit then plug in again to restart.

Make sure the unit is OFF and plug the cord into a standard electrical outlet.

### BLENDING TIPS AND TECHNIQUES

- Cut food into small pieces 3/4" (2 cm) before adding to the blender.
- When ingredients stick or spatter along the sides of the jar, stop the blending action and remove the lid. Use a rubber spatula to push food toward the blades. Replace the lid, then continue blending.
- Some of the tasks that cannot be performed efficiently with a blender are: beating egg whites, whipping cream, mashing potatoes, mixing dough and extracting juices from fruits and vegetables.
- The following items should never be placed in the unit as they may cause damage: dried spices and herbs (ground alone), bones, large pieces of solidly frozen foods and tough foods such as turnips.
- Use the lid cap to measure ingredients up to 2 oz. (60 ml) when adding ingredients like lemon juice, cream or liqueurs.

### Care and Cleaning

This product contains no user serviceable parts. Refer service to qualified service personnel.

#### CLEANING

Important: To maintain performance, always dry blades after cleaning.

1. Before cleaning, turn off and unplug the unit. Twist to unlock , lift the jar off the unit base, and rinse. For easier cleanup, rinse parts immediately after blending. Parts may be hand-washed.
2. Do not immerse the base in liquid. Wipe the unit base with a damp cloth and dry thoroughly. Remove stubborn spots by rubbing with a damp cloth and nonabrasive cleaner.

Note: If liquids spill into the base, wipe with a damp cloth and dry thoroughly. Do not use rough scouring pads or cleansers on parts or finish.

3. Removable parts can be washed by hand or in a dishwasher. Lid, lid cap and blade assembly should be placed in the top rack only. The jar is bottom rack dishwasher-safe. Do not place jar or parts in boiling liquids.

### NEED HELP?

For service, repair or any questions regarding your appliance, call the appropriate 800 number on cover of this book. Please **DO NOT** return the product to the place of purchase. Also, please **DO NOT** mail product back to manufacturer, nor bring it to a service center. You may also want to consult the website listed on the cover of this manual.

#### Two-Year Limited Warranty

(Applies only in the United States)

##### What does it cover?

- Any defect in material or workmanship provided; however, Applica's liability will not exceed the purchase price of product.

##### For how long?

- Two years after date of purchase.

##### What will we do to help you?

- Provide you with a reasonably similar replacement product that is either new or factory refurbished.

##### How do you get service?

- Save your receipt as proof of date of sale.
- Visit the online service website at [www.prodprotect.com/applica](http://www.prodprotect.com/applica), or call toll-free 1-800-231-9786, for general warranty service.
- If you need parts or accessories, please call 1-800-738-0245.

##### What does your warranty not cover?

- Damage from commercial use
- Damage from misuse, abuse or neglect
- Products that have been modified in any way
- Products used or serviced outside the country of purchase
- Glass parts and other accessory items that are packed with the unit
- Shipping and handling costs associated with the replacement of the unit
- Consequential or incidental damages (Please note, however, that some states do not allow the exclusion or limitation of consequential or incidental damages, so this limitation may not apply to you.)

##### How does state law relate to this warranty?

- This warranty gives you specific legal rights. You may also have other rights that vary from state to state or province to province.

is a registered trademark of The Black & Decker Corporation, Towson, Maryland, USA

**Por favor lea este instructivo antes de usar el producto.**

## INSTRUCCIONES IMPORTANTES DE SEGURIDAD

Cuando se usan aparatos eléctricos, siempre se deben respetar las siguientes medidas básicas de seguridad:

○ Por favor lea todas las instrucciones.

○ A fin de protegerse contra el riesgo de un choque eléctrico, no sumerja el cable, los enchufes ni el aparato en agua ni en ningún otro líquido.

○ Todo aparato eléctrico usado en la presencia de los niños o por ellos mismos requiere la supervisión de un adulto.

○ Desconecte el aparato toma corriente cuando no esté en uso, antes de instalarle o retirarle piezas y antes de limpiarlo.

○ Evite el contacto con las piezas móviles.

○ No use ningún aparato eléctrico que tenga el cable o el enchufe averiado, que presente un problema de funcionamiento o que esté dañado. Acuda a un centro de servicio autorizado para que lo examinen, reparen o ajusten o llame gratis al número correspondiente en la cubierta de este manual.

○ El uso de accesorios, incluyendo los tarros de envasar, no recomendados por el fabricante pueden ocasionar incendio, choque eléctrico o lesiones.

○ No use este aparato a la intemperie.

○ No permita que el cable cuelgue del borde de la mesa o del mostrador.

○ Para reducir el riesgo de lesiones severas a las personas o daño al procesador de alimentos, mantenga las manos y utensilios alejados de las cuchillas o discos mientras la licuadora esté en funcionamiento.

○ Las cuchillas tienen filo. Manéjelas con cuidado.

○ Para reducir el riesgo de lesiones, nunca coloque el montaje de las cuchillas en la base sin haber enganchado la jarra debidamente en su lugar.

○ Siempre opere la licuadora con la tapa en su lugar.

○ Cuando licue líquidos calientes, retire la pieza central de la tapa de dos piezas.

## CONSERVE ESTAS INSTRUCCIONES.

**Este aparato eléctrico es para uso doméstico únicamente.**

Nota

**ENCHUFE POLARIZADO (Solamente para los modelos de 120V)** Este aparato cuenta con un enchufe polarizado (un contacto es más ancho que el otro). A fin de reducir el riesgo de un choque eléctrico, este enchufe encaja en un tomacorriente polarizado en un solo sentido. Si el enchufe no entra en el tomacorriente, inviértalo y si aun así no encaja, consulte con un electricista. Por favor no trate de alterar esta medida de seguridad.

**CABLE ELÉCTRICO**

a) El producto se debe de proporcionar con un cable eléctrico corto (o uno separable), a fin de reducir el riesgo de tropezar o de enredarse en un cable más largo.

b) Existen cables eléctricos más largos y separables o cables de extensión que uno puede utilizar si toma el cuidado debido.

c) Si se utiliza un cable separable o de extensión,

- El régimen nominal del cable separable o del cable de extensión debe ser, como mínimo, igual al del régimen nominal del aparato.
- Si el aparato es de conexión a tierra, el cable de extensión debe ser un cable de tres alambres de conexión a tierra.
- Uno debe de acomodar el cable más largo de manera que no cuelgue del mostrador o de la mesa, para evitar que un niño tire del mismo o que alguien se tropiece.

**TORNILLO DE SEGURIDAD**

**Advertencia:** Este aparato cuenta con un tornillo de seguridad para evitar la remoción de la cubierta exterior del mismo. A fin de reducir el riesgo de incendio o de choque eléctrico, por favor no trate de remover la cubierta exterior. Este producto no contiene piezas reparables por el consumidor. Toda reparación se debe llevar a cabo únicamente por personal de servicio autorizado.

**Nota:** Si el cordón de alimentación esta dañado, en América Latina debe sustituirse por personal calificado o por el centro de servicio autorizado.

Nota

Nota

Nota

Nota

Nota

Nota

Nota

Nota

**¿NECESITA AYUDA?**

Para servicio, reparaciones o preguntas relacionadas al producto, por favor llame al número del centro de servicio que se indica para el país donde usted compró su producto.

NO devuélva el producto al fabricante. Llame o lleve el producto a un centro de servicio autorizado.

**DOS AÑOS DE GARANTÍA LIMITADA**

**(No aplica en México o Estados Unidos)**

**¿Qué cubre la garantía?**

- La garantía cubre cualquier defecto de materiales o de mano de obra que no haya sido generado por el uso incorrecto del producto.

**¿Por cuánto tiempo es válida la garantía?**

- Por dos años a partir de la fecha original de compra.

**¿Cómo se obtiene el servicio necesario?**

- Conserve el recibo original como comprobante de la fecha de compra, comuníquese con el centro de servicio de su país y haga efectiva su garantía si cumple lo indicado en el manual de instrucciones.

**¿Cómo se puede obtener servicio?**


- Conserve el recibo original de compra.
- Por favor llame al número del centro de servicio autorizado.

**¿Qué aspectos no cubre esta garantía?**

- Los productos que han sido utilizados en condiciones distintas a las normales.
  - Los daños ocasionados por el mal uso, el abuso o negligencia.
  - Los productos que han sido alterados de alguna manera.
  - Los daños ocasionados por el uso comercial del producto.
  - Los productos utilizados o reparados fuera del país original de compra.
  - Las piezas de vidrio y demás accesorios empacados con el aparato.
  - Los gastos de tramitación y embarque asociados al reemplazo del producto.
  - Los daños y perjuicios indirectos o incidentales.
- ¿Qué relación tiene la ley estatal con esta garantía?**
- Esta garantía le otorga derechos legales específicos y el consumidor podría tener otros derechos que varían de una región a otra.

**El producto puede variar ligeramente del que aparece ilustrado aquí.**

Nota

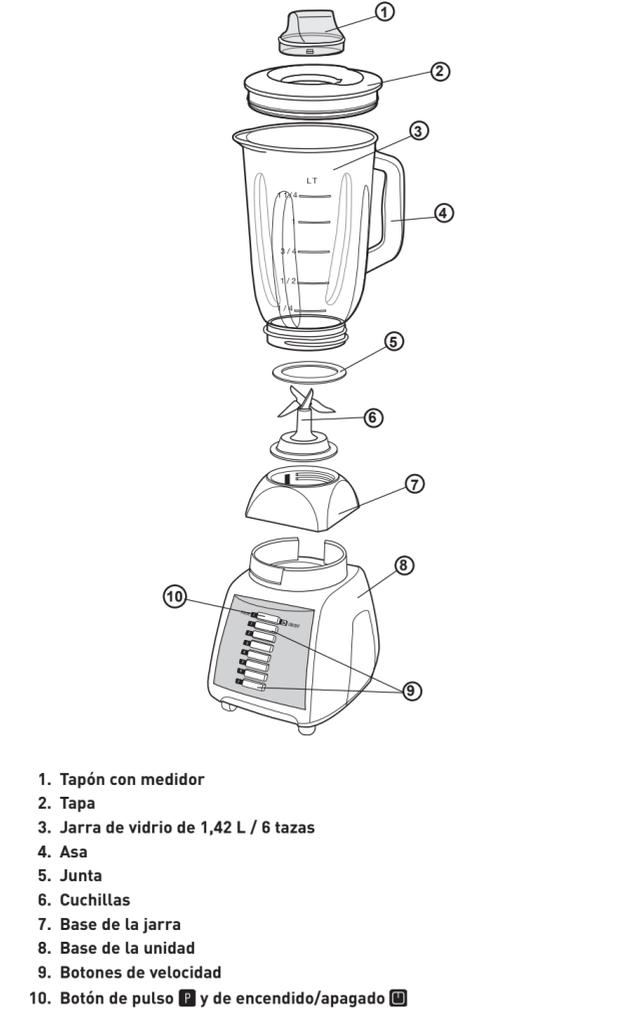

Nota

### Como usar

Este producto es para uso doméstico solamente.

**PASOS PRELIMINARES**

- Elimine todo el material de embalaje y las etiquetas.

- Retire y conserve el material de lectura.

- Lave todas las partes conforme a las instrucciones de la sección CUIDADO Y LIMPIEZA en este manual.

Nota

*Por favor llame al número correspondiente que aparece en la lista a continuación para solicitar que se haga efectiva la garantía y donde Ud. puede solicitar servicio, reparaciones o partes en el país donde el producto fué comprado. También puede consultarnos en el e-mail servicio@applicamail com. mx*

<b>Argentina</b> SERVICIO TECNICO CENTRAL ATTENDANCE Avda. Monroe N° 3351 Buenos Aires – Argentina Fonos: 0810 – 999 – 8999 011 – 4545 – 4700 011 – 4545 – 5574 supervision@attendance.com.ar	<b>México</b> Artículo 123 # 95 Local 109 y 112 Col. Centro, Cuauhtemoc, México, D.F. Tel. 01 800 714 2503
<b>Chile</b> MASTER SERVICE SERVICENTER Nueva Los Leones N° 0252 Providencia Santiago – Chile Fono Servicio: [562] – 232 77 22 servicente@servicenter.cl	<b>Nicaragua</b> ServiTotal De semáforo de portezuelo 500 metros al sur. Managua, Nicaragua, Tel. (505) 248-7001
<b>Colombia</b> PLINARES Avenida Quito # 88A-09 Bogotá, Colombia Tel. sin costo 01 800 7001870	<b>Panamá</b> Servicios Técnicos CAPRI Tumbamuerto Boulevard El Dorado Panamá 500 metros al sur. Tel. 3020-480-800 sin costo (507) 2360-236 / 159
<b>Costa Rica</b> Aplicaciones Electromecanicas, S.A. Calle 26 Bis y Ave. 3 San Jose, Costa Rica Tel.: (506) 257-5716 / 223-0136	<b>Perú</b> Servicio Central Fast Service Av. Angamos Este 2431 San Borja, Lima Perú Tel. (511) 2251 388
<b>Ecuador</b> Servicio Master de Ecuador Av. 6 de Diciembre 9276 y los Alamos Tel. (593) 2281-3882	<b>Puerto Rico</b> Buckeye Service Jesús P. Piñero #1013 Puerto Nuevo, SJ PR 00920 Tel.: (787) 782-6175
<b>El Salvador</b> Calle San Antonio Abad 2936 San Salvador, El Salvador Tel. (503) 2284-8374	<b>Republica Dominicana</b> Plaza Lama, S.A. Av, Duarte #94 Santo Domingo, República Dominicana Tel.: (809) 687-9171
<b>Guatemala</b> MacPartes SA 3ª Calle 414 Zona 9 Frente a Tecun Tel. (502) 2331-5020 / 2332-2101	<b>Venezuela</b> Inversiones BDR CA Av. Casanova C.C. City Market Nivel Plaza Local 153 Diagonal Hotel Melia, Caracas. Tel. (582) 324-0969
<b>Honduras</b> ServiTotal Contigua a Telecentro Tegucigalpa, Honduras, Tel. (504) 235-6271	www.applicaservice.com servicio@applicamail.com

**BLACK & DECKER** es una marca registrada de The Black & Decker Corporation, Towson, Maryland, E.U.