 
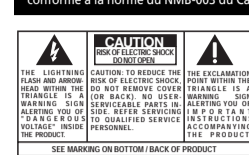 


FCC Information

For Your Records

In the event that service should be required, you may need both the model number and the serial number. In the space below, record the date and place of purchase, and the serial number:

Model No. Date of Purchase Place of Purchase Serial No.



FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference...

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference...

FCC Information

correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna.

The descriptions and characteristics given in this document are given as a general indication and not as a guarantee. In order to provide the highest quality product possible, we reserve the right to make any improvement or modification without prior notice.

Service Information

This product should be serviced only by those specially trained in appropriate servicing techniques. For instructions on how to obtain service, refer to the warranty included in this Guide.

Ecology Help protect the environment - we recommend that you dispose of used batteries by putting them into specially designed receptacles.

 
FCC Information

Do not operate or store unit in places with frequent static electricity or electrical noise (e.g. speaker, TV set).

Precautions for Batteries If you do not use the unit for more than one month, be sure to remove the batteries to avoid leakage.

Power Supply

(battery power) 2 x "AAA" ESD Remark: In case of malfunction due to electrostatic discharge just reset the product (disconnect and reconnect of the power source may be required) to resume normal operation.

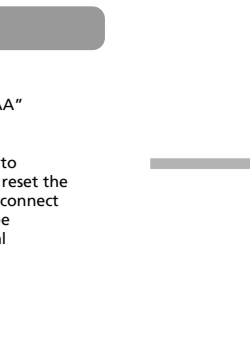


Comercializadora Thomson de México, S.A. de C.V. Av. Álvaro Obregón No. 151, Piso 13, Col. Roma, Delegación Cuauhtémoc, C.P. 06700, México, D.F. Teléfono: 52-55-11-020380 RFC: TM89023-K55

Thomson Inc. P.O. Box 1976, Indianapolis, IN 46206-1976 62007 Thomson Inc. Trademarks(s) © Registered Marca(s) ® Registrada(s) Marques(s) © Deposité(s) www.rausaudiovideo.com Printed in China/Impreso en China

RP5022 User manual Guide de l'utilisateur

 General Controls

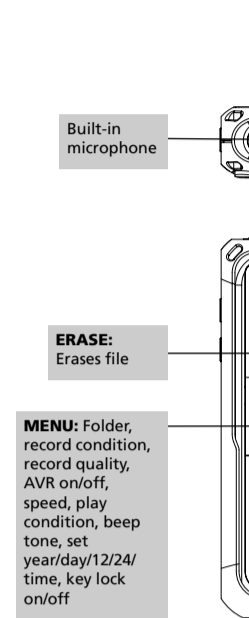

General Controls

RECORDING: starts / pauses recording. STOP: stops playback/recording. PLAY: turns the player on. FORWARD: skips and searches forward. REVERSE: skips and searches backward.

General Controls

Battery level indicator, Key Lock, Timer/date/recorded time, AMP/PM, Recording Conditions, Automatic Voice Recording, Recording Qualities.

General Controls

Folder (A/B/C/D), File selected, Total number of files in a folder, Bookmark, Play, Record, Total remaining time for recording.

Display Messages

ALL APPEND CUT-E CUT-S DELETE FULL MM/DD 12 HOUR TIME INSERT INTRO OFF ON SEN MI TONE NO TONE VOL 15 YEAR LOCKED FORMAT SPEED WAIT... FCLINK

Display Messages

Select all (Introductory Playback & Erasing All Files) Append (Adding Appendix) Cut End (Cutting) Cut Start (Cutting) Delete (Erasing Selected File)

Before You Begin

Unpacking Your Player You should have the following: one USB cable, one Digital Voice Manager CD, one user manual.

Before You Begin

Installing Batteries (not included) Slide the battery compartment door to open. Insert the two supplied "AAA" batteries with polarities matching indicators.

Before You Begin

Using earphones and external microphone When earphones are connected, sound output from speaker will be muted.

Before You Begin

2. Press REVERSE or FORWARD to set beep sound ON/OFF. 3. Press MENU to confirm selection.

Setting the Time

REVERSE or FORWARD to increase/decrease the number, press MENU to confirm. Once the hour field is entered, the digits in the minute field will flash.

Setting the Time

digits in the month field will flash (default is 1). Press REVERSE or FORWARD to increase/decrease the number, press MENU to confirm.

Bookmark

Creating a bookmark This feature allows you to create an interception point in the recorded message for quick reference.

Bookmark

Deleting a bookmark 1. Select folder (A/B/C/D). 2. Select file.

Recording Mode

Setting Recording Mode You can select between two recording modes - manual recording and AVR (automatic voice recording).

Recording Mode

Tip: You can record up to 99 files in one folder, not exceeding 396 files in total. When the maximum limit is reached, "FULL" will be shown.

Recording Mode

Setting Recording Quality You can select between two recording qualities. Default is HQ.

Recording Mode

Setting Recording Condition You can select between two recording conditions. Default is DICT.

Setting the Time

Year/Date/12/24/Time Setting With this function, you can always read on the display the recording date and time of your recorded messages.

Basic Operation

Select folder You can select a specific folder (A/B/C/D) for browsing. Default is folder A.

Basic Operation

Normal Playback 1. In stop mode, select a folder (A/B/C/D). 2. Select file by pressing REVERSE or FORWARD.

Basic Operation

Select file You can select a specific file for playback.

Basic Operation

Erasing file/folder You can delete a file by the following steps: 1. Select folder (A/B/C/D).

Advanced operation

Insert You can insert new segments into a file without erasing previously recorded content.

Advanced operation

Append You can add appendix (e.g. reminder, supplementary information) to the end of the file.

Advanced operation

Cut You can erase unwanted parts from your recording.

Advanced operation

Format (Caution! All data inside the memory will be erased)

Recording Mode

Tip: For conferences, to obtain optimum recording quality, place the recorder with the microphone freely exposed to the sound source as close as convenient.

Recording Mode

Play one/all You can choose to play a specific file or all files in a folder.

Recording Mode

Erasing selected file 1. Turn on the player. 2. Select a folder (A/B/C/D).

Recording Mode

Erasing all files in a folder You can delete all files in a specific folder by the following steps.

Recording Mode

Advanced operation The edit function does not operate when battery power is too low.

Recording Mode

Speed You can adjust the playback speed.

Recording Mode

Insert You can insert new segments into a file without erasing previously recorded content.

Recording Mode

Append You can add appendix (e.g. reminder, supplementary information) to the end of the file.

Recording Mode

Cut You can erase unwanted parts from your recording.

Other functions

IntroScan This feature allows playback of the beginning three seconds of each file in a folder.

Other functions

Play one/all You can choose to play a specific file or all files in a folder.

Other functions

Erasing selected file 1. Turn on the player. 2. Select a folder (A/B/C/D).

Other functions

Erasing all files in a folder You can delete all files in a specific folder by the following steps.

Other functions

Advanced operation The edit function does not operate when battery power is too low.

Other functions

Speed You can adjust the playback speed.

Other functions

Insert You can insert new segments into a file without erasing previously recorded content.

Other functions

Append You can add appendix (e.g. reminder, supplementary information) to the end of the file.

Other functions

Cut You can erase unwanted parts from your recording.

Connecting to the Computer

Using the Digital Voice Manager The RCA Digital Voice Manager can perform playback, organize your bookmarks of the recorded files and create self-executable voice file from the recorded files.

Connecting to the Computer

Playback and Editing Operations 1. To organize your files, click the corresponding buttons to cut, delete, copy and paste a file (or a folder) to delete.

Connecting to the Computer

Erasing selected file 1. Turn on the player. 2. Select a folder (A/B/C/D).

Connecting to the Computer

Erasing all files in a folder You can delete all files in a specific folder by the following steps.

Connecting to the Computer

Advanced operation The edit function does not operate when battery power is too low.

Connecting to the Computer

Speed You can adjust the playback speed.

Connecting to the Computer

Insert You can insert new segments into a file without erasing previously recorded content.

Connecting to the Computer

Append You can add appendix (e.g. reminder, supplementary information) to the end of the file.

Connecting to the Computer

Cut You can erase unwanted parts from your recording.

U.S. Limited Warranty

What your warranty covers: Defects in materials or workmanship. For how long after your purchase: One year from date of purchase.

U.S. Limited Warranty

What we will do: Provide you with a new, or at our option, a refurbished unit. The exchange unit is under warranty for the remainder of the original product's warranty period.

U.S. Limited Warranty

How to make a warranty claim: Properly pack your unit. Include any cables, etc., which were originally provided with the product.

U.S. Limited Warranty

What your warranty does not cover: Customer instruction. Your Owner's Manual provides information regarding operating instructions and user controls.

U.S. Limited Warranty

How to make a warranty claim: Properly pack your unit. Include any cables, etc., which were originally provided with the product.

U.S. Limited Warranty

How to make a warranty claim: Properly pack your unit. Include any cables, etc., which were originally provided with the product.

U.S. Limited Warranty

How to make a warranty claim: Properly pack your unit. Include any cables, etc., which were originally provided with the product.

U.S. Limited Warranty

How to make a warranty claim: Properly pack your unit. Include any cables, etc., which were originally provided with the product.

U.S. Limited Warranty

How to make a warranty claim: Properly pack your unit. Include any cables, etc., which were originally provided with the product.



RP5022 User manual Guide de l'utilisateur

It is important to read this instruction book prior to using your new product for the first time. Please read the manual. Instructions avant d'utiliser votre nouveau produit pour la première fois.

It is important to read this instruction book prior to using your new product for the first time. Please read the manual. Instructions avant d'utiliser votre nouveau produit pour la première fois.

It is important to read this instruction book prior to using your new product for the first time. Please read the manual. Instructions avant d'utiliser votre nouveau produit pour la première fois.

It is important to read this instruction book prior to using your new product for the first time. Please read the manual. Instructions avant d'utiliser votre nouveau produit pour la première fois.

It is important to read this instruction book prior to using your new product for the first time. Please read the manual. Instructions avant d'utiliser votre nouveau produit pour la première fois.

It is important to read this instruction book prior to using your new product for the first time. Please read the manual. Instructions avant d'utiliser votre nouveau produit pour la première fois.

It is important to read this instruction book prior to using your new product for the first time. Please read the manual. Instructions avant d'utiliser votre nouveau produit pour la première fois.