



User Manual



EURORACK PRO RX1602

Professional Multi-Purpose 16-Input Ultra-Low Noise Line Mixer

Table of Contents

Important Safety Instructions	3
Legal Disclaimer	3
Limited Warranty	3
1. Introduction	5
1.1 Before you get started	5
1.1.1 Shipment.....	5
1.1.2 Initial operation	5
1.1.3 Warranty.....	5
1.2 The user's manual.....	5
2. Control Elements and Connections	5
2.1 Channel section.....	5
2.2 Main section.....	6
2.3 Mains connection.....	7
3. Applications	7
3.1 Keyboards sub-mixer.....	7
3.2 Sub-mix with samplers.....	8
3.3 Monitoring multi-track recorders.....	8
3.4 Small live setup.....	9
4. Installation	9
4.1 Rack mounting	9
4.2 Audio connections.....	9
5. AUX Channels Modification	10
6. Specifications.....	11

EN Important Safety Instructions



Terminals marked with this symbol carry electrical current of sufficient magnitude to constitute risk of electric shock.

Use only high-quality professional speaker cables with ¼" TS or twist-locking plugs pre-installed. All other installation or modification should be performed only by qualified personnel.



This symbol, wherever it appears, alerts you to the presence of uninsulated dangerous voltage inside the enclosure - voltage that may be sufficient to constitute a risk of shock.



This symbol, wherever it appears, alerts you to important operating and maintenance instructions in the accompanying literature. Please read the manual.



Caution

To reduce the risk of electric shock, do not remove the top cover (or the rear section). No user serviceable parts inside. Refer servicing to qualified personnel.



Caution

To reduce the risk of fire or electric shock, do not expose this appliance to rain and moisture. The apparatus shall not be exposed to dripping or splashing liquids and no objects filled with liquids, such as vases, shall be placed on the apparatus.



Caution

These service instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operation instructions. Repairs have to be performed by qualified service personnel.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

11. Use only attachments/accessories specified by the manufacturer.



12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid

injury from tip-over.

13. Unplug this apparatus during lightning storms or when unused for long periods of time.

14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

15. The apparatus shall be connected to a MAINS socket outlet with a protective earthing connection.

16. Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.



LEGAL DISCLAIMER

TECHNICAL SPECIFICATIONS AND APPEARANCES ARE SUBJECT TO CHANGE WITHOUT NOTICE AND ACCURACY IS NOT GUARANTEED. BEHRINGER IS PART OF THE MUSIC GROUP (MUSIC-GROUP.COM). ALL TRADEMARKS ARE THE PROPERTY OF THEIR RESPECTIVE OWNERS. MUSIC GROUP ACCEPTS NO LIABILITY FOR ANY LOSS WHICH MAY BE SUFFERED BY ANY PERSON WHO RELIES EITHER WHOLLY OR IN PART UPON ANY DESCRIPTION, PHOTOGRAPH OR STATEMENT CONTAINED HEREIN. COLORS AND SPECIFICATIONS MAY VARY FROM ACTUAL PRODUCT. MUSIC GROUP PRODUCTS ARE SOLD THROUGH AUTHORIZED FULLFILLERS AND RESELLERS ONLY. FULLFILLERS AND RESELLERS ARE NOT AGENTS OF MUSIC GROUP AND HAVE ABSOLUTELY NO AUTHORITY TO BIND MUSIC GROUP BY ANY EXPRESS OR IMPLIED

UNDERTAKING OR REPRESENTATION. THIS MANUAL IS COPYRIGHTED. NO PART OF THIS MANUAL MAY BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING AND RECORDING OF ANY KIND, FOR ANY PURPOSE, WITHOUT THE EXPRESS WRITTEN PERMISSION OF MUSIC GROUP IP LTD.

ALL RIGHTS RESERVED.

© 2012 MUSIC Group IP Ltd.

Trident Chambers, Wickhams Cay, P.O. Box 146, Road Town, Tortola, British Virgin Islands

LIMITED WARRANTY

§ 1 Warranty

1 This limited warranty is valid only if you purchased the product from a MUSIC Group Authorized Reseller in the country of purchase. A list of authorized resellers can be found on BEHRINGER's website behringer.com under "Where to Buy", or you can contact the MUSIC Group office closest to you.

2 MUSIC Group* warrants the mechanical and electronic components of this product to be free of defects in material and workmanship if used under normal operating conditions for a period of one (1) year from the original date of purchase (see the Limited Warranty terms in § 4 below), unless a longer minimum warranty period is mandated by applicable local laws. If the product shows any defects within the specified warranty period and that defect is not excluded under § 4, MUSIC Group shall, at its discretion, either replace or repair the product using suitable new or reconditioned product or parts. In case MUSIC Group decides to replace the entire product, this limited warranty shall apply to the replacement product for the remaining initial warranty period, i.e., one (1) year (or otherwise applicable minimum warranty period) from the date of purchase of the original product.

3 Upon validation of the warranty claim, the repaired or replacement product will be returned to the user freight prepaid by MUSIC Group.

4 Warranty claims other than those indicated above are expressly excluded.

PLEASE RETAIN YOUR SALES RECEIPT. IT IS YOUR PROOF OF PURCHASE COVERING YOUR LIMITED WARRANTY. THIS LIMITED WARRANTY IS VOID WITHOUT SUCH PROOF OF PURCHASE.

§ 2 Online registration

Please do remember to register your new BEHRINGER equipment right after your purchase at behringer.com under "Support" and kindly read the terms and conditions of our limited warranty carefully. Registering your purchase and equipment with us helps us process your repair claims quicker and more efficiently. Thank you for your cooperation!

§ 3 Return materials authorization

1 To obtain warranty service, please contact the retailer from whom the equipment was purchased. Should your MUSIC Group Authorized Reseller not be located in your vicinity, you may contact the MUSIC Group Authorized Fulfiller for your country listed under

“Support” at behringer.com. If your country is not listed, please check if your problem can be dealt with by our “Online Support” which may also be found under “Support” at behringer.com. Alternatively, please submit an online warranty claim at behringer.com BEFORE returning the product. All inquiries must be accompanied by a description of the problem and the serial number of the product. After verifying the product’s warranty eligibility with the original sales receipt, MUSIC Group will then issue a Return Materials Authorization (“RMA”) number.

② Subsequently, the product must be returned in its original shipping carton, together with the return authorization number to the address indicated by MUSIC Group.

③ Shipments without freight prepaid will not be accepted.

§ 4 Warranty Exclusions

① This limited warranty does not cover consumable parts including, but not limited to, fuses and batteries. Where applicable, MUSIC Group warrants the valves or meters contained in the product to be free from defects in material and workmanship for a period of ninety (90) days from date of purchase.

② This limited warranty does not cover the product if it has been electronically or mechanically modified in any way. If the product needs to be modified or adapted in order to comply with applicable technical or safety standards on a national or local level, in any country which is not the country for which the product was originally developed and manufactured, this modification/adaptation shall not be considered a defect in materials or workmanship. This limited warranty does not cover any such modification/adaptation, regardless of whether it was carried out properly or not. Under the terms of this limited warranty, MUSIC Group shall not be held responsible for any cost resulting from such a modification/adaptation.

③ This limited warranty covers only the product hardware. It does not cover technical assistance for hardware or software usage and it does not cover any software products whether or not contained in the product. Any such software is provided “AS IS” unless expressly provided for in any enclosed software limited warranty.

④ This limited warranty is invalid if the factory-applied serial number has been altered or removed from the product.

⑤ Free inspections and maintenance/repair work are expressly excluded from this limited warranty, in particular, if caused by improper handling of the product by the user. This also applies to defects caused by normal wear and tear, in particular, of faders, crossfaders, potentiometers, keys/buttons, guitar strings, illuminants and similar parts.

⑥ Damage/defects caused by the following conditions are not covered by this limited warranty:

- improper handling, neglect or failure to operate the unit in compliance with the instructions given in BEHRINGER user or service manuals;

- connection or operation of the unit in any way that does not comply with the technical or safety regulations applicable in the country where the product is used;
- damage/defects caused by acts of God/Nature (accident, fire, flood, etc) or any other condition that is beyond the control of MUSIC Group.

⑦ Any repair or opening of the unit carried out by unauthorized personnel (user included) will void the limited warranty.

⑧ If an inspection of the product by MUSIC Group shows that the defect in question is not covered by the limited warranty, the inspection costs are payable by the customer.

⑨ Products which do not meet the terms of this limited warranty will be repaired exclusively at the buyer’s expense. MUSIC Group or its authorized service center will inform the buyer of any such circumstance. If the buyer fails to submit a written repair order within 6 weeks after notification, MUSIC Group will return the unit C.O.D. with a separate invoice for freight and packing. Such costs will also be invoiced separately when the buyer has sent in a written repair order.

⑩ MUSIC Group Authorized Resellers do not sell new products directly in online auctions. Purchases made through an online auction are on a “buyer beware” basis. Online auction confirmations or sales receipts are not accepted for warranty verification and MUSIC Group will not repair or replace any product purchased through an online auction.

§ 5 Warranty transferability

This limited warranty is extended exclusively to the original buyer (customer of authorized reseller) and is not transferable to anyone who may subsequently purchase this product. No other person (reseller, etc.) shall be entitled to give any warranty promise on behalf of MUSIC Group.

§ 6 Claim for damage

Subject only to the operation of mandatory applicable local laws, MUSIC Group shall have no liability to the buyer under this warranty for any consequential or indirect loss or damage of any kind. In no event shall the liability of MUSIC Group under this limited warranty exceed the invoiced value of the product.

§ 7 Limitation of liability

This limited warranty is the complete and exclusive warranty between you and MUSIC Group. It supersedes all other written or oral communications related to this product. MUSIC Group provides no other warranties for this product.

§ 8 Other warranty rights and national law

① This limited warranty does not exclude or limit the buyer’s statutory rights as a consumer in any way.

② The limited warranty regulations mentioned herein are applicable unless they constitute an infringement of applicable mandatory local laws.

③ This warranty does not detract from the seller’s obligations in regard to any lack of conformity of the product and any hidden defect.

§ 9 Amendment

Warranty service conditions are subject to change without notice. For the latest warranty terms and conditions and additional information regarding MUSIC Group’s limited warranty, please see complete details online at behringer.com.

* MUSIC Group Macao Commercial Offshore Limited of Rue de Pequim No. 202-A, Macau Finance Centre 9/J, Macau, including all MUSIC Group companies

1. Introduction

Congratulations! With the EURORACK PRO RX1602, you have purchased a multifarious “problem-solver” for signal distribution. This piece of equipment was developed for those among you with the highest expectations, who are in the business of professional recording, radio and TV broadcast studios, PA and home recording situations, etc. The RX1602’s extensive range of possibilities make it ideal for routing separate signals to a single stereo output (mixer), or for signal level adjustment of individual signals (level translator)—all these functions can be achieved by using the EURORACK PRO RX1602.

Future-oriented BEHRINGER technology

Our rack mixer’s technology is based on experience and insights spanning many years, delving into the fields of audio technology already used worldwide in countless studios as well as radio and TV applications.

To allow for the highest possible level of operational safety, we manufacture our equipment under the highest quality standards in the industry. Your RX1602 has been manufactured under ISO9000 certified management system.

Balanced inputs

The BEHRINGER RX1602 features electronically servo-balanced inputs. The automatic servo function detects when unbalanced jacks are connected, and internally adjusts the signal level so that no level difference between input and output signals occurs (6 dB correction).

- ◆ The following user’s manual is intended to familiarize you with the unit’s control elements, so that you can master all the functions. After having thoroughly read the user’s manual, store it at a safe place for future reference.

1.1 Before you get started

1.1.1 Shipment

The RX1602 was carefully packed at the factory to assure secure transport. Should the condition of the cardboard box suggest that damage may have taken place, please inspect the unit immediately and look for physical indications of damage.

- ◆ Damaged units should NEVER be sent directly to us. Please inform the dealer from whom you acquired the unit immediately as well as the transportation company from which you took delivery of the unit. Otherwise, all claims for replacement/repair may be rendered invalid.

1.1.2 Initial operation

Please make sure the unit is provided with sufficient ventilation, and never place the EURORACK on top of an amplifier or in the vicinity of a heater to avoid the risk of overheating.

- ◆ Before plugging the unit into a power socket, please make sure you have selected the correct voltage:

The fuse compartment near the power plug socket contains three triangular markings. Two of these triangles are opposite one another. The voltage indicated adjacent to these markings is the voltage to which your unit has been set up, and can be altered by rotating the fuse compartment by 180°.

ATTENTION: This does not apply to export models that were for example manufactured only for use with 120 V!

- ◆ If you alter the unit’s voltage, you must change the fuse accordingly. The correct value of the fuse needed can be found in the chapter “Specifications”.
- ◆ Faulty fuses must be replaced with fuses of appropriate rating without exception! The correct value of the fuses needed can be found in the chapter “Specifications”.

Power is delivered via the cable enclosed with the unit. All required safety precautions have been adhered to.

- ◆ Please make sure that the unit is grounded at all times. For your own protection, you should never tamper with the grounding of the cable or the unit itself.

1.1.3 Warranty

Please take a few minutes and send us the completely filled out warranty card within 14 days of the date of purchase. You may also register online at behringer.com. The serial number needed for the registration is located at the top of the unit. Failure to register your product may void future warranty claims.

1.2 The user’s manual

The user’s manual is designed to give you both an overview of the control elements, as well as detailed information on how to use them. In order to help you understand the links between the controls, we have arranged them in groups according to their function. If you need to know more about specific issues, please visit our website at www.behringer.com, where you’ll find additional information on mixing consoles, effects units and dynamic processors.

2. Control Elements and Connections

In this chapter we go about describing all control elements of your EURORACK PRO RX1602. All controls and connectors will be explained in full detail. You will also receive useful information about possible applications.

2.1 Channel section

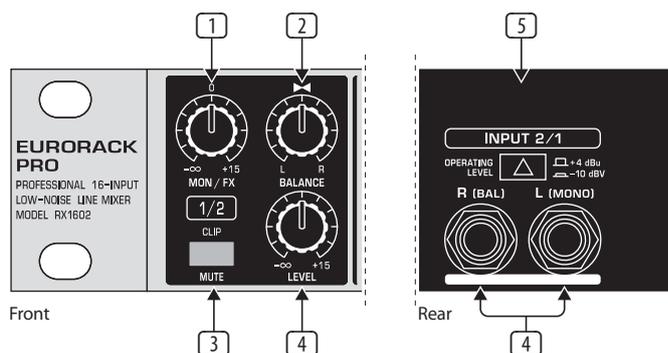


Fig. 2.1: Control elements of the channel section

- 1 Use the **MON/FX** control to set the signal level of the respective channel for monitoring or effects purposes. You can take the MON/FX signal at the MON OUT SEND connector (14). The MON/FX SEND control (7) of the main section governs the overall MON/FX SEND signal level.

This aux send path is factory set to pre fader and post mute. It means that the respective channels’ monitor signal or effects send signal is still present at the MON OUT SEND-connector when the LEVEL control (4) is turned to its left-most position. If the MUTE switch (3) is in its depressed position, the signal is muted totally. The LEVEL control is equivalent to channel faders on conventional mixing consoles.

- ◆ You have the option to retroactively make the monitor channel perform independently from the setting of the LEVEL control (“post fader”). This modification can be done individually for each channel.

This modification makes sense when you for example wish to frequently use certain channels for effect applications.

How necessary actions are taken is explained in ch. 5: “Aux Channels Modification”.

- 2 By using the **BALANCE** control, you can
- set up the position of mono signals in the stereo image, and
 - regulate the ratio of left/right channel signals when processing stereo signals
- 3 The **MUTE** switch is used to interrupt the signal path, thus muting the respective channel. When pressed (signal muted) the switch is lit red.
- When the MUTE switch is not depressed, the red light functions as **CLIP** display, indicating when the input signal level is too high (>+17 dBu). To avoid distortion, please reduce the signal level using the LEVEL control 4 in case the CLIP indicator is frequently or permanently lit.
- 4 To increase or reduce the input signal level, use the **LEVEL** control (increase up to +15 dB, reduce all the way down to -∞).
- Similarly, use the LEVEL controls of the channel sections to regulate the channel's signal level present in the main mix.
- 5 Use the **OPERATING LEVEL** switch located on the rear of your RX1602 to individually adjust each channel to the output signal level of your equipment. When the switch is depressed (-10 dBV), the inputs are more sensitive.
- 6 These are the inputs of the channel sections on balanced ¼" TRS connectors. Of course, you can connect mono jacks (unbalanced operation). To use a channel for a mono signal, please connect the signal source to the left input.

2.2 Main section

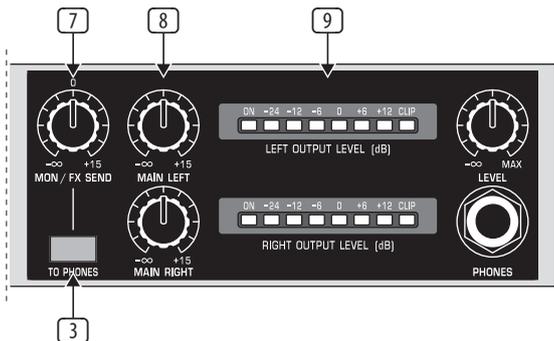


Fig. 2.2: Main section

- 7 Use the **MON/FX SEND** control to set the signal level of those signals that are routed to the MON OUT SEND connector 14 for monitoring or effects applications.
- 8 The left signal portion of the mix created using the LEVEL and BALANCE controls of each channel is set using the **MAIN LEFT** control.
- The right signal portion of the mix is correspondingly adjusted using the **MAIN RIGHT** control. Amplification of up to +15 dB is possible on both controls.
- 9 You can easily get a readout of both channels by observing the highly accurate 7-digit level meters labeled **LEFT OUTPUT LEVEL** and **RIGHT OUTPUT LEVEL**.

Gain setting:

To correctly set the input gain of a channel, please press the MUTE switch 3 of the remaining channels.

When recording with digital multi-channel recorders, the peak meter on the recorder should not reach over 0 dB. This is because unlike with digital recordings, even the smallest amount of distortion can lead to unpleasant-sounding end result.

With analog recorders, the VU meters of the recording device should read roughly up to +3 dB in case of low-frequency signals (e.g. bass drum). Because of their inherent inertia, VU meters tend to display levels of signals with frequencies of above 1 kHz too low. Therefore, when using instruments such as a hi-hat, you should set the input gain only up to -10 dB. Snare drums should be set up to roughly 0 dB.

- ◆ The peak meters of your EURORACK PRO display the level virtually frequency-independent. A re-cording level of 0 dB is recommended for all kinds of signals.
- 10 The **TO PHONES** switch gives you the option to feed the signals routed to the monitor/effects bus into your headphones for control purposes.

Attention!

- ◆ We would like to bring your attention to the fact that high volume levels may damage your hearing and/or your headphones. Please turn the MAIN LEFT and MAIN RIGHT controls as well as the PHONES turn in the main section all the way to the left before powering up the unit. Please always pay keen attention to an appropriate volume level.

- 11 The **LEVEL** control in the MAIN section governs the volume level of your headphones.

Please connect your headphones to the PHONES connector. It is a standard ¼" TRS stereo connector.

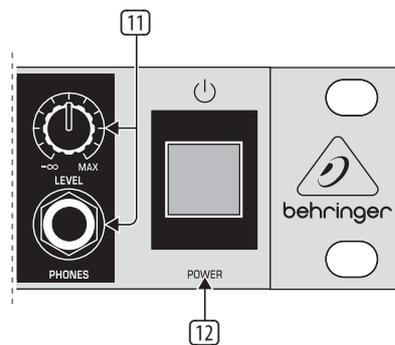


Fig. 2.3: POWER switch, LEVEL control and PHONES connector

- 12 Use the **POWER** switch to power up your RX1602. The POWER switch should always be in the "Off" position when you are about to connect your unit to the mains.
- ◆ Attention: The POWER switch does not fully disconnect the unit from the mains. Unplug the power cord completely when the unit is not used for prolonged periods of time.

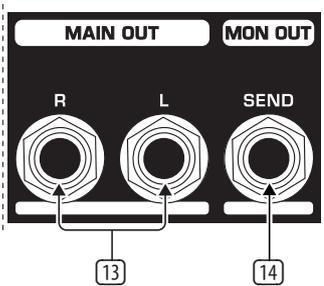


Fig. 2.4: MAIN OUT and MON OUT SEND connectors

- 13 The **MAIN OUT** connectors come as 1/4" TRS jacks. The main mix signal (derived from all channels) is present here. You can set the output signal level by using the MAIN LEFT and MAIN RIGHT controls 8 (reducing all the way down to -∞, increasing up to +15 dB). The main mix signal can be used to feed your mixing console or stereo amplifier, among others.
- 14 The monitor signal can be taken at the **MON OUT SEND** connector (1/4" TRS connector). It is just as well-suited for being used with effects applications.

2.3 Mains connection

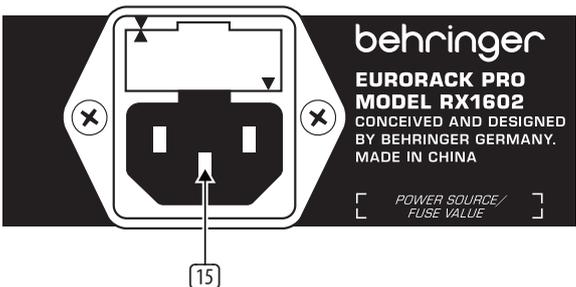


Fig. 2.5: Mains connector with integrated fuse compartment

- 15 The mains connection is achieved via the standard IEC connector. A matching power cord is included.

FUSE COMPARTMENT/VOLTAGE SELECTION: Before plugging the unit into a power socket, please make sure you have selected the correct voltage. Faulty fuses must be replaced with fuses of appropriate rating without exception. Some units feature a fuse compartment that can be operated in two different positions, allowing alternating between 230 V and 120 V. Attention: when using the unit outside of Europe (running on 120 V), you have to implement a fuse with a higher rating.

SERIAL NUMBER. The serial number is located on the top of the unit. Please take a few minutes and send to us a completely filled out warranty card within 14 days of the original date of purchase. Otherwise, warranty claims may be rendered invalid. Or fill out the warranty information online at behinger.com.

3. Applications

3.1 Keyboards sub-mixer

Very often, keyboards feature a stereo design, their signals are already pre-amplified and require no sound processing. To avoid using valuable channels of your main mixer for a purpose other than processing mic signals, you can instead use your RX1602 as a sub-mixer.

In this case, the output signals of keyboards, samplers or similar sound sources are connected to the inputs 6 of the RX1602. You can route the MAIN OUTs of your RX1602 into your main mixer via the aux returns or a stereo channel.

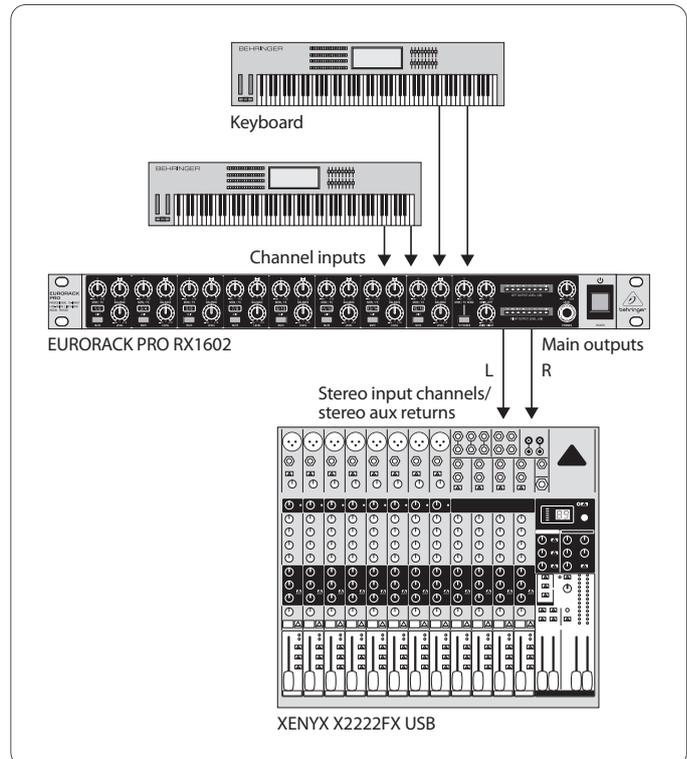


Fig. 3.1: Keyboard sub-mix using the RX1602

3.2 Sub-mix with samplers

Those of you who work with hardware samplers in studio environments, and who combine many outputs of these units on a single RX1602, can save yourselves a lot of frequent plugging in and out of cables. At the same time, you get a practical way to adjust the signal level to various recording equipment inputs. Last but not least, you also get an extra effects bus.

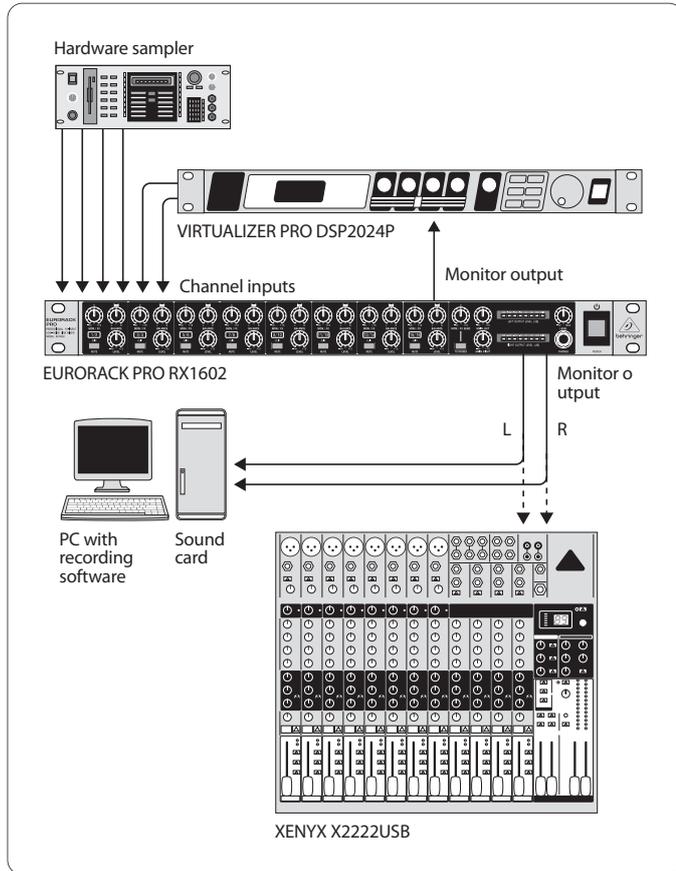


Fig. 3.2: Sampler/PC application

3.3 Monitoring multi-track recorders

Professional sound cards and multi-track recorders can replay several tracks simultaneously. For this purpose, your RX1602 can be ideally used as a space-saving monitor mixer.

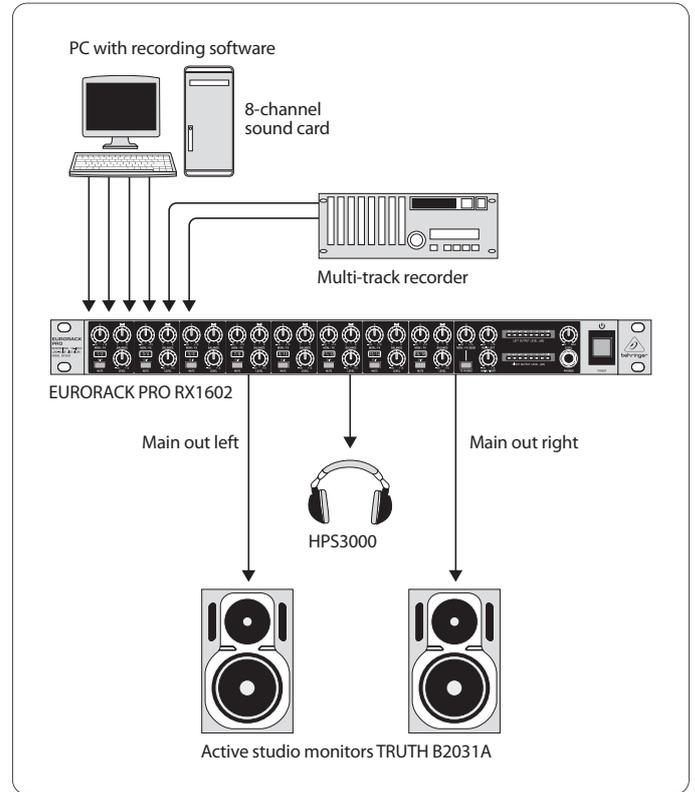


Fig. 3.3: Monitoring multi-track recorders or multi-channel sound cards

3.4 Small live setup

Compact and powerful, feature-rich equipment is optimal for musicians who spend a lot of their time on the road. Fig. 3.4 shows an example of a compact solution for keyboard and vocal amplification, whereby a singing guitar player or an additional musician can easily be integrated into the mix.

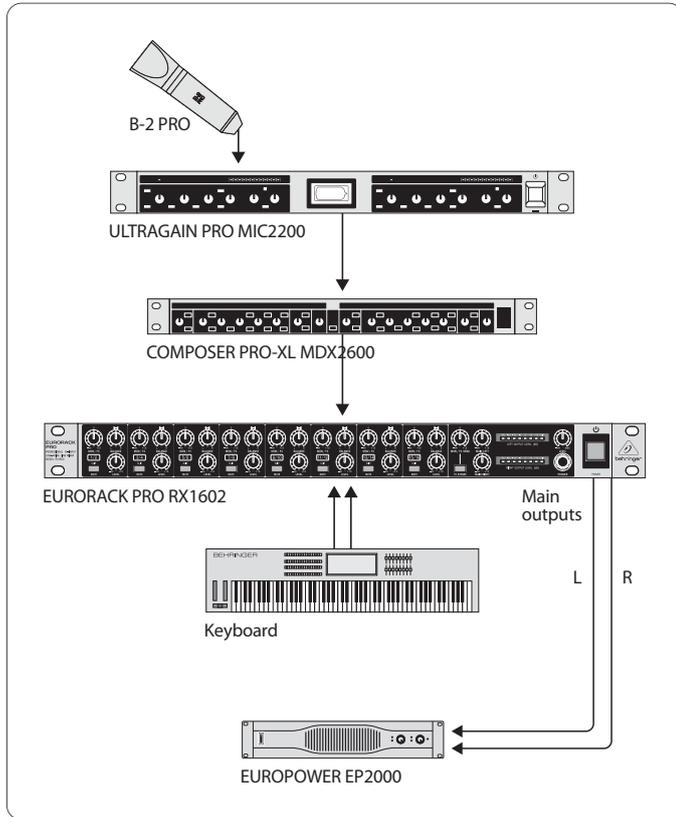


Fig. 3.4: Expandable small live setup

4. Installation

4.1 Rack mounting

The BEHRINGER EURORACK PRO RX1602 requires one height unit (1 HU) for being installed into a 19" rack. Please allow at least an extra 4" of space for the connectors on the rear panel.

Also, please make sure that sufficient ventilation of the unit is provided for, and never put the rack mixer onto an amp or similar equipment to avoid overheating.

Please use M6 machine screws and nuts to install your RX1602 into a rack.

4.2 Audio connections

You will require several types of cables for the various kinds of connections possible. The following illustrations show you how to wire different cables. Always use high-quality cables.

The audio inputs of the RX1602 are electronically balanced to avoid hum problems.

Of course, you can also connect equipment featuring un-balanced outputs. To this end, use either mono jacks or connect ring and sleeve of the stereo jack (bridge pin 1 and pin 3 when using XLR connectors).

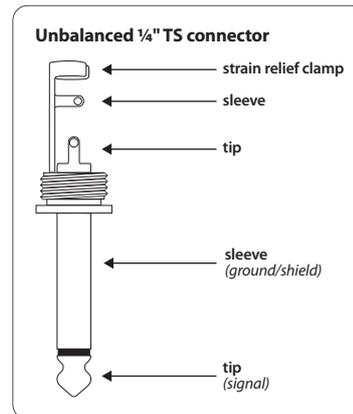


Fig. 4.1: 1/4" TS connector

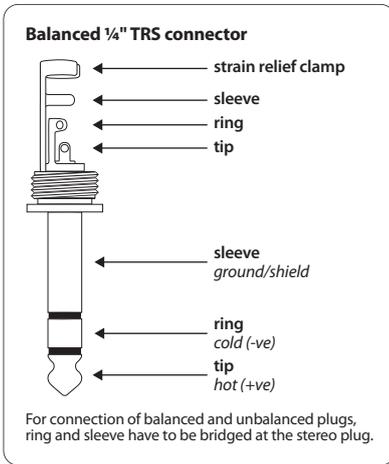


Fig. 4.2: 1/4" TRS connector

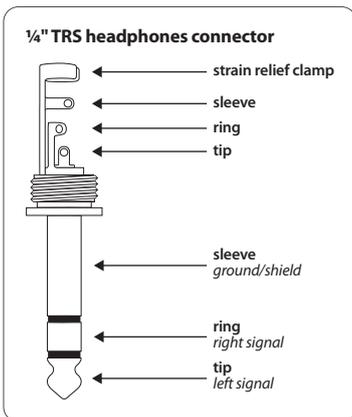


Fig. 4.3: 1/4" TRS connector for headphones operation

5. AUX Channels Modification

All monitor and effects signals are tapped into post mute and pre fader, which resembles the function of a pre fader aux channel on conventional mixing consoles. If you prefer to use the aux channels mainly for effect applications, we suggest to alter them to post Fader. The difference is that you extract the respective channels' signal from the effect mix, too, when you turn the LEVEL-control to minimum. You can do this modification for each channel individually, the choice is yours.

- ◆ The following modifications put your soldering skills to the test. Only attempt to implement them if you feel you have enough past experience. Consider hiring professional help. Regardless of who implements these modifications, they effectively void all warranty claims.
 - ◆ A piece of advice for the brave: bridge endings that are to be soldered should not be put into the drill holes. Instead, bridge endings should be soldered above the drill holes in a flat fashion! A bridge should be somewhat upwardly curved between both of the bases.
1. Power down the unit and unplug the power cord before you remove the cover from the rest of the housing!
 2. The positions in question are found on the part of the circuit board located perpendicular to the front side. Please observe figure 5.1.
- ◆ Hold the unit so that you can read the FX/MON insignia on the circuit board. Soldering points should match those in the illustration.
3. Separate the "pre fader" conductor path.
 4. Solder a "post fader" bridge.
 5. Repeat this step on as many channels as desired.

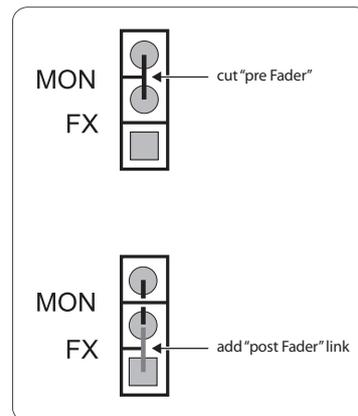


Fig. 5.1: Modification MON/FX "pre fader" > "post fader" 0

6. Specifications

Audio Inputs

Input L/R

Type	¼" TRS connector, electronically balanced
Impedance	approx. 20 kΩ balanced, 10 kΩ unbalanced
Gain range	-∞ to +15 dB
Operating level	variable, +4 dBu/-10 dBV (switchable)
Max. input level	+22 dBu
Common-mode rejection CMRR @ 1 kHz	typ. 44 dB

Audio Outputs

Main Out L/R

Type	¼" TRS connector, unbalanced
Gain range	-∞ to +15 dB
Impedance	approx. 120 Ω
Max. output level	+22 dBu

Mon Out

Type	¼" TRS connector, unbalanced, mono
Impedance	approx. 120 Ω
Max. output level	+22 dBu

Phones Output

Type	¼" TRS connector, stereo
Minimum load impedance	100 Ω

System Specifications

Bandwidth	20 Hz - 20 kHz +/-0.2 dB
Frequency range	20 Hz - 200 kHz +/-3 dB
Signal-to-noise ratio	< -97 dB
THD	0.0025% @ +4 dB input 1 kHz gain 1
Crosstalk	< -70 dB

Power Supply

Voltage

USA/Canada	120 V~, 60 Hz
Europe/U.K./Australia	230 V~, 50 Hz
Japan	100 V~, 50 - 60 Hz
General export model	120/230 V~, 50 - 60 Hz
Power consumption	max. 14 W
Fuse	100 - 120 V~: T 630 mA H 200 - 240 V~: T 315 mA H
Mains connection	Standard IEC connector

Dimensions/Weight

Dimensions	approx. 1 ¾ x 19 x 8 ½" approx. 44.5 x 483 x 217 mm
Weight	approx. 5.46 lbs / 2.48 kg
Shipping weight	approx. 7.30 lbs / 3.32 kg

BEHRINGER is constantly striving to maintain the highest professional standards. As a result of these efforts, modifications may be made from time to time to existing products without prior notice. Specifications and appearance may differ from those listed or illustrated.



We Hear You