

Operating Instructions

Digital AV Mixer
WJ-MX50



Panasonic®



Before attempting to connect or operate this product, please read these instructions completely.

CONTENTS

<p>Preface 2</p> <p>Features 2</p> <p>Precautions 3</p> <p>Major operating controls and their functions 4</p> <p>System Connection 14</p> <p>Operation 17</p> <p> A. Pre-operational Set up 17</p> <p> B. Basic operation-1 18</p> <p> B-1. Input/Output Selection 18</p> <p> B-2. Matte Color 18</p> <p> B-3. Audio Mixer 19</p> <p> B-4. Color Correction 19</p> <p> B-5. Position Control 20</p> <p> C. Basic operation-2 : Digital Effect bloc 20</p> <p> D. Basic operation-3 : Mix and Wipe block 22</p> <p> D-1. MIX 22</p> <p> D-2. NAM 22</p>	<p>D-3. WIPE 23</p> <p> 1. Wiping 23</p> <p> 2. Wipe Edge 23</p> <p> 3. Wipe Direction 23</p> <p> 4. Pattern Modifier 24</p> <p> 5. Pattern Selection 25</p> <p>D-4. Luminance Key 27</p> <p>D-5. Chroma Key 27</p> <p>D-6. Pattern Table 27</p> <p>E. Basic operation-4 : Downstream Key 32</p> <p>F. Basic operation-5 : Fade 33</p> <p>G. Basic operation-6 : Audio Follow 34</p> <p>H. Application 35</p> <p> H-1. Event Memory Functions 35</p> <p> H-2. Special Mode Functions 35</p> <p> H-3. Auto Take 36</p> <p> H-4. Digital Effect 36</p> <p>Interface 38</p> <p>Specifications 40</p> <p>Standard Accessory 40</p> <p>Optional Accessories 40</p>
---	--

CAUTION:

Before attempting to connect or operate this product, please read the label on the bottom.

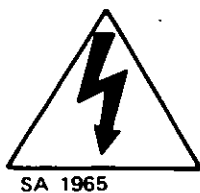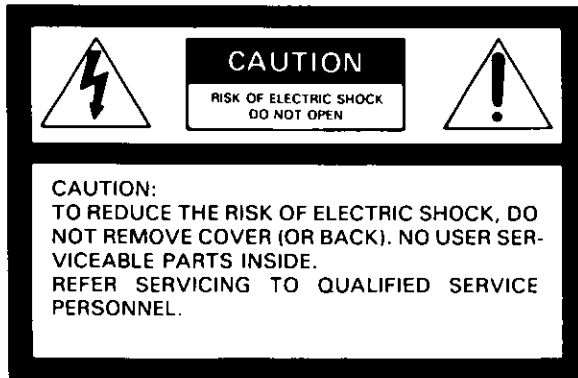

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

For U.S.A.

Warning:
 This equipment generates and uses radio frequency energy and if not installed and used properly, i.e., in strict accordance with the instruction manual, may cause harmful interference to radio communications. It has been tested and found to comply with the limits for a Class B computing device pursuant to Subpart J of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference when operated in a commercial environment.

For CANADA

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

The serial number of this product may be found on the bottom of the unit.
 You should note the serial number of this unit in the space provided and retain this book as a permanent record of your purchase to aid identification in the event of theft.

Model No. _____

Serial No. _____

WARNING:
 TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

PREFACE

The Panasonic Digital AV Mixer WJ-MX50 is designed for use in producing specially effected images by utilizing digital processing circuitries like the built-in Frame Synchronizer. In addition to the Mix Effect of the conventional AV Mixer, the WJ-MX50 includes such features as Chroma Key and Luminance Key functions. Additionally this unit has various functions such as Digital Effect, Downstream Key Effect, Wipe Effect, Fade Control, Memory and much more.

Also VTR Editing Controller can be connected for AB-roll editing purposes. This operating manual is intended to explain the Generator's many operational features. With the WJ-MX50 and your imagination there are many possible function combinations which are left to your creativity.

MAIN FEATURES

1. Built-in Frame Synchronizers for A-bus and B-bus.
2. Four audio/video source inputs.
3. Digital Effects such as Nega, Mosaic, Mono, Paint, Still, Strobe, Multi, Trail and AV Synchro.
4. Several combinations between the Chroma Key, Luminance Key, NAM, Mix, and Wipe.
5. 287 Wipe-pattern combinations are available.
6. 9 standard background matte-colors are available from the Matte Generator.
7. Audio fade, DSK fade and/or video fade are available either independently or in combination.
8. The interval time for the Auto-Fade and Auto-Take can be adjusted independently.
9. The audio level can also be linked with movement of the Wipe lever.
10. 8 special effects (factory set up) included.
11. 8-events memory available.
12. GPI and RS422 /RS232C connectors for external VTR Editing Controller.
13. Black Burst signal, Advance Sync signal and Advance Reference signal output connectors for use with VTR editing systems.
14. Built-in Demonstration mode available.
15. Reset ON mode for returning to reset mode conditions after power interruption.
16. The mode selection of all buttons will be held for approximately 1 week when the AC power is disconnected as this unit has memory back up.



PRECAUTIONS

The WJ-MX50 is a sensitive, high quality instrument and should be treated with care. And because it is an electrical device, the danger of electric shock exists if it is used inappropriately.

DON'T	DO'S
<ul style="list-style-type: none">× Do not attempt to disassemble the instrument. In order to prevent electrical shock, do not remove screws or covers. There are no user-serviceable parts inside.× Do not abuse the instrument. Avoid striking, shaking, etc. It could be damaged by improper handling or storage.× Do not use strong or abrasive detergents when cleaning the instrument body.× Do not expose the instrument to water or moisture, and do not operate it in wet or humid areas.× Do not use the instrument in an extreme environment where either high temperature or high humidity exist.	<ul style="list-style-type: none">● Do refer all servicing to qualified service personnel.● Do handle the instrument with care.● Do use a dry cloth to clean the instrument when dirty. In case the dirt is hard to remove, use mild detergent and wipe gently.● Do take immediate action if ever the instrument does become wet. Turn the power off and refer servicing to qualified service personnel. Moisture can damage the instrument and also create a danger of electric shock.● Use the instrument under conditions where temperatures are within 32°F-104°F (0°C-40° C), and humidity is below 90%


IMPORTANT NOTICE FOR VIDEO INPUT SIGNAL

- (1) If the input video signal does not meet with the NTSC color standard, this could cause a disturbance of synchronization. (The picture may jitter or tear)
- (2) If the signal to noise ratio (S/N) of the input signal is very low, this may be reflected in a low quality picture.
- (3) If the source input video signal is very jittery, as in the case of a poor VTR playback signal, this could cause a disturbance in synchronization or color.
- (4) If tracking noise is seen on the TV monitor, this could cause a disturbance in synchronization. It is necessary to adjust the tracking control of the input VTR.
- (5) When either a character generator signal or characters from a key camera is supplied, the edge of the characters might become rough as shown below under certain electronic conditions.
- (6) Flag waving (top of picture curls) may appear when certain VTR's are used as input signals. (due to AFC time constant)
- (7) When the External Key Video Signal is supplied to the EXT. CAMERA IN connector, this signal will be used as a reference sync signal for the WJ-MX50. So if this signal is jittery, as in the case of VTR playback signal, this could cause a disturbance in synchronization.

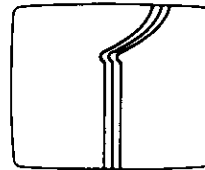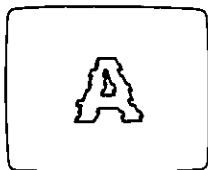

MAJOR OPERATING CONTROLS AND THEIR FUNCTIONS

■ TOP VIEW 1

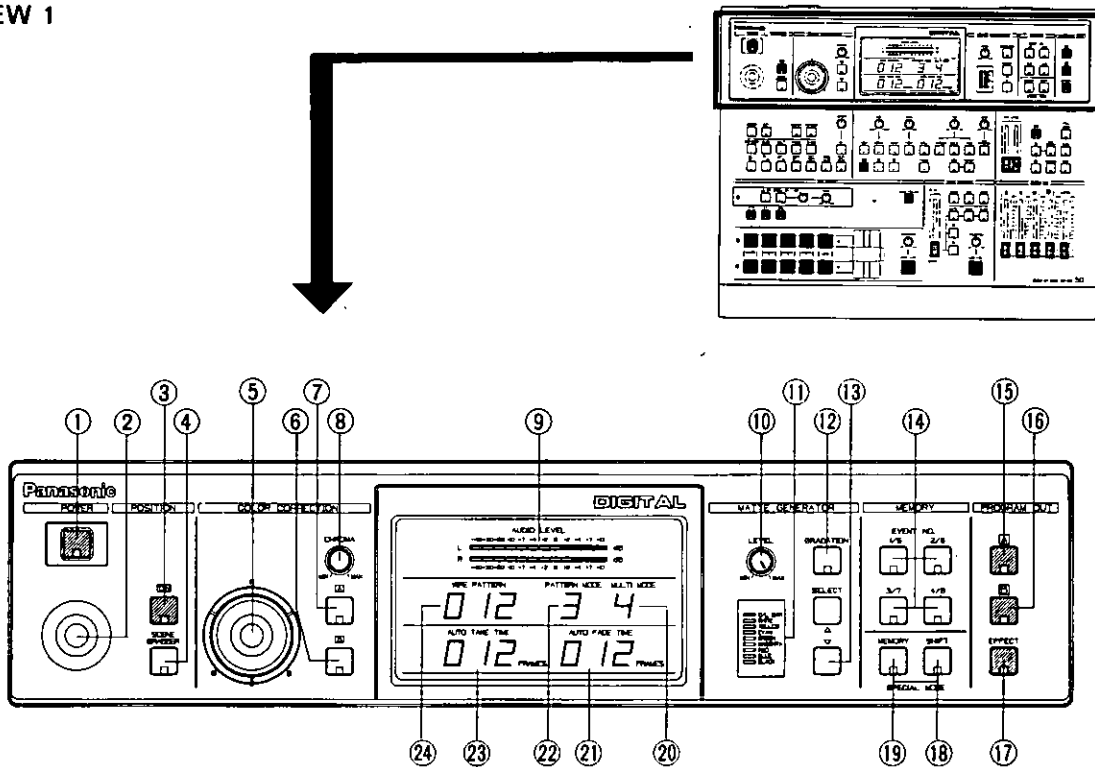

1. Power ON/OFF Button (POWER)

Press this button to turn on the power of the unit. The LED on this button lights and the following LEDs light up at the same time. C/L BAR on the Matte Color Indicator (11), Effect-Out Button (17), One-Way Button (27), Straight Wipe Button (70), Effect ON/OFF Button (59), Effect-A Button (58), Repeat Effect Button (54), DSK-A Button (45), Matte Button (47), Wipe Select Button (74), Source 1 on A-bus Button (102), Source 2 on B-Bus Button (101), Audio Follow ON/OFF Button (79) and Black Fade Button (85). These LED's light up only when the Reset ON/OFF Switch (109) is turned on.

Notes :

1. The Main Power Switch (in back) (131) must be on before the Power ON/OFF Button (1) is pressed
2. When the Editing Controller AG-A800 is used with WJ-MX50, the power of AG-A800 should be off first to turn off the power of WJ-MX50. The power of WJ-MX50 can not be turned off by-itself.
3. Read Note 3 on page 17.

2. Positioner Joystick

The position of the wipe pattern as selected using the Square Wipe Button (60) can be freely set using this Joystick control.

3. Positioner ON/OFF Button (ON)

This button must be pressed to operate the Positioner Joystick (2).

4. Scene Grabber ON/OFF Button (SCENE GRABBER)

The scene wiped by the Square Wipe Button (60) will be grabbed by pressing this button. The position of this area can then be changed by operating the Positioner Joystick (2).

5. RGB Control

This Joystick Control permits you to balance or change the hue from the images of the Source Video Signal (either A or B) by moving its position. When this Controller is positioned at center, it generates the original color of the Source Video Signal.

6. Color - B Button (B)

Color correction can be made on the B - bus Source Video Signal by pressing this button. When you press it once, the LED starts blinking, the chroma level can be changed by using the Chroma Level Control (8). When you press a second time, the LED is continuously turned on, the hue can be changed by using the RGB Control (5) in addition to the chroma level by using the Chroma Level Control (8).

7. Color - A Button (A)

Color correction can be made on the A - bus Source Video Signal by pressing this button. When you press it once, the LED starts blinking, the chroma level can be changed by using the Chroma Level Control (8). When you press a second time, the LED is continuously turned on, the hue can be changed by using the RGB Control (5) in addition to the chroma level by using the Chroma Level Control (8).


8. Chroma Level Control (CHROMA)

This Control adjusts the color level of the images from the Source Video Signal. When this Control is set to the center position, it generates the original color level of the Source Video Signal.

Note :

The noise may be recorded on tape when this control is adjusted to the MAX with excessive color input signal.

- 9. Audio Level Indicator (AUDIO LEVEL)**
This Indicator indicates the audio output level of the Program Out 1 Audio Output Connector (135) and the Program Out 2 Audio Output Jacks (134).
- 10. Matte Color Control (LEVEL)**
The color displayed on the Matte Color Indicator (11) can be adjusted with this control except C/L BAR.
- 11. Matte Color Indicator**
The Matte Color selected by the Matte Color Selectors (13) is shown by the appropriate LED.
- 12. Gradation Button (GRADATION)**
When this button is pressed, the Matte color of the upper portion on the screen is less intense and gradually increases to that of the lower portion of the screen.
- 13. Matte Color Selectors (SELECT)**
Any one of 9 Matte Colors - Color Bar, White, Yellow, Cyan, Green, Magenta, Red, Blue and Black - can be selected by repeatedly pressing either of these buttons. When the SELECT (A) button is pressed, the color indicated on the Matte Color Indicator (11) changes from lower to upper. The Black will be selected after the Color Bar. When the SELECT (V) button is pressed, the reverse procedure takes place.
- 14. Event Number Buttons (EVENT NO)**
These buttons are used to memorize the present status of all functions settings on the unit. Also this button can be used with the Auto Take Button (97) to recall the memorized status. Each button has 2 memories (by using Shift Button (18)). Up to 8 memories are available with these 4 buttons.
Note :
Refer to the Shift Button (18) and the Memory Set Button (19) for selection of preset memory settings.
- 15. Program Out - A Button (A)**
When this button is pressed, the A - bus source signals which is given Effect by the DIGITAL EFFECT function, COLOR CORRECTION function, SCENE GRABBER function, COMPRESSION function or SLIDE function is provided at the Program Output connectors.
Note :
If the MATTE on the A - bus is pressed, the A - bus button will begin blinking automatically to show you which button was selected before.
- 16. Program Out - B Button (B)**
When this button is pressed, the B - bus source signals which is given Effect by the DIGITAL EFFECT function, COLOR CORRECTION function, SCENE GRABBER function, COMPRESSION function or SLIDE function is provided at the Program Output connectors.
Note :
If the MATTE on the B - bus is pressed, the B - bus button will begin blinking automatically to show you which button was selected before.
- 17. Effect - Out Button (EFFECT)**
When this button is pressed, the final video signal - whether it is effected or not - will be provided at the Program Output connector.
- 18. Shift Button (SHIFT)**
This button will be used when the Event Number Buttons (14) numbered 5 to 8 are required. However, in case this button is pressed with the Memory Set Button (19) simultaneously, the unit then enters the Special Mode (SPECIAL MODE).
Notice :
(1) Refer to page 35 for details of the Special Mode.
(2) In the Special Mode, the LED on the Shift Button (18) goes off and the one on the Memory Set Button (19) starts blinking.
- 19. Memory Set Button (MEMORY)**
This button has 2 functions. In order to activate the Event Number Buttons (14) to memorize the current status of the unit, press the Memory Set Button (19) prior to the Event Number Buttons (14). In case this button is pressed with the Shift Button (18) simultaneously (as mentioned previously), the unit enters the Special Mode.
Notice :
(1) Refer to page 35 for details of the Special Mode.
(2) In Special Mode, the LED on the Shift Button (18) goes off and the one on the Memory Set Button (19) starts blinking.
- 20. Multi Mode Indicator (MULTI MODE)**
The number displayed on this indicator shows the mode of the pattern by pressing the Multi Wipe Button (67). From 0 to 6 will be indicated
- 21. Auto Fade Time Indicator (AUTO FADE TIME)**
The number on the indicator shows the fading time by picture frame when adjusting the Auto Fade Transition Control (91). From 0 to 510 will be indicated for every 2 frames.
- 22. Pattern Mode Indicator (PATTERN MODE)**
The number on this indicator shows the pattern mode which is pressed and selected from the Wipe Pattern Select Buttons number (60), (61), (62), (64), (66), (68) or (70). From 1 to 4 will be indicated.
- 23. Auto Take Time Indicator (AUTO TAKE TIME)**
The number on this indicator shows the Auto Take Time by picture frame when adjusting the Auto Take Transition Control (98). From 0 to 510 will be indicated for every 2 frames.
- 24. Wipe Pattern Number Indicator (WIPE PATTERN)**
The number on this indicator shows the wipe pattern which is generated by the combinations of the Wipe Pattern Select Buttons number (60), (61), (62), (64), (66), (68) or (70), and Modify Buttons number (63), (65), (67), (69) or (71). Any possible combination from 1 to 255 will be indicated.

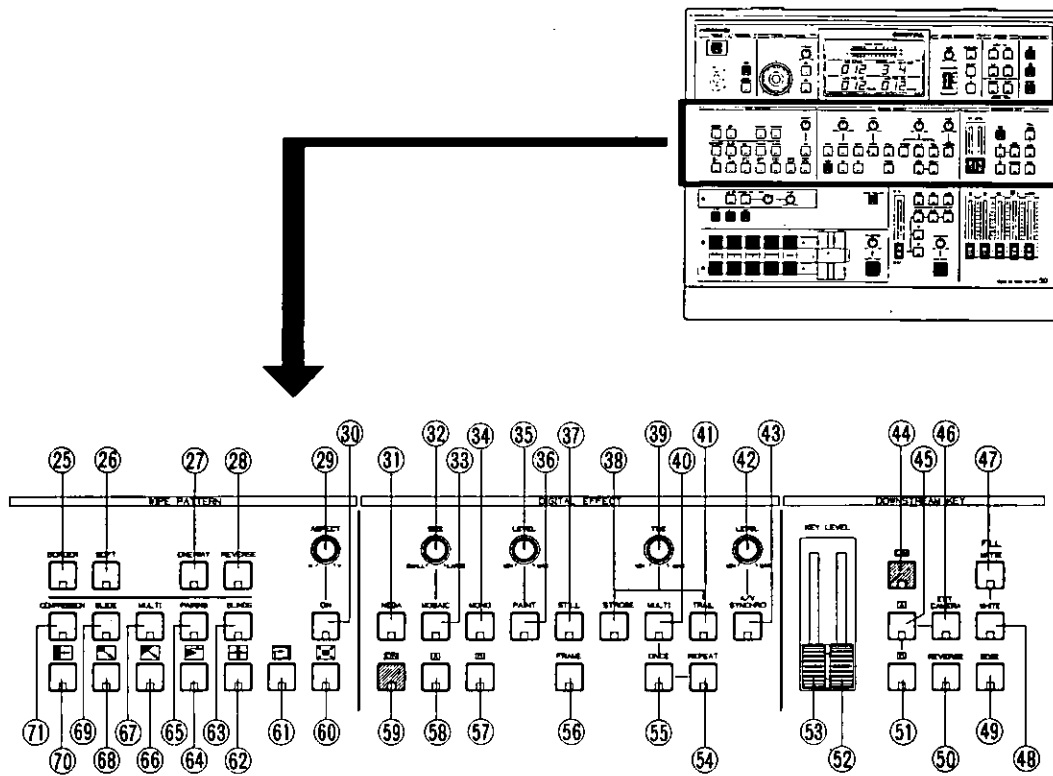

25. Border Button (BORDER)

This button is used for selecting a border wipe edge. Pressing this button once selects a narrow border. Pressing this button a second time selects a wide border. The color of the border is applied from the complementary color of selected Matte Color.

26. Soft Button (SOFT)

This button is used for making the faint border wipe edge. Pressing this button once selects a narrow soft border. Pressing this button a second time selects it a wide soft border. No color is available.

27. One - Way Button (ONE - WAY)

When this button is pressed, the wiping scene moves one way everytime by changing the Mix/Wipe Lever (99). Without using this function, the wiping scene moves alternately by changing the Mix/Wipe Lever (99).

28. Reverse Button (REVERSE)

When this button is pressed, the movement of the wiped scene will be reversed compared without pressing this button.

29. Aspect Control (ASPECT)

The aspect ratio, used only when the Square Wipe Button (60) is selected, can be changed by adjusting this control. To use this function, the Aspect ON/OFF Button (30) must be ON.

Note :

The black area will be shown along the image on the video monitor when the Compression function is used with it.

30. Aspect ON/OFF Button (ON)

In case the Aspect function is required, this button must first be pressed.

31. Negative Button (NEGA)

The on-screen image can be transposed to look like a negative of the visual image by pressing this button.

32. Mosaic Size Control (SIZE)

The size of the pieces of the mosaic pattern can be adjusted by twisting this control.

33. Mosaic Button (MOSAIC)

By adding small squares in mosaic-like patterns a design or blurred image can be created. The size of the mosaic squares can be changed by using the Mosaic Size Control (32).

34. Mono Color Button (MONO)

When this button is pressed, the Source Video Signal becomes a monochrome scene. This function has a priority to the Color Correction function in operation.

35. Paint Control (LEVEL)

The gradation of the paint effect can be changed by adjusting this control.

36. Paint Button (PAINT)

The image can be transformed to resemble an oil painting of the video scene by pressing the button.

- 37. Still Button (STILL)**
An instant still or frozen image of the video can be obtained by pressing this button.
- 38. Strobe Button (STROBE)**
Video frames can be frozen intermittently, to achieve a strobe effect, by pressing this button. The strobe interval can be adjusted by the Effect Interval Timer (39) from approximately 0.03 seconds to 2.1 seconds.
- 39. Effect Interval Timer (TIME)**
The time of interval for the Strobe effect, Multi effect and Trail effect can be adjusted by this timer. Also this timer works with the A/V Synchro function. In this case, the A/V Synchro interval applies to the Strobe effect.
- 40. Multi Button (MULTI)**
The video image on the monitor TV becomes multiple video images by pressing this button. When you press it first, 4-images are displayed. The second press makes it 9-images and the third press makes it 16-images. The fourth press returns the screen to a single image screen. The trail interval can be changed by the Effect Interval Timer (39) from approximately 0.06 seconds to 2.1 seconds.
- 41. Trail Button (TRAIL)**
The compressed video image trails one after another from small to larger and larger video images up to a maximum of 16 images. The start position can be selected by the Positioner Joystick (2) either to start from upper right or upper left. The trail interval can be changed by the Effect Interval Timer (39) from approximately 0.06 seconds to 2.1 seconds.
- 42. A/V Synchro Control (LEVEL)**
This control adjusts the trigger sensitivity of the A/V Synchro. When this control is turned to the MAX position, the A/V Synchro will be triggered by (a higher threshold) high level sounds. When this control is turned to the MIN position, the A/V Synchro will be triggered by (a lower threshold) low level sounds.
- 43. A/V Synchro Button (A/V SYNCHRO)**
Any combination of the digital effects (Nega, Mosaic, Mono, Paint, Still or Strobe) can be synchronized to pulse with certain levels of accompanying music or sound supplied to the WJ-MX50.
- 44. DSK ON/OFF Button (ON)**
This button is pressed to activate the Downstream Key (DSK) effect.
- 45. DSK-A Button (A)**
When this button is pressed, the Source Video Signal on the A-Bus will be the Key-Source Signal.
- 46. Ext. Camera Button (EXT. CAMERA)**
When this button is pressed, the external camera which is connected to the External Camera Input (121) or (122) can be used as the Key-Source Signal.
- 47. Matte Button (MATTE)**
When this button is pressed, the Matte Color generated in the MATTE GENERATOR will be used as a Key-Fill Signal which is to be overlaid on the Key-Source Signal.
- 48. White Button (WHITE)**
When this button is pressed, the white color will be used as a Key-Fill Signal which is to be overlaid on the Key-Source Signal.
- 49. Edge Button (EDGE)**
This button is used to edge on the Downstream Keyed images. Two types (shadow, border) and five kinds of edges are available by pressing this button repeatedly.
Notes :
1. When the Downstream Keyed images are white, you can color the edge to any one of 9 colors, solid or graded by pressing the Gradation Button (12) and the Matte Color Selector (13).
 2. When the Matte Colored Downstream Keyed images are used, the edge color is always black.
- 50. Key Reverse Button (REVERSE)**
The polarity of the Downstreamed Keyed Images will be reversed by pressing this button.
- 51. DSK-B Button (B)**
When this button is pressed, the Source Video Signal on the B-Bus will be the Key-Source Signal.
- 52. High Level Key Slide Control (KEY LEVEL)**
This slide control is used to adjust the sensitivity of the luminance level of the Key signal for higher level.
- 53. Low Level Key Slide Control (KEY LEVEL)**
This slide control is used to adjust the sensitivity of the luminance level of the Key signal for lower level.
- 54. Repeat Effect Button (REPEAT)**
Each of the multiple video images will be scanned one after another repeatedly by pressing this button.
- 55. Once Only Button (ONCE)**
Each of the multiple video images will be scanned one time only by pressing this button. It will be frozen after that.
- 56. Frame Button (FRAME)**
When this button is pressed the Digital Effected Image is reproduced as a frame video image. This feature is applied to Still, Strobe, Multi and Trail functions. And this button is used to remove the image vibration.

Note :

The difference between on and off of this button.

FRAME BUTTON	Output Signal	Resolution
ON	2-field	Standard
OFF	1-field	Reduced

57. Effect-B Button (B)

The Source Video Signal on B-bus will receive the Digital Effect by pressing this button (if Effect ON/OFF Button (59) is first pressed).

58. Effect A-Button (A)

The Source Video Signal on A-bus will receive the Digital Effect by pressing this button (if Effect ON/OFF Button (59) is first pressed).

59. Effect ON/OFF Button (ON)

The selected Digital Effect function becomes operative by pressing this button.

60. Square Wipe Button

Four wipe patterns can be selected by pressing this button repeatedly . . . circle, oval, square and diamond. The Aspect Control (29) or the Positioner Joystick (2) can be used with these patterns.

61. Mosaic Wipe Button

The wiping becomes a mosaic-like pattern by pressing this button. Four kinds of pattern are available by repeatedly pressing this button.

62. Split Wipe Button

The video scene is split from the center of the image by pressing this button. Three kinds of patterns are available by repeatedly pressing this button.

63. Blinds Wipe Button (BLINDS)

The video scene is wiped in a blinds pattern. Several wipe combinations using buttons (62), (64), (66), (68) and (70) are operative with this button.

64. Triangle Wipe Button

The video scene is wiped with a triangle shape. Four patterns are available.

65. Pairing Wipe Button (PAIRING)

A paired wipe scene can be obtained by pressing this button. The wipe buttons of (64), (66), (68) and (70) are operative with this button.

66. Diagonal Wipe Button

The video scene is wiped with a diagonal shape. Four patterns are available.

67. Multi Wipe Button (MULTI)

The wiped pattern can be multiplied by pressing this button repeatedly. The effect of the multiplication depends on the wiped pattern.

68. Corner Wipe Button

The video scene is wiped with a square shape from the corner of the monitor screen. Four kinds of patterns are available.

69. Slide Button (SLIDE)



The wiped scene slides into the monitor screen by pressing this button once. Both wiped scenes slide in and out by pressing this button a second time.

70. Straight Wipe Button

The video scene is wiped with a straight line. Four patterns are available.

71. Compression Button (COMPRESSION)

The compressed video scene is wiped into the monitor screen by pressing this button once. The compressed video scenes are wiped in and out of the monitor screen by pressing this button a second time.

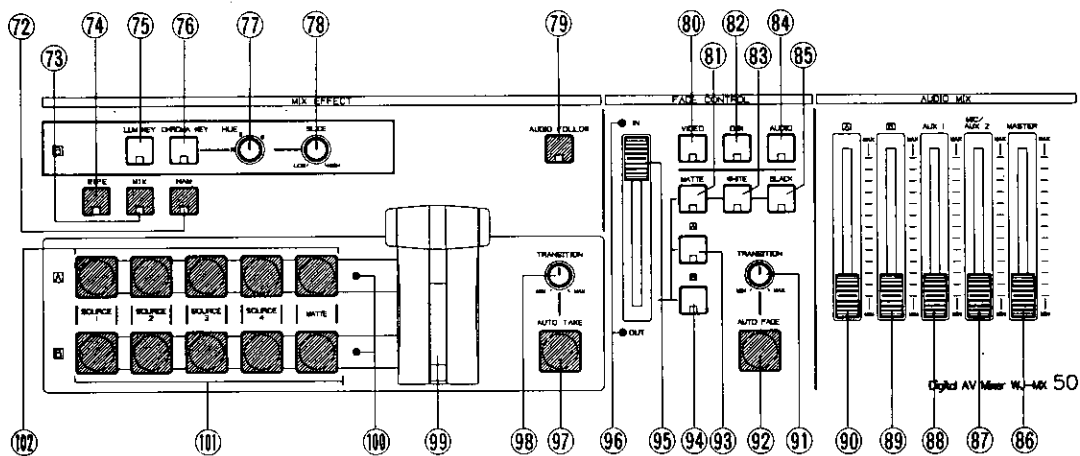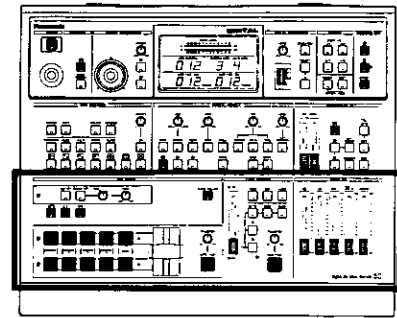

72. NAM Select Button (NAM)

NAM (Non Additive Mix) effect is obtained by pressing this button and the Mix/Wipe Lever (99) is to be positioned at center. The darker area on the B-bus image and the A-bus image are replaced at relative levels by the lighter areas of each other, i.e. the stronger (lighter) images from either input replace the weaker (darker) ones.

73. Mix Select Button (MIX)

This button is pressed to obtain a Mix Effect between the A-bus Source Video Signal and the B - bus Source Video Signal.

74. Wipe Select Button (WIPE)

This button is pressed to obtain a Wipe effect between the A-bus Source Video Signal and the B-bus Source Video Signal using the settings of the Wipe Pattern Select Buttons.

75. Luminance Key Select Button (LUM KEY)

The Luminance Key effect is obtained by pressing this button and the adjustment of the Slice Control (78). The B - bus signal must be the key signal.

76. Chroma Key Select Button (CHROMA KEY)

The Chroma Key effect is obtained by pressing this button and the adjustment of the Hue Control (77) and Slice Control (78). The B-bus signal must be the Key signal.

77. Hue Control (HUE)

This control is used to adjust the Hue of the Chroma Key effect.

78. Slice Control (SLICE)

This control is used to adjust the slice level of the luminance signal for the Luminance Key effect or the chroma signal for the Chroma Key effect.

79. Audio Follow Button (AUDIO FOLLOW)


When this button is pressed, the audio on the A-bus and B-bus can be changed according to the relative percentage position of the Mix/Wipe Lever (99).

80. Video Fade Button (VIDEO)

When this button is pressed, the Wiped or Mixed video signal will fade-in or fade-out by using the Fade Control (95).


- 81. Matte Fade Button (MATTE)**
The video fade signal is faded out to the selected Matte Color by pressing this button.
- 82. DSK Fade Button (DSK)**
When this button is pressed, the Downstream Keyed signal will fade-in or fade-out by using the Fade Control (95).
- 83. White Fade Button (WHITE)**
The video fade signal is faded out to White by pressing this button.
- 84. Audio Fade Button (AUDIO)**
When this button is pressed, the audio will fade-in or fade-out by using the Fade Control (95).
- 85. Black Fade Button (BLACK)**
The video fade signal is faded out to Black by pressing this button.
- 86. Master Audio Fader (MASTER)**
The total audio level of the mixed audio signals is adjusted by sliding this fader.
- 87. Mic/Aux-2 Audio Fader (MIC/AUX2)**
The audio level connected to the Microphone Jack (106) or the Auxiliary Audio Input-2 Jack (136) can be adjusted by sliding this fader. Select the Mic or Aux-2 audio signal by the Mic/Aux-2 Switch.(105).
- 88. Aux-1 Audio Fader (AUX1)**
The audio level connected to the Auxiliary Audio Input-1 Jack (137) can be adjusted by sliding this fader.
- 89. B-bus Audio fader (B)**
The audio level from the B-bus source inputs can be adjusted by sliding this fader.
- 90. A-bus Audio Fader (A)**
The audio level from the A-bus source inputs can be adjusted by sliding this fader.
- 91. Auto Fade Transition Control (TRANSITION)**
This control adjusts the automatic fading time from 0 to 510 frames for every 2 frames. This amount is then displayed on the "Auto Fade Time Indicator" (21).
- 92. Auto Fade Button (AUTO FADE)**
When this button is pressed, the automatic fade sequence for the selected input(s) begins, with the time set by the Auto Fade Transition Control (91). This button remains lit during Auto-fading.
- 93. A-bus Fade Button (A)**
The video fade signal is faded out to the A-bus video signal by pressing this button.
- 94. B-bus Fade Button (B)**
The video fade signal is faded out to the B-bus video signal by pressing this button.
- 95. Fade Control**
The fade-in and fade-out can be manually controlled by using this control.
- 96. Fade LED (IN/OUT)**
When the IN (OUT) LED is continuously turned on, the fade is In (Out) situation. When the IN (OUT) LED is blinking, the fade-in (fade-out) is currently incomplete.
- 97. Auto Take Button (AUTO TAKE)**
The Auto Take effect - Automatic Wipe/Mix/NAM - can be executed by pressing this button. This button lights during the Auto-Take interval.
- 98. Auto Take Transition Control (TRANSITION)**
The Auto Take interval time can be adjusted by this control from 0 to 510 frames for every 2 frames.
- 99. Mix/Wipe Lever**
In the wipe mode, manually moving this lever between the A-bus and B-bus will increase the relative portion of each bus signal, according to the option selected. In the mix mode, the audio/video are together switched between A-bus and B-bus.
- 100. Mix/Wipe LED**
When the A-bus (or B-bus) LED is continuously turned on, the Wipe/Mix/NAM is A-bus (or B-bus) situation. When the A-bus (or B-bus) LED is blinking, the Wipe/Mix/NAM effect is only partially completed on the A-bus (or B-bus) side.
- 101. B-bus Buttons (B)**
These buttons are used to select the desired audio/video signals allocated to the B-bus input. The Source 1/2/3/4 corresponds to the Source 1/2/3/4 audio/video inputs on the rear panel of the instrument.
- 102. A-bus Buttons (A)**
These buttons are used to select the desired audio/video signals allocated to the A-bus input. The Source 1/2/3/4 corresponds to the Source 1/2/3/4 audio/video inputs on the rear panel-of the instrument.

■ FRONT VIEW

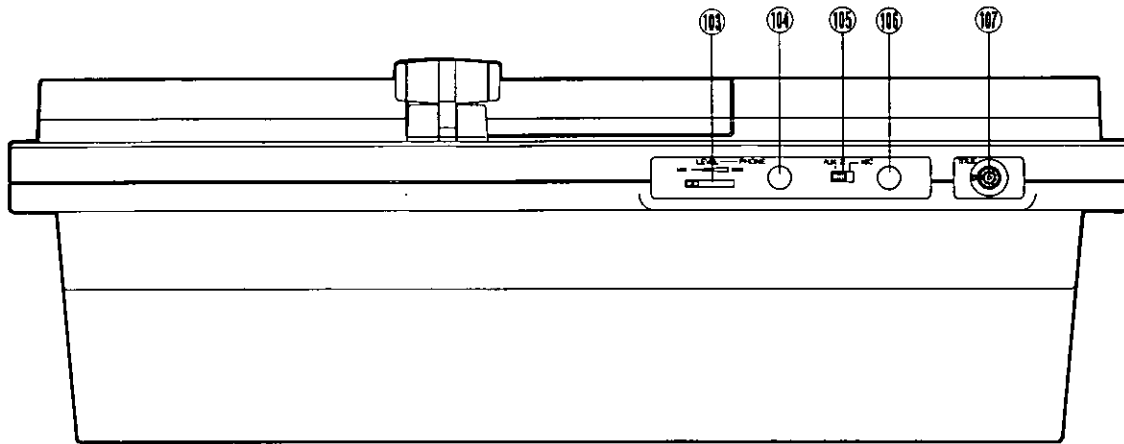


- 103. Headphone Level Control (LEVEL)**
The audio level of the headphone can be adjusted with this control.
- 104. Headphone Jack (PHONES)**
Optional headphone can be connected to this jack.
- 105. Mic/Aux-2 Switch (AUX 2/MIC)**
When the Mic/Aux-2 Audio Fader (87) is desired, select either Mic or Aux-2 with this switch.
- 106. Microphone Jack (MIC)**
Optional microphone can be connected to this jack.

- 107. Title Input Connector (TITLE)**
This connector is used to connect the optional Character Generator WJ-KB50 (recommended). The pin numbers are stated below.
(1): Character IN
(2): Not used
(3): Ground
(4): Not used
(5): Sync out
(6): Not used
(7): Ground
(8): +9V OUT
(9): Ground
(10): ID

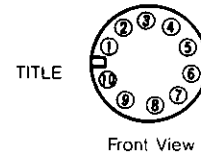

■ REAR VIEW

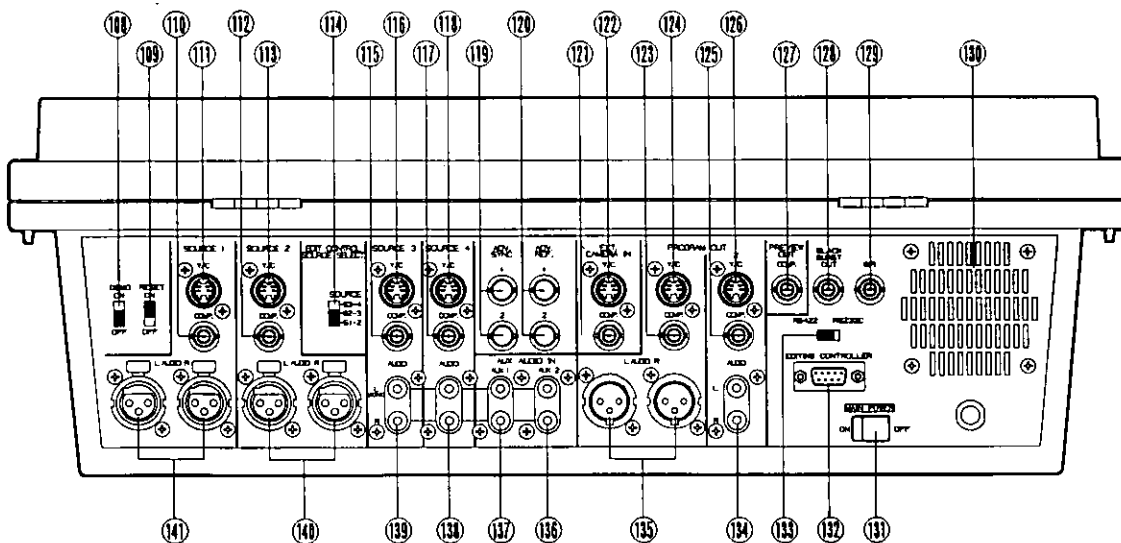

108. Demo ON/OFF Switch (DEMO ON/OFF)

When this switch is in the ON position, a preprogrammed mixer features demonstration takes place.

109. Reset ON/OFF Switch (RESET ON/OFF)

In case the power of this unit is turned on while this switch is in the ON position, the LED's on the panel light up as the factory preset. In case the power of this unit is turned on while this switch is in the OFF position, the LED's on the panel light up returning to how they were. Refer to Note 3 on page 17.

110. Source1 COMP. Input Connector (SOURCE1/COMP.)

This connector accepts a 1.0 Vp-p/75 ohms composite video signal.

111. Source1 Y/C Input Connector (SOURCE1-Y/C)

This connector accepts the S-Video signal.

Note:

This input has a priority over that of the COMP. Connector in the Source 1. If the S-Video signal and the composite signal are both supplied to the Source1 at the same time, only the S-Video signal is used as a Source1 Video signal.

112. Source 2 COMP. Input Connector (SOURCE2/COMP.)

This connector accepts a 1.0 Vp-p/75 ohms composite video signal.

113. Source 2 Y/C Input Connector (SOURCE2-Y/C)

This connector accepts the S-Video signal.

Note:

This input has a priority over that of the COMP. Connector in the Source 2. If the S-Video signal and the composite signal are both supplied to the Source 2 at the same time, only the S-Video signal is used as a Source 2 Video signal.

114. Source Selection Switch (EDIT CONTROL SOURCE SELECT, SOURCE)

This switch is used to choose between the Source signals for the Editing Controller AG-A800. The relation between this switch and the source selection switches (P1, P2, AUX) on the AG-A800 is as follows.

WJ-MX50 SOURCE	AG-A800		
	P1	P2	AUX
S1-2	Source 1	Source 2	Source 3
S2-3	Source 2	Source 3	Source 4
S3-4	Source 3	Source 4	Source 1

Example :

If this switch is in the S1-2 position, Source1 is selected when P1 button is pressed.

115. Source 3 COMP. Input Connector (SOURCE3/COMP.)

This connector accepts a 1.0 Vp-p/75 ohms composite video signal.

116. Source 3 Y/C Input Connector (SOURCE4-Y/C)

This connector accepts the S-Video signal.

Note:

This input has a priority to that of COMP. Connector in the Source 3. If the S-Video signal and the composite signal are both supplied to the Source 3 at the same time, only the S-Video signal is used as a Source 3 Video signal.

117. Source 4 COMP. Input Connector (SOURCE4/COMP.)

This connector accepts a 1.0 Vp-p/75 ohms composite video signal.

118. Source 4 Y/C Input Connector (SOURCE3-Y/C)

This connector accepts the S-Video signal.

Note:

This input has a priority to that of COMP. Connector in the Source 4. If the S-Video signal and the composite signal are both supplied to the Source 4 at the same time, only the S-Video signal is used as a Source 4 Video signal.

119. Advance Sync Output Connectors (ADV SYNC)

In the A/B Roll Editing System, the Advance Sync signal from this connector should be supplied to the playback VTR's which do not have the Time Base Corrector (T.B.C.) inside.

Note:

The enough editing accuracy may not be obtained without this signal. This signal is necessary for the Compression function and Trail function when it is recorded on the VTR.

120. Advance Reference Output Connectors (ADV REF)

In the A/B Roll Editing System, the Advance Reference Signal from this connector should be supplied to the playback VTR's which have the Time Base Corrector (T.B.C.) inside (or AUX video source).

Note:

The enough editing accuracy may not be obtained without this signal. This signal is necessary for the Compression function and Trail function when it is recorded on the VTR.

121. External COMP. Input Connector (EXT CAMERA IN/COMP.)

The external camera to be used as a Key Source is connected to this connector when the camera has the composite video signal.

122. External Y/C Input Connector (EXT CAMERA IN/Y/C)


The external camera to be used as a Key Source is connected to this connector when the camera has a S-Video Signal.

- 123. Program Out-1 COMP. Output Connector (PROGRAM OUT 1/COMP.)**
The Program Output Signal-1 of the composite video signal is provided via this connector.
- 124. Program Out-1 Y/C Output Connector (PROGRAM OUT 1/Y/C)**
The Program Output Signal-1 of the S-Video signal is provided via this connector.
- 125. Program Out-2 COMP. Output Connector (PROGRAM OUT 2/COMP.)**
The Program Output Signal-2 of the composite video signal is provided via this connector.
- 126. Program Out-2 Y/C Output Connector (PROGRAM OUT 2/Y/C)**
The Program Output Signal-2 of the S-Video signal is provided via this connector.
- 127. Preview Output Connector (PREVIEW OUT, COMP.)**
The effected video of the composite video signal is obtained at this connector regardless of the selection of the Program Out Buttons (15), (16), (17).
- 128. Black Burst Output Connector (BLACK BURST OUT)**
The Black Burst Signal for use with system synchronization is provided via this connector to the Editing Controller.
- 129. GPI Input Connector (GPI)**
In the A/B Roll Editing System, the GPI signal (General Purpose Interface) may be used in order to make an interface between the WJ-MX50 and the Editing Controller.
- 130. Cooling Fan**
- 131. Main Power Switch (MAIN POWER)**
The unit becomes stand-by mode by turning on this switch. Unless this switch is turned on, the unit will not be on even if the (front panel) Power ON/OFF Button (1) is pressed.
Note :
The unit becomes on without pressing Power ON/OFF Switch (1) by turning Main Power Switch (131) on if the Reset ON/OFF Switch (109) had been set to the OFF position. This takes place leaving the Main Power Switch (131) off for more than a few days.
- 132. Editing Control Connector (EDITING CONTROLLER)**
This connector is used for connecting with the Editing Controller AG-A800 or the Modem Unit.
- 133. RS422/RS232C Selection Switch (RS422/RS232C)**
When using an external product such as the Editing Controller AG-A800 or the Modem Unit, this switch is used to make the selection. In the case of the Editing Controller, turn this switch to the RS422 position. In the case of the Modem Unit, turn this switch to the RS232C position.
- 134. Program Out-2 Audio Output Jacks (PROGRAM OUT 2/AUDIO, L/R)**
The audio output signals of R-channel and L-channel on the Program Output 2 are provided via these jacks.
- 135. Program Out-1 Audio Output Connectors (PROGRAM OUT 1/AUDIO L/R)**
The audio output signals of R-channel and L-channel on the Program Output 1 are provided via these XLR-connectors.
- 136. Auxiliary Audio Input-2 Jacks (AUX AUDIO IN, AUX2)**
The auxiliary audio input 2 signal can be inputted via these jacks. When the audio is supplied to the L-channel, this audio is supplied to the R-channel (mono-mode) internally. When the audio is also supplied to the R-channel, this audio is used for the R-channel only.
- 137. Auxiliary Audio Input-1 Jacks (AUX AUDIO IN, AUX1)**
The auxiliary audio input 1 signal can be inputted via these jacks. When the audio is supplied to the L-channel, this audio is supplied to the R-channel (mono-mode) internally. When the audio is also supplied to the R-channel, this audio is used for the R-channel only.
- 138. Source 4 Audio Input Jacks (SOURCE 4/AUDIO L/R)**
Source 4 Audio Input signal can be supplied via these jacks. When the audio is supplied to the L-channel, this audio is supplied to the R-channel (mono-mode) internally. When the audio is also supplied to the R-channel, this audio is used for the R-channel only.
- 139. Source 3 Audio Input Jacks (SOURCE 3/AUDIO IN, AUX1)**
Source 3 Audio Input signal can be supplied via these jacks. When the audio is supplied to the L-channel, this audio is also supplied to the R-channel (mono-mode) internally. When the audio is also supplied to the R-channel, this audio is used for the R-channel only.
- 140. Source 2 Audio Input Connectors (SOURCE 2/AUDIO L/R)**
The Source 2 Audio Input Signal can be supplied via these XLR-connectors.
- 141. Source 1 Audio Input Connectors (SOURCE 1/AUDIO L/R)**
The Source 1 Audio Input Signal can be supplied via these XLR-connectors.

SYSTEM CONNECTION

This system diagram shows the example of Panasonic A/B ROLL EDITING SYSTEM with 2 Playback VTR's, 1 Recording VTR and 1 Editing Controller AG-A800.

For the details of operations, setting up of controls and connections for the VTR's, refer to the corresponding operating manuals.

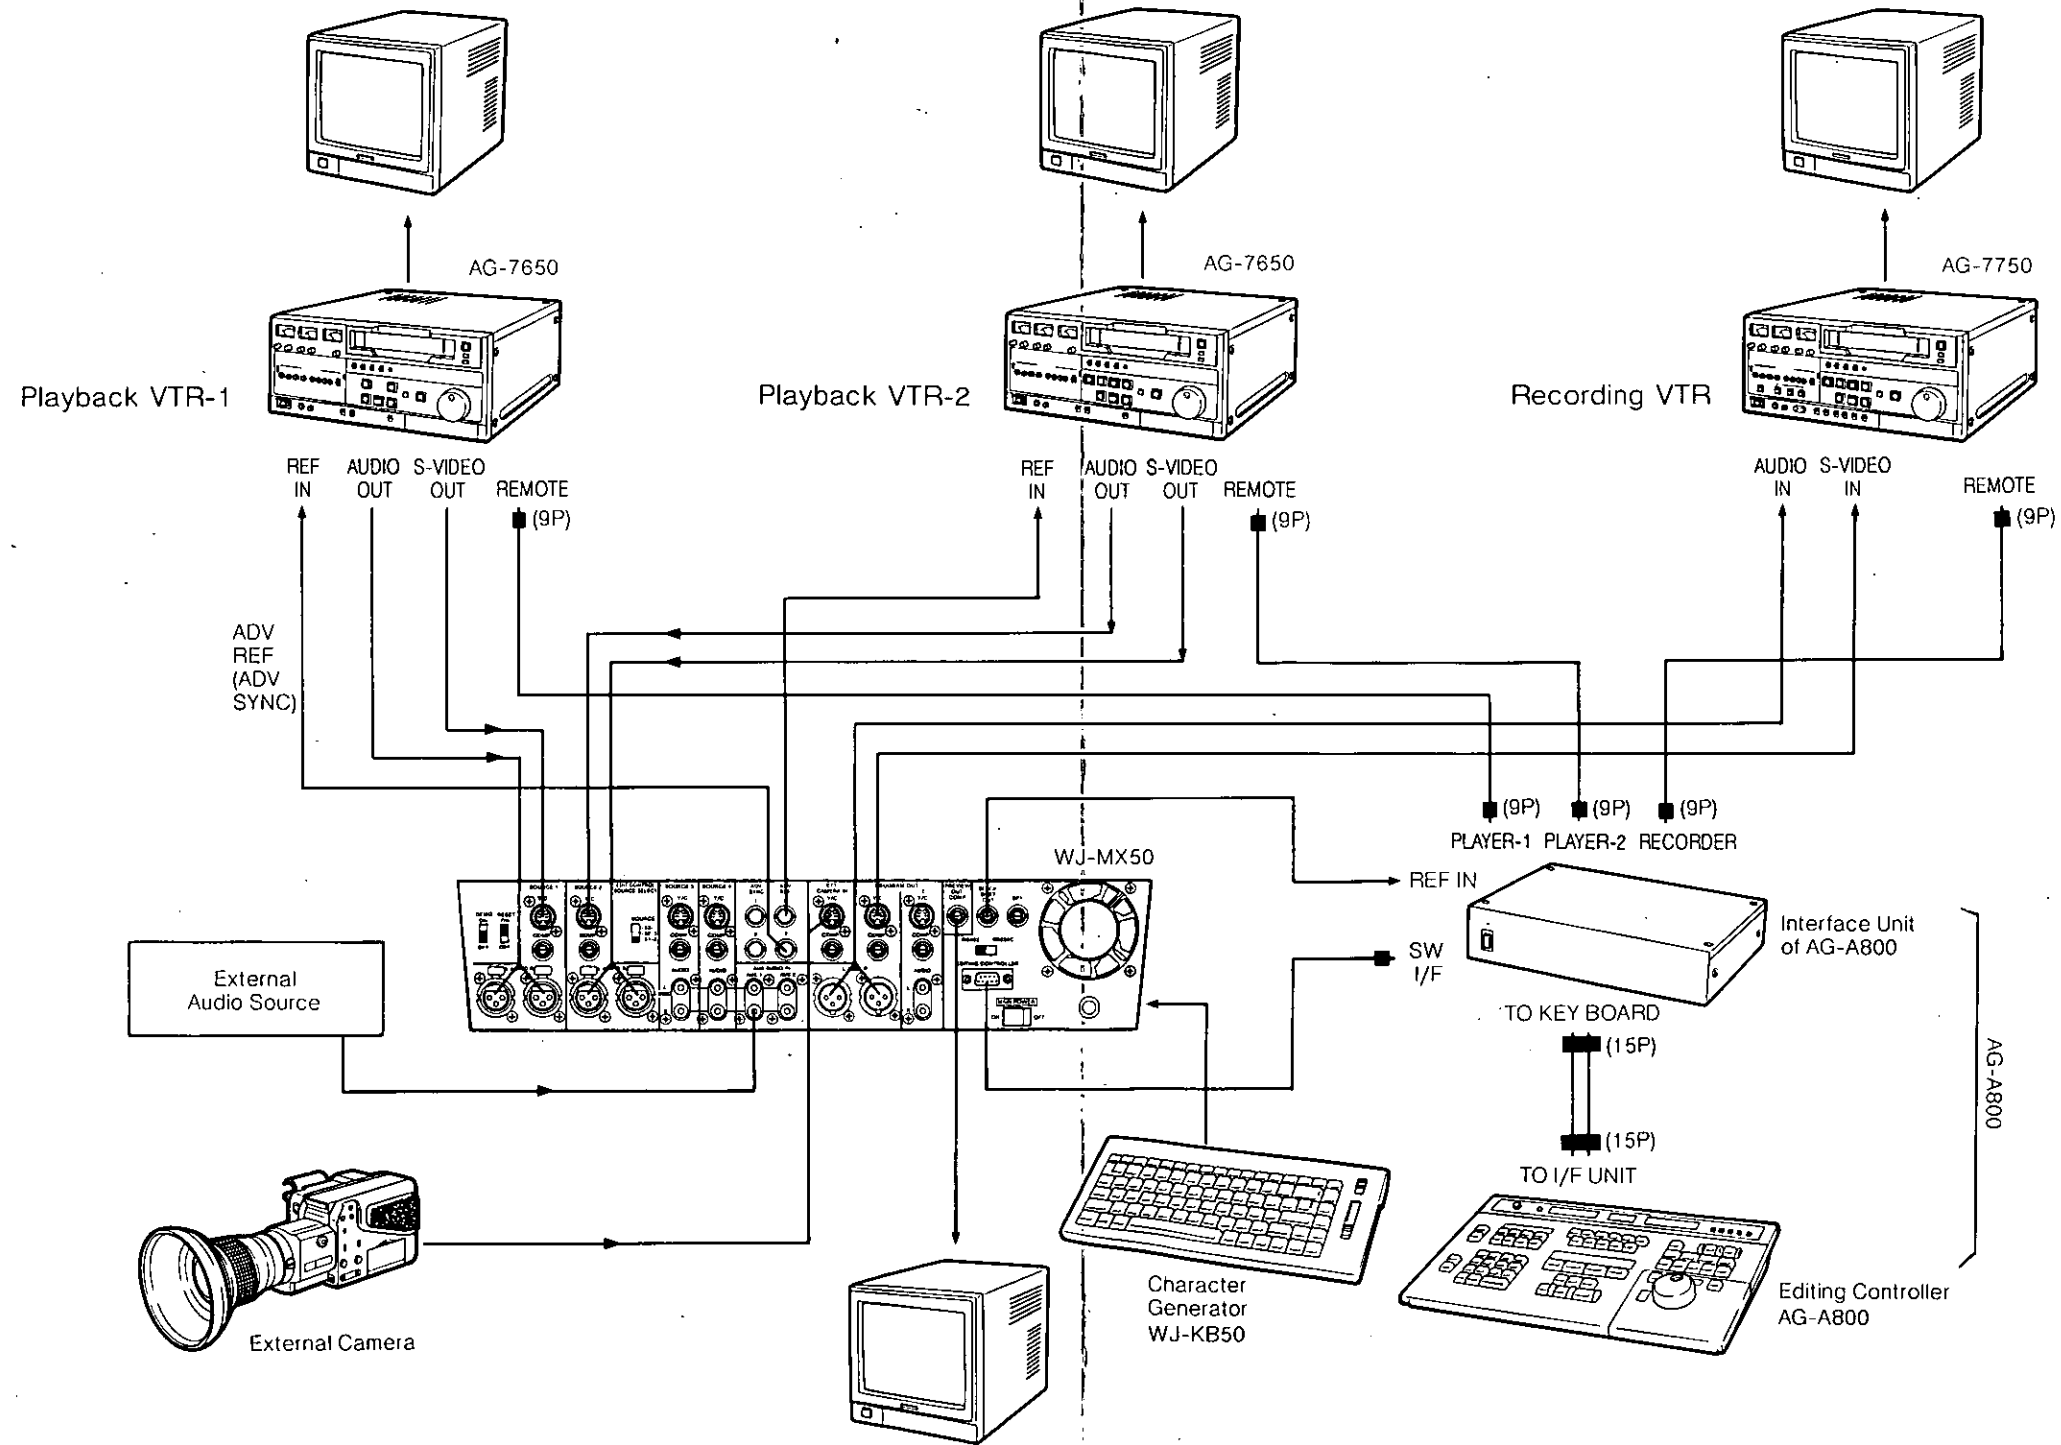

Note:
 The ADV REF, ADV SYNC or BLACK BURST signal should be used.
 The enough editing accuracy may not be obtained without this signal. This signal is necessary for the Compression function and Trail function when it is recorded on the VTR.

The following models (or equivalents) are recommended in this system. The S-Video signal and balanced audio signal are also recommended to use obtaining a quality edited outputs.

Digital AV Mixer :	WJ-MX50
Character Generator :	WJ-KB50
External Camera :	WV-D5100
Playback VTR :	AG-7650
Recording VTR :	AG-7750
Editing Controller :	AG-A800
Monitor TV	


- (1) Connect the coaxial cables between the Advance Reference Output Connectors (120) on the WJ-MX50 and the REF-IN connector on both Playback VTR-1 and -2.
- (2) Connect the audio cables between the Source 1 Audio Input Connector (141) /Source 2 Audio Input Connector (140)/Program Out-1 Audio Output Connector (135) on the WJ-MX50 and the AUDIO OUT connector/AUDIO IN connector on the Playback VTR-1/Playback VTR-2/Recording VTR respectively.
- (3) Set the Source Selection Switch (114) on the WJ-MX50 to the S1-2 position.
- (4) Connect the control cables between the PLAYER-1/PLAYER-2/RECORDER connectors on the Interface Unit of AG-A800 and the REMOTE connector on the Playback VTR-1/Playback VTR-2/Recording VTR respectively.
- (5) Connect the S-Video Cables between the Source 1 Y/C Input Connector (111)/Source 2 Y/C Connector (113)/Program Out-1 Y/C Output Connector (124) on the WJ-MX50 and the S-VIDEO OUT/S-VIDEO IN connectors on the Playback VTR-1/Playback VTR-2/Recording VTR respectively.
- (6) Connect the coaxial cable between the Black Burst Output Connector (128) on the WJ-MX50 and the REF IN connector on the Interface Unit of AG-A800.
- (7) Connect the control cable between the Editing Control Connector (132) and the SW I/F connector on the Interface Unit of AG-A-800.
- (8) Connect the control cable between the TO I/F UNIT connector on the AG-A800 and the TO KEY BOARD connector on the Interface Unit of AG-A800.
- (9) Connect the S-Video Cable between the S-Video Output Connector on the WV-D5100 and the External Y/C. Input Connector (122) on the WJ-MX50.
- (10) Connect the coaxial cable between the Preview Output Connector (127) on the WJ-MX50 and the Video Input Connector on the Monitor TV.
- (11) Connect the coaxial cables between the VIDEO OUT connectors on the Playback VTR-1/Playback VTR-2/Recording VTR and the Video Input Connectors on the Monitor TV respectively.
- (12) Connect the audio cable between the Audio Output on the External Audio Source and the Auxiliary Audio Input 1 Jacks (137) on the WJ-MX50.

OPERATION


A. Pre-operational setup

A-1. Power

1. Turn on the MAIN POWER Switch (131) located on the rear panel. The unit is now in stand-by mode. No operations can be executed yet.

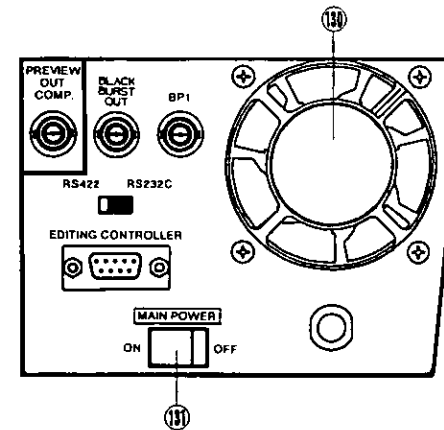

2. Press the POWER Button (1) on the operation panel. The unit is now in operation mode and the Cooling Fan (130) located on the rear panel starts to rotate. The LED's on the operation panel light up as shown if the RESET Switch (109) was already in the ON position.

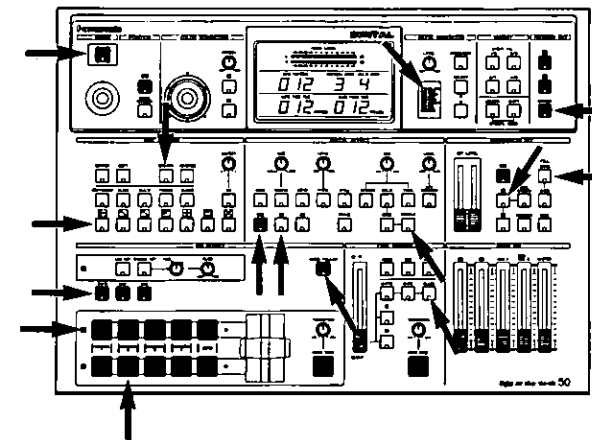


Notes:

1. If you do not use the unit for an extended period of time or to shut off the power completely, switch off the MAIN POWER Switch (131).
2. If the Cooling Fan (130) does not rotate, turn off and disconnect the AC power cord. Call service personnel before attempting further use.
3. The power of WJ-MX50 can be turned on from the Stand-by mode by turning on the power of AG-A800. In this case the LED of the Mix Select Button (73) turns on instead of the Wipe Select Button (74).

A-2. RESET Switch

1. **ON position . . . Factory preset operation mode**
It is recommended to normally keep the RESET Switch (109) in the ON position. It would be helpful in case of unexpected operational failure.
2. **OFF position . . . Field Preset operation mode**
The status of the operation mode will be remembered when the power of the unit is turned off. And this status, without Still, Strobe and Special function, is later recalled when the power is restored.

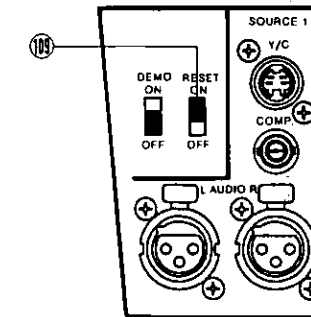


A-3. DEMO Switch

1. **ON position**
The preprogrammed demonstration of the built-in Effect functions of the WJ-MX50 will be automatically displayed on an attached video monitor.

Note:

This feature is useful for demonstrating functions to a new user to help familiarize him/herself with the unit.

2. **OFF position**
The unit reverts to standard operation mode. This switch is normally set to the OFF position.

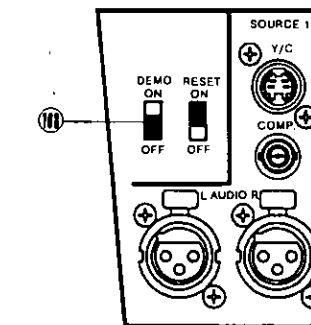


- A-4. Confirm that the unit is in the operation mode. Then set up the operation panel as mentioned in the next operating procedure.

B. Basic Operation-1


B-1. Input/Output Selection

1. Source Selector

The audio/video signal to be inputted for effect is selected from the respective options on the A-bus and B-bus. The selected audio will be controlled by the AUDIO MIX for the respective A-bus/B-bus audio.

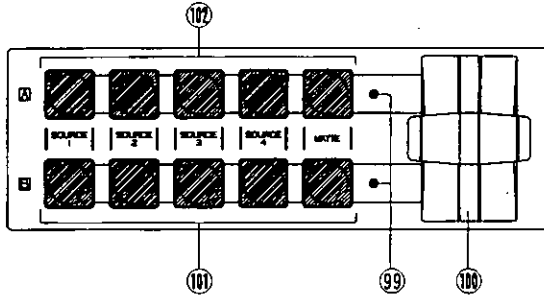

2. Program Out Selection

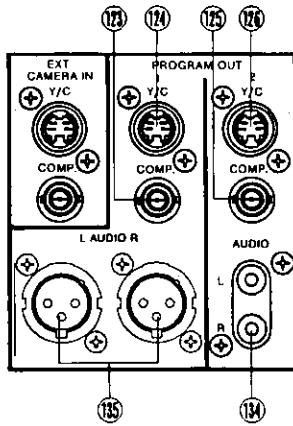


- The audio/video signal to be sent out to the PROGRAM OUT-1, -2 connectors (123) (124) (125) (126) (134) and (135) is selected by the appropriate PROGRAM OUT Buttons (15) (16) (17).
- In case the Source Video Signal from the A-bus is to be sent out directly, press the PROGRAM OUT A Button (15). (The Matte Signal will not be sent out. The Source Video whose button is blinking is sent out instead.) As for the audio, the mixed audios of A-bus Fader (90), AUX1 Fader (88) and AUX2 Fader (87) will be sent out.
- In case the Source Video Signal from the B-bus is to be fed out directly, press the PROGRAM OUT B Button (16). (The Matte Signal will not be sent out. The Source Video whose button is blinking is sent out instead.) As for the audio, the mixed audios of B-bus Fader (89), AUX1 Fader (88) and AUX2 Fader (87) will be sent out.
- In case the (operation panel processed) effected video signal is to be sent out, press the EFFECT Button (17). As for the audio, the mixed audios (all under the Master Audio) in the AUDIO MIX is sent out.

Note:

The A-bus or B-bus video signal sent out from the PROGRAM OUT connectors (123)-(126) will be effected by the Color Correction, Digital Effect, Position, Downstream Key, Mix Effect and Fade Control. So do not add these effects to the video if you want to see the original source video signal.

B-2. Matte

The Matte Color produced by the MATTE GENERATOR has 9 colors to choose from : Color Bar (C/L BAR), White, Yellow, Cyan, Green, Magenta, Red, Blue and Black.

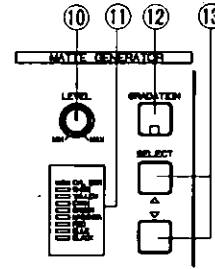

- To select the (background) matte color, press either SELECT Button (13) until reaching the desired color. The selected color is then indicated by the LED on the Matte Color Indicator (11).
- To change the chroma level of the selected matte color, adjust the Matte Color Control (10). The C/L BAR and BLACK will not be changed. In case the WHITE is selected, the brightness changes from black to white.
- When the GRADATION Button (12) is pressed, the Matte Color is gradated accordingly (per the Matte Color Control) from the top to the bottom.

Note:

When the Matte Color is selected by the Source Selector, it can be used as an alternate source signal for the WIPE (74), MIX (73) and NAM (72) functions. However the Matte color can not be used in the following effect operation. In these cases, the Source Video Signal on the blinking source button instead of the Matte Color will be displayed on the monitor automatically.


 
1. LUM KEY (75) effect
2. CHROMA KEY (76) effect
3. DOWN STREAM KEY effect
4. FADE CONTROL effect

B-3. Audio Mixer

There are 7 audio source inputs on the WJ-MX50 - the Source 1/2/3/4, 2 auxiliary audio inputs (AUX1, 2) and the external microphone. Each audio level can be adjusted independently by the audio faders.

The EFFECT Button (17) must be on to have the mixed audio outputs as combined in Audio Mix.

- When the AUX2 audio (instead of external microphone) is to be adjusted, turn the AUX-2/Mic Switch (105) on the front panel to the AUX2 position.

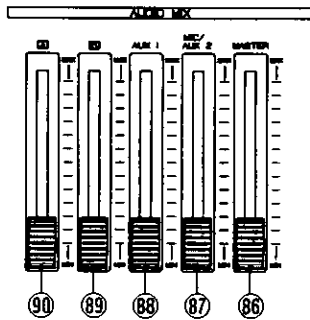


- The A Fader (90) adjusts the audio level of the A-bus Source Audio Signal; the B Fader (89) adjusts that of the B-bus. The AUX1 Fader (88) or the MIC/AUX2 Fader (87) adjusts each respective audio input signal accordingly.
- The MASTER Fader (86) adjusts the output audio level of the 4 mixed input faders. It is advisable to adjust the average output audio level to about 0 dB as represented on the Audio Level Indicator (9).
- When the A Button (15) on the PROGRAM OUT is pressed, the A-bus/AUX1 /AUX2-MIC audios are output to the Program Out Audio-1, -2 on the rear panel.
- When the B Button (16) on the PROGRAM OUT is pressed, the B-bus/AUX1 /AUX2-MIC audios are output to the Program Out Audio -1, -2 on the rear panel.
- When the EFFECT Button (17) on the PROGRAM OUT is pressed, A-bus/B-bus/AUX1/AUX2-MIC audios are output of the Program Out Audio -1, -2 on the rear panel.

B-4. Color Correction

This function allows for the adjustment of color from the selected input source, as well as compensation for excessive color. Using the monochrome effect, a single tint can be cast over on entire scene image.

Notes:

- The Color Correction will have no effect if the selected source video is a Black/White signal.
- The MONO Button (34) on the DIGITAL EFFECT should be off.
- The same color correction should be applied to both the A-bus and B-bus signals.

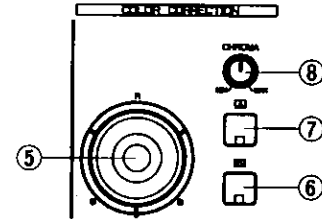


- To correct the A-bus signal, press the A Button (7) once. The LED starts blinking. In this case only the CHROMA Control (8) performs a color correction for the A-bus signal. If you press the A Button (7) a second time, the LED is turned on. The CHROMA Control (8) and the R/G/B Control (5) are then available to make color correction for the A-bus signal. To eliminate the color correction function, press the A Button (7) a third time to turn off the LED.
- To correct the B-bus signal, press the B Button (6) once. The LED starts blinking. In this case only the CHROMA Control (8) performs color correction for the B-bus signal. If you press the B Button (6) a second time, the LED is turned on. The CHROMA Control (8) and the R/G/B Control (5) are then available to make color correction for the B-bus signal. To eliminate the color correction, press the B Button (6) a third time to turn off the LED.
- If the CHROMA Control (8) is turned fully to the MIN position and the position of the R/G/B Control (5) to the center, a Black and White video image is obtained. When adjusting the R/G/B Control (5) from this position, a mono tone (R/G/B) video image is obtained.

Note:


The Black and White video image is obtained in another way - Press the Color-A Button (7) or Color-B (6) Button twice (The LED blinks). Turn the CHROMA Control (8) to fully MIN position.

B-5. Position Control


The position of the specific wipe pattern can be changed on the monitor screen using Position Control function.

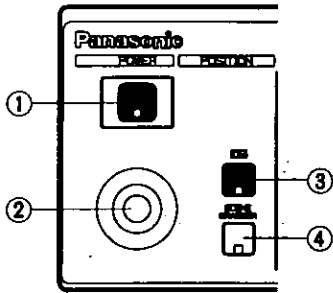


- Press the Square Wipe Button (60) and select the desired wipe pattern by pressing this button repeatedly.
- If necessary, change the aspect ratio by using the Aspect Control (29) and Aspect ON/OFF Button (30).

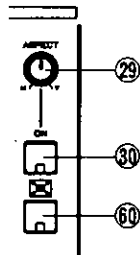

- Press the ON Button (3). (The wiped size becomes double.)
- Adjust the Mix/Wipe Lever (99) to obtain the desired wipe size.
- Operate the Positioner Joystick (2). The position of the wiped scene can be changed on the monitor screen.

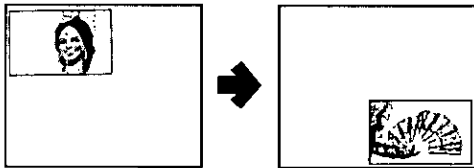

- When the SCENE GRABBER Button (4) is selected together with the ON Button (3), the scene in the wipe pattern will be "grabbed".
- Operate the Positioner Joystick (2). The position of the "grabbed" wipe scene can be freely set on the monitor screen.

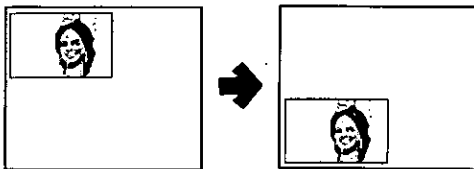

Note:

When the ON Button (3) is turned off, the SCENE GRABBER Button (4) becomes off.


C. Basic Operation-2

Digital Effect block

The following instructions detail the Digital Effect block function which generates digital special effects for the A-bus and B-bus source video signals. In order to add the desired effect(s) on the A-bus (B-bus) signal, press the A-Button (58) (B-Button (57)) and the ON-Button (59).


Notes:

1. The selected effect(s) can be added to either the A-bus or B-bus at one time.
2. Without pressing the ON-Button (59), the digital effect(s) will not be applied on the A-bus or B-bus signal.

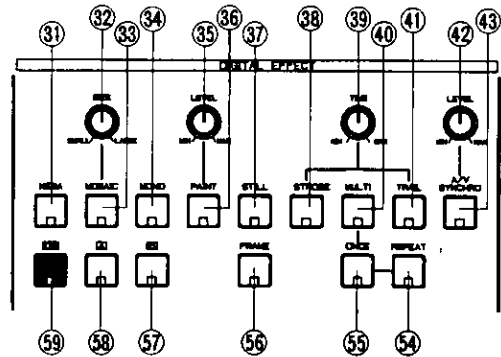


1. Negative

Press the NEGA Button (31). The negative image (like a film negative) is obtained. The Color Correction can also be added with this function.

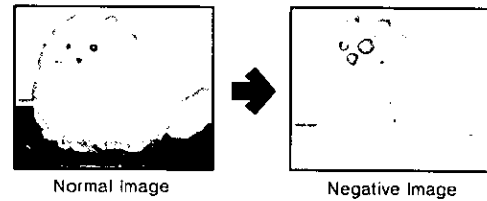

2. Press the MOSAIC Button (33). A mosaic-like or box-like pattern is obtained. The size of the mosaic pattern can be adjusted continuously for up to 31 increments by adjusting the SIZE Control (32).


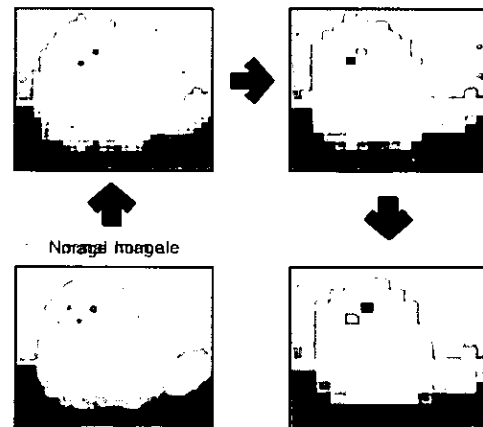


3. Monochrome

Press the MONO Button (34). A black and white image can be obtained.


4. Paint

Press the PAINT Button (36). An oil-paint touch image can be obtained. The gradation level of the simulated paint can be changed continuously by adjusting corresponding LEVEL Control (35).

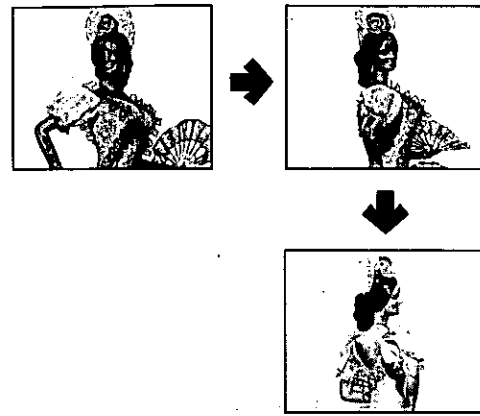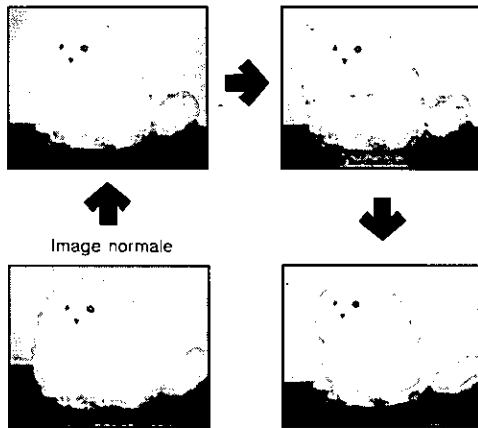

5. Still

Press the STILL Button (37). An instant or frozen image at any point in the selected video input will be obtained.

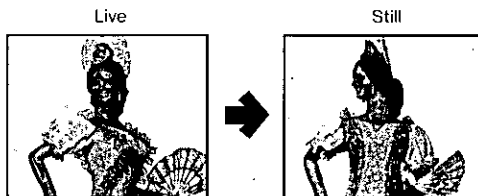

Notes:


1. The Trail mode can be performed when the Still mode is under operation. The LED on Still Button blinks during Trail mode.
2. The Strobe mode, Multi mode and Compression mode can not be used when the Still mode is under operation. The Still mode becomes off automatically.

6. Strobe

Press the STROBE Button (38). A Stroboscopic image like a series of still images is played in slow motion at variable 0.03 to 2.1 second intervals. The interval can be adjusted by the TIME Control (39).

7. Multi

Press the MULTI Button (40). The video image on the monitor TV changes to display multiple video images. When you press it once, 4 images are displayed. The second time makes it 9 images and the third press makes it 16 images. A fourth press of the MULTI Button (40) returns the screen to its normal single image. The display interval for multiple video image can be changed by the TIME Control (39) from approximately 0.07 seconds to 2.1 seconds.

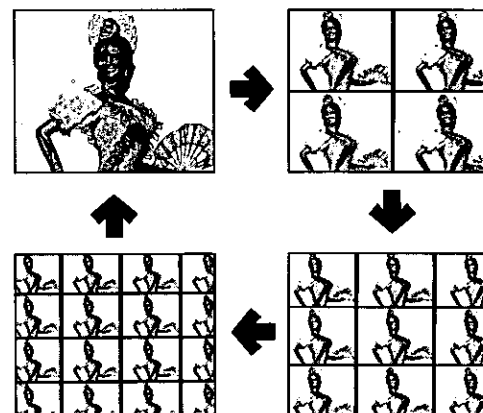

Note:

Each of the multiple video images scans either one time through the multiple image series or repeatedly (i.e. cycling through the screens until disables) by selecting of the ONCE Button (55) or the REPEAT Button (54).

8. Trail

Press the TRAIL Button (41). The displayed compressed video image successively trails one after another from small to larger and larger video images up to a maximum of 16 images. The trail time interval can be changed by the TIME Control (39) from approximately 0.07 seconds to 2.1 seconds.




Notes:

1. The start position can be selected by the Positioner Joystick (2) either to start from upper right or upper left. And by adjusting the Positioner Joystick (2) while trail is on progress a "staggered" series of images can be obtained.
2. The Compression Wipe function, by pressing the Compression Button (71), does not work properly during the trail mode's execution.
3. The A/V Synchro mode can not be used together with the Trail mode.


9. A/V Synchro

Press the A/V SYNCHRO Button (43). The music or sound supplied to the WJ-MX50 can trigger other selected Digital Effect(s) except the Trail mode.

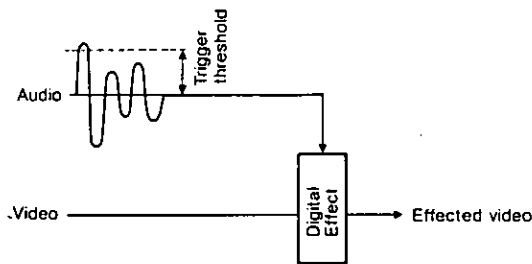

Notes:

1. The trigger threshold can be adjusted by the LEVEL Control (42).
2. The A/V Synchronization holds the desired effect(s) of Nega, Mosaic, Mono, Paint and Still for certain period once triggered. The holding time varies as shown below.

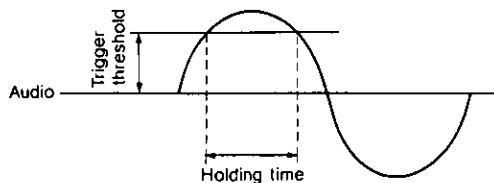


3. The A/V Synchronization holds the Strobe effect on for the period adjusted by the Effect Interval Timer (39).

D. Basic Operation-3


Mix and Wipe block

The following instructions detail the Mix and Wipe block, which consists of five functions ... Mix, Wipe, Luminance Key, Chroma Key and NAM.

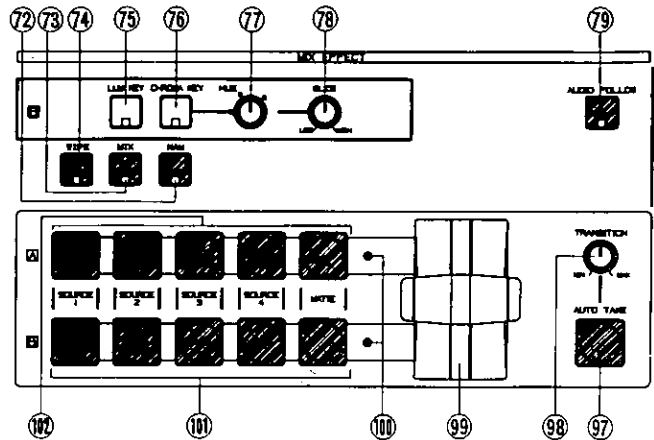

D-1. Mix

- Press the MIX Button (73)
- Select the source signals from the A-bus (102) and B-bus (101). In case the MATTE color is selected, the color choice is available from the SELECT buttons (13) on the MATTE GENERATOR.

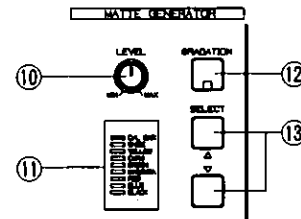

- Operate the Mix/Wipe Lever (99) from the A-bus to B-bus, or vice versa to perform the desired mixing.
- Notice the following Mix/Wipe LED's (100) are lighting as appropriate.
 - (1) A-bus : ON → A-bus image fully displayed on the screen.
 - (2) A-bus : blinking → A-bus image (stronger) and B-bus image (weaker) on the screen.
 - (3) B-bus : blinking → A-bus image (weaker) and B-bus image (stronger) on the screen.
 - (4) B-bus : ON → B-bus image fully displayed on the screen.

D-2. NAM (Non-Additive-Mix)

- Press the NAM Button (72)
- Select the source signals from the A-bus (102) and the B-bus (101). In case the MATTE is selected, the color choice is available from the SELECT buttons (13) on the MATTE GENERATOR.


- Operate the Mix/Wipe Lever (99) from A-bus to B-bus, or vice versa to the desired display ratio.
- The Mix/Wipe LED's (100) will light as appropriate.
 - (1) A-bus : ON→A-bus image fully displayed on the screen.
 - (2) A-bus : blinking→A-bus image (stronger) and B-bus image (weaker) on the screen.
 - (3) B-bus : blinking→A-bus image (weaker) and B-bus image (stronger) on the screen.
 - (4) B-bus : ON→B-bus image fully displayed on the screen.

Note:

When the Mix/Wipe Lever (99) is positioned at the center, the brighter part of each respective scene (between the A-bus signal and B-bus signal) can be observed on the screen (as opposed to the Mix function which just mixes the two images).

D-3. Wipe

The wipe pattern is produced from the WIPE PATTERN block as shown below.

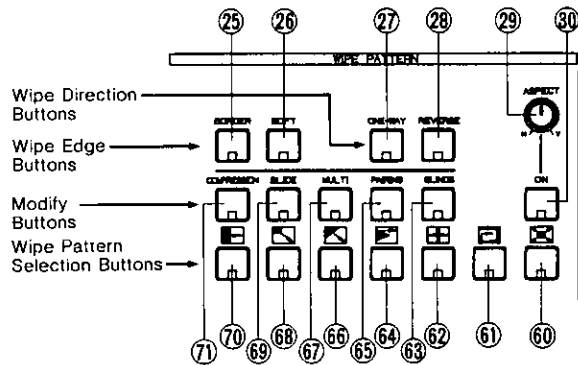

1. Wiping

- Press the WIPE Button (74)
- Select the source signals from the A-bus (102) and the B-bus (101). In case the MATTE is selected, the color choice is available from the SELECT buttons (13) on the MATTE GENERATOR
- Select and press the desired Wipe Pattern Select Buttons and the Modify Buttons.
- Also if desired, select and press the buttons from the Wipe Edge Buttons and the Wipe Direction Buttons.
- Operate the Mix/Wipe Lever (99) from A-bus to B-bus, or vice versa. Wiping is thus performed accordingly.
- Notice that the Mix/Wipe LED's (100) are lighting as follows.
 - (1) A-bus : ON→A-bus image fully displayed on the screen.
 - (2) A-bus : blinking→The Mix/Wipe Lever (99) moves to halfway done.
 - (3) B-bus : blinking→The Mix/Wipe Lever (99) moves after halfway done.
 - (4) B-bus : ON→B-bus image on fully displayed the screen.

Notes:

1. The wipe pattern can be generated in combination with the Wipe Pattern Select Buttons and the Modify Buttons. Every generated wipe pattern combination is numbered and is displayed on the Wipe Pattern Number Indicator (24). Refer to the Pattern Table on page 28.
2. Each generated wipe pattern can be selected for the Wipe Edge function and the Wipe Direction function by appropriately pressing the Wipe Edge Buttons and the Wipe Direction Buttons.

2. Wipe Edge

- Press the BORDER Button (25) once, a narrow border is added between the wiped images. If it is pressed again, the border becomes wide. A third press of the button eliminates the border entirely.
- Press one of the Matte Color Selectors (13) to select then add the desired color on the border. (The complementary color of Matte Color is applied.)



Narrow Border with Matte Color



Wide Border with Matte Color

- Press the SOFT Button (26). A faint border is displayed between the two video images at the wipe margin. (No Matte Color is available)




3. Wipe Direction


- Press the ONE-WAY Button (27). The wiping scene moves the same way every time the Mix/Wipe Lever (99) is operated.



- Press the REVERSE Button (28). The movement of the wiped scene will be executed in the reverse direction.

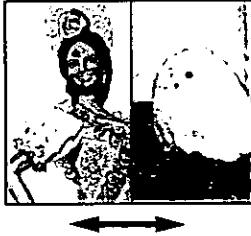

- Press both the ONE-WAY Button (27) and REVERSE Button (28). The combination of these two functions will allow for symmetrical screen wiping.

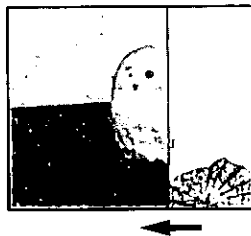

4. Pattern Modifier


Modify Buttons should be used in combination with some of the Wipe Pattern Select Buttons. If the prohibited combination is made, the LED on the Modify Button goes off or the Straight Wipe Button (70) is automatically selected.

Note :


For the details of the combinations, refer to the Wipe Pattern Table on page 28.

(1) Compression

The following wipe pattern from the Wipe Pattern Selection Buttons can be used with this mode.

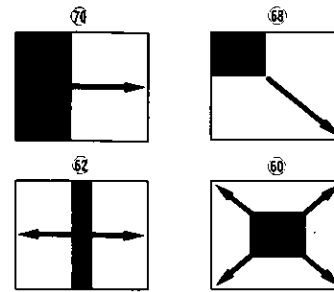

- Press the COMPRESSION Button (71) once. The compressed video scene (fully displayed but at available size) is wiped in/out on the monitor screen.

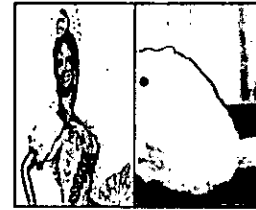


- Press the COMPRESSION Button (71) twice. The compressed video scenes for both A-bus and B-bus images are wiped in-out on the monitor screen.



(2) Slide


The following wipe pattern can be used with this mode.

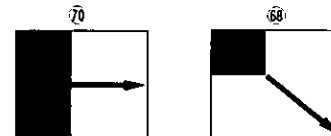


- Press the SLIDE Button (69) once. Either A-bus or B-bus image will slide over the other bus image.



- Press the SLIDE Button (69) twice. The A-bus and B-bus images will slide in/out over each other.

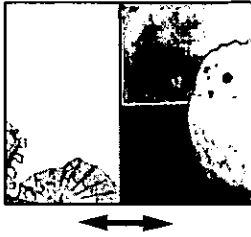

- (3) Multi
The following wipe pattern can be used with this mode.

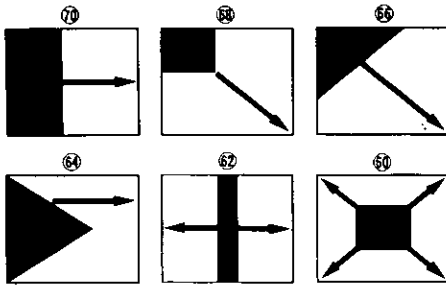


- Press the MULTI Button (67). The vertical multiple pattern or the horizontal multiple pattern (up to 6 variations) can be obtained by pressing this button repeatedly.



- The MULTI Button (67) can be used in combination with the PAIRING Button (65).

- (4) Pairing
The following wipe pattern can be used with this mode.

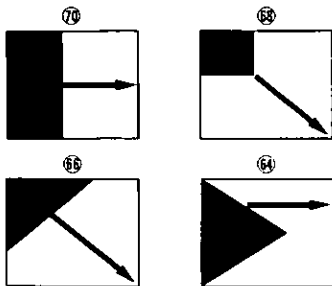


- Press the PAIRING Button (65). A paired wipe scene can be obtained.



- The PAIRING Button (65) can be used in combination with the MULTI Button (67).

- (5) Blinds
The following wipe pattern can be used with this mode.

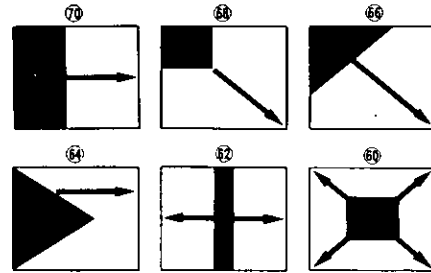

- Press the BLINDS Button (63). The video scene is wiped in a blinds pattern.




5. Pattern Selection

Select one of Wipe Pattern Select Buttons to obtain a desired wipe pattern. This button can also be used in conjunction with the Modify Button(s) to display a variety of wipe patterns. Refer to the Wipe Pattern Table on page 28 for the combinations.


- (1) Straight Wipe Pattern

- Press the Straight Wipe Button (70). The following patterns can be selected by pressing this button repeatedly.

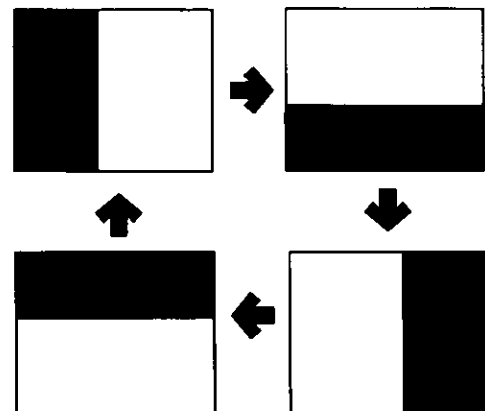


(2) Corner Wipe Pattern

- Press the Corner Wipe Button (68). The following patterns can be selected by pressing this button repeatedly.

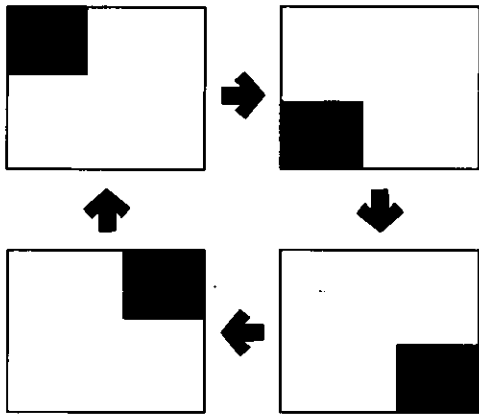


(3) Diagonal Wipe Pattern

- Press the Diagonal Wipe Button (66). The following patterns can be selected by pressing this button repeatedly.

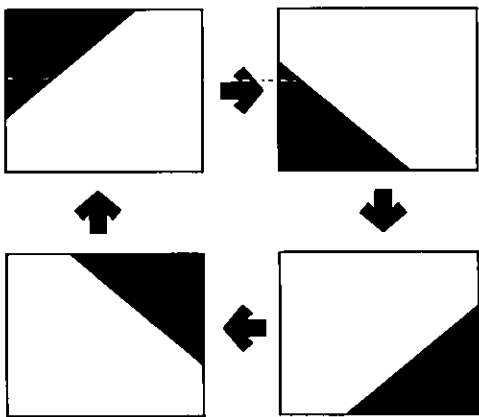


(4) Triangle Wipe Pattern

- Press the Triangle Wipe Button (64). The following patterns can be selected by pressing this button repeatedly.

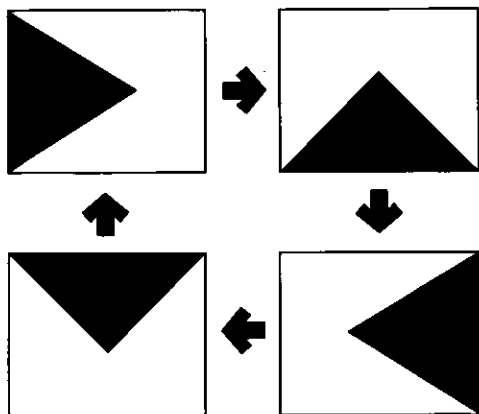


(5) Split Wipe Pattern

- Press the Split Wipe Button (62). The following patterns can be selected by pressing this button repeatedly.

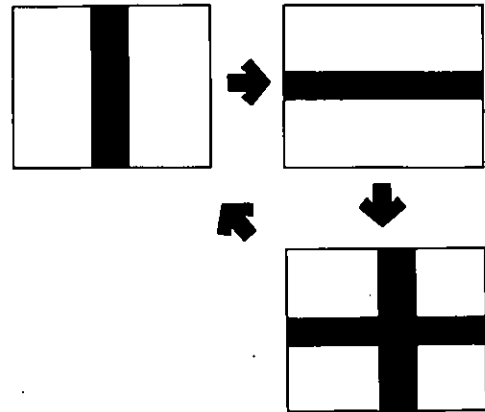


(6) Mosaic Wipe Pattern

- Press the Mosaic Wipe Button (61). The following patterns can be selected by pressing this button repeatedly.

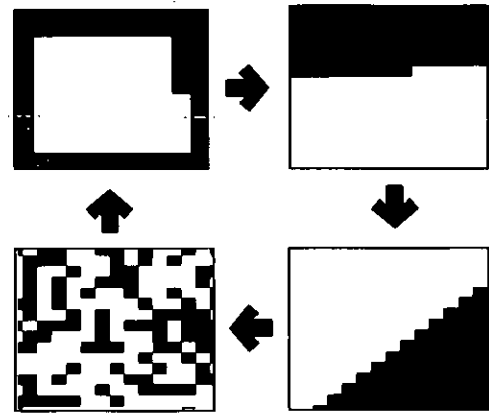


(7) Square Wipe Pattern

- Press the Square Wipe Button (60). The following patterns can be selected by pressing this button repeatedly.

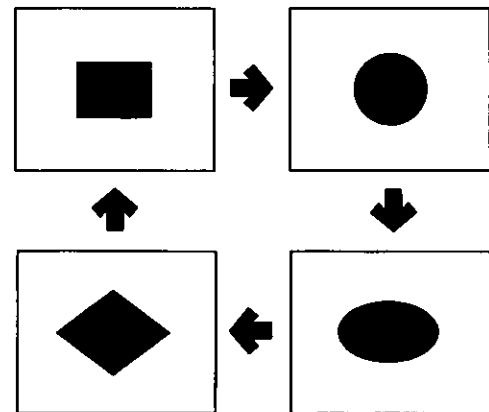


- To change the aspect ratio of the pattern, press the Aspect ON/OFF Button(30) and adjust the ASPECT Control (29) for the desired aspect ratio.

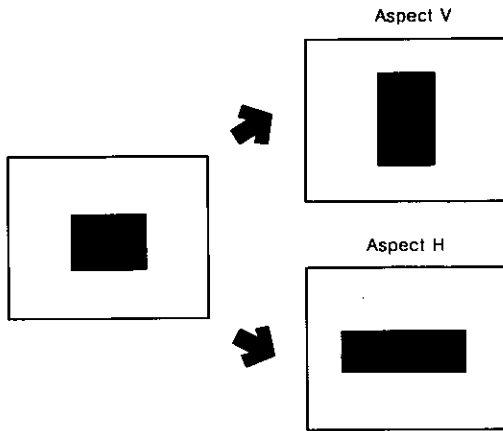

D-4. Luminance Key

- Move the Mix/Wipe Lever (99) all the way to the B-bus position.
- Press the LUM KEY Button (75)
- Adjust the SLICE Control (78) to the desired clear key picture threshold.

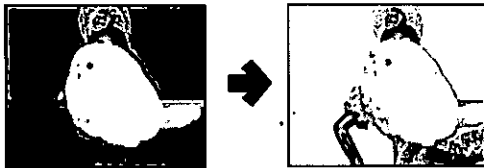


Note :

By adjusting the Mix/Wipe Lever (99) to the A-bus position, a mixing effect can be obtained.

D-5. Chroma Key

- Move the Mix/Wipe Lever (99) all the way to the B-bus position.
- Press the CHROMA KEY Button(76).
- Set the SLICE Control (78) to the center position.
- Adjust the HUE Control (77) to fix the desired color.
- Adjust the SLICE Control (78) to the desired clear key picture threshold.

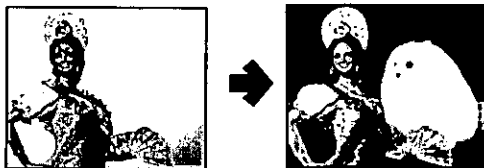

Notes :

1. By adjusting the Mix/Wipe Lever (99) to the A-bus position, a mixing effect can be obtained.
2. It is strongly recommended to use a well lighted and stable object for the key image (B-bus) to achieve the best results.

D-6. Pattern Table



 















































- Up to 287 wipe patterns are available in combination of the Pattern Selection Buttons (27 patterns) and the Pattern Modifier Buttons (18 kinds). However, due to the limitation of RS422 protocol, the Wipe Pattern Indicator can show the numbers 001 to 255 only.
- The AG-A800 can access the wipe pattern number of WJ-MX50 from 01 to 99. Refer to the service personnel for more information on the access matter.
- If the wipe pattern number of 99 is accessed by the AG-A800, the wipe pattern which is currently set up by the WJ-MX50 will be generated.
- The round in the Pattern Table means that the wipe pattern is available but neither access from the external Editing Controller nor the wipe pattern indication is possible.
- Example of the number in the Pattern Table.
 1. 001 is displayed when the straight Wipe Button (□) is pressed.
 2. 129 is displayed when the Reverse Button (28) is additionally pressed with the Straight Wipe Button (□).
- The following functions and the Wipe Pattern Numbers can be accessed by the external Editing Controller.

Function	Wipe Pattern Number
Special Mode 1	55
Special Mode 2	56
Special Mode 3	57
Special Mode 4	58
Special Mode 5	59
Special Mode 2 (Reverse)	184
Special Mode 3 (Reverse)	185
Special Mode 4 (Reverse)	186
NAM	60
LUM KEY	61
CHROMA KEY	62

WIPE PATTERN TABLE

Wipe Pattern Selection Buttons															
	Modify Button	PATTERN MODE													
	1	2	3	4	1	2	3	4	1	2	3	1	2	3	4
No Modify Button	 001 129	 002 130	 003 131	 004 132	 005 133	 006 134	 007 135	 008 136	 009 137	 010 138	 011 139	 012 140	 013 141	 014 142	 015 143
COMPRESSION I (Single-Bus)	 028 156	 029 157	 030 158	 031 159	 036 164	 037 165	 038 166	 039 167	 040 168	 041 169				 042 170	
COMPRESSION II (A-B-Bus)	 032 160	 033 161	 034 162	 035 163											
SLIDE I (Single-Bus)	 043 171	 044 172	 045 173	 046 174	 051 179	 052 180	 053 181	 054 182							
SLIDE II (A-B-Bus)	 047 175	 048 176	 049 177	 050 178											
PAIRING	 063 191	 064 192	 065 193	 066 194	 067 195	 068 196	 069 197	 070 198							
BLINDS	 079 207	 080 208	 081 209	 082 210	 083 211	 084 212	 085 213	 086 214	 087 215	 088 216	 089 217	 090 218	 091 219	 092 220	 093 221
MULTI MODE 1	 ○		 ○		 ○	 ○	 ○	 ○	 ○	 ○		 ○	 ○	 ○	 ○
MULTI MODE 2		 ○		 ○	 ○	 ○	 ○	 ○	 ○		 ○	 ○	 ○	 ○	 ○
MULTI MODE 3					 ○	 ○	 ○	 ○	 ○			 ○	 ○	 ○	 ○
MULTI MODE 4	 103 231		 ○		 ○	 ○	 ○	 ○	 ○			 ○	 ○	 ○	 ○

2	3	4	1	2	3	4	1	2	3	4	1	2	3	4	
013 141	014 142	015 143	016 144	017 145	018 146	019 147	020 148	021 149	022 150	023 151	024 152	025 153	026 154	027 155	
			071 199	072 200	073 201	074 202	075 203	076 204	077 205	078 206					
091 19	092 220	093 221	094 222	095 223	096 224	097 225	098 226	100 228	101 229	102 230					
○	○	○	○	○	○	○	○	○	○	○					
○	○	○	○	○	○	○	○	○	○	○					
○	○	○	○	○	○	○	○	○	○	○					
○	○	○	○	○	○	○	○	119 247	○	121 249					

Wipe Pattern Selection Buttons												
	Modify Button	PATTERN MODE										
	1	2	3	4	1	2	3	4	1	2	3	1
MULTI MODE 5		 104 232		 ○	 ○	 ○	 ○	 ○		 ○	 ○	 ○
MULTI MODE 6					 105 233	 106 234	 107 235	 108 236			 109 237	 110 238
MULTI MODE 1 & PAIRING	 122 250		 ○		 ○	 ○	 ○	 ○				
MULTI MODE 2 & PAIRING		 123 251		 ○	 ○	 ○	 ○	 ○				
MULTI MODE 3 & PAIRING					 ○	 ○	 ○	 ○				
MULTI MODE 4 & PAIRING	 ○		 ○		 ○	 ○	 ○	 ○				
MULTI MODE 5 & PAIRING		 ○		 ○	 ○	 ○	 ○	 ○				
MULTI MODE 6 & PAIRING					 ○	 ○	 ○	 ○				

SPECIAL MODE	No. 1	No. 2	No. 3	No. 4	No. 5
	055	056 184	057 185	058 186	059 —

NAM	LUM KEY	CHROMA KEY
060	061	062

2	3	4	1	2	3	4	1	2	3	4	1	2	3	4	
○	○	○	○	○	○	○	118 246	○	120 248	○					
111 239	112 240	113 241	114 242	115 243	116 244	117 245	○	○	○	○					
			○	○	○	○	○	○	○	○					
			○	○	○	○	○	○	○	○					
			124 252	125 253	○	○	126 254	127 255	○	○					
			○	○	○	○	○	○	○	○					
			○	○	○	○	○	○	○	○					


Remarks:

- Each box number should be read as,
001 → Normal Wipe
129 → Reverse Wipe
- The box marked (○) can not be accessed by external controller. However, the wipe pattern can be available.
- No wipe pattern is available for the blank box.

E. Basic Operation-4

Downstream Key

The following instructions detail the Downstream Key block. This function is mainly used for superimposing the characters or letters as for a teloper. The optional Character Generator WJ-KB50 can be used for this purpose.

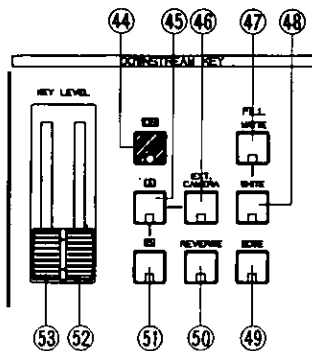


- Set the Low Level Key Control (53) to the end low position and the High Level Key Control (52) to the top high position




- Turn the Mix/wipe Lever (99) to the B-bus position.
- Select and press either the MATTE Button (47) or the WHITE Button (48) as a Key-Fill signal. The Key-Fill signal will be filled on the key signal. When the MATTE Button (47) is pressed, the choice of desired color is available from the MATTE GENERATOR.
- Press the EXT. CAMERA Button (46) as a Key Signal. (or A-Button (45) or B-Button (51) can be selected)
- Press the ON Button (44). The Fill color will then be displayed.
- Adjust the Low Level Key Control (53) to obtain the clear edge key image. Similarly adjust the High Level Key Control (52) as necessary.

Example of using the title card option.

In case the title is written with white letters on the black card, adjust the Low Level Key Control (53) to obtain a clear edge key image.

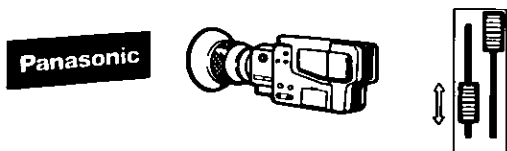


In case the title is written with black letters on the white card, adjust the High Level Key Control (54) to obtain a clear edge key image.

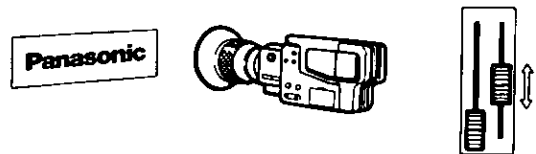


Notes :

1. When the optional Character Generator WJ-KB50 is used for the key source, set both the KEY LEVEL controls (52) (53) to the low end position.
2. If the EXT. CAMERA signal is jittery, as in the case of a VTR playback signal, this could cause a disturbance in synchronization.
- When the REVERSE Button (50) is pressed, the keyed-image and the background image will reverse the settings.

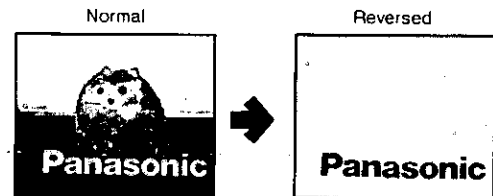

- When the EDGE Button (49) is pressed, two types (shadow, border) and five kinds of edges are available by pressing this button repeatedly.

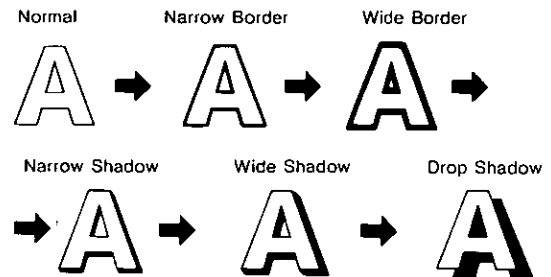


Notes :

1. When the Key image is white, the color on the edge of the threshold can be set to any one of 9 colors, solid or graded by pressing the Matte Color Selector (13) and the Gradation Button (12) to the desired color.
2. When the Matte Colored key image is used, the edge color if displayed at all is always black.

F. Basic Operation-5

Fade


Synchronized fading makes it possible to operate the Video, Downstream Key and Audio fades together, or in any combination. Each of the three can be controlled independently, via either Auto Fade or a manual Fader. The following area shows the Fade Control Block.

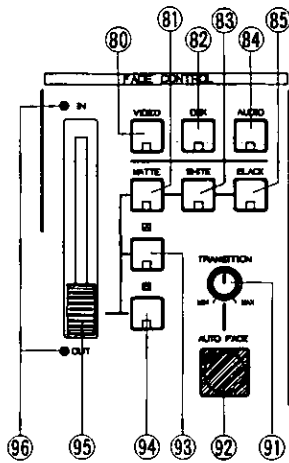

The VIDEO (80), DSK (82) and/or AUDIO (84) signals can fade out to one of the following : MATTE (81), WHITE (83), BLACK (85), A (93), or B (94) signal.

F-1. Video Fade-Out (In)

- Set the Fade Control (95) to the IN (OUT) position.
- Select the fade out scene from : MATTE, WHITE, BLACK A or B.
- Press the VIDEO Button (80).
- Slide the Fade Control (95) to the OUT (IN) position. The IN (OUT) LED starts blinking (as the fade progresses) then the OUT (IN) LED begins blinking after the fade is halfway done. The OUT (IN) LED becomes continuously on when the Fade Control (95) reaches the AUT (IN) position.

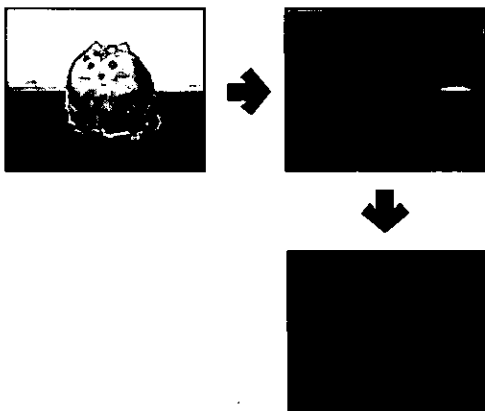


Note :

If the automatic fading is to be operated, first adjust the TRANSITION Control (91) to the desired auto fading time. Then press the AUTO FADE Button (92) when ready to execute. The Auto-Fade can be stopped during Auto-fading by pressing this button. The LED on the VIDEO Button (80) blinks while stopping. The Auto-fading will start again by pressing the AUTO FADE Button (92) again.

F-2. Downstream Key Fade-Out (In)

- Set the Fade Control (95) to the IN (OUT) position
- Press the DSK Button (82).
- Slide the Fade Control (95) to the OUT (IN) position. The IN (OUT) LED starts blinking (as the fade progresses) then the OUT (IN) LED begins blinking after the fade is halfway done. The OUT (IN) LED becomes continuously on when the Fade Control (95) reaches the OUT (IN) position.

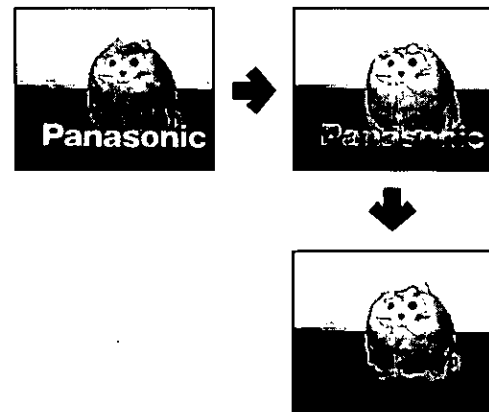

Note :

If the automatic fading is to be operated, first adjust the TRANSITION Control (91) to the desired auto fading time. Then press the AUTO FADE Button (92) when ready to execute. The Auto-Fade can be stopped during Auto-fading by pressing this button. The LED on the DSK Button (82) blinks while stopping. The Auto-fading will start again by pressing the AUTO FADE Button (92) again.

F-3. Audio Fade-Out (In)

- Set the Fade Control (95) to the IN (OUT) position.
- Select the fade out scene from : MATTE, WHITE, BLACK, A, or B.
- Press the AUDIO Button (84).
- Slide the Fade Control (95) to the OUT (IN) position. The IN (OUT) LED starts blinking (as the fade progresses) then the OUT (IN) LED begins blinking after the fade is halfway done. The OUT (IN) LED becomes continuously on when the Fade Control (95) reaches the OUT (IN) position.

Notes :

1. If the automatic fading is to be operated, first adjust the TRANSITION Control (91) to the desired auto fading time. Then press the AUTO FADE Button (92) when ready to execute. The Auto-Fade can be stopped during Auto-fading by pressing this button. The LED on the AUDIO Button (84) blinks while stopping. The Auto-fading will start again by pressing the AUTO FADE Button (92) again.
2. The headphone audio does not fade.
3. When either MATTE, WHITE or BLACK is selected for the fade out scene, no sound comes out. However when either A or B is selected for the fade out scene, A-bus audios, Aux-1 and Aux-2 audios or B-bus audios, Aux-1 and Aux-2 audios will be outputted.

Remarks :

1. Any combination of VIDEO, DSK and/or AUDIO can be selected for fading. The LED in each button indicates which of the three are currently selected. If none are selected the Fade Control Area is effectively disabled.
2. The video signal can be Faded-out to,
 - MATTE (81)-The selected MATTE Color.
 - WHITE (83)-A White background.
 - BLACK (85)-A Black background.
 - A-Bus (93)-Uneffected A video signal.
 - B-Bus (94)-Uneffected B video signal.
3. A partial Fade which is either interrupted (by re-pressing Auto Fade (92) while Fade is in progress) or by releasing the Fade Control (95) before completion will display a mixed image of the selected signals.
4. Only the outputs selected for fading are processed.

Example-1 :

If VIDEO is chosen but not DSK (while the Downstream Key Function is activated) then only the VIDEO portion of the final image will Fade - the Downstream Key image will remain on screen, un-faded.

Example-2 :

If both VIDEO and AUDIO are selected (Downstream Key not activated, so not eligible for fading) and fade-out to B-bus is also selected, then the combined video-audio (at Fade In position) with all effects will fade to the uneffected B-Bus video and audio. (i.e. any A-Bus inputs and effects will fade-out, leaving only B. If AUX 1 and/or MIC/AUX 2 Audio are present, they also will remain.)




G. Basic operation-6

Audio Follow

Audio can be processed either separately or in conjunction with video source selection.

The Audio Follow provides automatic audio ratio mixing (between A-bus and B-bus inputs) via the Mix/Wipe Lever (99), according to the ratio of A and B inputs as effected.

- Press the AUDIO FOLLOW Button (79)
- Adjust the Mix/Wipe Lever (99) to the A-bus or B-bus position.
- The audio level ratio between the A-bus and B-bus changes according to the position of the Mix/Wipe Lever (99).

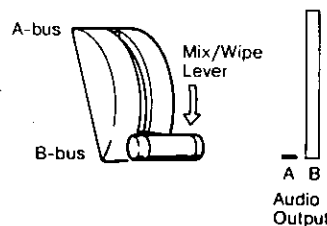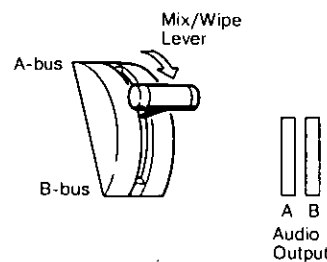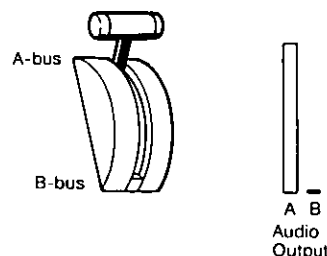


Note :

If AUX1 and/or MIC/AUX2 inputs are used they are controlled directly via their respective faders (87), (88) - i.e. they will be uneffected by the Audio Follow function.


H. Application

H-1. Event Memory Functions


Customized effect combinations can be stored in the Event Memory, and later recalled for subsequent access. The MEMORY Button (19) and SHIFT Button (18) are used to store the desired effects.

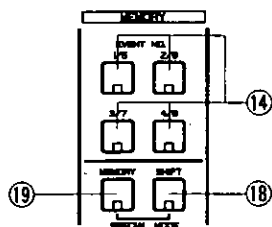

 - To clean/reset the eight memories. Press Power ON/OFF Button (1) to turn off. Then, while holding down both MEMORY Button (19) and SHIFT Button (18) press Power ON/OFF Button (1) to turn on again.



- To set a Memory location. Choose desired effects on panel. When the correct combination is selected press MEMORY Button (19) then press the appropriate EVENT NO. Button (14). (for location 5-8, press SHIFT Button (18)). The LED on the EVENT NO. Button (14) blinks 3 times then goes off when memory is completed.

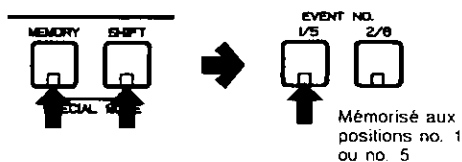

- To recall an event setting, press (for 5-8 : press SHIFT Button (18), then) the correct EVENT NO. Button (14) then press the AUTO TAKE Button (97).

Note :

 
Up to eight pre-set Event combinations are available. If executing Auto Take successively, each memory occurrence will be performed in sequence according to the numerical locations used, i.e. only stored numbers will be "toggled" through. So if #3 was skipped in the event memory setting, it will also be skipped by pressing AUTO TAKE Button (97).

Caution :

The event memory will disappear in a few days leaving the Main Power Switch (131) off.

H-2. Special Mode Functions

Under "Special Mode" eight factory preset effect functions are accessible for use. These demonstrate a few of the many capabilities of the instrument.



Note :

Before operating the Mode 6-Shutter, Mode 7-Vibrate or Mode 8-Satellite, be sure to turn the Mix/Wipe Lever (99) to the B-bus position.

- Simultaneously press the MEMORY Button (19) and SHIFT Button (18). The MEMORY Button (19) LED will begin blinking indicating that the instrument is in Special Mode.
- Each mode is accessed (when MEMORY Button (19) LED is blinking) by pressing (for 5-8, press SHIFT Button (18)) the appropriate EVENT NO. Button (14).

(1) Mode 1 - Mosaic Mix :

Press No.1 button. The mix pattern from A-bus and B-bus becomes a mosaic during the mix. This can be executed by the Mix/Wipe Lever (99) or by Auto Take Button (97) or by external controller equipped with GPI (or RS422).

(2) Mode 2 - Stream :

Press No.2 button. The compressed image zooms in from corner. Two corners are available by the Positioner Joystick (2). This can be executed by the Mix/Wipe Lever (99) or by Auto Take Button (97) or by external controller equipped with GPI (or RS422).

(3) Mode 3 - Cork Screw :

Press No.3 button. The compressed image corkscrews in from corner. This can be executed by the Mix/Wipe Lever (99) or by Auto Take Button (97) or by external controller equipped with GPI (or RS422).

(4) Mode 4 - Bounce :

Press No.4 button. The compressed image drops-bounce in from corner. This can be executed by the Mix/Wipe Lever (99) or by Auto Take Button (97) or by external controller equipped with GPI (or RS422).

(5) Mode 5 - Flip :

Press No.5 button. The Vertical Split Compressed Wipe is obtained on the Matte Color. This can be executed by the Mix/Wipe Lever (99) or by Auto Take Button (97) or by external controller equipped with GPI (or RS422).

(6) Mode 6 - Shutter :

Press No.6 button. The Horizontal Split Wipe from B-bus to Matter Color is obtained. This can be executed using either the Auto Take Button (97) or by external controller equipped with GPI.

Note :

When the Square Wipe Button (60) is selected at this moment, the Mode 6 changes to the Circle Wipe mode.

(7) Mode 7 - Vibrate :

Press No.7 button. The Horizontal Shake of B-bus is obtained.

This can be executed using either the Auto Take Button (97) or by external controller equipped with GPI.

Note :

The vibration lasts for 64 video frames.

(8) Mode 8 - Satellite :

Press No.8 button. The compressed satellite moving of B-bus image can be obtained. B-bus image orbits within A-bus image.

This can be executed using either the Auto Take Button (97) or by external controller equipped with GPI.

Notes :

1. The satellite moving starts and stops using either the AUTO TAKE Button (97) or by external controller equipped with GPI.
 2. This mode will not be released unless other mode or function is selected.
- To cease special mode, press the MEMORY Button (19) and SHIFT Button (18) simultaneously again. The unit returns to the status as it was.

H-3. Auto Take

Instead of the lever controlled Mix and Wipe using the Mix/Wipe Lever (99), an automatic Mix and Wipe operation can be made using Auto Take function. Two kinds of Auto Take are available.

1. Standard Auto Take

- Set up the Wipe Pattern and the Digital Effect as desired.
- Select the Mix Effect function from NAM Button (72), MIX Button (73), WIPE Button (74), LUM KEY Button (75) and CHROMA KEY Button (76).
- Adjust the TRANSITION Control (98) to the desired auto take time.
- Press the AUTO TAKE Button (97).
The Auto-Take can be stopped during Auto-taking by pressing the AUTO TAKE Button (97). The LED's on both A-bus and B-bus buttons blink while stopping. The Auto-taking will start again by pressing the AUTO TAKE Button (97) again.

2. Memory Auto Take

- Select and recall the programmed memory by pressing the EVENT NO. Button (14).
- Press the AUTO TAKE Button (97). The memorized program will be performed. After this, the next Event Number is selected automatically.
- Press the AUTO TAKE Button (97) again. The another program will be performed.

- The memorized program can be recalled and performed one after another by pressing the AUTO TAKE Button (97) repeatedly.
The Auto-Take can be stopped during Auto-taking by pressing the AUTO TAKE Button (97). This button blinks while stopping. The Auto-taking will start again by pressing the AUTO TAKE Button (97) again.


H-4. Digital Effects

Many unique Digital Effects are available through this Digital AV Mixer. By combining specific digital attributes the experienced user can generate a host of tailored processes for specific applications. And each can be stored in a memory location (Event Memory) for instant recall. Below are a couple of sample combinations.

1. Auto-Take

Select the same source input for both the A-bus and B-bus then adjust 2 different Digital Effect versions which can then be mixed or wiped over each other as desired. For example


- Reset the functions to the factory set up mode by turning off and on the power of the unit.
- Press and activate the PAINT Button (36) and STROBE Button (38) for the A-bus version. The Mix/Wipe Lever (99) should be turned to A-bus position at this moment.
- Turn the Mix/Wipe Lever (99) to the B-bus position.
- Press the B-Button (57) on the DIGITAL EFFECT block.
- Press the NEGA Button (31).
- Adjust the the TRANSITION Control (98) down to "MIN" position.
- Then press the AUTO TAKE Button (97) repeatedly. The 2 different Digital Effect versions instantly overlays the other set of digital effects for the effected same source input, as desired.

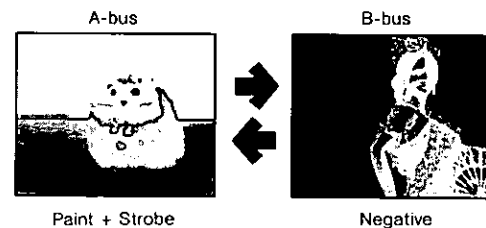

2. Mosaic-Spotlight

- Reset the functions to the factory setup mode by turning off and on the power of the unit.
- Select the same source input for both the A-bus and B-bus.
- The A-bus should have no Digital Effects applied to it.
- Turn the Mix/Wipe Lever (99) to the B-bus position.
- Press the B-Button (57) on the DIGITAL EFFECT block.
- Press the MOSAIC Button (33).
- Press the Square Button (60) on the WIPE PATTERN block.
- Adjust the Mix/Wipe Lever (99) to obtain the desired wipe size.
- Press the Positioner ON/OFF Button (3).

- The Positioner Joystick (2) now controls the location of the mosaic image.
- If the border is desired to highlight the "anonymous" area, press the BORDER Button (25) on the WIPE PATTERN block.
- If the Reverse function (REVERSE Button (28)) and/or the Monochrome function (MONO Button (34)) is added, more highlight effect can be produced.

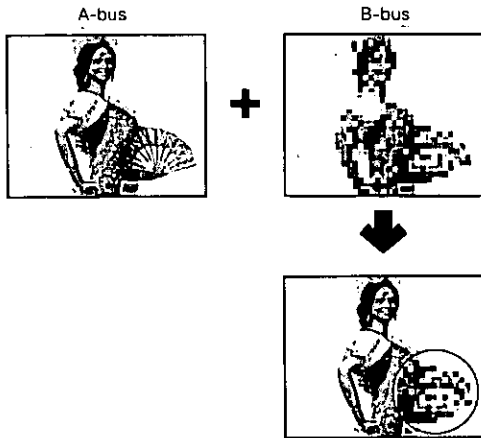


3. After Image

- Reset the functions to the factory setup mode by turning off and on the power of the unit.
- Select the same source input for both the A-bus and B-bus.
- Press the STROBE Button (38).
- Press the MIX Button (73).
- Adjust the TIME Control (39) and Mix/Wipe Lever (99) to obtain the necessary After Image.
- If required, press the A/V SYNCHRO Button (43) to synchronize this effect to the audio.



4. Multi/Live pictures mixing

- Reset the functions to the factory setup mode by turning off and on the power of the unit.
- Select the same source input for both A-bus and B-bus.
- Press the MULTI Button (40).
- Press the COMPRESSION Button (71) and Square Wipe Button (60).
- Adjust the Mix/Wipe Lever (99) to change the size of square picture.
- Press the STROBE Button (38). The live picture in the center of the monitor screen and the multiple still pictures on the back is obtained.
- If required, change the position of the live picture by operating the Positioner Joystick (2).

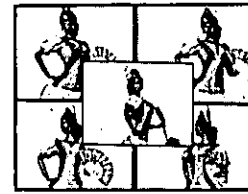

5. Picture-in-Picture

- Reset the functions to the factory setup mode by turning off and on the power of the unit.
- Press the Square Wipe Button (60).
- Press the COMPRESSION Button (71).
- Press the Positioner ON/OFF Button (3).
- Adjust the size of the square wipe picture by using the Mix/Wipe Lever (99).
- Press the SCENE GRABBER Button (4).
- The other wipe patterns can be selected by pressing the Square Wipe Button (60) repeatedly ... circle, oval, and diamond. Then adjust the Mix/Wipe Lever (99) to obtain the smaller wiped size.

Note :

Only square wipe pattern in the Picture-in-Picture mode can be stored to the Event Memory.



H-5. Event Memory accessed by AG-A800


The Event Memory can be accessed by AG-A800 at the points of DSK IN/OUT set by AG-A800.

Note :

1. Do not execute the Wipe or Mix effects with transition time under the Event Memory in AB-Roll Editing.
2. This application can be applied for the NEGA, MONO, MOSAIC, PAINT, TRAIL and MULTI on the A-bus in DIGITAL EFFECT block, and also be applied for on/off of the Color Correction. In this case, the Assemble Editing should be used instead of AB-Roll Editing.

[Example]

- Memorize the MOSAIC on A-bus into Event Memory No. 1.
- Select A-bus picture.
- Stand by the editing system and select the Event Memory No. 1.
- Execute the editing. At the point of IN of DSK Key, the Event Memory No. 1 will be started. Then at the point of OUT of DSK Key, the Event Memory No. 1 will be finished.

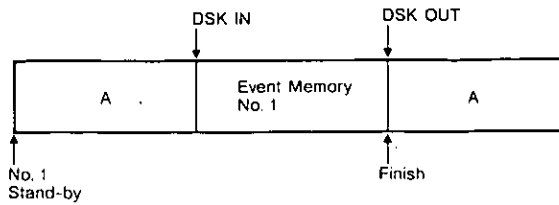

Notes :

1. When accessing the regular DSK function from AG-A800, turn off all the Event Number Button (14). The DSK function and the Event Memory can not be used at the same time.
2. The setting up of the transition time of KEY IN/OUT by AG-A800 should be "0". If not, the OUT point of DSK changes.
3. The transition time of the Event Memory should be shorter than the period between DSK IN and DSK OUT. Otherwise, the Event Memory will not be finished at the DSK OUT position.

INTERFACE

The WJ-MX50 is equipped with the interface capability for use with an external remote controller such as the AG-A800 (Editing Controller), a personal computer or a GPI function product. Refer to the service personnel or system installer for setting up of interface.


1. GPI (General Purpose Interface)

The WJ-MX50 accepts a GPI signal from an external remote controller. The GPI signal can be used to activate the Auto Take function of the WJ-MX50.


Setting up the switch.

(This switch has been set at right position (OFF) at factory. The setting up may not necessary locally.)

- Turn off unit and disconnect power supply.
- When handling unit take care not to damage the many controls, faders, joysticks and switches.
- Open the top panel by removing the 14 case screws.

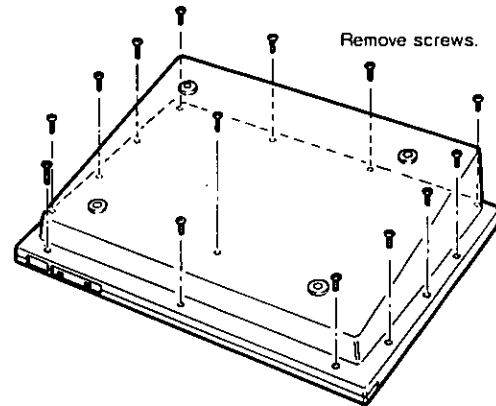

- There are 2 square holes on the shield plate as shown. Turn the switch number 1 on SW702 to the OFF position if this switch has been set to the ON position.

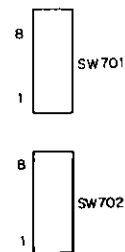

- Close the top panel by fixing the 14 case screws.
- Supply the GPI signal to the GPI Input Connector (129) on the rear panel.

Pulse Timing

- The Auto Take function is activated at the point of the falling edge of the GPI pulse, as shown.



2. RS422

The optional Editing Controller AG-A800 can be used with the WJ-MX50 to control it remotely in the VTR Editing System.

Setting up

- Turn the RS422/RS232C Selection Switch (133) on the rear panel to the RS422 position.
- Connect the control cable between the AG-A800 and the Editing Controller Connector (132) on the WJ-MX50.
- The pin configuration of the Editing Controller Connector (132) is as follows.
 1. Ground
 2. Transmit A
 3. Receive B
 4. Receive Common
 5. Spare
 6. Transmit Common
 7. Transmit B
 8. Receive A
 9. Ground

3. RS232C


The optional remote controller which uses a MODEM can be used with the WJ-MX50 for remote operation.

Setting up the switch

- Open the top panel by removing the 14 case screws.
- Set the switch (SW701) referring to the Note-2 and 3 below.
- Close the top panel by fixing 14 case screws after setting the switch correctly.

Notes :

1. Make the required conversion cable referring to the following wiring information.

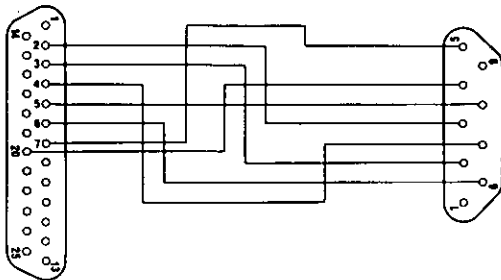

RS232C

WJ-MX50

25-pin

9-pin

2 TXD	3 TXD
3 RXD	2 RXD
4 RTS	7 RTS
5 CTS	8 CTS
6 DSR	6 DSR
7 SIG. G	5 SIG. G
20 DTR	4 DTR

[DCE Connection]

2. Refer to the table below for transmitting protocol between the RS232C DT/WJ-MX50 connection.



SW701

No.	Switch Name	Description																																				
1.	Bit length	ON - 8 bits OFF - 7 bits																																				
2.	Stop bit	ON - 2 bits OFF - 1 bit																																				
3.	Parity	ON - OFF, OFF - ON																																				
4.	Even/Odd	ON (Odd) or OFF (Even)																																				
5.	—	OFF																																				
6, 7, 8	BAUD rate	<table border="0"> <tr> <td>No. 6</td> <td>No. 7</td> <td>No. 8</td> <td></td> </tr> <tr> <td>OFF</td> <td>OFF</td> <td>OFF</td> <td>→ 19.2 kbps</td> </tr> <tr> <td>ON</td> <td>OFF</td> <td>OFF</td> <td>→ 9.6 kbps</td> </tr> <tr> <td>OFF</td> <td>ON</td> <td>OFF</td> <td>→ 4.8 kbps</td> </tr> <tr> <td>ON</td> <td>ON</td> <td>OFF</td> <td>→ 2.4 kbps</td> </tr> <tr> <td>OFF</td> <td>OFF</td> <td>ON</td> <td>→ Inhibited</td> </tr> <tr> <td>ON</td> <td>OFF</td> <td>ON</td> <td>→ Inhibited</td> </tr> <tr> <td>OFF</td> <td>ON</td> <td>ON</td> <td>→ Inhibited</td> </tr> <tr> <td>ON</td> <td>ON</td> <td>ON</td> <td>→ Inhibited</td> </tr> </table>	No. 6	No. 7	No. 8		OFF	OFF	OFF	→ 19.2 kbps	ON	OFF	OFF	→ 9.6 kbps	OFF	ON	OFF	→ 4.8 kbps	ON	ON	OFF	→ 2.4 kbps	OFF	OFF	ON	→ Inhibited	ON	OFF	ON	→ Inhibited	OFF	ON	ON	→ Inhibited	ON	ON	ON	→ Inhibited
No. 6	No. 7	No. 8																																				
OFF	OFF	OFF	→ 19.2 kbps																																			
ON	OFF	OFF	→ 9.6 kbps																																			
OFF	ON	OFF	→ 4.8 kbps																																			
ON	ON	OFF	→ 2.4 kbps																																			
OFF	OFF	ON	→ Inhibited																																			
ON	OFF	ON	→ Inhibited																																			
OFF	ON	ON	→ Inhibited																																			
ON	ON	ON	→ Inhibited																																			

SW702

No.	Switch Name	Description
1.	RS422 Parity	ON - Odd OFF - Even (Factory Setup)
2 - 8	—	All OFF

3. The switch (SW701) has been set as follows at factory. Change this basic setting up to meet necessary Modem requirements.

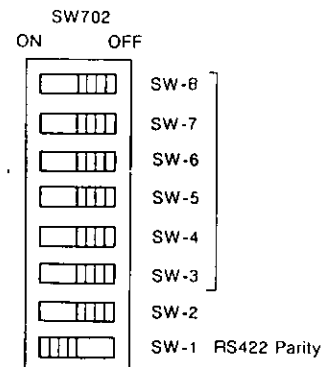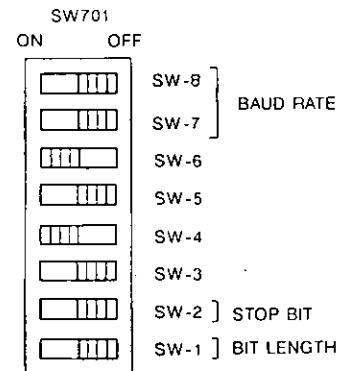

[Factory Setup Mode]

SPECIFICATIONS

Source Input :	× 4 (SOURCE 1/2/3/4)
Composite Video Input :	1.0 Vp-p/75 Ohms, NTSC signal, BNC × 4
S-Video Input :	Y signal; 1.0 Vp-p/75 Ohms, C signal; 0.286 Vp-p/75 Ohms, Mini DIN 4 connector × 4
Audio Input :	SOURCE 1/2; XLR-type × 2, +4 dBm/600 ohms (Balanced), Left and Right. SOURCE 3/4; Pin-jack × 2, -6 dBs/20 Kohms (Unbalanced), Left and Right. × 2 (Aux1/2) -6dBs/20 Kohms, Pin-jack (Unbalanced), Left and Right
Auxiliary Audio Input :	-60 dBv/600 ohms, unbalanced, tip-ring-sleeve type phone jack × 1
Microphone Input :	1.0 Vp-p/75 ohms, NTSC composite signal, BNC × 1
External Camera Input :	Y signal; 1.0 Vp-p/75 ohms, C signal; 0.286 Vp-p/75 ohms, Mini DIN 4 connector × 1
GPI Input :	Make-contact, BNC × 1
Character (TITLE) Input :	10-pin connector × 1 for optional Character Generator WV-KB12A, WJ-KB15, WJ-KB50.
Program Output :	× 2 (PROGRAM OUT 1/2)
Composite Video Output :	1.0 Vp-p/75 ohms NTSC signal, BNC × 2
S-Video Output :	Y signal; 1.0 Vp-p/75 ohms, C signal: 0.286 Vp-p/75 ohms, Mini DIN 4 connector × 2
Audio Output :	PROGRAM OUT 1; XLR-type × 1, +4dBs/47 ohms (Balanced), Left and Right. PROGRAM OUT 2; Pin-jack × 1, -6dBs/47 ohms (Unbalanced), Left and Right. 1.0 Vp-p/75 ohms, NTSC composite signal, BNC × 1.
Preview Output :	Sync 0.286 Vp-p/75 ohms, Burst 0.286 Vp-p/75 ohms NTSC signal, BNC × 1.
Black Burst Output :	4 Vp-p/75 ohms, BNC × 2
Advance Sync Output :	Sync 0.286 Vp-p/75 ohms, Burst 0.286 Vp-p/75 ohms, BNC × 2
Advance Reference Output :	-20 dBv - -80 dBv, 8 ohms unbalanced, tip-ring-sleeve type phone jack × 1.
Headphone Output :	
Digital Effects :	Nega, Mosaic, Mono, Paint, Still, Strobe, Multi, Trail, A/V Synchro, Frame
Matte Colors :	Color Bar, White, Yellow, Cyan, Green, Magenta, Red, Blue, Black.
Wipe Patterns :	287 Patterns
Joystick Control :	Positioner, Color Correction.
Audio Mixer :	A-bus, B-bus, AUX-1, AUX-2, Mic, Master.
Others :	Audio-Follow, Auto-Take, Auto-Fade, Memory, Special Mode.
Video Sampling :	4 : 1 : 1, Y = 14.3 MHz (936 fH), 8-bit component
Frequency Range :	Sync; 15,734 KHz ± 300 Hz SC; 3.579545 MHz ± 40 Hz
Frequency Responce :	Y/C signal; 4.5 MHz (at -3dB) Composite Video Signal; 4.5 MHz (at -3dB) Audio; 20 - 20 KHz (at -3 dB)
Gain :	Unity (Video)
S/N (Typical) :	56 dB (S-Video), 50 dB (Composite), 70dB (Audio at 1 KHz)
Differential Gain :	± 5° (Composite)
Differential Phase :	± 5 % (Composite)
Power Source :	120V AC 60 Hz
Power Consumption :	Operation mode; Approximately 45W Stand-by mode; Approximately 5W
Ambient Operating Temperature :	32 - 104°F (0 - 40°C)
Ambient Operating Humidity :	Less than 90%
Dimensions :	18-7/8" (W) × 6-7/16" (H) × 14-1/2" (D) [480 (W) × 164 (H) × 396 (D) mm]
Wight :	15 lbs. (6.8 Kg)

Weight and dimensions indicated above are approximate.
Specifications are subject to change without notice.

STANDARD ACCESSORY

- Wipe Pattern Sheet 1 pc.

OPTIONAL ACCESSORIES

- Charactor Generator WV-KB12A, WJ-KB15, WJ-KB50

YWV7 1/2 A 1655A3 LABEL, There is no sheet

Panasonic

Communications & Systems Company

Division of Matsushita Electric Corporation of America

PROFESSIONAL/INDUSTRIAL VIDEO

HEADQUARTERS:

50 Meadowland Parkway, Secaucus, New Jersey 07094

EASTERN ZONE:

50 Meadowland Parkway, Secaucus, NJ 07094 (201) 348-7620

CENTRAL ZONE:

425 E. Algonquin Road, Arlington Hts. IL 60005 (708) 981-4826

SOUTHERN ZONE:

Dallas Region: 4500 Amon Carter Blvd., Ft Worth, TX 76155 (817) 685-1117

Atlanta Region: 1854 Shackleford Ct. Suite 115, Norcross, GA 30093 (404) 925-6841

WESTERN ZONE:

Seattle Region: 1200 Westlake Ave. N., Suite 508, Seattle, WA 98109 (206) 285-8883

Los Angeles Region: 6550 Katella Ave., Cypress, CA 90630 (714) 373-7275

MATSUSHITA ELECTRIC OF CANADA LIMITED

5770 Ambler Drive, Mississauga, Ontario, Canada L4W 2T3 (416) 624-5010

PANASONIC SALES COMPANY

DIVISION OF MATSUSHITA ELECTRIC OF PUERTO RICO, INC.

San Gabriel Industrial Park, 65th Infantry, Ave. KM. 9.5 Carolina, Puerto Rico 00630 (809) 750-4300