

Bravetti

DO IT ALL 2

Stick Blender/Chopper

Use and Care Instructions

**Model EP558
120 V~, 60Hz, 350 Watts**

Please insert picture of unit

Read These Instructions Before Use

READ THESE INSTRUCTIONS BEFORE USE

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before using the appliance.
2. To protect against risk of electrical shock, do not immerse cord, plug or unit (body of mixer) in water or other liquid.
3. Do not allow use by children. Care should be taken when appliance is used near children.
4. Unplug appliance from outlet when not in use, before putting on or taking off accessories, and before cleaning.
5. Avoid contact with moving parts at all times. Keep hands, hair, clothing, as well as spatulas and other utensils away from blender during operation to prevent risk of personal injury and/or damage to the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to EURO-PRO Corp. for examination, repair or electric or mechanical adjustment.
7. The use of attachments not recommended or sold by **EURO-PRO** Corporation may cause fire, electrical shock or risk of personal injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter or touch hot surfaces, including the stove.
10. To avoid injury by accidentally switching on the appliance when changing the chopper, or hand blender attachment, always unplug the appliance before assembling or disassembling. Remove hand blender and chopper attachments from motor power pack before cleaning.
11. **DO NOT USE THIS APPLIANCE ON A STOVE.**
12. Do not use appliance for other than intended use.
13. Exercise extreme caution when blending hot liquids. Use a tall open container to allow steam to escape and avoid spillage or make small quantities at a time to reduce spillage.
14. To avoid burns, place the Stick Blender attachment first in the food to be beaten or chopped, then press the start button. Always release button before removing Stick Blender from the food.
15. Keep hands and utensils out of the container while blending to prevent the possibility of severe personal injury or damage to the unit. A spatula may be used but must be used only when the unit is not running.
16. Blades are sharp, handle carefully. When handling the chopper blade, always hold it by the plastic hub.
17. Make sure that the chopper cover is secured in place before operating appliance.
18. Do not place the beaker in a microwave oven.

IMPORTANT NOTICE

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

SAVE THESE INSTRUCTIONS

FOR HOUSEHOLD USE ONLY

Rev. 07/01C

Multi-Mixer Assembly & Use

Caution: Ensure that the appliance is unplugged from the electrical power source before changing attachments.

Mixer Gear Box (14)

- To attach the mixer gear box (14) to the Power Pack (1), line up arrows on the Power Pack and Mixer Gear Box.
- Push Power Pack onto Mixer Gear Box until seated.
- Then while grasping Mixer Gear Box rotate it 90° clockwise until the arrow on the Power Pack aligns with the "Square" on the Mixer Gear Box.
- To disassemble Mixer Gear Box and Power Pack rotate Mixer Gear Box 90° counterclockwise.

Select the desired attachment, either the Dough Hooks (17) or Mixing Beaters (16) and assemble to Mixer Gear Box (14) as noted below:

A) Dough Hooks (17)

For use with light dough ONLY.

- Insert stem end of dough hooks (one at a time) into opening in base of Mixer Gear Box (14). Insert the dough hook with the metal ring on the shaft into the larger of the two holes in the mixer gear box. The metal ring must be seated below the surface of the gear box.
- Rotate slightly while pressing gently until dough hook "Clicks" into place.
- Repeat for second dough hook.
- Ensure that dough hooks are well seated in Mixer Gear Box.

B) Wire Whisk (15)

This attachment is used for beating air into mixtures such as egg whites, yolks or creams..

- To install, place stem of Wire Whisk into either of the openings in the Mixer Gear Box.
- Rotate Wire Whisk while pushing gently until Wire Whisk "Clicks" into place.
- Ensure that Wire Whisk is well seated in Mixer Gear Box.

C) Wire Beaters (16)

Follow the same installation procedure for the Wire Beaters as detailed for the Dough Hooks above.

Food Chopper Attachment

Caution - Blades are sharp. Use extreme caution when handling the blade, always hold it by the plastic hub. Do not immerse the cover and gear box in water.

To store the unit, do not wrap cord around the power pack. Coil cord loosely and use a twist tie to secure it in large loops.

To clean the power pack, processor cover/gear box, wipe off with a clean, damp kitchen cloth. Towel dry.

Ice Crusher Attachment

Caution - Blades are sharp. Use extreme caution when handling the blade, always hold it by the plastic hub. Do not immerse Power Pack in water or any other liquid.

Ensure that the gear box and blade assembly is well seated before turning the unit on to chop ice. **Hold appliance with BOTH hands when chopping ice.**

Ice Crusher Assembly and Use

Caution - Unplug appliance before changing accessories or cleaning.

- Place the blade support (7) into the tall ice crusher bowl (5). Then place the Ice Crusher Blade (13) over the blade shaft.
- Assemble the Chopper Gear Box (8) as you would for the Chopping Attachment. (See page 5.)
- Place ice cubes to be crushed into bowl.

Note: Recommended size of ice cubes is 1 1/4" x 1" x 3/4". Do not crush more than 10 oz. of ice cubes at a time.

Warning: This appliance is intended for intermittent use. When crushing ice, use only bursts of 4 seconds each. Run time not to exceed 15 seconds before allowing unit to cool down.

Caution: Hold both the bowl/gear box and power pack when chopping ice. **Don't** hold appliance by the power pack only.

Main Components

- | | |
|-------------------------|-----------------------------|
| 1 - 350 Watt Power Pack | 10 - Chopping Bowl |
| 2 - Operating Switch | 11 - Chopping Bowl Cover |
| 3 - Stick Blender | 12 - Ice Crusher Bowl Cover |
| 4 - Wall Bracket | 13 - Ice Crusher Blade |
| 5 - Ice Crusher Bowl | 14 - Mixer Gear Box |
| 6 - Plastic Whisk | 15 - Wire Whisk |
| 7 - Blade Support | 16 - Wire Beaters |
| 8 - Chopper Gear Box | 17 - Dough Hooks |
| 9 - Chopper Blade | 18 - Frothier |



Insert new picture

Wall Bracket

A wall bracket (4) is provided with your Bravetti **Do It All Stick Blender/ Chopper**. Install the wall bracket in any convenient location using the wall anchors and screws (included). The Power Pack with or without the Stick Blender attachment may then be conveniently stored out of the way. (See illustration below.)


Important: Install wall mount bracket high enough above countertop to allow for clearance of power pack with stick blender attached.



Adjustable Speed Control

Your Bravetti **Do It All Stick Blender/ Chopper** has been designed with a variable speed control to provide more versatility in preparing delicate sauces or for chopping ice. To adjust speed, turn knob on top of Power Pack clockwise from low setting to increase speed and counterclockwise from high setting to decrease speed.

Assembly of Stick Blender

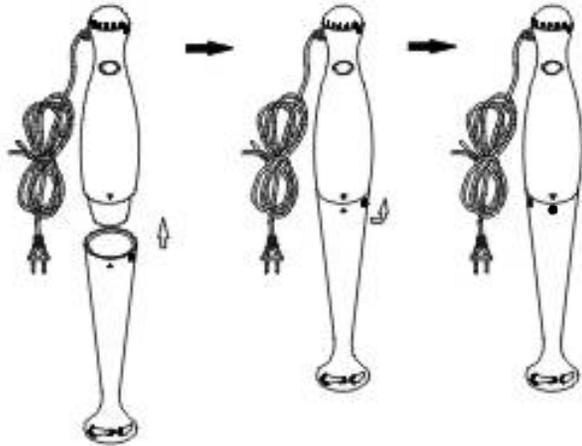

Assembling the Bravetti *Do It All 2* Stick Blender:

Make sure that the unit is unplugged from power source before attaching or removing the Stick Blender attachment.

1. Line up arrow of Stick Blender attachment with arrow on power pack. Once fully inserted, rotate stick blender attachment clockwise 90° until arrow on power pack aligns with square on Stick Blender.

Warning: This appliance is designed for intermittent use. Maximum running time with the Stick Blender is 1 minute. After this time, allow the unit to cool.

2. Plug the cord into an electrical outlet (120V~ / 60Hz).

Caution: To avoid splattering, place the Stick Blender attachment first in the food to be beaten or chopped, then press the button. Always release the button before removing the Stick Blender from the food, especially when using the Stick Blender in hot liquids. Always hold the Stick Blender with your hand while processing. Never leave unit unattended.

Caution: Do not use the Stick Blender on the stove. If you want to use it in a saucepan while cooking, you must first remove saucepan from the stove.

3. Use the measuring beaker/cup with the Stick Blender or you can use another container. The measuring beaker/cup is intended only for processing small quantities with the Stick Blender.

Caution: To remove the Stick Blender attachment from the power pack, first unplug the power pack and only then turn the Stick Blender 90° counterclockwise and pull it off.

Achieving best results with the Bravetti *Do It All 2* Stick Blender/Chopper



- * Only process very soft, tender pieces of food.
- * Food pieces should not be larger than ¾-inch cubes.
- * Do not fill the processor bowls more than half way with very soft, tender foods like cooked apples or tomatoes. When pureeing foods like cooked vegetables, soft cheese, or cooked poultry, only add a few pieces at a time so that the Stick Blender does not jam. In fact, it is always best to batch feed when using the Stick Blender/Chopper.
- * Avoid pureeing foods like citrus fruits or other foods that have a lot of fiber or hard, tough skin which can jam the appliance.
- * If the Stick Blender should jam during use and the blade stops turning, stop operation and **unplug the unit from the power source**. Disassemble the unit to remove any food that is jammed.

Caution: Never put your fingers or any utensils in the Stick Blender/Chopper during operation.

Warning: This appliance is designed for intermittent use. Maximum running time with the Stick Blender/Chopper is 15 seconds. Allow unit to cool before resuming use. Best chopping results are achieved by using 2-3 second bursts.

Important: To mince meat, cut the meat into 1/2" cubes and do not mince more than 6 oz. At one time. Make sure that the meat, fish or poultry is fully defrosted and that all bones and gristle have been removed. Allow cooked food to cool before placing in the chopping bowl.

Assembly of Chopper/Ice Crusher Bowls

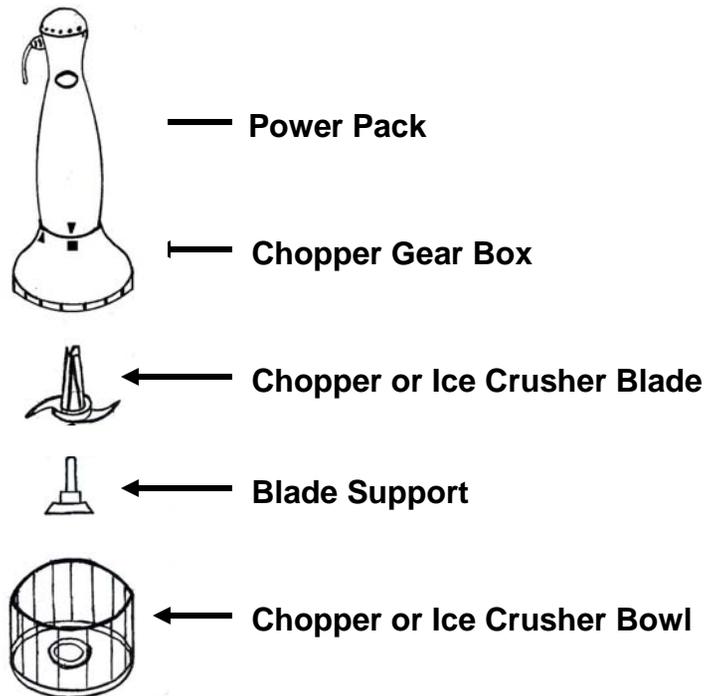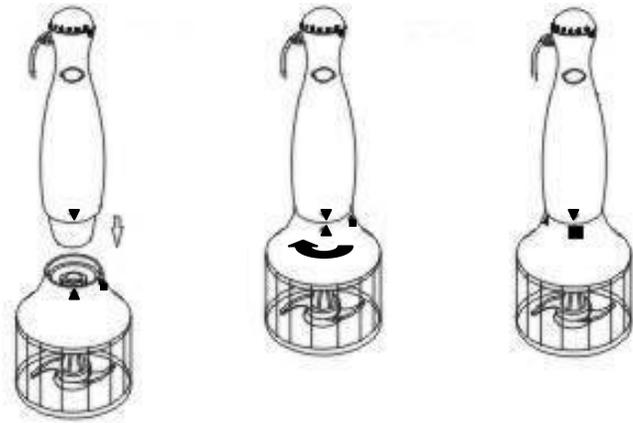

The Bravetti *Do It All 2* Stick Blender/Chopper can be used in the following food preparation applications:

Pureeing soups, sauces, fruits and vegetables:

- * Fruits and vegetables should be peeled, cored and seeded.
- * Meats, poultry, and fish should have skin and bones removed.
- * Food should be cut up into pieces no larger than 3/4-inch.
- * Cook the food in liquid until very soft and tender.
- * Puree cooked food **ONLY** after allowing to cool down.
- * Food can also be pureed directly in the pot after being allowed to cool.
- * Place the Stick Blender in the center of the food in an upright position with the processor end resting directly on the bottom of the bowl or pot.
- * The processor end must always be immersed in the food. **DO NOT lift up and out of food while operating since the hot food will splatter and could cause burns.**
- * While holding the power pack and the Stick Blender in your hand, press and hold down on the switch with your index finger.
- * Release once the food has reached the desired consistency.
- * Do not operate continuously for more than 1 minute.
- * If pieces of unprocessed food remain, or if there are any lumps, continue pureeing the food, however, mash the food pieces or lumps by slightly raising and then lowering the Stick Blender over those pieces.