

cubes with the blender using a plunging action until the ice cubes are fine ice.

### Top tips

- When processing foods with strong colour (eg. carrots) the plastic parts of the appliance may become discoloured. Wipe with cooking oil to clean any discoloured parts.
- For blending, select a slow speed for soft ingredients, increase the speed to produce the consistency required.
- Select a high speed for blending hard ingredients.
- When blending, start the process by plunging the blender into the ingredients. This will ensure all the ingredients are pulled into the blade to be processed. Continue this movement until the mixture is to the desired consistency.
- Do not lift the blender head out of the mixture as splashing may occur.

### Cleaning

**WARNING: Always unplug the unit from the mains before cleaning.**

**WARNING: Handle the blades with care as they are sharp.**

Clean the main housing with a damp cloth and dry all the parts thoroughly.

**WARNING: Never immerse main housing in water or any other liquid.**

### Trouble shooting

Check the plug is in the socket and the switch is in the 'on' position.

Is the plug itself or the socket faulty? Check this by plugging in another appliance.

- **Appliance gets very hot.** Blender has been used continuously for too long. Leave the appliance to cool.

- **Appliance not working.** The removable blender leg has not been fitted correctly. Detach the attachment and replace as described in 'Assembling the blender leg'.

### Wall mounting bracket

The hand blender can be wall mounted for convenient storage .

Do not mount the storage bracket/unit over or near any portion of a heating or cooking appliance or sink or basin.

**WARNING: Always ensure you are not drilling into the wall adjacent to any electrical wires or pipes such as water or gas.**

- 1 Find a suitable position on the wall or cupboard where the blender is to be positioned.
- 2 Mark the fixing points through the bracket.
- 3 If you are fixing to a solid brick or block wall use a suitable size masonry drill and drill to a depth of 25mm.
- 4 If fixing to a wood or cupboard surface, drill a 2mm pilot hole or use a bradawl.

### Dedicated helpline

If you have any difficulty with your appliance, do not hesitate to call. We are more likely to be able to help than the store from where you bought it.


Please have the following information ready to enable our staff to deal with your enquiry quickly:

- Name of the product
- Model number as shown on the underside of the appliance or rating plate
- Serial number

UK Helpline 0870 060 2609

Replacement Parts 0870 167 6640

Ireland Helpline 1800 409119

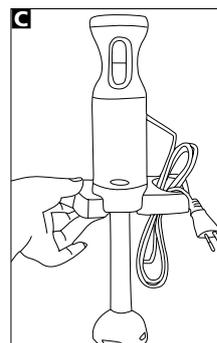

## YOUR FIVE YEAR GUARANTEE

Available on registration



This 5 year guarantee is only valid when registered directly with Morphy Richards. If you do not register your product it is guaranteed for 2 years. To validate your 5 year guarantee, telephone our consumer helpline. Once you have registered your product you will receive written confirmation from Morphy Richards, please retain this information. Please refer to your 2 year guarantee for more details.

## YOUR TWO YEAR GUARANTEE



It is important to retain the retailers receipt as proof of purchase. Staple your receipt to this back cover for future reference. Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no.                      Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase it should be returned to the place of purchase for it to be replaced. If the fault develops after 28 days and within the guarantee period from the original purchase date, you should contact the Helpline number quoting Model number and Serial number

Morphy Richards products are intended for household use only.

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.

on the product, or write to Morphy Richards at the address shown. You will be asked to return the product (in secure, adequate packaging) to the address below along with a copy of proof of purchase. Subject to the exclusions set out below (see Exclusions) the faulty appliance will then be repaired or replaced and dispatched usually within 7 working days of receipt. If for any reason this item is replaced during the guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the guarantee the appliance must have been used according to the instructions supplied.

## EXCLUSIONS

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

- 1 The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturers recommendations or where the fault has been caused by power surges or damage caused in transit.
- 2 The appliance has been used on a voltage supply other than that stamped on the product.
- 3 Repairs have been attempted by persons

other than our service staff (or authorised dealer).

- 4 Where the appliance has been used for hire purposes or non domestic use.
- 5 Morphy Richards are not liable to carry out any type of servicing work, under the guarantee.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer.

- This guarantee is valid in the UK and Ireland only.



For electrical products sold within the European Community. At the end of the electrical products useful life it should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice in your country.

 
**morphy richards**

**The After Sales Division  
Morphy Richards Ltd**

Mexborough, South Yorkshire,  
England, S64 8AJ

Helpline (Office hours)  
UK 0870 060 2609  
Republic of Ireland 1800 409119

FP48959MUK Rev 1 05/06



**morphy richards®**



## Hand blender



Please read and keep these instructions

### *Getting the best from your new appliance...*

#### **Safety**

*Take care when handling blades they are very sharp.*

#### **Operation**

*The hand blender is designed for intermittent use. Do not use non stop for more than 1 minute at a time. Allow to cool down for a minimum of 5 minutes before further use.*



BLEND



To register for your 5 year guarantee ring the Helpline numbers below.

Please have the following information available:

Serial number: \_\_\_\_\_ and model number: 48959

(see page 6 for guarantee details)



 
For replacement parts, help with using your Morphy Richards products, problems and lots more, contact us by phone or through our website.



**UK Helpline: 0870 060 2609**  
**Replacement parts: 0870 167 6640**  
**Ireland 1800 409119**

**[www.morphyrichards.com](http://www.morphyrichards.com)**







---

## **CONTENTS**

  ---

<b>Important safety instructions</b>	<b>3</b>
<b>Electrical requirements</b>	<b>3</b>
<b>Features</b>	<b>4</b>
<b>Unpacking your hand blender</b>	<b>4</b>
<b>Assembling the blender leg</b>	<b>4</b>
<b>Using the hand blender</b>	<b>4</b>
<b>Using for Ice crushing</b>	<b>4</b>
<b>Top tips</b>	<b>5</b>
<b>Cleaning</b>	<b>5</b>
<b>Trouble shooting</b>	<b>5</b>
<b>Wall mounting bracket</b>	<b>5</b>
<b>Dedicated helpline</b>	<b>5</b>
<b>Your guarantee</b>	<b>6</b>



## IMPORTANT SAFETY INSTRUCTIONS

The use of any electrical appliance requires the following of basic common sense safety rules.

Primarily there is danger of injury or death and secondly the danger of damage to the appliance. These are indicated in the text by the following two conventions:

**WARNING: Danger to the person!**

IMPORTANT: Damage to the appliance!

In addition we offer the following essential safety advice.

### Location

- Remove all packaging and retain for future reference.
- Ensure the appliance is used on a firm, flat surface.
- Do not use the appliance outdoors or in a bathroom.
- Do not place the appliance on a highly polished wooden surface as damage may occur to the surface.
- Do not place the appliance on or near a hot surface such as a hot plate or radiant rings or near a naked flame.
- Do not let the mains lead overhang the edge of the table or work-top, or touch hot surfaces.

### Children

- Children do not understand the dangers associated with operating electrical appliances. Never allow children to use this appliance.

### Personal safety

- Avoid touching moving parts. Keep hands, hair, clothing as well as spatula and other utensils away from chopper blades during operation, to prevent personal injury and/or damage to the appliance.
- **WARNING: To protect against risk of electric shock NEVER immerse the appliance body in water or in any other liquid and always ensure the electrical connections are kept dry.**

### Other safety considerations

- Always disconnect the blender from the supply. If it is left unattended and before assembling, disassembling or cleaning.
- Never pull on the cord to unplug the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The power cord cannot be replaced. Contact Morphy Richards for advice.
- The use of attachments or tools not recommended or sold by Morphy Richards may cause fire, electric shock or injury.
- Do not use the appliance for other than its intended use.

### Product specific safety

- **WARNING: The blender blades are very sharp. Handle with care when using and cleaning.**

### ELECTRICAL REQUIREMENTS


Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current).

If the socket outlets in your home are not suitable for the plug supplied with this appliance, the plug should be removed and the appropriate one fitted.

**WARNING: The plug removed from the mains lead, if severed, must be destroyed as a plug with bared flexible cord is hazardous if engaged into a live socket outlet.**


Should the fuse in the 13amp plug require replacement, a 3 amp BS1362 fuse must be fitted.

This appliance does not need to be earthed, as it is a double insulated product.

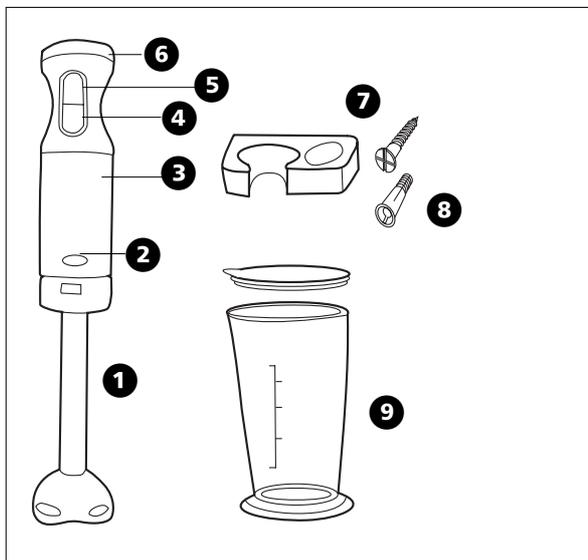


Your hand blender is designed to help you prepare everything from soups to chocolate mousse and crush ice quickly.

The hand blender can be used with the measuring jug or a saucepan.

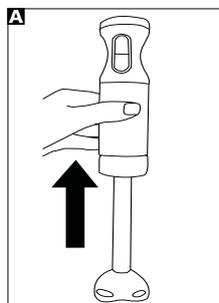

### Features

- 1 Blender leg
- 2 Release button
- 3 Blender body
- 4 Turbo switch
- 5 On/off switch
- 6 Speed control
- 7 Wall mounting bracket
- 8 Wall mounting screw and wall plug x2
- 9 Measuring jug with storage lid

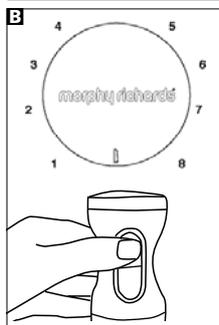

### Unpacking your hand blender

**WARNING: Carefully unpack your hand blender, blades are very sharp.**

Wash all parts, with the exception of the blender body, before first use. See cleaning instructions page 5.

### Assembling the blender leg

Insert by pushing the blender leg into the blender body, until it clicks into place.

To remove the blender leg press the release button.

### Using the hand blender

**WARNING: Make sure that the hand blender is switched off and unplugged from the mains.**

- 1 Clean the blender leg before using it for the first time with a damp cloth.
- 2 Insert the blender leg into the main housing and click into place **A**.
- 3 The hand blender can now be plugged in and is ready to use.
- 4 Place the blender leg into the food to blend, select the required speed for your food on the speed control, then press the on/off button **B**. Release the on/off to stop blending.
- 5 After use, unplug the blender and remove the blender leg by pressing the release button and pull gently away.
- 6 Give the blender leg a rinse with cold water. If the main body has been splashed just give it a wipe with a damp cloth.

**WARNING: Your hand blender is designed for intermittent use. Do not use non-stop for more than 1 minute. Allow to cool down for a minimum of 5 minutes before further use.**

### Using for Ice crushing

The blender leg is fitted with a special blade suitable for crushing ice. It can be used to crush ice cubes to produce fine ice for cocktails, cold drinks etc.

- 1 Place a maximum of 4 ice cubes in the plastic measuring beaker.
- 2 Press firmly down on the ice