 


Hamilton Beach®

Ice Shaver

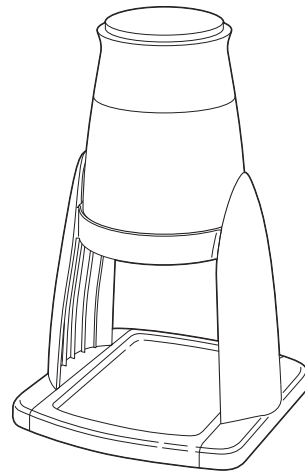

English..... 2
USA: 1-800-851-8900
Canada : 1-800-267-2826

840116700

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. To protect against risk of electrical shock, do not immerse motor housing, cord, or plug in water or other liquid.
3. Close supervision is necessary when any appliance used by or near children.
4. Unplug cord from outlet when not in use, before putting on or taking off parts, and before cleaning.
5. Avoid contacting moving parts. Keep fingers out of discharge opening.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or is dropped or damaged in any manner. Call our toll-free customer service number for information on examination, repair or electrical or mechanical adjustment.
7. The use of attachments not recommended or sold by Hamilton Beach/ Proctor-Silex, Inc. may cause fire, electric shock, or injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. The blade is sharp. Handle carefully. Store out of reach of children.
11. Do not attempt to defeat the interlock mechanism.
12. Never place fingers or other utensils into discharge areas.
13. Check ice chamber for presence of foreign objects before using.

SAVE THESE INSTRUCTIONS!

CONSUMER SAFETY INFORMATION

This appliance is intended for household use only.

This appliance is equipped with a polarized plug. This type of plug has one blade wider than the other. The plug will fit into an electrical outlet only one way. This is a safety feature intended to help reduce the risk of electrical shock. If you are unable to insert the plug into the outlet, try reversing the plug. If the plug should still fail to fit, contact a qualified electrician to replace the obsolete outlet.

Do not attempt to defeat the safety purpose of the polarized plug by modifying the plug in any way.



The length of the cord used on this appliance was selected to reduce the hazards of becoming tangled in, or tripping over a longer cord. If a longer cord is necessary an approved extension cord may be used. The electrical rating of the extension cord must be equal to or greater than the rating of the ice shaver. Care must be taken to arrange the extension cord so that it will not drape over the counter-top or tabletop where it can be pulled on by children or accidentally tripped over.

Ice Choices

- Fill Freezer Containers with desired liquid 24 hours before use. Let freeze before using.
- Empty Freezer Containers and place ice rounds in plastic storage bags to build up a selection of flavored ice.
- Ice can also be made in ice cube trays with water or other beverage.
- Any form of ice can be used for plain shaved ice: automatic ice maker, ice from trays, bagged ice, or the Freezer Container rounds; however, the Freezer Container rounds will work best.

Parts and Features

1. Motor Housing
2. Ice Chamber with Shaving Blade
3. Base
4. 2 Freezer Containers

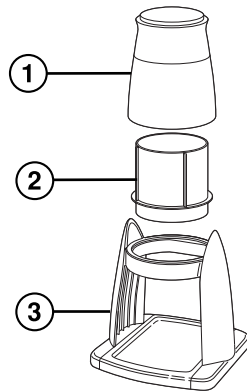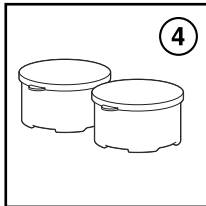

Before First Use: Wash Ice Chamber and Freezer Containers in hot, soapy water. Rinse and dry.

How to Use Your Ice Shaver

1. Have your preferred ice rounds or ice cubes available.
2. Place Base on countertop. Place bowl, cup, or other container onto Base platform to hold shaved ice.
3. Fit Ice Chamber into Base by lining up flat sides.
4. Place ice into Ice Chamber. Do not overfill.
5. Place Motor Housing on top of Ice Chamber. Plug into outlet.
6. Push top of Motor Housing to start shaving. Release to stop shaving. Some ice pieces will remain in Ice Chamber.
7. When finished, unplug ice shaver and clean according to directions in "Cleaning Your Ice Shaver."


Cleaning Your Ice Shaver

⚠ WARNING

To reduce risk of personal injury and/or damage to your ice shaver:

- Never wash ice chamber with shaving blade, or any part of this appliance, or other removable parts in a dishwasher.
- Always inspect ice chamber with shaving blade before each use.
- Do not use a cracked, bent or damaged ice chamber.

1. Unplug Motor Housing from outlet.
2. To remove the Motor Housing for cleaning, turn upside down. Then, using a cloth to protect your hands, grasp the metal disc and turn counter-clockwise as shown.
3. Wash metal disc and nut in hot, soapy water. Rinse and dry. Wipe the bottom of the Motor Housing with damp, soapy cloth, then wipe dry with a clean cloth.
4. Reattach the metal disc by placing it back onto the motor housing. Using a cloth to protect your hands, turn the disc clockwise. Do not immerse Motor Housing in water or other liquid.
5. Wash Base, Ice Chamber, and Freezer Containers in hot, soapy water. Rinse and dry.

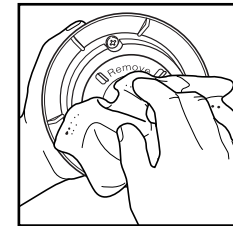

Recipes

Slushies

Freeze soda, fruit juice, or other beverage. Shave frozen beverage into a glass, then fill glass with more of the same beverage.

Ice Milk Milkshake

Freeze plain or chocolate milk. Shave frozen milk into a glass then fill glass with more milk.

Rootbeer Float Snow Cone

Freeze rootbeer. Shave rootbeer into a cone or bowl. Drizzle half-and-half cream over shaved rootbeer.

Piña Colada

Stir 2 tablespoons coconut into $\frac{3}{4}$ cup pineapple juice then freeze. Shave into cone or bowl.

Lemonade Sorbet

Freeze lemonade. Shave into a bowl and drizzle with additional lemonade.

Coffee Granita

Freeze 1 cup brewed coffee sweetened with 1 to 2 tablespoons sugar. Shave into cup or bowl.

Orange Cow

Freeze orange juice. Shave juice into glass. Fill glass with milk.

Frozen Yogurt Banana Berry Smoothie

Freeze 6 to 8 ounces strawberry yogurt. Shave frozen yogurt into a bowl. Place the following in blender and blend until smooth: shaved frozen yogurt, $\frac{3}{4}$ cup milk, $\frac{1}{2}$ banana.

Recipes

Crunchy Apple Smoothie

Freeze $\frac{3}{4}$ cup apple juice. Shave apple juice into a bowl. Place the following in blender and blend until smooth: shaved apple juice, 6 to 8 ounces vanilla yogurt, 1 tablespoon wheat germ, sprinkle of cinnamon.

Classic Soft Drink Slushie

Shave ice in a glass and add your favorite soda.

Lemonade Slushie

Shave ice in a glass and add lemonade.

Fresh Fruit Treats

Freeze sliced fresh fruit in fruit juice. Such as apples in apple juice, oranges in orange juice, bananas in pineapple juice. Shave into a bowl or cup.

Sweet Frozen Treats

Mix then freeze powdered drink mix. Shave into a bowl and scoop into cones.

Snow Cones

Shave regular ice then drizzle flavored syrup over the ice.

Frozen Yogurt

Mix 6 to 8-ounce container of yogurt with equal amount of non-dairy frozen whipped topping. Freeze. Shave into a bowl or cup.

Real Iced Tea

Freeze sweetened tea. Shave into a glass. Fill glass with more tea.

Customer Service

If you have a question about your ice shaver, call our toll-free customer service number. Before calling, please note the model, type, and series numbers and fill in that information below. These numbers can be found on the back of the motor housing. This information will help us answer your question much more quickly.

MODEL: _____ **TYPE:** _____ **SERIES:** _____

LIMITED WARRANTY

This product is warranted to be free from defects in material and workmanship for a period of two (2) years for Hamilton Beach Portfolio products or one (1) year for Hamilton Beach products from the date of original purchase, except as noted below. During this period, we will repair or replace this product, at our option, at no cost. THE FOREGOING WARRANTY IS IN LIEU OF ANY OTHER WARRANTY, WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. ANY LIABILITY IS EXPRESSLY LIMITED TO AN AMOUNT EQUAL TO THE PURCHASE PRICE PAID, AND ALL CLAIMS FOR SPECIAL, INCIDENTAL AND CONSEQUENTIAL DAMAGES ARE HEREBY EXCLUDED. There is no warranty with respect to the following, which may be supplied with this product: glass parts, glass containers, cutter/strainer, blades, and/or agitators. This warranty extends only to the original consumer purchaser and does not cover a defect resulting from abuse, misuse, neglect, use for commercial purposes, or any use not in conformity with the printed directions. This warranty gives you specific legal rights, and you may also have other legal rights which vary from state to state, or province to province. Some states or provinces do not allow limitations on implied warranties or special, incidental or consequential damages, so the foregoing limitations may not apply to you.

If you have a claim under this warranty, DO NOT RETURN THE APPLIANCE TO THE STORE! Please call our CUSTOMER SERVICE NUMBER. (For faster service please have model, series, and type numbers ready for operator to assist you.)

CUSTOMER SERVICE NUMBERS

In the U.S. 1-800-851-8900

In Canada 1-800-267-2826

Web site address: www.hamiltonbeach.com

KEEP THESE NUMBERS FOR FUTURE REFERENCE!

HAMILTON BEACH ♦ PROCTOR-SILEX, INC.
263 Yadkin Road
Southern Pines, NC 28387

PROCTOR-SILEX CANADA, INC.
Picton, Ontario K0K 2T0

840116700

www.hamiltonbeach.com

6/03