

Congratulations on your purchase of a high-quality Insignia product. Your Blu-ray Disc player has built-in Wi-Fi that lets you connect your player to the Internet to download BD-Live content.

This guide includes two options for configuring your wireless connection:

- Connecting to a broadcasting wireless network using DHCP
- Connecting to a wireless network using WPS (Wi-Fi Protected Setup)


NOTE: You only have to perform this procedure once. The next time you turn on your player, it will connect to the network automatically.

Connecting to a broadcasting wireless network using DHCP

NOTE: You only have to perform this procedure once. Once you have connected to a network, the next time you turn on your player, it will automatically connect to the same network.

To set up a network connection:

- 1 Press **ENTER**. The *Settings* menu opens.
- 2 Press **▲** or **▼** to select **Network**. The **Network** menu opens.

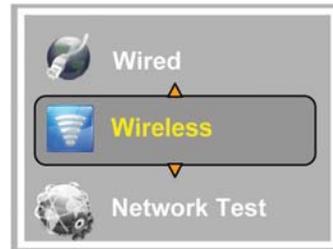

- 3 Press **▶**, press **▲** or **▼** to highlight **Wireless**, then press **ENTER**. A list of network options opens.



- 4 Press **▲** or **▼** to highlight *Network List*, then press **ENTER**. The *Network List* opens and shows the available networks. It may take several seconds for this list to appear.



- 5 Press **▲** or **▼** to highlight a network, then press **ENTER**. A list of options opens.



- 6 If your network is not using encryption or you have successfully logged on the network before, go to Step 15.

NOTE: If a network is using encryption, a closed lock icon  appears next to the network name. If you have successfully logged on to the network before, a saved  icon appears next to the network name.

Or,

If your network is using encryption, go to the next step.

- 7 Press **▲** or **▼** to highlight **Edit**, then press **ENTER**. An edit screen opens. The **AdHoc**, **Encryption**, and **Name** fields are already set correctly based on data received from the wireless router.



- 8 Press ▲ or ▼ to highlight the **Password** field, then press **ENTER**. An on-screen keyboard appears.



- 9 Press ▲, ▼, ◀ or ▶ to highlight the first letter in the password, then press **ENTER**. Repeat this step to enter the rest of the password. If you make a mistake, use the backspace key  to delete the character
- 10 After you enter the password, highlight , then press **ENTER** to close the keyboard.
- 11 Press ▼ to highlight **OK**, then press **ENTER**. The *Network List* reopens.
- 12 If necessary, press ▲ or ▼ to highlight the network again, then press **ENTER**. The option list reopens.



- 13 Press ▲ or ▼ to highlight **Connect**, then press **ENTER**. If the wireless network is working, you should see the message shown below:



You may also briefly see a “connected” message appear on the TV. Press **ENTER** to remove the message from the TV screen.

If the message shown above does not appear, your Blu-ray player is not connected to the network. Repeat this task again.

Connecting to a wireless network using WPS (Wi-Fi Protected Setup) Push button

NOTE: The steps in this task are based on using the remote control that came with your player.

To set up a network connection:

- 1 Press **ENTER**. The *Settings* menu opens.
- 2 Press ▲ or ▼ to select **Network**. The *Network* menu opens.



- 3 Press ▶, press ▲ or ▼ to highlight **Wireless**, then press **ENTER**. A list of network options opens.



- 4 Press ▲ or ▼ to highlight **WiFi Protected Setup**, then press **ENTER**. The following screen appears.



- 5 Press the WPS button on your router. The following screen should appear. When you see “Success” on the screen, your player is connected to the router.



- 6 Press **ENTER** to close the message.