



Wireless - N PCI Adapter

Quick Installation Guide

Model # AWN-11N-PCI

1. Introduction

This is a Wireless PCI Adapter that delivers unrivaled wireless performance for your Desktop PC. It complies with IEEE 802.11n draft standard and backward compatible with IEEE 802.11b/g. This product is made in ISO9001 approved factory and complies with FCC part 15 regulations and CE approval.

1.1 Features

- Complies with draft IEEE 802.11n standard
- Up to 300Mbps data transfer rates in 802.11n mode
- Backward compatible with IEEE 802.11b/g
- Supports 64/128-bit WEP Data Encryption
- Supports WPA, WPA2, WPS, 802.1x advanced security
- Supports both Infrastructure and Ad-Hoc Networking Modes
- Supports Quality of Service (QoS) - WMM, WMM-PS
- Supports Windows 2000/XP/Vista
- Simple user setup and diagnostics utilities

1.2 LED Indicator

LED	Light Status	Description
ACT	Blinking	Data is being transmitted or received.
LINK	On	Wireless link is established.

1.3 Package Contents

- One Wireless PCI Adapter
- Three External Antennas
- One CD-ROM (Drivers / Utility, User's Manual)
- One Quick Installation Guide

If any of the above items is missing, contact your dealer immediately.

2. Installation Procedure

Note: If you have installed the Wireless Adapter driver & utility before, please uninstall the old version first.


- 2.1 Turn off the computer and insert the Wireless PCI Adapter into the PCI slot of your computer.
- 2.2 **“Found New Hardware Wizard”** will be displayed after the adapter is installed and the computer is restarted. Please click **Cancel** to continue.

2.3 Insert the Installation CD into CD-ROM drive then windows below will appear. Click “Install Driver & Utility” to begin device driver installation.



2.3.1 For Windows XP and 2000

Step1: Please read the following license agreement. Select I accept the terms of the license agreement and click Next to continue.

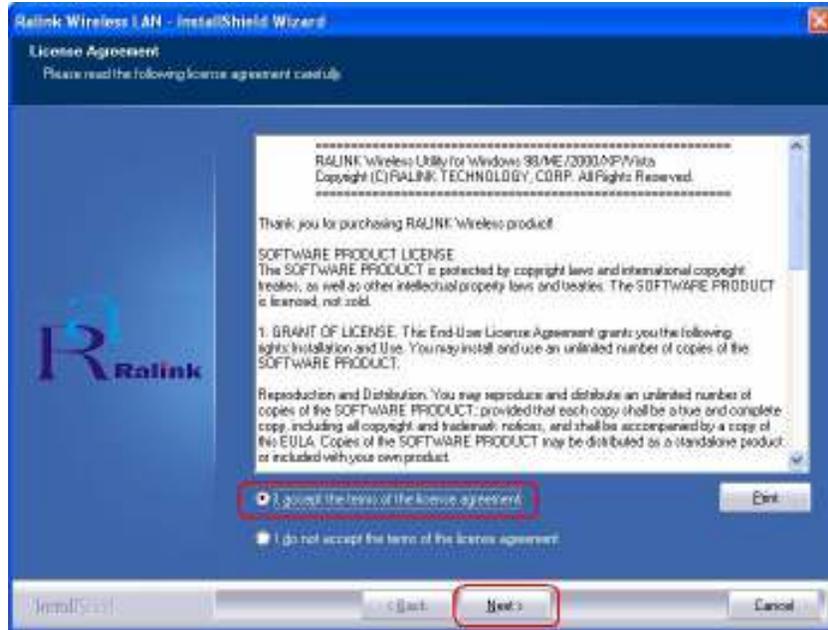

Step1.1: In Windows XP, You can choose to configure the adapter through the **Microsoft Zero Configuration Tool** or the **Ralink Configuration Tool**. It is recommended to choose the **Ralink Configuration Tool** for the adapter. Click **Next** to continue.


Step1.2: If you need better performance, please choose **Optimize for performance mode** to enable **Tx Burst mode**. Or you can choose **Optimize for WiFi mode** to run in standard wireless network.

Step2: Click **Install** to begin the installation.

Step3: After the setup wizard has successfully installed wireless LAN, click **Finish** to exit the wizard.

2.3.2 For Windows Vista

Step1: Please read the following license agreement. Select **I accept the terms of the license agreement** and click **Next** to continue.

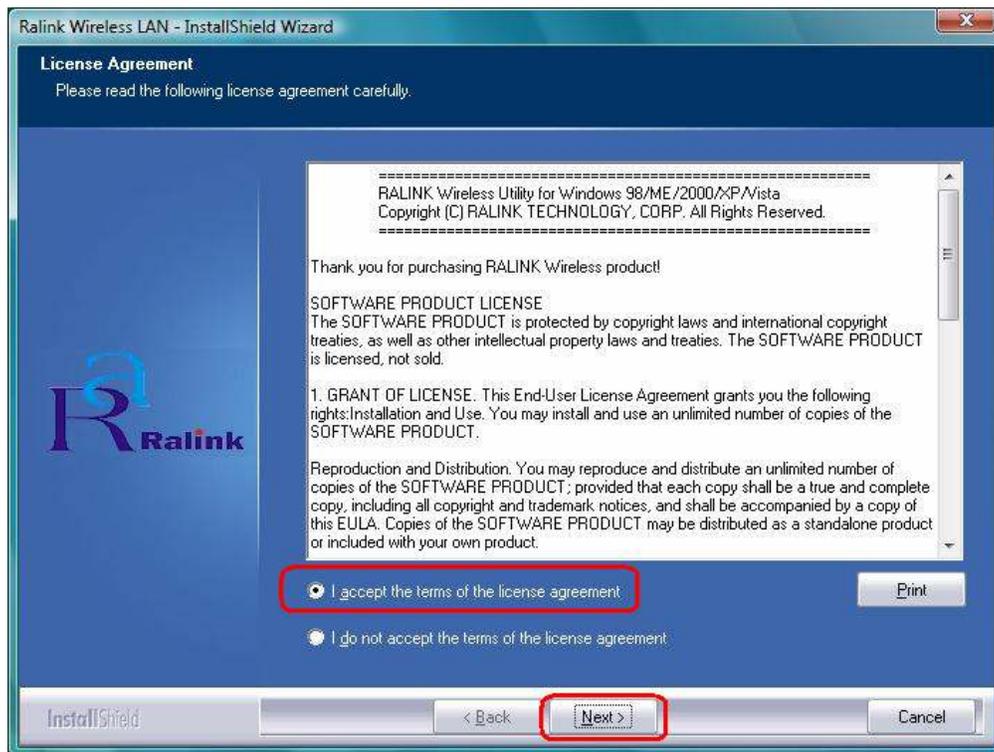

Step2: Click **Install** to begin the installation.

Step3: After the setup wizard has successfully installed wireless LAN, click **Finish** to exit the wizard.

2.4 For detailed information of Device Driver & Utility installation, please refer to the user's manual included in the Installation CD.