

VIZIO

MODEL

VBR135

USER GUIDE

INSTALLING THE BLU-RAY PLAYER

CONTROLS & CONNECTIONS

BASIC OPERATION

ADJUSTING THE PLAYER'S SETTINGS

TROUBLESHOOTING & SUPPORT

HELP, SPECS, WARRANTY & LEGAL



This product qualifies for ENERGY STAR in the "factory default" setting and this is the setting in which power savings will be achieved. Changing the factory default picture settings or enabling other features will increase power consumption that could exceed the limits necessary to qualify for ENERGY STAR rating.

IMPORTANT SAFETY INSTRUCTIONS

Your Blu-ray Player is designed and manufactured to operate within defined design limits. Misuse may result in electric shock or fire. To prevent your Blu-ray Player from being damaged, the following instructions should be observed for the installation, use, and maintenance of your Blu-ray Player. Read the following safety instructions before operating your Blu-ray Player. Keep these instructions in a safe place for future reference.

- To reduce the risk of electric shock or component damage, switch off the power before connecting other components to your Blu-ray Player.
- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use



caution when moving the cart/apparatus combination to avoid injury from tip-over.

- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as when the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally or has been dropped.
- Unplug the power cord before cleaning your Blu-ray Player.
- When moving your Blu-ray Player from an area of low temperature to an area of high temperature, condensation may form in the housing. Wait before turning on your Blu-ray Player to avoid causing fire, electric shock, or component damage.
- A distance of at least three feet should be maintained between your Blu-ray Player and any heat source, such as a radiator, heater, oven, amplifier etc. Do not install your Blu-ray Player close to smoke. Operating your Blu-ray Player close to smoke or moisture may cause fire or electric shock.
- Slots and openings in the back and bottom of the cabinet are provided for ventilation. To ensure reliable operation of your Blu-ray Player and to protect it from overheating, be sure these openings are not blocked or covered. Do not place your Blu-ray Player in a bookcase or cabinet unless proper ventilation is provided.
- Never push any object into the slots and openings on your Blu-ray Player cabinet. Do not place any objects on the top of your Blu-ray Player. Doing so could short circuit parts causing a fire or electric shock. Never spill liquids on your Blu-ray Player.
- Your Blu-ray Player should be operated only from the type of power source indicated on the label. If you are not

sure of the type of power supplied to your home, consult your dealer or local power company.

- Do not apply pressure or throw objects at your Blu-ray Player. This may compromise the integrity of the display. The manufacturer's warranty does not cover user abuse or improper installations.
- The power cord must be replaced when using different voltage than the voltage specified. For more information, contact your dealer.
- When connected to a power outlet, power is always flowing into your Blu-ray Player. To totally disconnect power, unplug the power cord.
- The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of un-isolated, dangerous voltage within the inside of your Blu-ray Player that may be of sufficient magnitude to constitute a risk of electric shock to persons.
- Do not overload power strips and extension cords. Overloading can result in fire or electric shock.
- The wall socket should be installed near your Blu-ray Player and easily accessible.
- Only power of the marked voltage can be used for your Blu-ray Player. Any other voltage than the specified voltage may cause fire or electric shock.
- Do not touch the power cord during lightning. To avoid electric shock, avoid handling the power cord during electrical storms.
- Unplug your Blu-ray Player during a lightning storm or when it will not be used for long period of time. This will protect your Blu-ray Player from damage due to power surges.
- Do not attempt to repair or service your Blu-ray Player yourself. Opening or removing the back cover may expose you to high voltages, electric shock, and other hazards. If repair is required, contact your dealer and

refer all servicing to qualified service personnel.

- **WARNING:** Keep your Blu-ray Player away from moisture. Do not expose your Blu-ray Player to rain or moisture. If water penetrates into your Blu-ray Player, unplug the power cord and contact your dealer. Continuous use in this case may result in fire or electric shock.
- Do not use your Blu-ray Player if any abnormality occurs. If any smoke or odor becomes apparent, unplug the power cord and contact your dealer immediately. Do not try to repair your Blu-ray Player yourself.
- Avoid using dropped or damaged appliances. If your Blu-ray Player is dropped and the housing is damaged, the internal components may function abnormally. Unplug the power cord immediately and contact your dealer for repair. Continued use of your Blu-ray Player may cause fire or electric shock.
- Do not install your Blu-ray Player in an area with heavy dust or high humidity. Operating your Blu-ray Player in environments with heavy dust or high humidity may cause fire or electric shock.
- Follow instructions for moving your Blu-ray Player. Ensure that the power cord and any other cables are unplugged before moving your Blu-ray Player.
- When unplugging your Blu-ray Player, hold the AC/DC power adapter, not the cord. Pulling on the power cord may damage the wires inside the cord and cause fire or electric shock. When your Blu-ray Player will not be used for an extended period of time, unplug the power cord.
- To reduce risk of electric shock, do not touch the connector with wet hands.
- Insert batteries in accordance with instructions. Incorrect polarities may cause the batteries to leak which can damage the remote control or injure the operator. Do not expose batteries to excessive heat such as sunshine, fire or the like.
- If any of the following occurs, contact the dealer:

- The power cord fails or frays.
 - Liquid sprays or any object drops into your Blu-ray Player.
 - Your Blu-ray Player is exposed to rain or other moisture.
 - Your Blu-ray Player is dropped or damaged in any way.
 - The performance of your Blu-ray Player changes substantially.
- This apparatus shall not be exposed to dripping or splashing and no objects fill with liquids, such as vases, shall be placed on the apparatus.
 - The mains plug or appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
 - CAUTION - These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated DANGEROUS VOLTAGE within the product's enclosure that may be of sufficient magnitude to constitute a risk of electrical shock to persons.

Caution

- This BD player has a laser system.
- Please note that hazardous radiation leakage may be caused if the player is misused in anyway.
- Do not defeat the safety interlocks.
- Do not open the case of the player. The laser light will become visible when the case is opened.

CLASS 1 Laser Product

Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

IMPORTANT SAFETY INFORMATION FOR VIEWING 3D CONTENT



You may experience discomfort while watching 3D content. You may feel symptoms of eye strain, vision fatigue, color or depth distortion, motion sickness, nausea, dizziness, disorientation, or other discomforts. If you experience any of these symptoms, stop watching and take a break for at least thirty minutes before resuming. If the symptoms are severe or continue even after you have stopped watching 3D content, consult a physician.



Take care to monitor children's watching of 3D content. Children (including teenagers) may be more at risk of experiencing discomfort while watching 3D content and less likely to report symptoms. Monitor children's 3D content viewing and watch for signs of discomfort.



Some viewers may be susceptible to epileptic seizures or strokes when viewing 3D images, even if those conditions have not been previously diagnosed. If you or anyone in your family has a history of seizures or strokes, or if you have any other reason to think you or someone under your supervision may be susceptible to epileptic seizures or strokes, consult a physician before watching 3D content.



Even if you do not experience any of the above symptoms, take regular breaks from watching 3D content.

Table of Contents

Installing the Blu-ray Player	3	Adjusting the Deep Color Setting.....	18
Inspecting the Package Contents	3	Adjusting the Audio Settings	19
Connecting the Player to an Electrical Outlet	3	Changing the PCM Downsampling Rate	19
Connecting the Player to your TV	3	Adjusting the Digital Audio Output	20
Connecting the Player to your Home Audio System.....	4	Activating or Deactivating Dynamic Range Control (DRC)	20
Connecting the Player to your TV and Home Audio System with HDMI	5	Changing Language Settings.....	21
Setting Up your Network Connection.....	6	Changing the On-Screen Menu Language	21
Connecting to a Wireless Network	7	Changing the Disc's Menu Language	21
Connecting to a Wireless Network with WiFi Protected Setup (WPS)	7	Changing the Audio Language	22
Controls & Connections.....	8	Changing the Subtitle Language	22
Front Panel.....	8	BD-Live Storage	22
Rear Panel	9	Using Disc Playback Memory	22
Remote Control	10	Setting the Parental Controls.....	23
Replacing the Batteries	11	Setting the Parental Country	23
Basic Operation	12	Activating or Deactivating the Parental Controls	24
Navigating the On-Screen Menu	12	Changing the Parental Code	24
Playing a Disc	12	Changing the System Settings.....	25
Basic Playback Functions	13	Activating or Deactivating the Screen Saver	25
Advanced Playback Functions	14	Activating or Deactivating Disc Autoplay	26
Viewing USB Media - Audio and Images	14	Enabling or Disabling CEC Support	26
USB Media Playback Controls.....	15	Setting Power Down Mode.....	26
Playing USB Photos and Audio.....	15	Updating the Player's Firmware	27
Adjusting the Player's Settings	17	Restoring the Player's Factory Default Settings.....	27
Adjusting the Display Settings.....	17	Adjusting the Network Settings	28
Adjusting the Aspect Ratio	18	Adjusting the Wired Settings.....	28
Activating Film Mode.....	18	Setting Up a Wireless Connection Manually	29
		Setting Up a Wireless Connection Using WPS.....	29
		Viewing the Info Screen	30

Table of Contents

 
Using Internet Apps	31
Using the Netflix App.....	31
Opening a Netflix Account	31
Using the VUDU App	31
Opening a VUDU Account.....	31
Using the Pandora App	32
Opening a Pandora Account.....	32
Using the HULU Plus App.....	32
Opening a HULU Plus Account	32
Troubleshooting & Technical Support	33
Specifications	35
Limited Warranty.....	36
Legal & Compliance.....	37

Installing the Blu-ray Player

1


INSPECTING THE PACKAGE CONTENTS

Before installing your new Blu-Ray Player, take a moment to inspect the package contents. Use the images below to ensure nothing is missing or damaged.

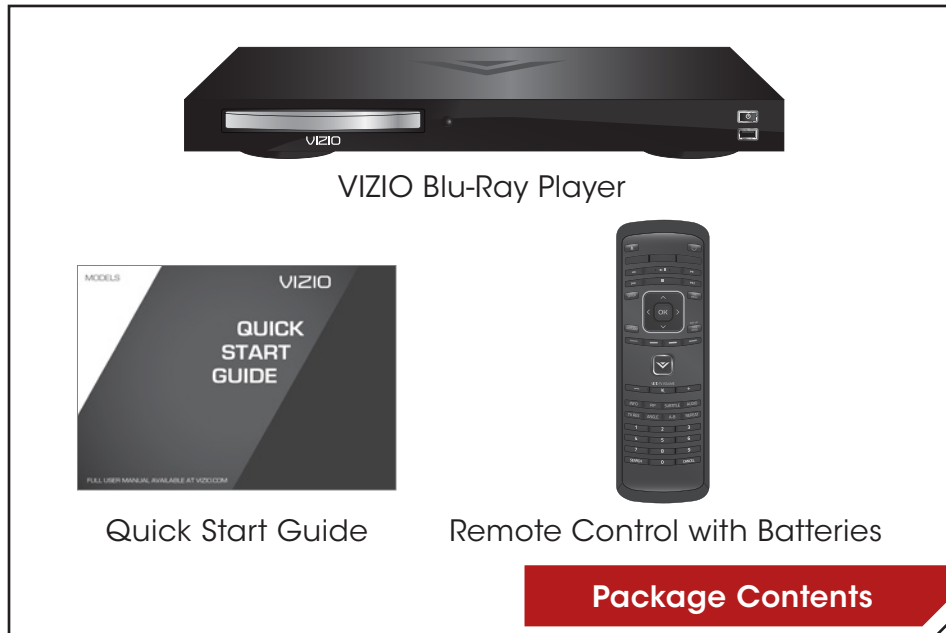


CONNECTING THE PLAYER TO AN ELECTRICAL OUTLET

 Your player must be connected to a power source in order to work. Connect the power cord to an electrical outlet as shown below:

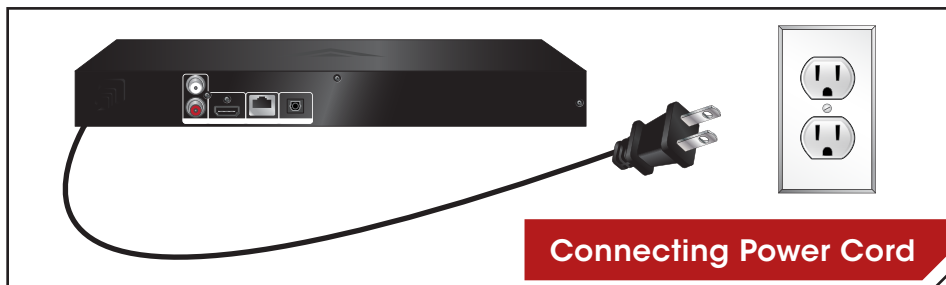

CONNECTING THE PLAYER TO YOUR TV

 Your Blu-ray player will easily connect to your TV. Before you begin the installation, ensure your TV has an available HDMI port.

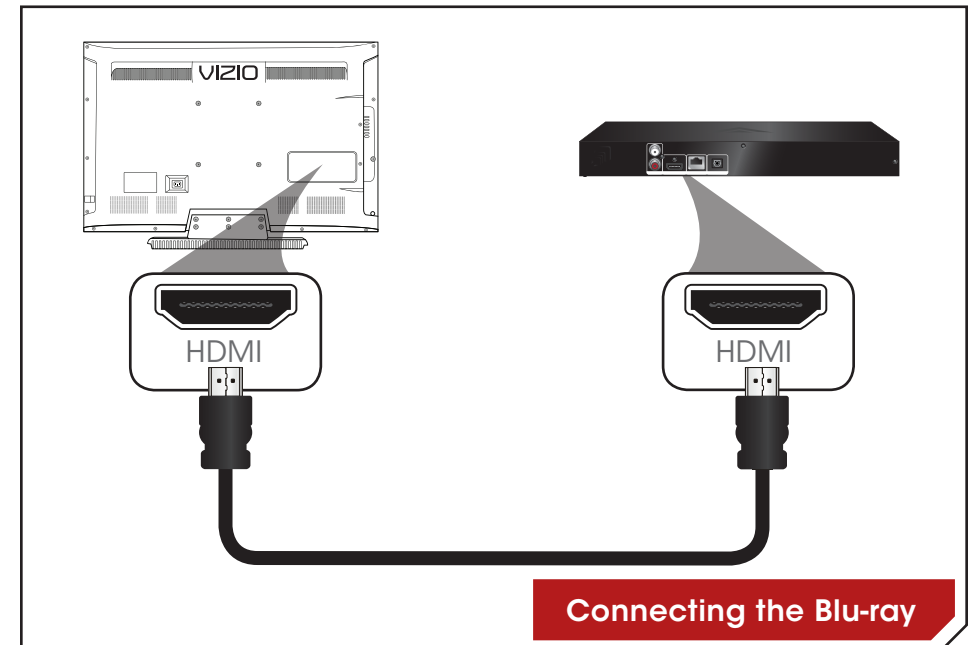

To connect the player to the TV:

1. Ensure both the TV and the player are off.
2. Connect the player and the TV using an HDMI cable. Ensure each end of the cable is securely connected.
3. Turn the TV on.
4. Turn the player on by pressing the **Power** button on the remote, or by touching the **Power** control on the front of the player.
5. When you are ready to use the player, set the TV's input to the proper HDMI input. (Devices differ; see your TV's user manual for details on how to change the input source)

CONNECTING THE PLAYER TO YOUR HOME AUDIO SYSTEM

Your player has a RCA stereo audio port and a digital optical audio port. If your home audio system is equipped with a digital optical port, you can connect it to your player so you can enjoy theater-style surround sound.



Remember: You still need to connect the player to your television to view video. See *Connecting the Player to your TV* on page 3.

To connect the player to your home audio system:

 
1. Ensure both your home audio system and the player are off.
2. Connect the player to the home audio system using either a RCA stereo cable or optical cable. See the *Home Audio Connection Chart* below.
3. Turn the player on by pressing the Power button on the remote, or by pressing the Power button on the front of the player.

4. Turn your home audio system on.
5. When you are ready to use the player, set your home audio system's input to stereo or optical. (Devices differ; see your audio system's user manual for details on how to change the input)

If the player is correctly connected, you will hear audio from your home audio system speakers when a disc is played.



For best quality sound, connect your player to your home audio system using an HDMI cable. See the next page for instructions.

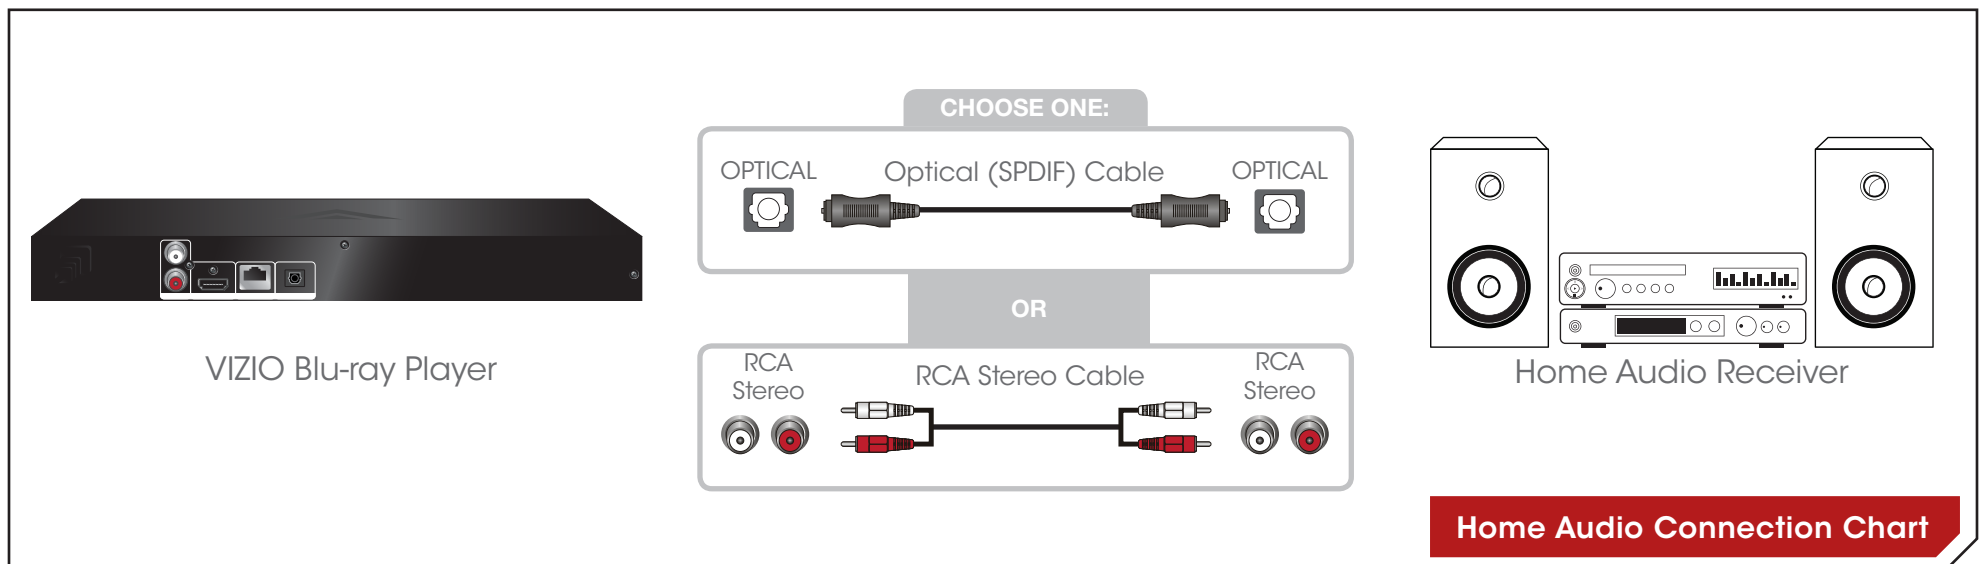


CONNECTING THE PLAYER TO YOUR TV AND HOME AUDIO SYSTEM WITH HDMI

Your player can output high-definition digital audio via the HDMI port, enabling you to enjoy up to 7.1 channels of surround sound using your home audio system.

To connect the player to your home audio system with HDMI:

 1. Ensure both your home audio system and the player are off.
2. Connect the player to the home audio system and TV as shown in the HDMI Connection Chart below.
3. Turn the power on by pressing the Power button on the remote, or Power button on the front of the player.
4. Turn your TV and home audio system on.
5. When you are ready to use the player, set your home audio system's input to the player's connection. Set your TV's input to the proper HDMI connection.

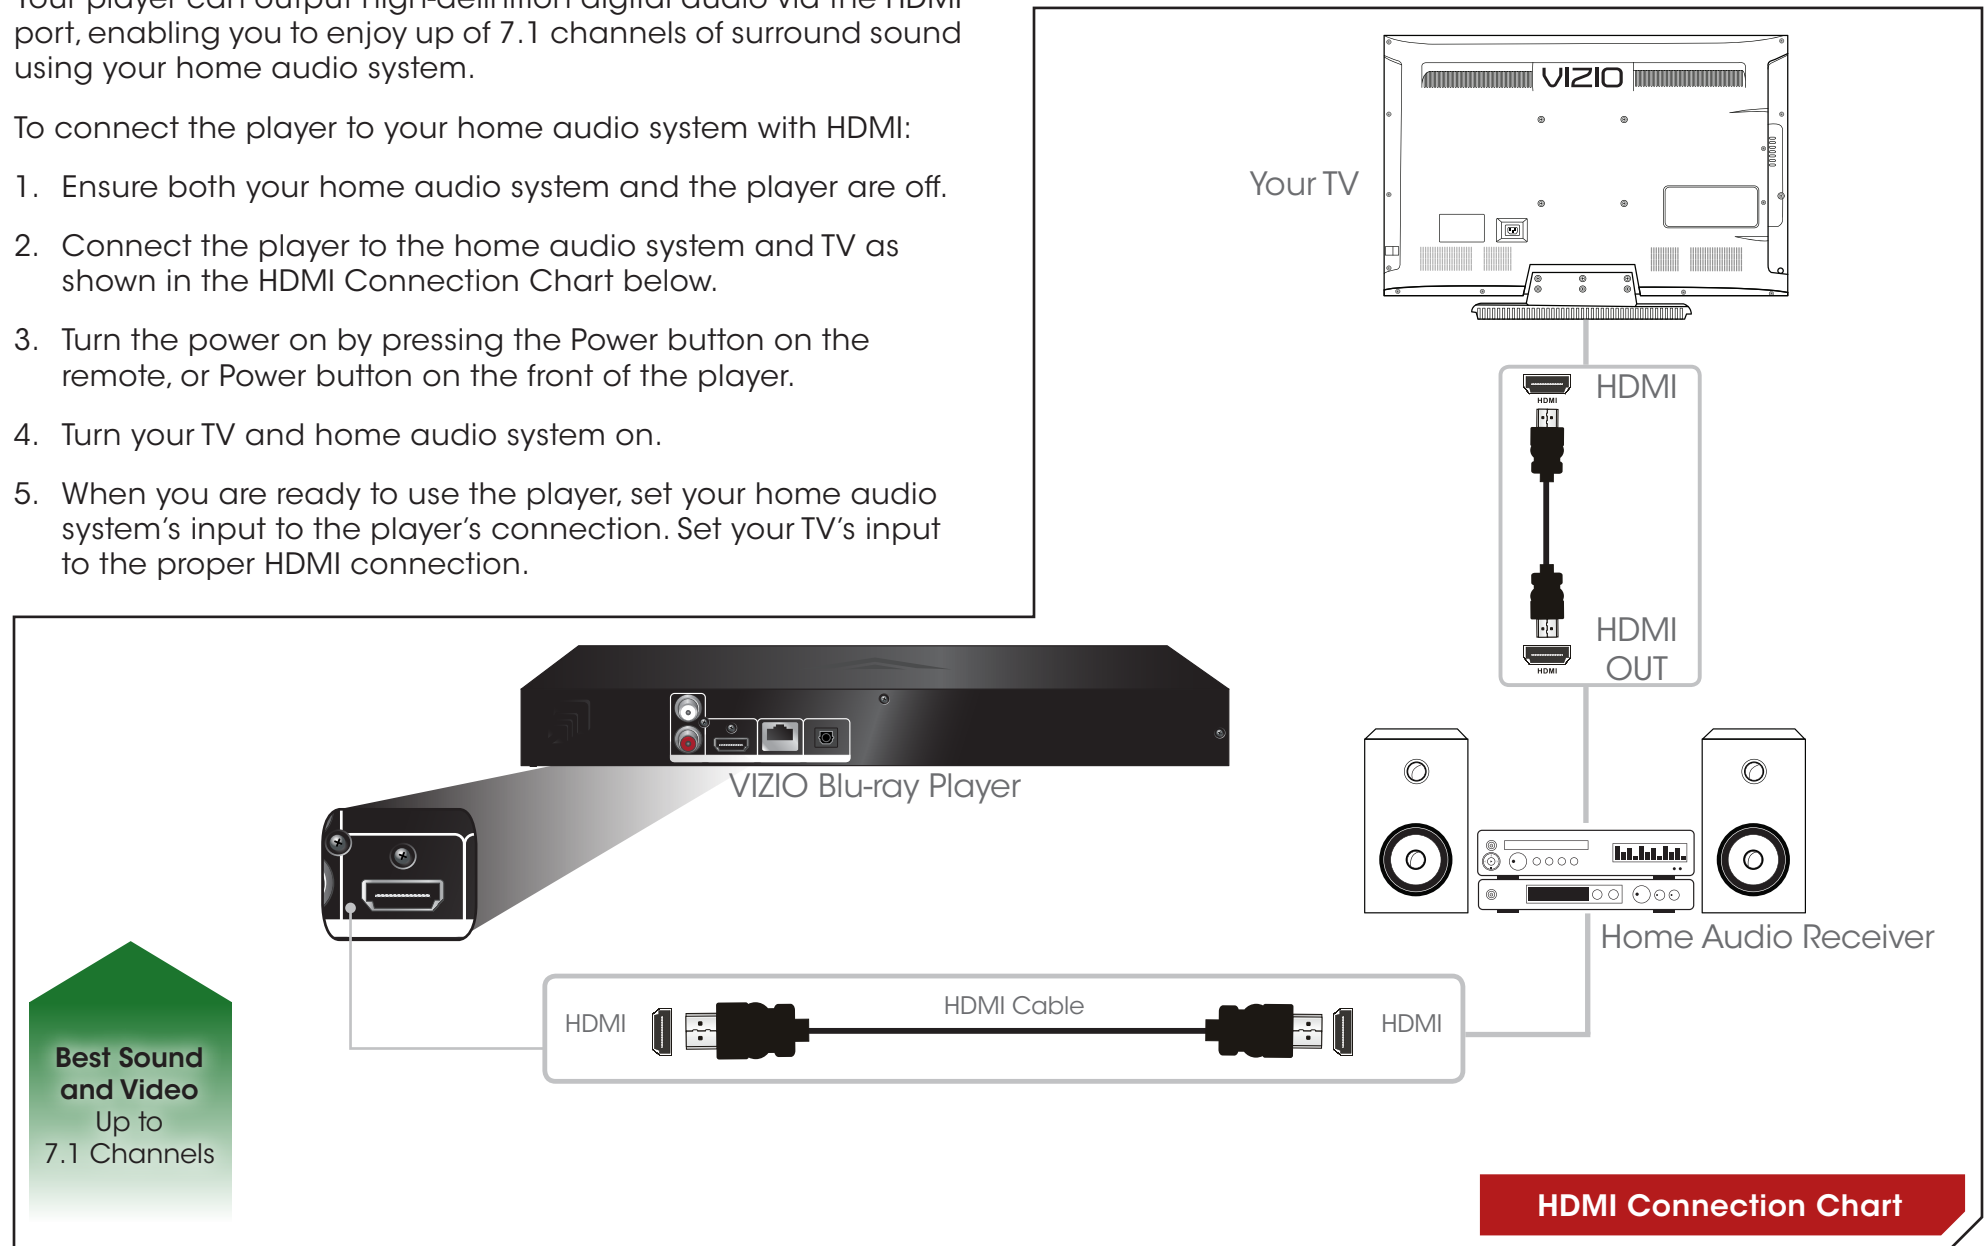

SETTING UP YOUR NETWORK CONNECTION

Your player is network-ready, and can be connected to your home network using the RJ45 (ethernet) connector on the back panel.

Once you have connected to your home network and the Internet, you can use Internet Apps to deliver popular online content to your player.



 
For the most reliable network performance, a wired connection is recommended.



Ethernet cables are available from many retailers in lengths of up to 50 feet.

To connect to a wired network:

1. Ensure you have:
 - An ethernet cable long enough to connect the player to your router or modem
 - A router or modem with an available ethernet port
 - A high-speed Internet connection
2. Connect your ethernet cable from the router or modem to the ethernet port on the back of the player.
3. Turn on the player and your TV. Use the **Left/Right Arrow** buttons to highlight **Settings** and press **OK**. Then highlight **Network** and press **OK**. Then highlight **Connection Type**, press **OK** and select **Ethernet**.

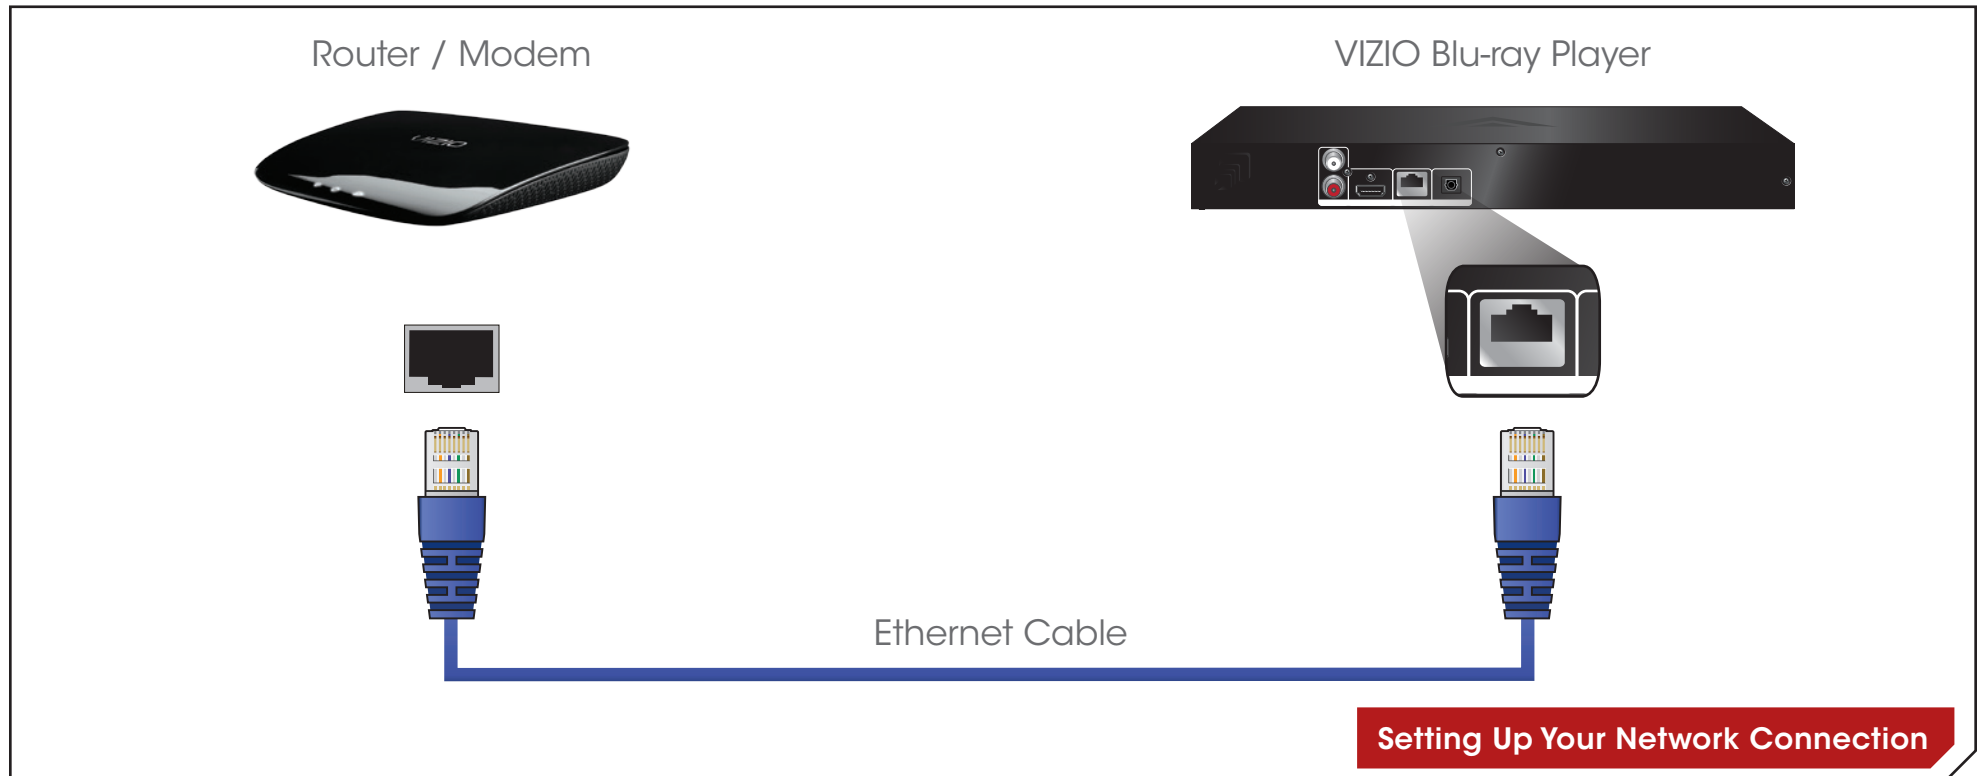

Connecting to a Wireless Network



For the most reliable network performance, a wired connection is recommended.

To connect to a wireless network:

1. Ensure you have:
 - A router broadcasting a high-speed wireless signal (802.11n recommended)
 - A high-speed Internet connection
2. Press the **Power** button on the remote to turn the player on. Turn your TV on and select the input to which the Blu-ray player is connected.
3. Use the **Left/Right Arrow** buttons on the remote to highlight **Settings**, then press **OK**.
4. Use the **Up/Down Arrow** buttons on the remote to highlight **Network**, then press **OK**.
5. Use the **Up/Down Arrow** buttons on the remote to highlight **Connection Type**, then press **OK**.
6. Use the **Up/Down Arrow** buttons on the remote to highlight **Wireless**, then press **OK**. A confirmation window is displayed, highlight **Yes** to continue.
7. Use the **Up/Down Arrow** buttons to select **Scan** to have your player search for available wireless networks.
8. If your network is password-protected, enter your password using the buttons on the remote. When you are finished select **Enter**, and then **Next** to continue.
9. When your player has connected, a success message is displayed. Select **OK** to complete the wireless setup.

Connecting to a Wireless Network with WiFi Protected Setup (WPS)



 
Ethernet cables are available from many retailers in lengths of up to 50 feet.

Wi-Fi Protected Setup is an easy way to connect the Player to your home wireless network.

To connect using WPS:

1. Ensure you have:
 - A router with a WPS button, broadcasting a high-speed wireless signal (802.11n recommended)
 - A high-speed Internet connection
2. Press the **Power** button on the remote to turn the player on. Turn the TV on and select the input to which the Blu-ray player is connected.
3. Use the **Left/Right Arrow** buttons on the remote to highlight **Settings**, then press **OK**.
4. Use the **Up/Down Arrow** buttons on the remote to highlight **Network**, then press **OK**.
5. Use the **Up/Down Arrow** buttons on the remote to highlight **Connection Type**, then press **OK**.
6. Use the **Up/Down Arrow** buttons on the remote to highlight **Wireless**, then press **OK**. A confirmation window is displayed, highlight **Yes** to continue.
7. Use the **Up/Down Arrow** buttons to select **Auto WPS**.
8. Follow the on screen instructions to complete the WiFi Protected Setup.

FRONT PANEL

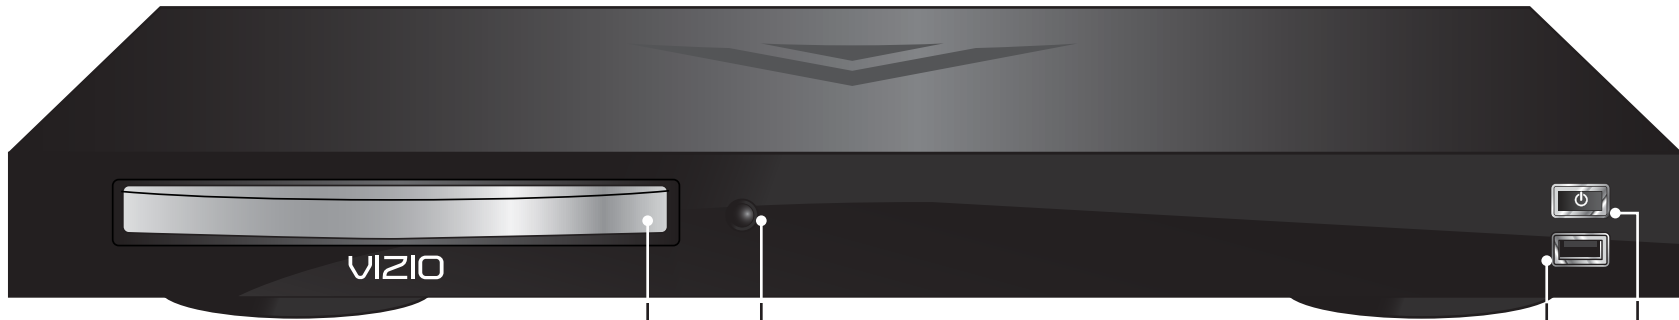

Disc Tray —
To insert a disc, press the Eject Button first then place a disc onto the tray.

 
Eject Button —
Press to eject the disc tray.

USB Port —
Insert USB thumb drive to play photos and music. Supported files include .jpg and .mp3.

Power Button —
Press to turn Player on or off.

Front Panel

REAR PANEL

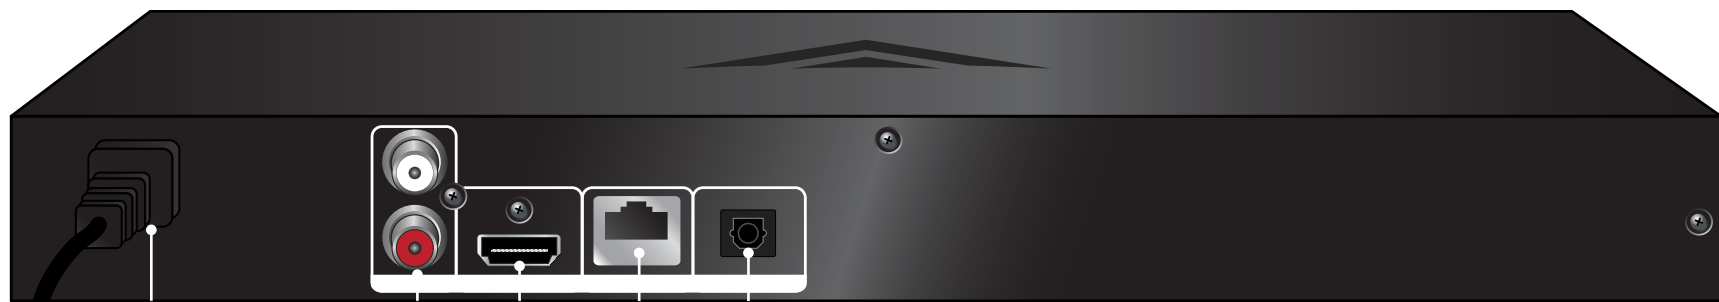

Power Cord

Digital Optical Audio Out

Connect an optical cable* to an external audio device.

Ethernet

Connect an Ethernet cable* to your router or modem.

HDMI Out

 
Connect an HDMI cable* to your TV.

RCA Stereo Audio Out

Connect an RCA cable* to an external audio device.

Rear Panel

REMOTE CONTROL

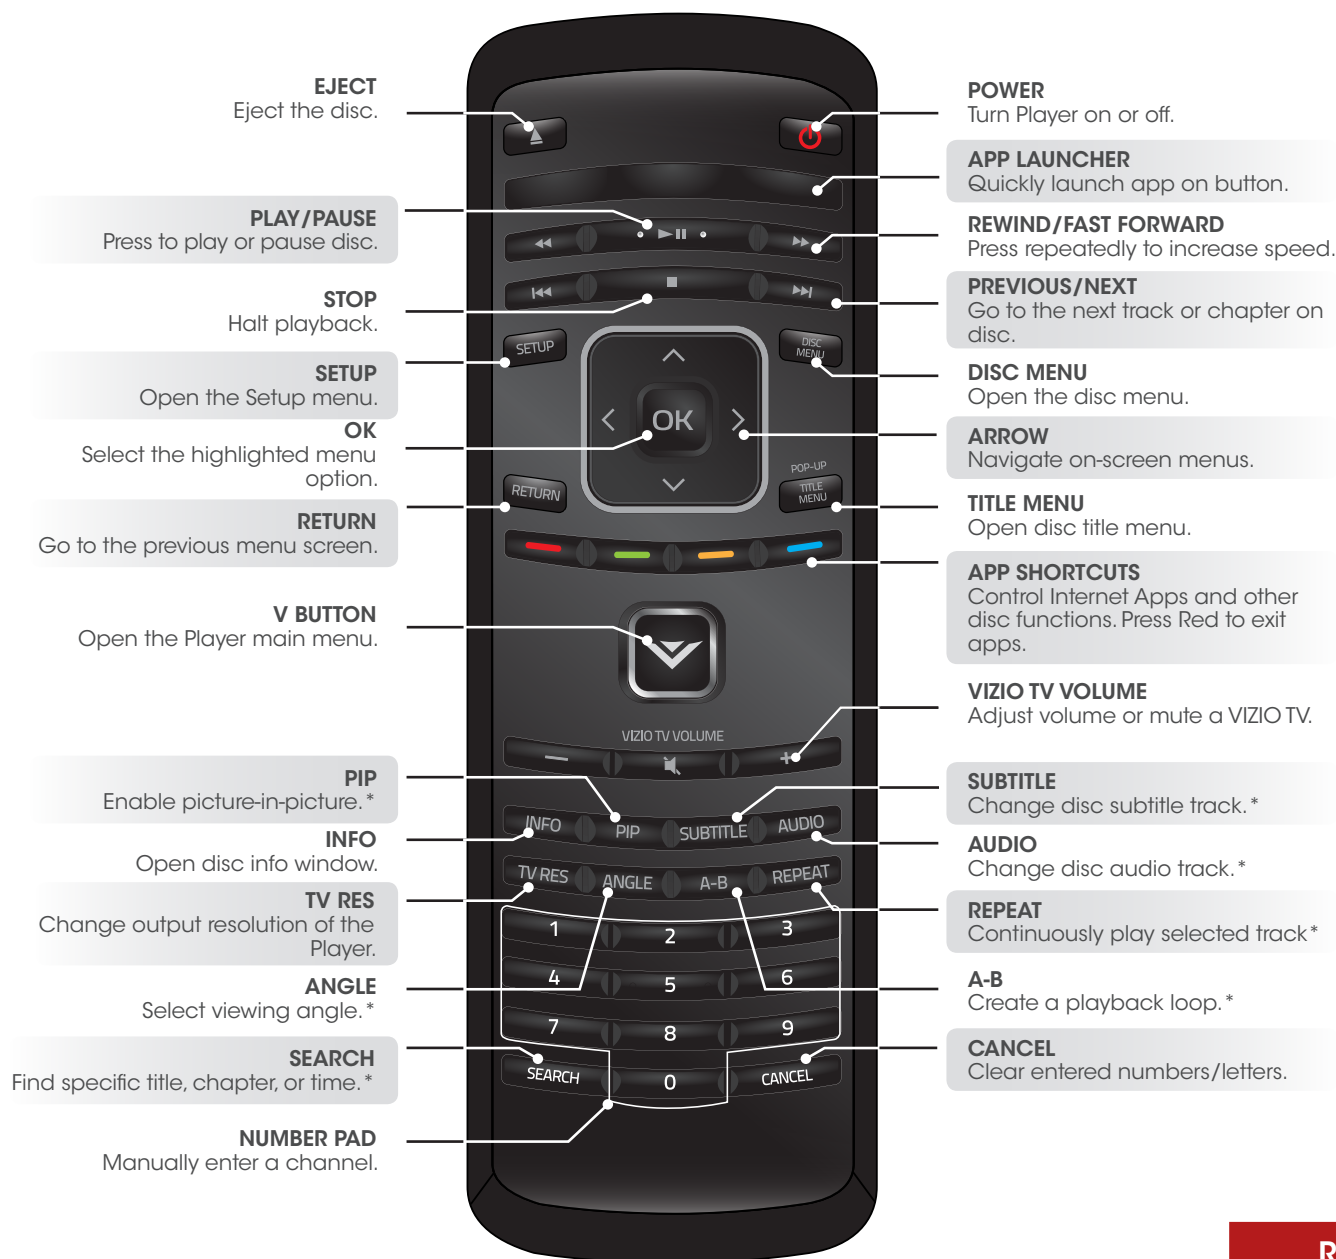

*Supported discs only.

Remote Control

Replacing the Batteries



1. Remove the battery cover.
2. Insert two AAA batteries into the remote control. Make sure that the (+) and (-) symbols on the batteries match the (+) and (-) symbols inside the battery compartment.
3. Replace the battery cover.



- Use only good quality batteries.
- Inserting the batteries incorrectly may result in cracking or leakage that may cause a fire or result in injury.
- Dispose of old or dead batteries in accordance with local hazardous waste regulations.
- Keep batteries away from children and pets.

In this chapter, you will learn how to:


- Navigate the On-Screen Menu
- Play a Disc
- View USB Media

Navigating the On-Screen Menu



To highlight an icon or menu setting, press the Arrow buttons on the remote. The highlighted icon or menu setting will glow light blue.

To select an icon or menu setting, highlight the icon or menu setting and press **OK** button on the remote.



To go back to a previous screen, press the **RETURN** button.

Playing a Disc


Your player can play several kinds of discs. Use this table to ensure your disc is compatible with the player:

Type of Disc	Logo
Blu-ray	
Blu-ray 3D	
DVD Video	
Audio CD	
DVD-R DVD+R	
DVD-RW DVD+RW	


To play a disc:

1. Press the **Eject** button on the remote control or press the **Eject** button on the front of the player.

 The disc tray opens.

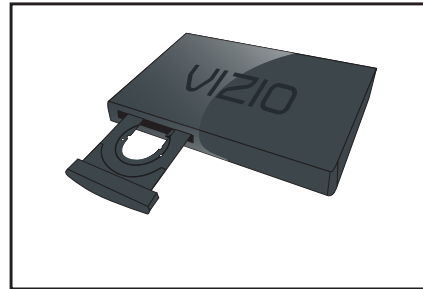


 2. Insert your disc. Place the disc, label side up, into the disc tray.

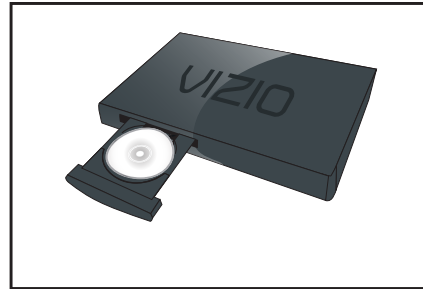

3. Press the **Eject** button on the remote control or press the **Eject** control on the front of the player.

 The disc tray closes.

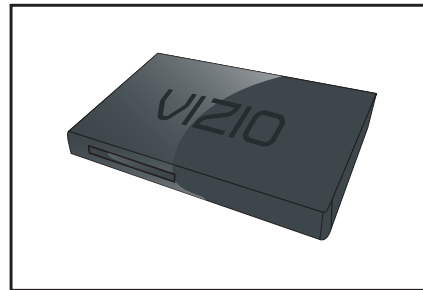

4. Using the **Arrow** buttons on the remote, highlight **Play Disc** and press **SELECT**. The disc plays.

Basic Playback Functions

When playing a disc, you can use buttons on the remote to manipulate the playback in several ways:



Previous: Skip to last chapter or track.

Next: Skip to next chapter or track.

Rewind: Reverse playback. Press repeatedly to increase the speed. Speeds are x2, x4, x8, x16, x32, and x64. Press Play/Pause to resume normal playback.

Play/Pause: Pause playback. Press again to resume normal playback.

Fast Forward: Increase speed of playback. Press repeatedly to increase the speed. Speeds are x2, x4, x8, x16, x32, and x64. Press Play/Pause to resume normal playback.

Stop: Halt playback.



If Disc Auto Playback is turned ON then the movie will load automatically.

Advanced playback functions

Your player also features advanced playback functions.



PIP: Enable picture-in-picture (Supported discs only.)

Info: Display the Info Bar. Press again to close the Info Bar.

TV Res: Change the output resolution. Press repeatedly to cycle through available resolutions.

Angle: Some video discs are recorded using multiple camera angles. Press to change viewing angle. (Supported discs only.)

Subtitle: Open subtitle menu. Press again to close. See *Changing the Subtitle Language* on page 22. (Supported discs only.)

Audio: Open audio menu. Press again to close. See *Adjusting the Audio Settings* on page 19. (Supported discs only.)

A-B: Loop a segment of audio or video. Press at the beginning of the desired segment, and again at the end. Segment will loop until the **REPEAT** button is pressed. (Supported discs only.)

Repeat: Change repeat mode (Supported discs only):

- **All** - Repeat all tracks in order.
- **Random** - Repeat all tracks randomly.
- **Track** - Repeat the currently playing track.
- **Off** - Resume normal playback.

VIEWING USB MEDIA - AUDIO AND IMAGES

Your player features a USB port where you can connect and share a USB thumb drive containing your photos and music.

The player supports the following file types:

Media Type	File Types
Audio	.mp3 .aac
Images	.jpg .jpeg .png

USB Media Playback Controls

When listening to USB audio, you can control the playback using buttons on the remote.



Previous: Play the file listed before the currently-playing file. (Audio only.)

Next: Play the file listed after the currently-playing file. (Audio only.)

Rewind: Reverse playback. Press repeatedly to increase the speed. Speeds are x2, x4, x8, x16, x32, and x64. Press **Play/Pause** to resume normal playback.

Play/Pause: Pause playback. Press again to resume normal playback.

Fast Forward: Increase speed of playback. Press repeatedly to increase the speed. Speeds are x2, x4, x8, x16, x32, and x64. Press **Play/Pause** to resume normal playback.

Stop: Halt playback.



The **REPEAT** button can be used with USB audio files as it is with disc media.

Playing USB Photos and Audio

 
To play USB media, you must first save your music or images onto a USB thumb drive.

Remember:


- The USB thumb drive must be formatted as FAT32.
- Files on the USB thumb drive must end in a supported file extension (.mp3, .jpg, etc).
- The player will not play media from external hard drives or mp3 players.

To play your USB media:

1. Turn the player off. Connect your USB thumb drive to the USB port on the front of the player.

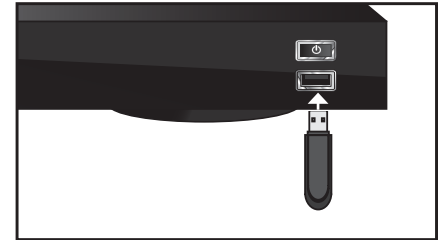

 2. Press the **Power** button on the remote or press the **Power** button on the front of the player to turn it on.

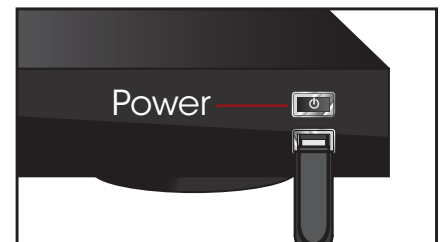

3. Use the **Arrow** buttons on the remote to highlight **My Media**, then press **OK**.



 
4. Use the **Up/Down Arrow** buttons to highlight the media type you want to play, then press **OK**.



5. Use the **Arrow** and **OK** buttons on the remote to locate your media file in the file browser.

Highlight the file and press **OK**.

The media file will begin to play.

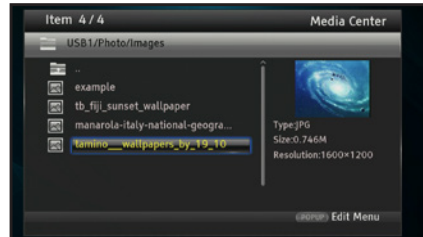

The photo slide show will begin playing automatically beginning with the photo you have chosen.



Do not remove the USB thumb drive while the player is on. Doing so may damage the drive.

Your player is preset to work with most setups out of the box, but if you would like to adjust any of the player's settings, you can use the on-screen menu to do so. The Settings menu is divided into these parts:

- General Setting
- Display Setting
- Audio Setting
- System Information

ADJUSTING THE DISPLAY SETTINGS

From the Display menu, you can adjust the way the player displays your video.

To access the Display menu:

1. Turn on the player and your TV. Use the **Arrow** buttons on the remote to highlight **Settings** and press **OK**.



2. Use the **Arrow** buttons on the remote to highlight **Display Setting** and press **OK**.

Your current settings are displayed to the right of each menu option.



Changing the Display Resolution

For the best viewing experience, you should adjust the player's settings so that it outputs video in a resolution supported by your TV.

To change the display resolution:

1. From the Display menu, use the **Up/Down Arrow** buttons on the remote to highlight **Output to TV** and press **OK**. Then highlight **Resolution** and press **OK**.



2. Using the **Arrow** buttons, highlight the highest resolution your TV can display, then press **OK**.

Since your TV is connected to the player using HDMI, select **HDMI Auto**. The player will detect the best display resolution automatically.



You can select the HDMI Auto setting to allow the player to automatically detect the best display resolution for your TV.



Only HDMI connections can display 1080p video.

Adjusting the Aspect Ratio

If video displayed from the player appears distorted or otherwise incorrect, you may need to adjust the aspect ratio of the player to match that of your TV. (Devices differ; see your TV's user manual to determine its aspect ratio.)

To adjust the aspect ratio:

1. From the Display menu, use the **Up/Down Arrow** buttons on the remote to highlight **Output to TV** and press **OK**. Then highlight **TV Screen** and press **OK**.



2. Highlight the aspect ratio that most closely matches that of your TV and press **OK**:
 - **16:9 Full** - Use this setting if you have a "widescreen" television. When using this setting, video formatted in 4:3 will be stretched horizontally to fit the screen.
 - **16:9 Normal** - Use this setting if you have a "widescreen" television. When using this setting, video formatted in 4:3 will be displayed in the center of the screen. Vertical bars will be displayed on the left and right edges of the picture.
 - **4:3 Pan&Scan** - Use this setting if you have a "traditional" screen (nearly square). When using this setting, movies in widescreen format will be centered and the left and right edges of the picture may be cut off.
 - **4:3 Letterbox** - Use this setting if you have a "traditional" screen (nearly square). When using this setting, movies in widescreen format will be fully displayed, with black bars on the top and bottom of the picture.

Activating Film Mode

Movies are recorded on film at a rate of 24 pictures, or frames, per second. Many of the movies on Blu-ray discs are formatted at this frame rate (24 frames/second). However, not all TVs can display this format.

If your TV is capable of displaying 24 frames/second, you can activate Film Mode for a better viewing experience.

To activate/deactivate Film Mode:

1. From the Display menu, use the **Up/Down Arrow** buttons on the remote to highlight **Output to TV** and press **OK**. Then highlight **HDMI 1080p 24Hz** then press **OK**.



2. Highlight **On** or **Off** and press **OK**.

Adjusting the Deep Color Setting

The player is capable of outputting 36-bit color over HDMI. For the best viewing experience, the deep color setting should be adjusted to match your TV's display capabilities.

To adjust the Deep Color setting:

1. From the Display menu, use the **Up/Down Arrow** buttons on the remote to highlight **HDMI Deep Color** and press **OK**.



2. Highlight the highest color setting that your TV can display. (Devices differ; see your TV's user manual for details.)

ADJUSTING THE AUDIO SETTINGS

The settings in the Audio Menu configure the player's digital audio outputs (HDMI or Optical/SPDIF).

To access the Audio Menu:

1. Turn on the player and your TV. Use the **Arrow** buttons on the remote to highlight **Settings** and press **OK**.



2. Use the **Arrow** buttons on the remote to highlight **Audio** and press **OK**.

The Audio drop-down menu is displayed. Your current settings are displayed to the right of each menu option.



Changing the PCM Downsampling Rate

This setting should be adjusted if your home audio receiver can process high-bitrate PCM signals over the Optical/SPDIF port.



If you are unsure about how to adjust this setting, leave the PCM Downsampling rate at 48 kHz.



Changing this setting has no effect if your audio is connected via HDMI cable.

If you have the player connected to a home audio receiver and your receiver can process high-bitrate PCM signals:

1. From the Audio menu, use the **Up/Down Arrow** buttons on the remote to highlight **PCM Down Sample** and press **OK**.



2. Highlight the highest downsampling rate your receiver can process and press **OK**. (Devices differ; see your receiver's user manual for details.)

Adjusting the Digital Audio Output

This setting changes the type of digital audio data the player outputs over HDMI and Optical/SPDIF. Depending on your setup, you may need to try several settings.

1. From the Audio menu, use the **Up/Down Arrow** buttons on the remote to highlight **Digital Audio Output** and press **OK**.



2. Highlight the digital audio format best suited to your home audio receiver (Bitstream, PCM, or Reencode) and press **OK**.

Select the Bitstream setting to enable up to 7.1 channels of audio depending on the source and the audio device capability.

Select the PCM setting for up to 2 channels of stereo audio. This setting offers the most compatibility with audio devices and TVs.

Select the Reencode setting to enable multi-channel audio with primary and secondary tracks (such as director's commentary) mixed together - when available from the source.

Activating or Deactivating Dynamic Range Control (DRC)

When activated, this setting normalizes the volume of a disc's audio track. The loudest parts of the soundtrack will be quieter, and the quietest parts will be louder. This effect can be useful when viewing movies late at night, when others might be sleeping.



To use this setting, your player's audio must be connected with HDMI or Optical/SPDIF, and digital output must be set to Bitstream or PCM.

To activate or deactivate Dynamic Range Control:

1. From the Audio menu, use the **Up/Down Arrow** buttons on the remote to highlight **DRC** and press **OK**.



2. Use the **Arrow** buttons on the remote to highlight **On**, **Off**, or **Auto** and press **OK**.



Selecting Auto for this setting turns on Dynamic Range Control for all Blu-ray soundtracks except Dolby TruHD.

CHANGING LANGUAGE SETTINGS

Changing the On-Screen Menu Language

To access the Language menu:

1. Turn on the player and your TV. Use the **Arrow** buttons on the remote to highlight **Settings** and press **OK**.



The Settings menu is displayed.

2. Use the **Arrow** buttons on the remote to highlight **Language** and press **OK**.

Your current settings are displayed to the right of each menu option.



This model only offers an On-Screen Language setting in English.

Changing the Disc's Menu Language

Using this setting, you can change the language that is displayed when a disc's main menu is displayed.



Not all languages are available on all discs. Most discs have only one menu language available.

To change the disc's menu language:

1. From the Language menu, use the **Up/Down Arrow** buttons on the remote to highlight **Disc Menu** and press **OK**.



2. Use the **Arrow** buttons on the remote to highlight a language of your choice and press **OK**.

Changing the Audio Language

 
This setting changes the spoken language on a played disc.



Not all languages are available on all discs. Most discs have only one or two audio languages available.

To change the disc's audio language:

1. From the Language menu, use the **Up/Down Arrow** buttons on the remote to highlight **Disc Audio** and press **OK**.

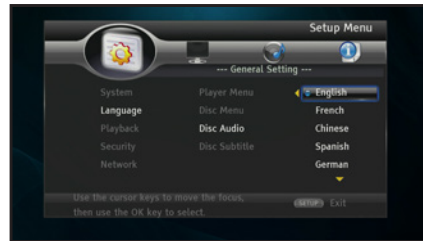

2. Use the **Arrow** buttons on the remote to highlight a language of your choice and press **OK**.

Changing the Subtitle Language

This setting changes the default subtitle language when playing a disc.

To change the subtitle language:

1. From the Language menu, use the **Up/Down Arrow** buttons on the remote to highlight **Disc Subtitle** and press **OK**.



2. Use the **Arrow** buttons on the remote to highlight a language of your choice and press **OK**.

BD-LIVE STORAGE

Some Blu-Ray discs offer a BD-Live feature that requires a network connection and USB storage. When a USB storage device is connected to the USB port, the player can use its memory for BD-Live storage.

To view the available BD-Live storage:

1. From the System menu, use the **Up/Down Arrow** buttons on the remote to highlight **BD-Live Memory** and press **OK**.



Selecting **Format** will clear all BD-Live content stored on the USB storage device.



You cannot "undo" a memory erase, but it will not damage the player in any way.

USING DISC PLAYBACK MEMORY

Disc bookmarks are used by the player to resume playback at the point the disc was halted.

To enable or disable Disc Playback memory:

1. From the Playback menu, use the **Up/Down Arrow** buttons on the remote to highlight **Last Memory** and press **OK**.

Then highlight **On** or **Off** to enable/disable Disc Playback Memory.



SETTING THE PARENTAL CONTROLS

The player's parental controls allow you to prevent the player from displaying certain rated content without a password.

To access the Parental Controls menu:

1. Turn on the player and your TV. Use the **Arrow** buttons on the remote to highlight **Settings** and press **OK**. Then highlight **Security** and press **OK**.



2. Use the **Arrow** buttons on the remote to highlight **Parental Control** and press **OK**.



You may be prompted to enter your Parental Code. If you have not yet set the code, enter 0000.

Setting the Parental Country

Because countries have their own rating systems, if you are going to use the Parental Controls, you should set the parental country to match the country in which you live.



Some discs do not support multiple country-based rating systems.



You may be prompted to enter your Parental Code. If you have not yet set the code, enter 0000.

To set the parental country:

1. From the Security menu, use the **Up/Down Arrow** buttons on the remote to highlight **Country Code** and press **OK**.



You may be prompted to enter your Parental Code. If you have not yet set the code, enter 0000.

2. Use the **Up/Down Arrow** and **OK** buttons to highlight the country in which you live.

Activating or Deactivating the Parental Controls

 
Use this setting to turn the parental controls on or off and restrict playback of discs encoded with a rating level equal to or higher than the level you choose.



You may be prompted to enter your Parental Code. If you have not yet set the code, enter 0000.

To activate/deactivate the parental controls:

1. From the Security menu, use the **Up/Down Arrow** buttons on the remote to highlight **Parental Control** and press **OK**.

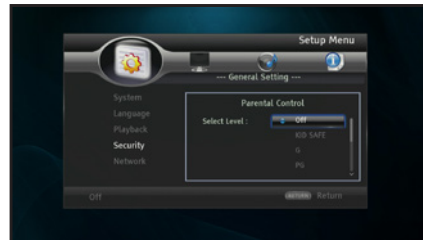

2. Using the **Arrow** buttons on the remote, highlight the highest rating level you wish to allow, then press **OK**.

For example, if you only want the player to display content rated PG or below, select **PG**.

Content ratings will vary according to your country.



Not all discs have parental controls enabled.

Changing the Parental Code

If you use the parental controls, you should change the passcode from the default to prevent children from accessing inappropriate material.



You may be prompted to enter your Parental Code. If you have not yet set the code, enter 0000.

To change the parental code:

1. From the Security menu, use the **Up/Down Arrow** buttons on the remote to highlight **Change Password** and press **OK**.



 
2. Using the **Keypad** on the remote, enter a new 4-digit parental passcode. Then re-enter the code to confirm it.
3. Write down your passcode and store it in a secure location.

CHANGING THE SYSTEM SETTINGS

The System menu allows you to customize autoplay function, power options, and the screen saver. From this menu, you can also reset the player to its factory defaults.

To access the System menu:

1. Turn on the player and your TV. Use the **Arrow** buttons on the remote to highlight **Settings** and press **OK**.

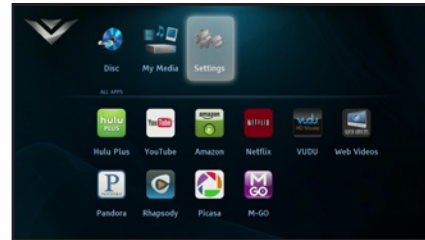

The Settings menu is displayed.

2. Use the **Arrow** buttons on the remote to highlight **System** and press **OK**.

Your current settings are displayed to the right of each menu option.



Activating or Deactivating the Screen Saver

The screen saver features a floating Vizio logo that will appear after a period of inactivity. This can prevent image "burn in" on your TV.

To set the screen saver:

3. From the System menu, use the **Up/Down Arrow** buttons on the remote to highlight **Screen Saver** and press **OK**.



4. Use the **Arrow** buttons to highlight **On** or **Off** then press **OK**.



If the player is idle for 20 minutes, the screen saver will automatically activate.

Activating or Deactivating Disc Autoplay

When this option is activated, the player will automatically play an inserted disc.

When this option is deactivated, you will need to select **Disc** to play a disc.



Autoplay does not mean that the player will start a movie. The disc will load and usually the disc's main menu will be displayed.

To Activate/Deactivate Disc Autoplay:

1. From the System menu, use the **Up/Down Arrow** buttons on the remote to highlight **Disc Auto Playback** and press **OK**.



2. Using the **Up/Down Arrow** buttons on the remote, highlight **On** or **Off**, then press **OK**.

Enabling or Disabling CEC Support

When enabled, CEC (Consumer Electronic Control), allows you to control your Blu-ray player using your TV remote. For CEC to work, your player must be connected to your TV with an HDMI cable, and your TV must support CEC. (Not all manufacturers enable CEC for all products.)

To enable or disable CEC support:

1. From the System menu, use the **Up/Down Arrow** buttons on the remote to highlight **CEC** and press **OK**.
2. Use the **Arrow** buttons to highlight **On** or **Off**, then press **OK**.

Setting Power Down Mode

The player has two Power Down Modes for you to choose from.

To select the different Power Down Modes:

1. From the System menu, use the **Up/Down Arrow** buttons on the remote to highlight **Power Down Mode** and press **OK**.



2. Use the **Arrow** buttons to highlight **Energy Saving** or **Quick Start**.
 - **Energy Saving:** Powers the player down to a full standby.
 - **Quick Start:** Keeps the player suspended for a quick power on.

Updating the Player's Firmware

 
Your device will update automatically with a valid internet connection when one is available.

Restoring the Player's Factory Default Settings

This setting allows you to restore menu and Internet App options to their factory defaults.

To restore a setting to the factory default:

1. From the System menu, use the **Up/Down Arrow** buttons on the remote to highlight **Factory Reset** and press **OK**.

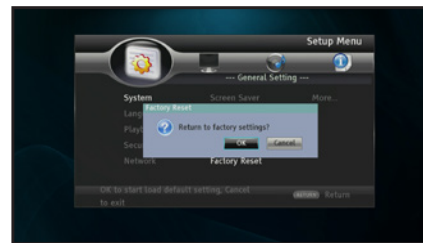

2. Use the **Arrow** and **OK** buttons to highlight and press **OK**.

ADJUSTING THE NETWORK SETTINGS

In order to access BD-Live or Internet Apps, your player must be connected to your home network and to the internet.

To access the Network menu:

1. Turn on the player and your TV. Use the **Arrow** buttons on the remote to highlight **Settings** and press **OK**.



The Settings menu is displayed.

2. Use the **Arrow** buttons on the remote to highlight **Network** and press **OK**.



Adjusting the Wired Settings

If your player is connected to your home network with an ethernet cable, the player will automatically detect the connection. You can manually adjust the settings, but VIZIO recommends this for advanced users only.

To adjust the wired settings:

1. From the Network Menu, use the **Arrow** buttons on the remote to highlight **IP Setting** and press **OK**.



2. Use the **Arrow** buttons on the remote to highlight **Manual** and press **OK**.



To change the individual IP settings, IP Mode must be set to Manual.

3. Use the **Arrow** and **OK** buttons on the remote to change each of the IP Mode settings:

- **IP Address**
- **Subnet Mask**
- **Default Gateway**
- **DNS1**
- **DNS2**



If you are unsure what values to enter, contact your Internet Service Provider (ISP) for assistance.

4. When you are finished, highlight **Apply** and press **OK**.

Setting Up a Wireless Connection Manually

If you have a wireless home network, including a wireless router or modem and an internet connection, you can set up the player to connect wirelessly.

To set up a wireless connection manually:

1. From the Network Menu, use the **Arrow** buttons on the remote to highlight **Wireless Setting** and press **OK**.



2. Use the **Arrow** buttons on the remote to highlight **Scan** and press **OK**.

A list of available wireless networks is displayed.



3. Use the **Arrow** buttons on the remote to highlight the name of your home wireless network, then press **OK**.



If your network is password-protected, you are prompted to enter a password. Enter your password using the remote.

When finished, highlight **Next** and press **OK**.

 


Setting Up a Wireless Connection Using WPS

Many newer routers feature WiFi Protected Setup, which allows you to setup a wireless network without manually entering connection information. Follow the instructions in this section if your WPS-enabled router has a WPS button.

To set up a wireless connection using a WPS button:

1. From the Network Menu, use the **Arrow** buttons on the remote to highlight **Wireless Setting** and press **SELECT**.

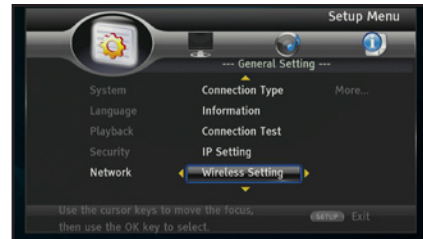

2. Use the **Arrow** buttons on the remote to highlight **Auto WPS** and press **OK**.



3. When prompted by the player, press the **WPS button** on your router.

When the router and player have established a connection, the WPS screen will display **Success**.



VIEWING THE INFO SCREEN

The info screen displays the following information:

- Software Version
- Interface
- MAC Address
- IP Address

To access the info screen:

 
1. Turn on the player and your TV. Use the **Arrow** buttons on the remote to highlight **Settings** and press **OK**.



The Settings menu is displayed.

2. Use the **Arrow** buttons on the remote to highlight **System Information** and press **OK**.

The info screen is displayed.

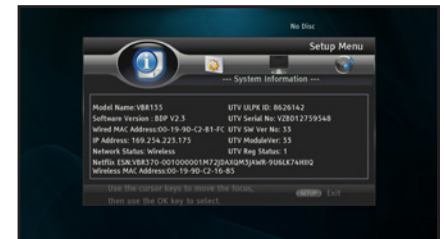



USING THE NETFLIX APP

Your player has the Netflix App built-in. With it, you can stream movies, television shows, and other content from the internet to your TV.

To use Netflix, you must first:

- Have a high-speed internet connection and a home computer.
- Connect your player to your home network. See page 28.
- Have a valid Netflix account.

Opening a Netflix Account

To use Netflix, you must first open an account. This can be completed using the on-screen menu or your home computer.

To open a Netflix account:

1. Turn on your player and the TV.

Using the **Arrow** buttons on the remote, highlight **Netflix** and press the **OK** button on the remote.

2. Netflix will ask you if you are a member. Use the **Arrow**

buttons on the remote to highlight **No** and press **OK** on the remote. Then highlight **Start your FREE trial** and press **OK** on the remote. Follow the on screen instructions to begin your free trial.

For Netflix support, go to www.netflix.com/help or call **1-866-579-7113**.

USING THE VUDU APP

Your player has the VUDU App built-in. With it, you can stream high-definition movies and TV programs from the internet to your TV. VUDU also features popular applications like Facebook and Twitter.

To use VUDU, you must first:

- Have a high-speed internet connection and a home computer.
- Connect your player to your home network. See page 28.
- Have a valid VUDU account.

Opening a VUDU Account

To use VUDU, you must first open an account. This can be completed using the on-screen menu and your home computer.

1. Turn on your player and the TV.

Using the **Arrow** buttons on the remote, highlight **VUDU** and press the **OK** button on the remote. The VUDU Apps screen is displayed.

2. Using the **Arrow** buttons on the remote, highlight **VUDU Movies** and press **OK**. The VUDU home screen is displayed.
3. Highlight **Start Free Trial** and press **OK**.
4. Using the **Arrow** and **OK** buttons, select **New User**.
5. Use the onscreen keyboard to enter your e-mail address and

press **Done**. You will now receive an e-mail from VUDU.

6. Use your home computer to read the VUDU e-mail. Click the **Complete Account Setup** button in the body of the e-mail. Complete the account setup by following the instructions on the VUDU website.
For VUDU support, go to **www.VUDU.com/support** or call **1-888-554-8838**.

USING THE PANDORA APP

Pandora is a personalized internet-based radio service that is designed to help you discover new music while you listen to music you already know and enjoy.

To use Pandora, you must first:

- Have a high-speed internet connection and a home computer.
- Connect your player to your home network. See page 28.
- Have a valid Pandora account.

Opening a Pandora Account

To use Pandora, you must first open an account. This can be completed using the on-screen menu and your home computer.

To open a Pandora account:

1. Turn on your player and the TV.

Using the **Arrow** buttons on the remote, highlight **Pandora** and press the **OK** button on the remote.

The Pandora App Welcome screen is displayed.

2. When asked if you already have a Pandora account, highlight **No** and press **OK**.

Follow the on-screen instructions. You will need to go to the Pandora web site using your home computer.

For Pandora support, go to **www.pandora.com/support**

USING THE HULU PLUS APP

Hulu Plus is an online video service that offers a selection of hit shows, clips, movies and more.

To use HULU Plus, you must first:

- Have a high-speed internet connection and a home computer.
- Connect your player to your home network. See page 28.
- Have a valid Hulu Plus account.

Opening a HULU Plus Account

To open a HULU Plus account:

1. Turn on your player and the TV.

Use the **Arrow** buttons on the remote to highlight **HULU Plus**. Press the **OK** button.

When asked if you are already a HULU Plus subscriber, highlight **No** and press **OK**.

2. A welcome screen is displayed. Write down the Referral Code.
3. On your home computer, go to **www.HULU.com/plus/vizio** and follow the account setup instructions.

Enter the Referral Code when prompted.

DO YOU HAVE QUESTIONS?

LET US HELP!

YOUR PRODUCT INCLUDES FREE LIFETIME TECH SUPPORT



The VIZIO support team is highly trained and is based in the United States.

We can help with:

- New Product Setup
- Connecting Your Devices
- Technical Problems
- And More

Phone: (877) 878-4946 (TOLL-FREE)

Email: techsupport@VIZIO.com

Web: www.VIZIO.com/support

Hours of operation:

Monday - Friday: 5 AM TO 8 PM (PST)


Saturday - Sunday: 8 AM TO 4 PM (PST)

We speak English • Se habla Español • Nous parlons Français

There is no power.

- Ensure the power cord is securely connected to a working electrical outlet.
- Press the Power/Standby button on the remote or touch the Power/Standby control on the player.
- Try plugging the power cord into a different electrical outlet.

Nothing happens when I press buttons on the remote.

- Place new batteries in the remote. Ensure the batteries are inserted correctly.
- Ensure no objects are blocking the front of the Blu-ray Player.
- When using the remote, point it directly at the Blu-ray Player.
- If you see , the action you are trying to perform is not allowed by the Player or disc.

My Blu-Ray or DVD disc does not play.

- Ensure the disc is clean and free of scratches.
- If you are using parental controls, the disc may not play.

I cannot connect the Player to my network.

- Unplug the modem/router and the Player. Wait 10 seconds, then turn them back on.
- Ensure the ethernet cable is securely connected to both the Player and your modem/router.
- Refer to your modem/router user guide.

The picture quality seems low.

- Connect the Player to your TV using an HDMI cable for the best picture quality.
- Connect the Player to an HDTV capable of displaying 720p or 1080p for the best picture quality.
- Ensure the cables connecting the Player to your TV are securely connected.
- Watch Blu-ray discs for the best picture quality. DVD discs are limited to 480p resolution.
- To view streaming video (Netflix, VUDU, Amazon, HULU), a high-speed wired/wireless Internet connection is required.

I am having trouble with Internet Apps.

- If you experience issues with Apps, please contact:

Netflix: www.netflix.com/help or 1-866-579-7113

Pandora: www.pandora.com/support

VUDU: www.VUDU.com/support or 1-888-554-8838

Amazon: Select the Contact Us button in the right-hand column of the Help page in the App.

HULU Plus: www.hulu.com/help

Dimensions:	14.2 x 1.6 x 7.9 inches 360 x 41 x 142 mm
Weight:	2.7 lbs 1.2 kg
Resolutions Supported:	Blu-ray Disc Resolutions of 1080p (HDMI Out) 1080i / 720p / 480i / 480p (HDMI) DVD, DVD-R, DVD-RW Selectable Resolutions of 1080p (HDMI) 1080i / 720p / 480i / 480p (HDMI)
Audio:	CD, CD-R, CD-RW, MP3, WMA Support 5.1, 7.1 PCM Digital Audio via HDMI 24-bit / 192KHz Audio DAC
Dolby:	Dolby Digital / Dolby Digital Plus / Dolby Digital TrueHD
DTS:	DTS Digital Surround / DTS HD Advanced Digital Out
Ethernet Ports:	1
WiFi:	802.11n
USB 2.0 Inputs:	1
HDMI Ports:	1
Analog Audio Output:	1
Digital Audio Ports:	1 (Optical/SPDIF)
OSD Languages:	English
Energy Star Qualified:	Yes
Warranty:	1 year

ON PARTS AND LABOR

Covers units purchased as new in United States and Puerto Rico Only.

VIZIO provides a warranty to the original purchaser of a new Product against defects in materials and workmanship for a period of one (1) year of non-commercial usage and ninety (90) days of commercial use. If a Product covered by this warranty is determined to be defective within the warranty period, VIZIO will either repair or replace the Product at its sole option and discretion.

To obtain warranty service, contact VIZIO Technical Support via e-mail: TechSupport@VIZIO.com or via phone at 877 MY VIZIO (877.698.4946) from 5:00AM to 8:00PM Monday through Friday and 8:00AM to 4:00PM Saturday and Sunday, Pacific Time, or visit www.VIZIO.com. PRE-AUTHORIZATION MUST BE OBTAINED BEFORE SENDING ANY PRODUCT TO A VIZIO SERVICE CENTER. Proof of purchase in the form of a purchase receipt or copy thereof is required to show that a Product is within the warranty period.

Parts and Labor

There will be no charge for parts or labor during the warranty period. Replacement parts and Products may be new or recertified at VIZIO's option and sole discretion. Replacement parts and Products are warranted for the remaining portion of the original warranty or for ninety (90) days from warranty service or replacement, whichever is greater.

Type of Service

Defective Products must be sent to a VIZIO service center to obtain warranty service. VIZIO is not responsible for transportation costs to the service center, but VIZIO will cover return shipping to the customer. PRE-AUTHORIZATION IS REQUIRED BEFORE SENDING ANY PRODUCT TO A VIZIO SERVICE CENTER FOR WARRANTY SERVICE.

Product returns to VIZIO's service centers must utilize either the original carton box and shipping material or packaging that affords an equal degree of protection. VIZIO Technical Support will provide instructions for packing and shipping the covered Product to the VIZIO service center.

Limitations and Exclusions

VIZIO's one-year limited warranty only covers defects in materials and workmanship. This warranty does not cover, for example: cosmetic damage, normal wear and tear, improper operation, improper voltage supply or power surges, signal issues, damages from shipping, acts of God, any type of customer misuse, modifications or adjustments, as well as installation and set-up issues or any repairs attempted by anyone other than by a

VIZIO authorized service center. Products with unreadable or removed serial numbers, or requiring routine maintenance are not covered. This one year limited warranty does not cover Products sold "AS IS", "FACTORY RECERTIFIED", or by a non-authorized reseller.

THERE ARE NO EXPRESS WARRANTIES OTHER THAN THOSE LISTED OR DESCRIBED ABOVE. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE PERIOD OF TIME SET FORTH ABOVE. VIZIO'S TOTAL LIABILITY FOR ANY AND ALL LOSSES AND DAMAGES RESULTING FROM ANY CAUSE WHATSOEVER INCLUDING VIZIO'S NEGLIGENCE, ALLEGED DAMAGE, OR DEFECTIVE GOODS, WHETHER SUCH DEFECTS ARE DISCOVERABLE OR LATENT, SHALL IN NO EVENT EXCEED THE PURCHASE PRICE OF THE PRODUCT. VIZIO SHALL NOT BE RESPONSIBLE FOR LOSS OF USE, LOSS OF INFORMATION OR DATA, COMMERCIAL LOSS, LOST REVENUE OR LOST PROFITS, OR OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR THE EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE. THIS WARRANTY IS SUBJECT TO CHANGE WITHOUT NOTICE.

CHECK WWW.VIZIO.COM FOR THE MOST CURRENT VERSION.

Personal Data

If your VIZIO product is capable of storing personal data and other information, ALL CONTENTS AND INFORMATION WILL BE DELETED IN THE COURSE OF SOME IN-HOME AND ALL SHIP-IN WARRANTY SERVICE. If this occurs, your product will be restored to you configured as originally purchased. You will be responsible for restoring all applicable data and passwords. Recovery and reinstallation of user data is not covered under this Limited Warranty. In order to protect your personal information, VIZIO recommends that you always clear all personal information from the unit before it is serviced, regardless of the servicer.

FCC Class B Radio Interference Statement

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

Notice:

5. The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
6. Shielded interface cables and AC power cord, if any, must be used in order to comply with the emission limits.
7. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modification to this equipment. It is the responsibilities of the user to correct such interference.

RF Exposure Information

This device meets the government's requirements for exposure to radio waves. This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. This device complies with FCC radiation exposure limits set forth for an uncontrolled environment.

DHHS and FDA safety certification

This product is made and tested to meet safety standards of the FCC, requirements and compliance with safety performance of the U.S. Department of Health and Human Services, and also with FDA Radiation Performance Standards 21 CFR Subchapter J.

IC Statement

Operation is subject to the following two conditions:

This device may not cause interference, and

This device must accept any interference, including interference that may cause undesired operation of the device.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

IC Radiation Exposure Statement

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Copyrights

Because AACS (Advanced Access Content System) is approved as content protection system for BD format, similar to use of CSS (Content Scramble System) for DVD format, certain restrictions are imposed on playback, analog signal output, etc., of AACS protected contents. The operation of this product and restrictions on this product may vary depending on your time of purchase as those restrictions may be adopted and/or changed by AACS after the production of this product. Furthermore, BD-ROM Mark and BD+ are additionally used as content protection systems for BD format, which imposes certain restrictions including playback restrictions for BD-ROM Mark and/or BD+ protected contents. To obtain additional information on AACS, BD-ROM Mark, BD+, or this product, please contact an authorized Customer Service Center.

Many BD-ROM/DVD discs are encoded with copy protection. Because of this, you should only connect your player directly to your TV, not to a VCR. Connecting to a VCR results in a distorted picture from copy-protected discs.

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

Under the U.S. Copyright laws and Copyright laws of other countries, unauthorized recording, use, display, distribution, or revision of television programs, videotapes, BD-ROM discs, DVDs, CDs and other materials may subject you to civil and/or criminal liability.

Licenses

- Java and all Java-based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and other countries.
- Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.
- Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,226,616; 6,487,535; 7,212,872; 7,333,929; 7,392,195; 7,272,567 & other U.S. and worldwide patents issued & pending.
- DTS is a registered trademark and the DTS logos, Symbol, DTS-HD and DTS-HD Master Audio are trademarks of DTS, Inc. © 1996-2008 DTS, Inc. All Rights Reserved.
- HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI licensing LLC.
- "DVD Logo" is a trademark of DVD Format/Logo Licensing Corporation.
- This product is licensed under the AVC patent portfolio license and VC-1 patent portfolio license for the personal and non-commercial use of a consumer to (i) encode video in compliance with the AVC Standard and VC-1 Standard ("AVC/VC-1 Video") and/or (ii) decode AVC/VC-1 Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed to provide AVC/VC-1 Video. No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, LLC. See <http://www.mpegla.com>.
- Blu-ray Disc™, Blu-ray™, BD-Live™, BONUSVIEW™, and the logos are trademarks of the Blu-ray Disc Association.

Cinavia Notice

This product uses Cinavia technology to limit the use of unauthorized copies of some commercially-produced film and videos and their soundtracks. When a prohibited use of an unauthorized copy is detected, a message will be displayed and playback or copying will be interrupted.

More information about Cinavia technology is provided at the Cinavia Online Consumer Information Center at <http://www.cinavia.com>. To request additional information about Cinavia by mail, send a postcard with your mailing address to: Cinavia Consumer Information Center, P.O. Box 86851, San Diego, CA, 92138, USA."

This product incorporates proprietary technology under license from Verance Corporation and is protected by U.S. Patent 7,369,677 and other U.S. and worldwide patents issued and pending as well as copyright and trade secret protection for certain aspects of such technology. Cinavia is a trademark of Verance Corporation. Copyright 2004-2010 Verance Corporation. All rights reserved by Verance. Reverse engineering or disassembly is prohibited.

Open Source Software Notice

Your VIA device may contain GPL executables and LGPL libraries that are subject to the PL2.0/LGPL2.1 License Agreements. VIZIO offers to provide source code to you on CD-ROM for a processing fee covering the cost of performing such distribution, such as the cost of media, shipping and handling upon request made to VIZIO at www.vizio.com.

This offer is valid for a period of three (3) years from the date of the distribution of this VIA device by VIZIO. You can obtain a copy of the GPL, LGPL licenses from <http://www.gnu.org/licenses/old-licenses/gpl-2.0.html> and <http://www.gnu.org/licenses/old-licenses/lgpl-2.1.html>. You can also obtain a copy of gSOAP public license from <http://www.cs.fsu.edu/~engelen/license.html>. Please visit www.vizio.com for attribution of copyrights to any open source software on your VIZIO VIA device. Permission is hereby granted, free of charge, to any person obtaining a copy of any such software and associated documentation files (the "Open Source Software"), to deal in the Open Source Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Open Source Software, and to permit persons to whom the Open Source Software is furnished to do so, subject to the following conditions:

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND,

EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

VIZIO Internet Applications (VIA) Policy

VIZIO Internet Applications ("VIA") affords the opportunity to access third party Internet product offerings or services ("VIA Services") on certain VIZIO devices incorporating the VIA functionality. The VIA Services accessible herein are provided as per our agreement with these third parties. These agreements are subject to change, interruption, suspension (including termination) at any time and for various reasons. VIZIO makes no warranties or representations that any particular VIA Service will be accessible, available, function in any particular manner or function at all.

Internet Access Required for VIA Services and Updates

To use these VIA Services, you must obtain high-speed/broadband access to the Internet (such as DSL, cable or T1 lines), either directly or through devices that access the Internet and pay any service fees associated with such access. In addition, you must provide all equipment necessary to make such connection to the Internet including a modem or other Internet access device. Each individual third party Internet product may require a different minimum Internet connection speed. The usability and availability of a functional VIA device and its Internet connected feature may highly be dependent and varied based on high-speed/broadband Internet access, connection speed, bandwidth, other equipment(s), third party applications, firmware updates and other factors outside of VIZIO's control and/or responsibility which may also be independent of the actual operation of the device. It is further understood that VIA enabled devices are integrated with sophisticated technologies (software and hardware) which may exhibit delayed boot-up/shutdown time and/or interrupted services. You further understand that the VIA Services specifications and functionality are constantly evolving and that we may directly, or indirectly via third parties, update or change the VIA Services, in whole or in part, at any time and without notice to you. Such updates may be required for you to use certain aspects of the VIA services or to continue to connect to the VIA Services.

Availability of Content on VIA Services

VIZIO or said third parties providing VIA Services reserve the right to delete data from their servers, or prevent access to their servers or to change data categories, product offerings or service levels for any reason that VIZIO or said third parties deem sufficient in their sole discretion at any time, without notice. VIZIO may also impose additional or different limits on the use of or access to certain VIA Services, in any case and without notice or liability. Some or all of the data or functionality of VIA Services may require additional payment and/or subscription by you. However, in no event will you be charged for any VIA Services unless those charges are made known to you in advance. VIZIO makes no warranties or representations of any kind as to the accuracy, currency, or completeness of any information contained on the data servers of such third party providers of any VIA Services. Furthermore, we do not review, control, or endorse the content, products or services of VIA Services or their data servers.

VIA SERVICES ARE PROVIDED "AS IS" AND "AS AVAILABLE," WITHOUT WARRANTY OF ANY KIND (INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, NON-INFRINGEMENT, OR FITNESS FOR A PARTICULAR PURPOSE), TO THE MAXIMUM EXTENT PERMITTED BY LAW. USE OF THE VIA SERVICES IS AT YOUR SOLE RISK. THIS MEANS, FOR EXAMPLE, THAT VIZIO DOES NOT GUARANTEE THAT THE VIA SERVICES WILL ALWAYS WORK PROPERLY OR WORK AT ALL. THIS ALSO MEANS WE DO NOT GUARANTEE THAT THE VIA SERVICES, CONTENT OR PRODUCTS WILL BE FREE FROM VIRUSES, HACKS, OR OTHER POTENTIALLY HARMFUL INTRUSIONS. PLEASE NOTE THAT SOME STATES DO NOT ALLOW SUCH WARRANTY LIMITATIONS, SO THESE LIMITATIONS MAY NOT APPLY TO YOU.

VIA Services Content Disclaimer

Certain VIA Services may include materials from third parties or links to certain third party data servers. You acknowledge and agree that VIZIO is not responsible for examining or evaluating the content or accuracy of any VIA Services, their data servers or related third-party materials. VIZIO does not warrant or endorse and does not assume and will not have any liability or responsibility for any third-party materials or web sites, or for any other materials, products, or services of third parties. Links to VIA Services and any associated links to other data servers are provided solely as a convenience to you. To the extent provided, content types or descriptions of VIA Services are provided for convenience, and you acknowledge and agree that VIZIO does not guarantee their accuracy. You understand that by using any of the VIA Services, you may encounter content that may be deemed offensive, indecent, or objectionable, which content may or may not be identified as having explicit language. Nevertheless, you agree to use the VIA Services at your sole risk and that VIZIO shall have no liability to you for content that

may be found to be offensive, indecent, or objectionable.

You agree that you will not use any third-party materials in a manner that would infringe or violate the rights of any other party, and that VIZIO is not in any way responsible for any such use by you.

VIZIO Privacy Policy and VIA Software License Agreement

Your right to use the widget links to access VIA Services is also governed by VIZIO's Privacy Policy and the VIZIO Internet Applications Software License Agreement ("VIA Software License Agreement"), the terms of which are incorporated herein by this reference. The terms of both the Privacy Policy and VIA Software License Agreement may be found in your Product Guide and on VIZIO's website. In the event of a conflict between the VIZIO Internet Applications (VIA) Policy and the VIA Software License Agreement, the VIA Software License Agreement shall control. BY YOUR USE OF THE VIA SERVICES, YOU EXPRESSLY AGREE TO ALL THE TERMS AND CONDITIONS OF THE FOREGOING POLICIES AND AGREEMENT.

VIZIO may change the terms and conditions of this VIA Policy, the VIZIO Privacy Policy and/or the VIA Software License Agreement, at any time and without prior notice. The most up to date versions are available on the Internet at: www.vizio.com. If you do not have Internet access, you should periodically contact our customer service department and we will mail you a current version, free of charge. IF YOU DO NOT AGREE TO ALL OF THE TERMS AND CONDITIONS OF THE VIA POLICY, THE VIZIO PRIVACY POLICY AND/OR THE VIA SOFTWARE LICENSE AGREEMENT OR ANY CHANGES THERETO, YOU MUST IMMEDIATELY CEASE USE OF THE VIA SERVICES.



VIZIO