

A grayscale photograph of a car's interior center console. A thick white line starts from the bottom left corner and points diagonally upwards towards the title text.

**MITBTSW2**

***Owner's Manual***

***Bluetooth Hands Free Vehicle Kit***

**IMPORTANT NOTE:** The operation of the Bluetooth Hands Free Kit as described in this manual is applicable to most phones. However, due to the configuration of some phones, some functions may not apply. Please see your installing dealer for more information.

# **Using Your Bluetooth Hands Free Kit**

## **Powering On/Off**

The bluetooth kit will automatically turn on when the vehicle's key is turned to the accessory position and will remain on until the vehicle's accessory power is turned off. After turning on, the bluetooth kit will automatically search for phones that have been paired with it. Since it is possible to have multiple phones paired to the system the order of priority of connecting will be the latest phone paired, the phone most used with the system, the phone second most used phone with the system. If the bluetooth kit has not been paired to a phone pairing will automatically activate.

## **Making a Call**

When connected to the bluetooth kit you may use your phone as normal to dial numbers or search your contacts list or by using Voice Dialing.

## **Voice Dialing**

To activate voice dialing press the ANSWER key on the bluetooth keypad, the system will prompt you for a command. Clearly speak your command (example, "Call Shaun"). The system will then confirm the command and in this example will then call "Shaun".

## **Ending a Call**

To end a call press and hold the END key for 2 seconds.

## **Answer a Call**

When there is an incoming call the vehicle's radio will be muted/turned off and the call will ring through the vehicle's speaker, to answer press the ANSWER key.

## **Ignore an Incoming Call**

To ignore an incoming call press and hold the END key.

## **Rodial the Last Number**

To redial the last number press and hold the ANSWER key for 2 seconds.

## **Adjusting the Call Volume**

While in a call, adjust the volume up/down with the ANSWER key or END key, each press raises or lowers the volume by 1 level. When the min/max volume is reached the system will beep 2 times through the speaker.

## **Transfer a Call**

To transfer a call between bluetooth hands free or normal phone operation press and hold the END key on the bluetooth keypad for 2 seconds.

## **Pairing**

To activate phone pairing press and hold the END key for 10 seconds. At this time you will need to activate pairing on the phone, see your phones owners manual. The PIN code for pairing is 1234 and will need to be entered into your phone at the time of pairing.

\*Throughout this manual, 'press' refers to pressing for less than 1 second, 'press and hold' refers to pressing for 2 seconds.

## **Using Your Bluetooth Hands Free Kit, continued**

### **Manual Search for Paired Phone**

If your phone is not connected to or has been disconnected by you from the bluetooth kit but has previously been paired to the system you can activate the manual search which will locate your phone and connect to it. To activate a manual search press the ANSWER key.


### **Reset / Clear All Paired Phones**

To permanently remove all paired phones from the bluetooth kit press and hold the END key for 15 seconds.

## **Quick Reference**

Quick Reference Guide - 2 Button Switch

FUNCTION	KEYPAD BUTTON	NOTES
Power Unit Up	-	Turn vehicle accessory ON
Make A Call	-	Use phone as normal
Answer Call	ANSWER	Press and release
End Call	END	Press and hold for 2 seconds
Voice Dialing	ANSWER	Press and release
Redial Last Number	ANSWER	Press and hold for 2 seconds
Transfer Call	ANSWER	Press and hold for 2 seconds
Ignore Call	END	Press and release
Volume	ANSWER OR END	Press and release
Pairing	END	Press and hold for 10 seconds
Manual Search	ANSWER	Press and release
Reset	END	Press together for 15 seconds
Disconnect Bluetooth	END	Press and hold for 5 seconds

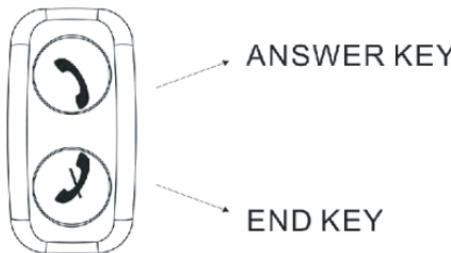

#### **FCC COMPLIANCE**

This device complies with Part 15 of the FCC rules and with RSS-210 of Industry Canada. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including any interference that may cause undesired operation.

#### **Warning!**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.