

ASSEMBLY INSTRUCTIONS

Adapter — KIT NO. 873440

For Hobart PRIME™ Mixer-Grinders with 15° incline cylinder and Hollymatic model 120 Bulker.

PART NO.	NAME OF PART	AMT.
873440	Adapter Kit (complete)	1
873430	Adapter, Bulker	1
873437	Long Support Rod	1
F-34483	Assembly Instructions	1

ASSEMBLY

WARNING: DISCONNECT ELECTRICAL POWER.

1. Remove the paper roll from the Hollymatic Model 120. Pull the pin out of the bracket underneath the bulker. Remove the Bulker from its pedestal by lifting straight up. Carefully set the Hollymatic Model 120 Bulker on its side (Fig. 1).

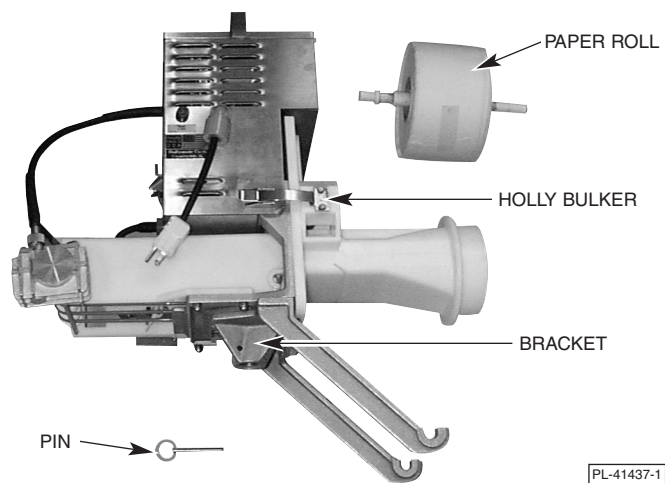


Fig. 1

2. Unscrew the height adjustment screw and remove the support rod from the pedestal. The long rod from the kit must be used with the Hobart PRIME™ Mixer-Grinder.

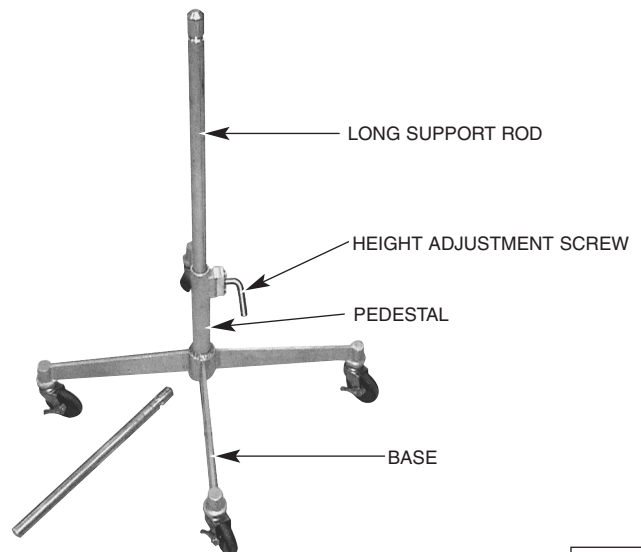


Fig. 2



701 S. RIDGE AVENUE
TROY, OHIO 45374-0001

937 332-3000

www.hobartcorp.com

FORM 34483 (May 2000)

ASSEMBLY (continued)

4. Assemble the Hollymatic model 120 bulker to the Pedestal. To fasten the bulker to its pedestal, insert the pin through the hole in the bracket. The bulker can swivel 360°. Reassemble paper roll (Fig. 3).

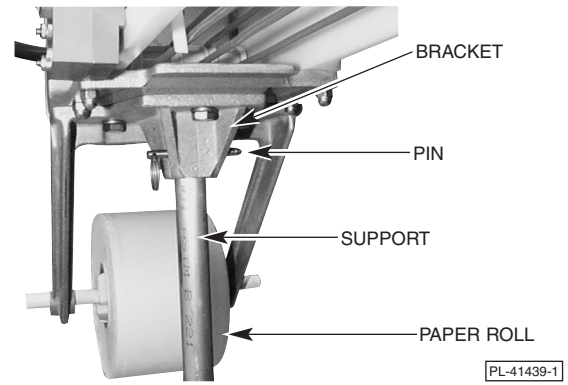


Fig. 3

5. Assemble the bulker adapter to the bulker input tube using the clamp provided with the Hollymatic Bulker, (Fig. 4).

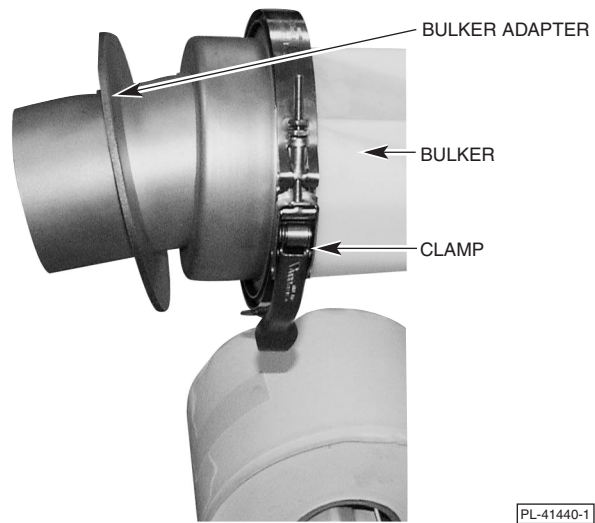


Fig. 4

6. Assemble the Tightening Ring shipped with the Hollymatic Bulker to the cylinder of the Hobart Mixer-Grinder (Fig. 5). A second clamp (also sourced from Hollymatic, Fig. 5) must be used to clamp the Bulker Adapter to the Tightening Ring.

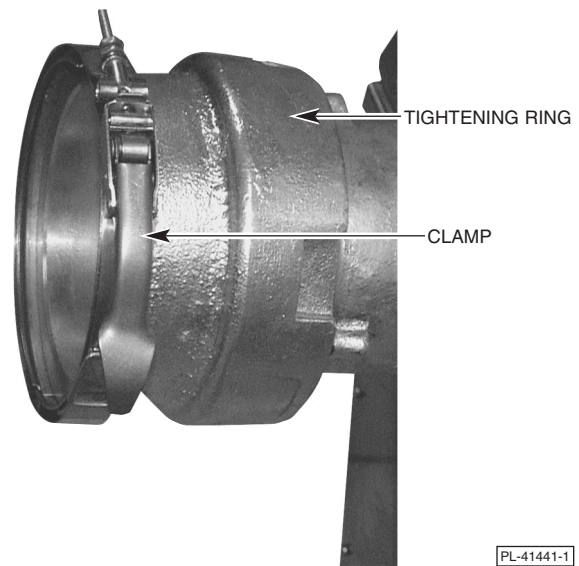


Fig. 5

When making the final linkup of the Hollymatic model 120 Bulker to the Hobart Mixer-Grinder, the height of the Bulker may need to be adjusted. The Bulker Adapter can be swiveled to allow the final adjustment before locking the clamps in place.