

QUICK INSTALLATION

Dual Band Wireless-N Notebook Adapter


INSTRUCTIONS FOR
WINDOWS VISTA™
USERS ONLY



Package Contents

- Dual Band Wireless-N Notebook Adapter
- Setup Wizard CD-ROM
- User Guide on CD-ROM
- Quick Installation

Model No: **WPC600N**

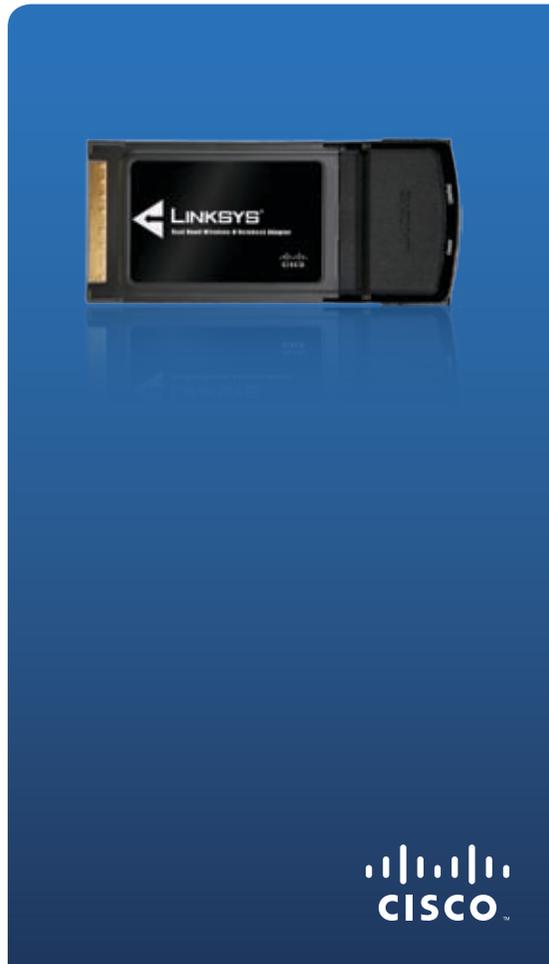

1 Installation


The Notebook Adapter is installed and set up using the Setup Wizard that is on the enclosed Setup Wizard CD.

This Quick Installation is for Windows Vista users only. If you have Windows XP or 2000, use the other enclosed Quick Installation.



IMPORTANT: Do not install the Adapter in your PC until you are instructed to do so or the Adapter will not install correctly.

- A.** Insert the Setup Wizard CD into your CD-ROM drive.

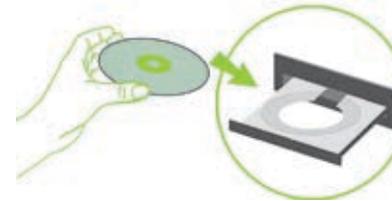

NOTE: Windows Vista or other personal firewalls may ask for permission to run the software or program. You will need to allow the software to run in order to continue.

- B.** The Welcome screen appears on your monitor.

Click the **Click Here to Start** button.




- C.** Read the License Agreement and click **Next** to continue the installation.



- D.** Find an available CardBus slot on your notebook PC.

With the connector pin end facing the CardBus slot and the label facing up, slide the Adapter into the CardBus slot until it locks in place.

Click **Next**.

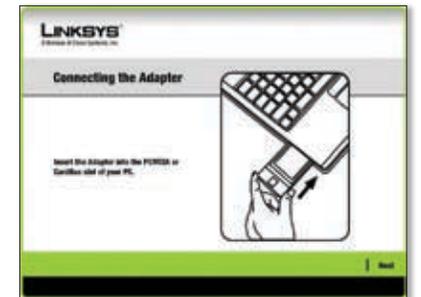


- E.** After you install the Adapter correctly, the *Congratulations* screen appears. (It may take a moment for the screen to appear.)

Click **Finish**.



- F.** The first Windows Vista Wireless Network Configuration utility screen appears. Select your network, then click **Connect**.

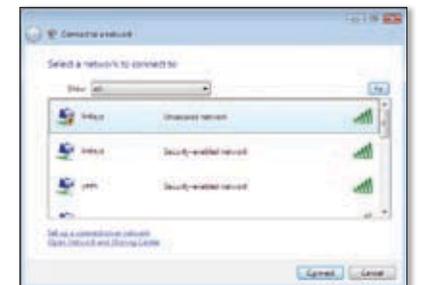

- G.** If your network has no wireless security, this screen appears. If your network has wireless security, go to step H.

To continue to your unsecured network, click **Connect Anyway** and go to step I.



- H.** If your network has wireless security, this screen appears. Enter the security key or passphrase (also known as pre-shared key or WEP key, depending on your type of security).

Click **Connect**.




- I.** This screen appears while the Adapter connects to your network. Do not cancel, unless you want to end the installation.



- J.** This screen appears when you are connected to your network.


Select **Save this Network**, if you want to save your settings.

Click **Close**.

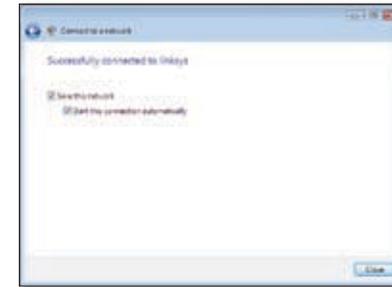

- K.** The *Network Location* screen may appear to help apply the correct settings for your type of location. If it doesn't appear, go to step M.

Select from **Home**, **Work**, or **Public location**.

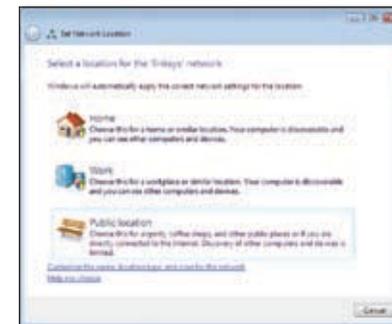

- L.** This screen varies according to the selected location.


Click **Close**.



- M.** The Windows Vista Wireless Network Configuration utility appears on your desktop's system tray.



You can use this utility to configure or change your wireless settings.

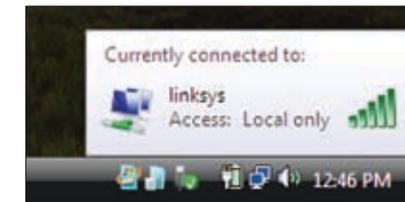

NOTE: For help with the Windows Vista Wireless Network Configuration utility, refer to Windows Vista Help and Support, by clicking Vista's **Start** button  > Help and Support.

Installation is complete!

For additional information or troubleshooting help, refer to the User Guide on the CD-ROM. Additional support is also available via e-mail or by phone.

24-Hour Technical Support
800-326-7114 (toll-free from US or Canada)

E-mail Support
support@linksys.com

Website
<http://www.linksys.com>
<http://support.linksys.com>

RMA (Return Merchandise Authorization)
<http://www.linksys.com/support>

FTP Site
<ftp://ftp.linksys.com>

Sales Information
800-546-5797 (800-LINKSYS)

Linksys is a registered trademark or trademark of Cisco Systems, Inc. and/or its affiliates in the U.S. and certain other countries. Copyright © 2007 Cisco Systems, Inc. All rights reserved. Other brands and product names are trademarks or registered trademarks of their respective holders.

70402110NC-BW

LINKSYS[®]
A Division of Cisco Systems, Inc.