



Hisense

User Guide



Bluetooth Handsfree Car Kit

MODEL: HB600



Table of Contents

Thank You	3
Safety Guidelines	3
Introducing the HB600	6
What Your Speaker Can Do	5
Specifications	7
Charging Your Speaker	7
GETTING STARTED	8
Pairing with Your Phone	9-10
How to	
Answer a Call	10
End a Call	10
Make a Call	10
Reject a Call*	10
Activate Voice Dialing*	11
Redial Last Number*	11
Adjust Sound and Volume	11
Call Waiting and Placing a Call on Hold*	11
Reject Call Waiting	11
Mute Function	11
Call Transfer From The Speaker To Mobile Phone	11-12
What the Lights Mean	13
Restore Factory Settings	14
Taking Care of Your Speaker	15
Glossary	15-16

Thank you

Thank you for purchasing the Hisense HB600 Bluetooth® Speaker. We hope you enjoy it! This instruction manual will get you started and ready to make the most of your speaker.

WARNING!

Speakers are capable of delivering sounds at loud volumes and high pitched tones. Exposure to such sounds can result in permanent hearing loss damage. The volume level may vary based on conditions such as the phone you are using, its reception and volume settings, and the environment. Please read the safety guidelines below prior to using this speaker.

Safety Guidelines

Prior to using this product follow these steps:

1. Before using the speakerphone, turn the volume control to its lowest level, use the speakerphone in conversation, and then slowly adjust the volume control to a comfortable level.
2. During the use of this product:
Keep the volume at the lowest level possible and avoid using the speakerphone in noisy environments where you may be inclined to turn up the volume; If increased volume is necessary, adjust the volume control slowly; and if you experience any discomfort

or ringing in your ears, immediately discontinue using the speakerphone and consult a physician. With continued use at high volume, your ears may become accustomed to the sound level, which may result in permanent damage to your hearing without any noticeable discomfort.

3. Drive Safely

Several studies have shown that cell phone usage while driving creates a distraction to the driver which may increase the likelihood of an accident. This distraction potential is not eliminated by the use of a handsfree phone. Handsfree phones have not been shown to be safer than hand-held phones with respect to driver distraction. When using the phone while driving, keep conversations short and resist any temptation to make notes or read documents. Before answering calls consider your circumstances. Pull off the road and park before making or answering calls when driving conditions require (e.g. bad weather, high traffic density, presence of children in the car, difficult junctions or maneuvers)

REMEMBER; DRIVING COMES FIRST, NOT THE CALL!

4. Abide by Local Laws.

Please check if the local laws where you live restrict the use of mobile phones while driving. It is the owner's responsibility to use this product in compliance with the laws of the place where you live.

WARNING!


Keep out of reach of children: The plastic bags the product and its parts are wrapped in are not toys for children. The bags themselves or the many small parts they contain may cause choking if ingested.

WARNING!

Ignition of flammable atmospheres: Do not use the Speaker in environments where there is a danger of ignition of flammable gases.

Introducing the HB600

1. Speaker
2. Microphone
3. LED Light
4. Charging Socket
5. Mute Button
6. Multi-Function Button (MFB)
 - Pairing Button – When speaker is turned off press and hold for 6 sec to put Speaker into pairing mode
 - Answer/End Button
 - Press for 4 seconds to turn speaker on (blue lights flash 5 times)
 - Press and hold for 5 seconds to turn speaker off (red light flash 5 times and then power off)
7. Volume (+)
8. Volume (-)

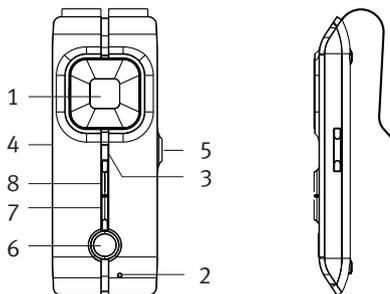

What your speaker can do

Your Hisense HB600 lets you do all this

- Answer Calls
- End Calls
- Reject Calls*
- Voice Dialing*
- Last Number Redialing*
- Call Waiting*
- Mute Conversation
- Put Call on Hold*

* Phone Dependent

Specifications

- Up to 14 hours talk time/standby time up to 850 hours
- Rechargeable battery, with charging option from AC power supply and car power outlet.
- Operating range up to 10 meters (approx. 33 feet)
- Headset and hands-free Bluetooth profiles
- Bluetooth specification (see glossary) version 2.1+EDR

Charging Your Speaker

Make sure that your Hisense HB600 speaker is fully charged before first use (normal charging time is approximately 3 hours). Use the AC adaptor to charge from a power socket, or charge directly from you're your car power outlet using the charging cable provided After connecting to the power source, the red LED will flash while charging. After charging ends the red LED will turn off.

Auto power off

if the speaker is turned on but not connected to a Bluetooth device for 15 minutes, the speaker will automatically turn off.

GETTING STARTED

The Hisense HB600 is easy to operate.

Turning Your Speaker On and Off

To turn your speaker on, press and hold the MFB for 4 seconds. Release the button when you hear short beep, the blue light will flash 5 times and the speaker will turned on

To turn off your Speaker, press and hold the MFB for 4 seconds. Release the button when you hear short beep, the blue light will flash 5 times and the speaker will turned off.

Pairing with Your Phone or Other Device

Before you use your Hisense HB600, you need to pair it with your mobile phone.

1. Make sure that the HB600 is turned off
2. Press and hold the MFB for 6 sec. until led flash red and blue alternatively.
3. Activate Bluetooth function of the mobile phone to search for Bluetooth devices (please refer to the phone's manual);
4. Set your Bluetooth phone to 'discover' the Hisense HB600

Follow your phone's instruction guide. This usually involves going to a 'setup,' 'connect' or 'Bluetooth' menu on your phone and selecting the option to 'discover' or 'add' a Bluetooth device.



5. Your phone will find the Hisense HB600

6. Your phone will then ask if you want to pair with it. Accept by pressing 'Yes' or 'OK' on the phone and confirm with the passkey or PIN = 0000 (4 zeros). Your phone will confirm when pairing is complete.

In case of unsuccessful pairing, repeat steps 1 to 6.

Note: If the pairing cannot be completed within 2 minutes after the pairing mode is activated, the speakerphone will power off automatically. Please repeat steps above to pair the speakerphone and mobile phone again.

How to...

Answer a Call

Press the MFB on your speaker to answer a call.

End a Call

Press the MFB to end an active call.

Make a Call

When you make a call from your mobile phone, the call will (subject to phone settings) automatically transfer to your speaker. If your phone does not allow this feature, press on the Hisense HB600's MFB to transfer the call to the speaker.

Reject a Call*

Press the MFB for approximately 2 seconds when the phone rings to reject an incoming call. Depending on your phone settings, the person who called you will either be forwarded to your voice mail or hear a busy signal.

Activate Voice Dialing*

Press the MFB once. Wait for the beep and then announce the name you wish to call.

For best results, record the voice-dialing tag through your speaker. Please consult your phone's user manual for more information about using this feature.

Redial Last Number*

Press the MFB twice when the speaker is turned on and not use (StandBy mode).

Adjust Sound and Volume

During a call, repeatedly press the Volume (+) or Volume (-) to change the volume.

Call Waiting and Placing a Call on Hold*

This lets you put a call on hold during a conversation and answer a waiting call.

Press the MFB twice to put the active call on hold and answer the waiting call.

Press the MFB twice to switch between the two calls. Tap the MFB to end the active conversation.

Reject Call Waiting

During a conversation, Press the MFB for 2 seconds in order to reject the call waiting.

Mute Function

During a conversation, press the mute button to mute the microphone.

To reactivate the microphone, short press the mute button.

Call Transfer from Speaker to Mobile Phone

Press the volume (+) and volume (-) buttons together. The conversation will be route to the mobile phone. In order to route the conversation back to the speaker, press again the volume (+) and volume (-) buttons together

- Functions marked with * are dependent on your phone supporting these features. Check your phone's user manual for further information.

What the light means

	What you see	What does this mean about your Speaker
When connected to charger	Solid red LED	Charging
	Red LED turn off	Charging completed
When NOT connected to charger	Red and blue LED flash alternatively.	Pairing
	Blue LED flash once every 3 seconds	Stand by mode
	Blue LED flash twice every 3 seconds	Stand by mode (but no Bluetooth device connected to speaker)
	Red LED flash once every 3 seconds	Low power alert
	Blue LED flash once every 6 seconds	Call in progress
	Red LED steady on	Mute
	Blue LED flash 5 times rapidly	Power on or off

Troubleshooting

I hear crackling noises

For the best audio quality, make sure that the mobile phone is placed within 10 meter from the speaker.

I cannot hear anything in my speaker

Increase the volume on the mobile phone.

Ensure that the Speaker is paired with the phone.

Make sure that the phone is connected to the speaker – if it does not connect from the phone's Bluetooth menu.

I have pairing problems even though my phone indicates otherwise

You may have deleted your speaker pairing connection in your mobile phone.

Follow the pairing instructions in page 9.

Restore Factory Settings

In order to restore factory settings and delete all paired devices from the speaker, while in stand by mode, press the volume (+) and volume (-) together for 10 seconds, until the blue LED flash 5 times. Continue pressing for 3 seconds, the speaker will turn off automatically, turn on the speaker and the speaker will return to its original settings.

Notice: If the speakerphone is connected with a mobile phone before restore to default setting, it will enter pairing mode automatically after restored to default.

Taking Care of Your Speaker

- Always store the Hisense HB600 with the power off and safely protected.
- Avoid storage at extreme temperatures (above 45°C/113°F – including direct sunlight – or below -10°C/14°F). This can shorten battery life and may affect operation. High temperatures may also degrade performance.
- Do not expose the Hisense HB600 to rain or other liquids.

Glossary

Bluetooth

The Bluetooth® Trademark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Hisense is under license. Other trademarks and trade names are those of their respective owners.

1. **Bluetooth** is a radio technology that connects devices, such as mobile phones and speakers, without wires or cords over a short distance (approx. 30 feet). Get more information at www.bluetooth.com.
2. **Bluetooth** profiles are the different ways that Bluetooth devices communicate with other devices. Bluetooth phones support either headset profile, the handsfree profile or both. In order to support a certain

profile, a phone manufacturer must implement certain mandatory features within the phone's software.

3. **Pairing** creates a unique and encrypted link between two Bluetooth devices and lets them communicate with each other. Bluetooth devices will not work if the devices have not been paired successfully.
4. **Passkey** or **PIN** is a code that you enter on your mobile phone to pair it with your Hisense HB600. This makes your phone and the Hisense HB600 recognize each other and automatically work together.



Dispose of the product according to local standards and regulations or local laws.